

Standard Combinations

Combination	Model	Port size	Components				
			Air filter AF	Regulator with Built-in Pressure Gauge ARG	Filter Regulator with Built-in Pressure Gauge AWG	Lubricator AL	Mist separator AFM
AF + ARG + AL 	ACG20	1/8, 1/4	AF20	ARG20		AL20	
	ACG30	1/4, 3/8	AF30	ARG30		AL30	
	ACG40	1/4, 3/8, 1/2	AF40	ARG40		AL40	
AWG + AL 	ACG20A	1/8, 1/4			AWG20	AL20	
	ACG30A	1/4, 3/8			AWG30	AL30	
	ACG40A	1/4, 3/8, 1/2			AWG40	AL40	
AF + ARG 	ACG20B	1/8, 1/4	AF20	ARG20			
	ACG30B	1/4, 3/8	AF30	ARG30			
	ACG40B	1/4, 3/8, 1/2	AF40	ARG40			
AF + AFM + ARG 	ACG20C	1/8, 1/4	AF20	ARG20			AFM20
	ACG30C	1/4, 3/8	AF30	ARG30			AFM30
	ACG40C	1/4, 3/8, 1/2	AF40	ARG40			AFM40
AWG + AFM 	ACG20D	1/8, 1/4			AWG20		AFM20
	ACG30D	1/4, 3/8			AWG30		AFM30
	ACG40D	1/4, 3/8, 1/2			AWG40		AFM40

INDEX

■ Air Combination

Air Filter + Regulator with Built-in Pressure Gauge + Lubricator	
ACG20/30/40	P.4
Filter Regulator with Built-in Pressure Gauge + Lubricator	
ACG20A/30A/40A	P.7
Air Filter + Regulator with Built-in Pressure Gauge	
ACG20B/30B/40B	P.9
Air Filter + Mist Separator + Regulator with Built-in Pressure Gauge	
ACG20C/30C/40C	P.11
Filter Regulator with Built-in Pressure Gauge + Mist Separator	
ACG20D/30D/40D	P.13

■ Regulator with Built-in Pressure Gauge

Regulator with Built-in Pressure Gauge	
ARG20/30/40	P.20
Regulator with Built-in Pressure Gauge with Back Flow Mechanism	
ARG20K/30K/40K	P.24

■ Filter Regulator with Built-in Pressure Gauge

Filter Regulator with Built-in Pressure Gauge	
AWG20/30/40	P.31
Filter Regulator with Built-in Pressure Gauge with Back Flow Mechanism	
AWG20K/30K/40K	P.35

How to Order

ACG 30 A 03 G1

Body size

Symbol	Port size
20	1/8
30	3/8
40	1/2

Model combination

Symbol	Combination				
	Air filter	Regulator with Built-in Pressure Gauge	Lubricator	Filter Regulator with Built-in Pressure Gauge	Mist separator
Nil	(1)	(2)	(3)	—	—
A	—	—	(2)	(1)	—
B ⁽¹⁾	(1)	(2)	—	—	—
C	(1)	(3)	—	—	(2)
D	—	—	—	(1)	(2)



Note 1) Wall mount is not available for size 20 regulator with downward facing handle in B combination. Contact SMC when wall mount is needed.

Note 2) The number inside () indicates the combination order counted from the inlet side.

Thread type

Symbol	Type
Nil	Rc
N	NPT
F	G



Note 3) Drain guide is NP 1/8 for ACG20 and NPT 1/4 for ACG30 and 40. Auto-drain port is provided with ø3.8" One-touch fitting (applicable to ACG30 and 40).

Note 4) Drain guide is G1/8 for ACG20 and G1/4 for ACG30 and 40.

Port size

Symbol	Port size	Body size		
		20	30	40
01	1/8	●	—	—
02	1/4	●	●	●
03	3/8	—	●	●
04	1/2	—	—	●

Accessory

Symbol	Description	Applicable model
Nil	—	—
C	Float type auto-drain (Normally closed)	ACG20□ to 40□
D	Float type auto-drain (Normally open)	ACG30□, 40□

When more than one specification is required, indicate in ascending alphanumeric order.

Mounting angle of pressure gauge °0



Note 5) Mounting angle of pressure gauge is G1 only. If other mounting angles are needed, contact SMC.

* Possible to change to the optional mounting angles. For details, refer to the back of page 6, "Procedure for replacing or changing the mounting angle of a pressure gauge"

Option

Symbol	Description	Applicable model
Nil	—	—
1 ⁽⁸⁾	0.02 to 0.2 MPa setting	ACG20□ to 40□
2	Metal bowl	ACG20□ to 40□
3	Lubricator with drain cock	ACG20□ to 40□
6	Nylon bowl	ACG20□ to 40□
8	Metal bowl with level gauge	ACG30□, 40□
C	With bowl guard	ACG20□
J ⁽⁹⁾	Filter case with drain guide	ACG20□ to 40□
N	Non-relieving type	ACG20□ to 40□
R	Flow direction: Right → Left	ACG20□ to 40□
W	Drain cock with barb fitting: ø6 x ø4 nylon tubing	ACG30□, 40□
Y	Regulator with upward facing handle	ACG20□ to 40□
Z ⁽¹⁰⁾	Name plate and pressure gauge in imperial units (PSI), caution plate for bowl (PSI · °F)	ACG20□ to 40□



* When more than one specification is required, indicate in ascending alphanumeric order

Note 8) Adjusting spring and pressure gauge (full-span 0.3 MPa) are different from those for the standard specification. Outlet pressure may increase by 0.2 MPa or more.

Note 9) Without a valve function.

Note 10) For thread type NP 1/8 This product is for overseas use only according to the new Measurement Law (The SI unit type is provided for use in Japan.)

Attachment

Symbol	Description	Attachment mounting position	Applicable model	Port size for intermediate air release
Nil	—	—	—	—
K	Check valve	AF + ARG + [K] + AL AW + [K] + AL	ACG20 to 40 ACG20A to 40A	ACG20□: 1/8 ACG30□: 1/4 ACG40□: 3/8
S ⁽⁷⁾	Pressure switch	AF + ARG + [S] + AL AF + [S] + ARG AF + AFM + [S] + ARG	ACG20 to 40 ACG20B to 40B ACG20C to 40C	—
V	Residual pressure relief 3 port valve	AF + ARG + AL + [V] AW + AL + [V] AF + ARG + [V] AF + AFM + ARG + [V] AW + AFM + [V]	ACG20 to 40 ACG20A to 40A ACG20B to 40B ACG20C to 40C ACG20D to 40D	—



Note 6) When more than one attachment is required, order in alphabetical order.

Note 7) Pressure switch cannot be mounted on the inlet and outlet sides of an ARG with an upward facing handle (optional specification: -Y).

Mounting Angle of Pressure Gauge

Symbol	G1
Mounting angle	0°
Mounting angle view	
Mounting angle view (-R specification)	

Accessory/Optional Combinations

⊙: Combination available ■: Combination not available ○: Varies depending on a model △: Available only with NPT thread

Combination Accessory/ Optional specifications	Symbol	Accessory		Option												F.R.L. unit applicable model									
		C	D	1	2	3	6	8	C	J	N	R	W	Y	Z	ACG20	ACG20A	ACG20B	ACG20C	ACG20D	ACG30 to ACG40	ACG30A to ACG40A	ACG30B to ACG40B	ACG30C to ACG40C	ACG30D to ACG40D
Float type auto-drain (N.C.)	C	■	■	⊙	⊙	⊙	⊙	○	○	○	○	○	○	○	△	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
Float type auto-drain (N.O.)	D	■	■	⊙	⊙	⊙	⊙	⊙	■	■	○	○	○	○	△	■	■	■	■	■	⊙	⊙	⊙	⊙	⊙
0.02 to 0.2 MPa setting	-1	⊙	○	■	⊙	⊙	⊙	○	○	○	○	○	○	○	△	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
Metal bowl	-2	⊙	○	⊙	■	⊙	■	■	○	○	○	○	○	○	△	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
Lubricator with drain cock	-3	⊙	○	⊙	⊙	■	⊙	○	○	○	○	○	○	○	△	⊙	⊙	■	■	■	⊙	⊙	■	■	■
Nylon bowl	-6	⊙	○	⊙	■	⊙	■	■	○	○	○	○	○	○	△	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
Metal bowl with level gauge	-8	⊙	⊙	⊙	■	⊙	■	■	○	○	○	○	○	○	△	■	■	■	■	■	⊙	⊙	⊙	⊙	⊙
With bowl guard	-C	⊙	■	⊙	■	⊙	■	■	○	○	○	○	○	○	△	⊙	⊙	⊙	⊙	⊙	■	■	■	■	■
Drain guide	-J	■	■	⊙	⊙	⊙	⊙	○	○	○	○	○	○	○	△	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
Non-relieving type	-N	⊙	○	⊙	⊙	⊙	⊙	○	○	○	○	○	○	○	△	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
Flow direction: Right → Left	-R	⊙	○	⊙	⊙	⊙	○	○	○	○	○	○	○	○	△	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
Drain cock with barb fitting	-W	■	■	⊙	■	⊙	■	■	○	○	○	○	○	○	△	■	■	■	■	■	⊙	⊙	⊙	⊙	⊙
Regulator upward facing handle	-Y	⊙	○	⊙	⊙	⊙	○	○	○	○	○	○	○	○	△	⊙	■	⊙	⊙	■	⊙	■	⊙	⊙	■
Name plate, caution plate for bowl, and pressure gauge in imperial units (PSI, °F)	-Z	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△	△

Attachments

		Port size	Function	
Check valve		1/8, 1/4, 3/8	Prevents back flow from lubricator.	P. 15
Pressure switch		—	Compact switch	P. 16
Residual pressure relief 3 port valve		1/8, 1/4, 3/8, 1/2	Releases residual pressure in lines.	P. 17
 Accessories Refer to page 18 for spacers and brackets.				

Air Combination

Air Filter + Regulator + Lubricator

Series ACG20/30/40




ACG20



ACG40

JIS Symbol

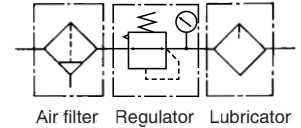

Air filter Regulator Lubricator

Standard Specifications

Model		ACG20	ACG30	ACG40
Component	Air filter	AF20	AF30	AF40
	Regulator	ARG20	ARG30	ARG40
	Lubricator	AL20	AL30	AL40
Port size		1/8 1/4	1/4 3/8	1/4 3/8 1/2
Fluid		Air		
Proof pressure		1.5 MPa		
Maximum operating pressure		1.0 MPa		
Regulating pressure range		0.05 to 0.85 MPa		
Relief pressure		Set pressure + 0.05 MPa ⁽²⁾ (at relief flow rate of 0.1 ℓ/min (ANR))		
Ambient and fluid temperature		−5 to 60°C (With no freezing)		
Nominal filtration rating		5 μm		
Recommended lubricant		Class 1 turbine oil (ISO VG32)		
Regulator construction		Relieving type		
Bowl material		Polycarbonate		
Bowl guard		Optional	Standard	
Sight dome material		Polycarbonate		
Weight (kg)		0.78	1.11	1.87

Accessory/Attachment Part No.

Description			Accessory/Attachment part no.			
			ACG20	ACG30	ACG40	
Pressure gauge ⁽¹⁾		Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS
		Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
Access- sory	Float type auto-drain ⁽²⁾		Normally closed	AD27	AD37	AD47
			Normally open	—	AD38	AD48
Attachment	Spacer		Y200	Y300	Y400	
	Spacer with bracket		Y200T	Y300T	Y400T	
	Check valve ⁽³⁾ ⁽⁴⁾		AKM2000-□01, (□02)	AKM3000-(□01), □02	AKM4000-(□02), □03	
	Pressure switch ⁽⁵⁾ ⁽⁶⁾		IS1000M-20	IS1000M-30	IS1000M-40	
	Residual pressure relief 3 port valve ⁽⁴⁾		VHS20-□01, □02	VHS30-□02, □03	VHS40-□02, □03, □04	

Note 1) Contact SMC regarding the connection thread NPT and pressure gauge supply for PSI unit specifications.

Note 2) Minimum operating pressure. N.O. type 0.1 MPa, N.C. type 0.15 MPa (AD17/27). Contact SMC regarding the specifications for PSI unit and °F.




Note 3) For FRL units, port sizes not in () are for standard application.

Note 4) Separate spacers are required for modular unit.

Note 5) Pressure switch cannot be mounted on the inlet and outlet sides of an ARG with an upward facing handle (optional specification: -Y).




Flow Characteristics

Condition: Inlet pressure 0.7 MPa

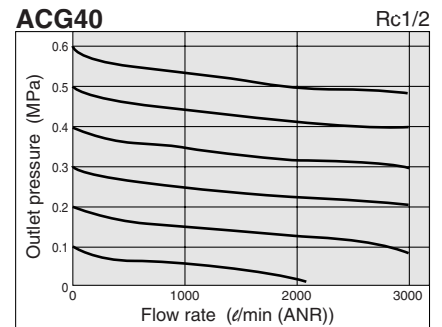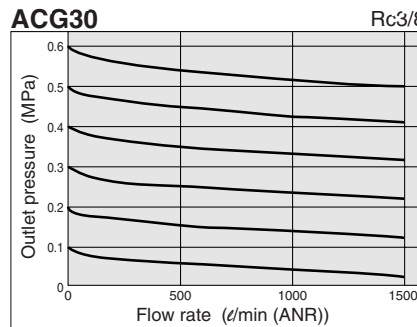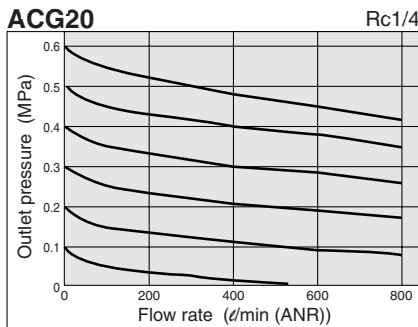

Pressure Characteristics

Conditions: Inlet pressure 0.7 MPa, Outlet pressure 0.2 MPa, Flow rate 20 l/min (ANR)

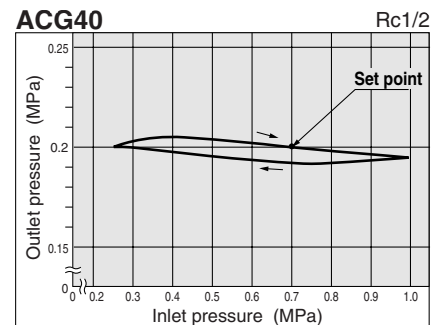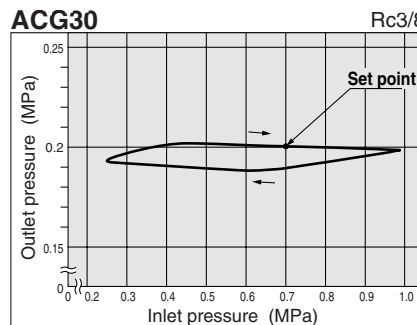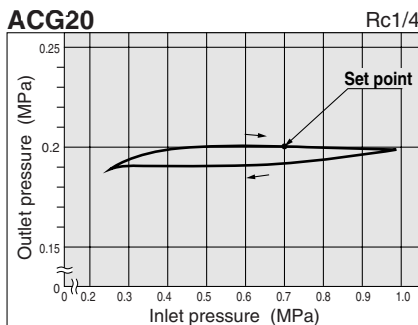

⚠ Specific Product Precautions

Piping

⚠ Warning

- When mounting a check valve, make sure the arrow (IN side) points in the correct direction of air flow.

Selection

⚠ Warning

- Float type auto-drain
 - Operate under the following conditions to avoid malfunction.
 - <N.O. type>**
 - Operating compressor: 0.75 kW (100 l/min (ANR)) or more.
 - When using 2 or more auto-drains, multiply the value above by the number of auto-drains to find the capacity of the compressors you will need.
 - For example, when using 2 auto-drains, 1.5 kW (200 l/min (ANR)) of the compressor capacity is required.
 - Operating pressure: 0.1 MPa or more.
 - <N.C. type>**
 - Operating pressure for AD17/27: 0.1 MPa or more.
 - Operating pressure for AD37/47: 0.15 MPa or more.
- Use a regulator or filter regulator with a back flow mechanism when mounting a 3 port valve for residual pressure release on the IN side to ensure the release of the residual pressure. Otherwise, residual pressure will not be fully released.

Selection

⚠ Caution

- Mounting a 3 port valve for residual pressure release on the IN side of the lubricator can cause lubricant to back flow. Take measures to prevent lubricant from splashing by installing a filter on the EXH port.
- An F.R.L. unit shipped from the plant has its model number labeled. However, components that are combined together during the distribution process do not have a label on them.
- Contact SMC when mounting a pressure switch, filter regulator on the OUT side of the 3 port valve for residual pressure release.

Air Supply


⚠ Caution

- Use an air filter with 5 μm or less filtration rating on the inlet side of the valve to avoid any damage to the seat caused by dust when mounting a 3 port valve for residual pressure release on the inlet side.


Series ACG20/30/40

Dimensions


ACG20 Standard Downward facing handle

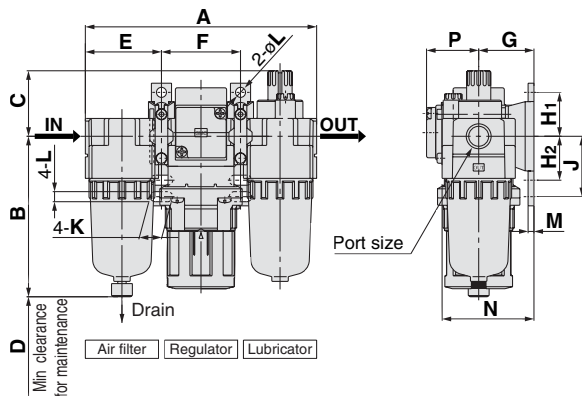


ACG30/40 Standard Downward facing handle

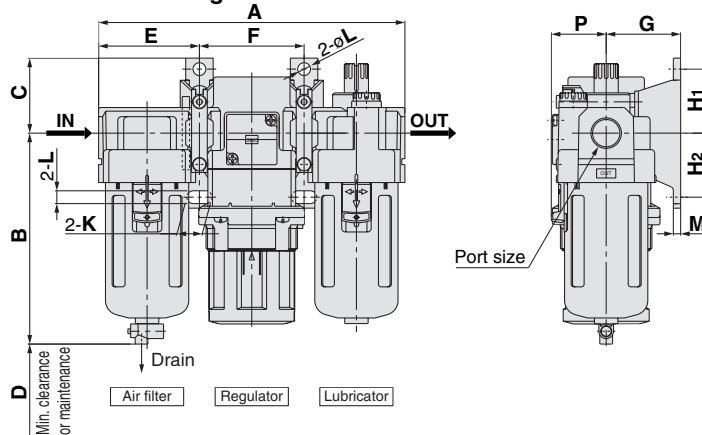

ACG20 Optional (-Y) Upward facing handle

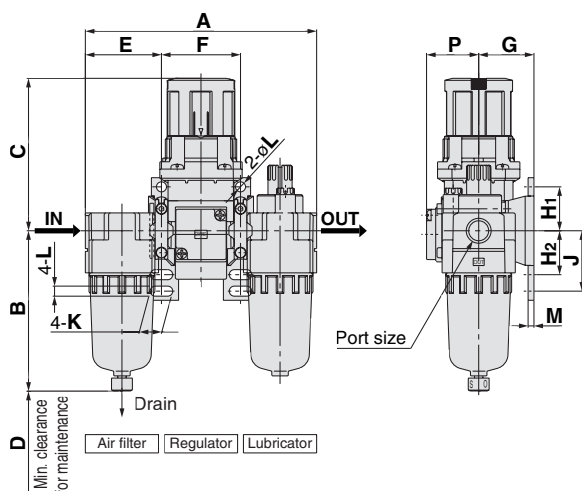

ACG30/40 Optional (-Y) Upward facing handle

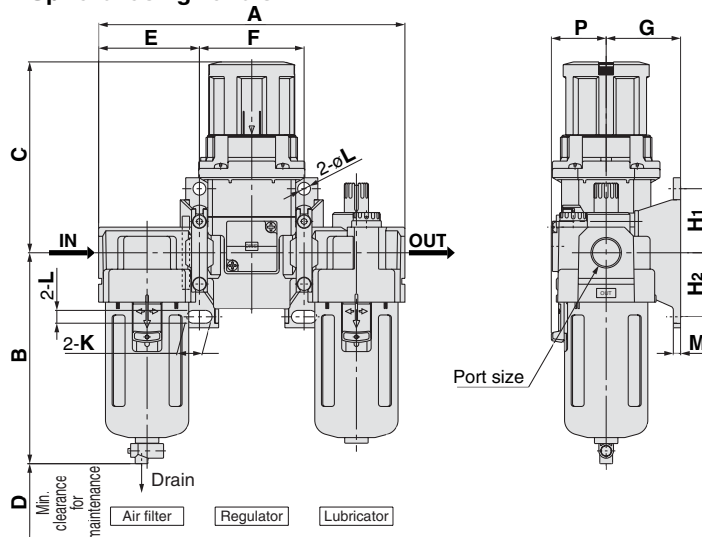

Applicable model	ACG20				ACG30/40				
Accessory/Optional specifications	With auto-drain (N.C.)	Metal bowl	With drain guide	With auto-drain (N.O./N.C.)	Metal bowl	Metal bowl with level gauge	With drain guide	Drain cock with barb fitting	
Dimensions	 B M5 x 0.8	 B	 B 1/8 Width across flats 17	 B N.O.: Black N.C.: Gray ø10 One-touch fitting	 B	 B	 B 1/4 Width across flats 17	 B Barb fitting Applicable tubing: T0604	

Model	Port size	Standard specifications														
		A	B	C	D	P	Bracket mount									
							E	F	G	H ₁	H ₂	J	K	L	øL	M
ACG20	1/8, 1/4	126	87	36	60	28.5	41.5	43	30	24	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	5.5	3.2
ACG30	1/4, 3/8	167	115	41	80	30	55	57	41	35	35	—	14	7	7	4
ACG40	1/4, 3/8, 1/2	220	147	48	110	38	72.5	75	50	40	40	—	18	9	9	4

Model	Accessory/Optional specifications									
	Upward facing handle ⁽²⁾					With auto-drain ⁽³⁾	With barb fitting ⁽³⁾	With drain guide ⁽³⁾	Metal bowl ⁽³⁾	Metal bowl with level gauge ⁽³⁾
	C	H ₂	J	K	L	B	B	B	B	B
ACG20	87	24	33	12	5.5	105	—	91	87	
ACG30	108.5	35	—	14	7	156	123	122	128	148
ACG40	114.5	40	—	18	9	186	155	154	160	180

Note 1) In the case of the ACG20's standard specification (downward facing handle), the wall mounting is not possible using the lower side mounting hole on the spacer with a bracket. Use the upper side mounting hole when wall mounting.

Note 2) In the case of the downward facing handle in the optional specification, the C dimension will change. Also, in the case of the ACG20, wall mounting is possible by using the lower side mounting hole on the spacer with a bracket.

Note 3) For the accessory/optional specifications (with auto-drain, with barb fitting, with drain guide, metal bowl, or metal bowl with level gauge), the total length (B dimension) will vary.

Filter Regulator + Lubricator


Series **ACG20A/30A/40A**

ACG20A



ACG40A

JIS Symbol

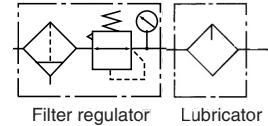

Standard Specifications

Model		ACG20A	ACG30A	ACG40A
Component	Filter regulator	AWG20	AWG30	AWG40
	Lubricator	AL20	AL30	AL40
Port size		1/8 1/4	1/4 3/8	1/4 3/8 1/2
Fluid		Air		
Proof pressure		1.5 MPa		
Maximum operating pressure		1.0 MPa		
Regulating pressure range		0.05 to 0.85 MPa		
Relief pressure		Set pressure + 0.05 MPa ⁽²⁾ (at relief flow rate of 0.1 d/min (ANR))		
Ambient and fluid temperature		−5 to 60°C (With no freezing)		
Nominal filtration rating		5 μm		
Recommended lubricant		Class 1 turbine oil (ISO VG32)		
Filter regulator construction		Relieving type		
Bowl material		Polycarbonate		
Bowl guard		Optional	Standard	
Sight dome material		Polycarbonate		
Weight (kg)		0.65	0.86	1.55

Accessory/Attachment Part No.

Description			Accessory/Attachment part no.		
Model			ACG20A	ACG30A	ACG40A
Pressure gauge ⁽¹⁾	Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS
	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
Access-ory	Float type auto-drain ⁽²⁾				
		Normally closed	AD27	AD37	AD47
		Normally open	—	AD38	AD48
Attachment	Spacer		Y200	Y300	Y400
	Spacer with bracket		Y200T	Y300T	Y400T
	Check valve ⁽³⁾ ⁽⁴⁾		AKM2000-□01, (□02)	AKM3000-(□01), □02	AKM4000-(□02), □03
	Residual pressure relief 3 port valve ⁽⁴⁾		VHS20-□01, □02	VHS30-□02, □03	VHS40-□02, □03, □04

Note 1) Contact SMC regarding the connection thread NPT and pressure gauge supply for PSI unit specifications.

Note 2) Minimum operating pressure: N.O. type 0.1 MPa; N.C. type 0.15 MPa (AD17/27). Contact SMC regarding the PSI and "F" unit specifications.


Note 3) For F.H.I. units, port sizes not in () are for standard application.

Note 4) Separate spacers are required for modular unit.


Series ACG20A/30A/40A

Dimensions

ACG20A

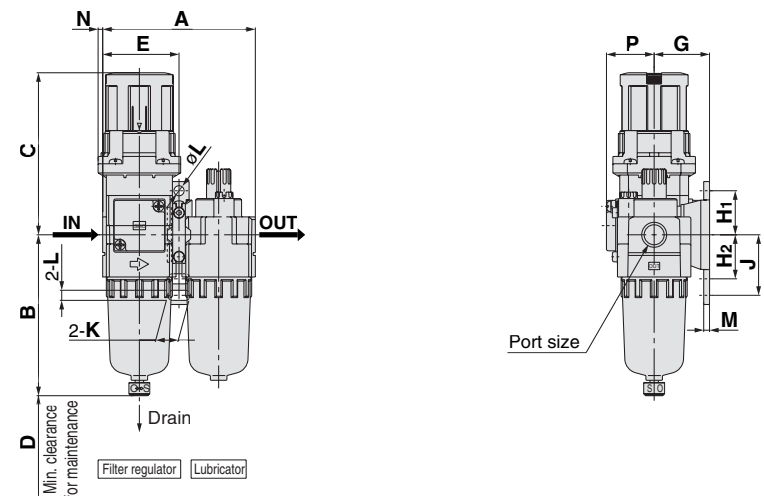

ACG30A/40A

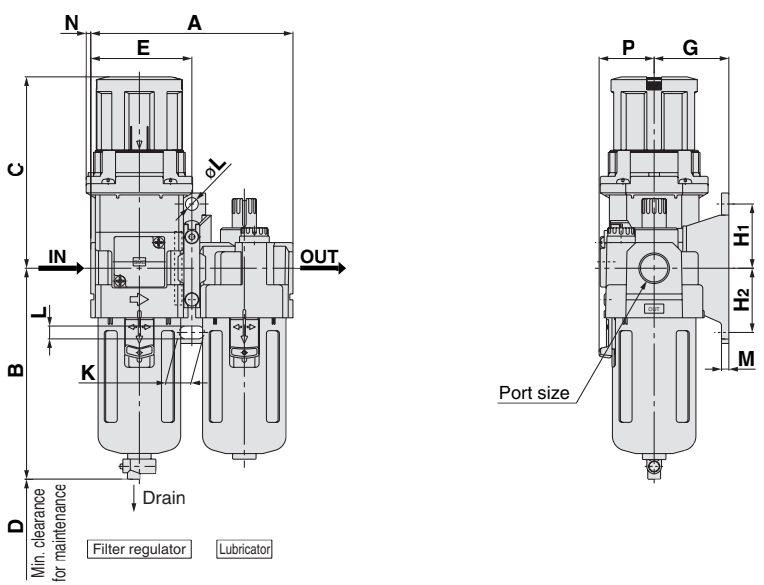

Applicable model	ACG20A				ACG30A/40A			
Accessory/Optional specifications	With auto-drain (N.C.)	Metal bowl	With drain guide	With auto-drain (N.O./N.C.)	Metal bowl	Metal bowl with level gauge	With drain guide	Drain cock with barb fitting
Dimensions	 M5 x 0.8	 B	 B 1/8 Width across flats 17	 B N.O.: Black N.C.: Gray ø10 One-touch fitting	 B	 B	 B 1/4 Width across flats 17	 B Barb fitting Applicable tubing: T0604

Model	Port size	Standard specifications														
		A	B	C	D	N	P	Bracket mount								
								E	G	H ₁	H ₂	J	K	L	øL	M
ACG20A	1/8, 1/4	83	87	91	60	2.5	26	41.5	30	24	24	33	12	5.5	5.5	3.2
ACG30A	1/4, 3/8	110	115	108.5	80	2.5	30	55	41	35	35	—	14	7	7	4
ACG40A	1/4, 3/8, 1/2	145	147	114.5	110	0	38	72.5	50	40	40	—	18	9	9	4

Model	Accessory/Optional specifications ^{Note)}				
	With auto-drain	With barb fitting	With drain guide	Metal bowl	Metal bowl with level gauge
	B	B	B	B	B
ACG20A	105	—	91	87	—
ACG30A	156	123	122	128	148
ACG40A	186	155	154	160	180

Note) For the accessory/optional specifications (with auto-drain, with barb fitting, with drain guide, metal bowl, or with level gauge), the total length (B dimension) will vary.

Air Filter + Regulator


Series **ACG20B/30B/40B**

ACG20B



ACG40B

JIS Symbol

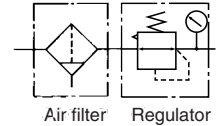

Air filter

Regulator

Standard Specifications

Model		ACG20B	ACG30B	ACG40B
Component	Air filter	AF20	AF30	AF40
	Regulator	ARG20	ARG30	ARG40
Port size		1/8 1/4	1/4 3/8	1/4 3/8 1/2
Fluid		Air		
Proof pressure		1.5 MPa		
Maximum operating pressure		1.0 MPa		
Regulating pressure range		0.05 to 0.85 MPa		
Relief pressure		Set pressure + 0.05 MPa ⁽²⁾ (at relief flow rate of 0.1 ℓ/min (ANR))		
Ambient and fluid temperature		-5 to 60°C (With no freezing)		
Nominal filtration rating		5 μm		
Regulator construction		Relieving type		
Bowl material		Polycarbonate		
Bowl guard		Optional	Standard	
Weight (kg)		0.56	0.74	1.25

Accessory/Attachment Part No.

Description			Accessory/Attachment part no.		
Model			ACG20B	ACG30B	ACG40B
Pressure gauge ⁽¹⁾	Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS
	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
Float type auto-drain ⁽²⁾	Normally closed		AD27	AD37	AD47
	Normally open		—	AD38	AD48
Attachment	Spacer		Y200	Y300	Y400
	Spacer with bracket		Y200T	Y300T	Y400T
	Pressure switch ⁽³⁾ ⁽⁴⁾		IS1000M-20	IS1000M-30	IS1000M-40
	Residual pressure relief 3 port valve ⁽³⁾		VHS20-□01, □02	VHS30-□02, □03	VHS40-□02, □03, □04

Note 1) Contact SMC regarding pressure gauge supply for PSI unit specifications.

Note 2) Minimum operating pressure. N.O. type 0.1 MPa, N.C. type 0.15 MPa. Contact SMC regarding the PSI and °F unit specifications.


Note 3) Separate spacers are required for modular unit.

Note 4) Pressure switch cannot be mounted on the inlet and outlet sides of an ARG with an upward facing handle (optional specification: -Y).


Series ACG20B/30B/40B

Dimensions


ACG20B Standard Downward facing handle

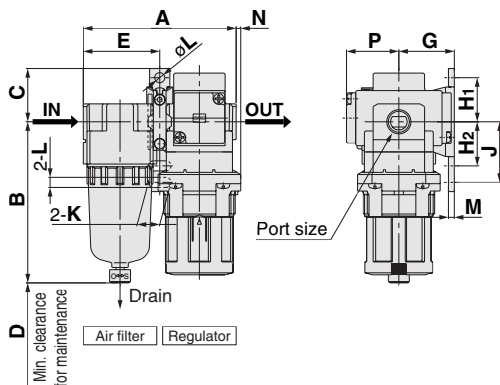


ACG30B/40B Standard Downward facing handle








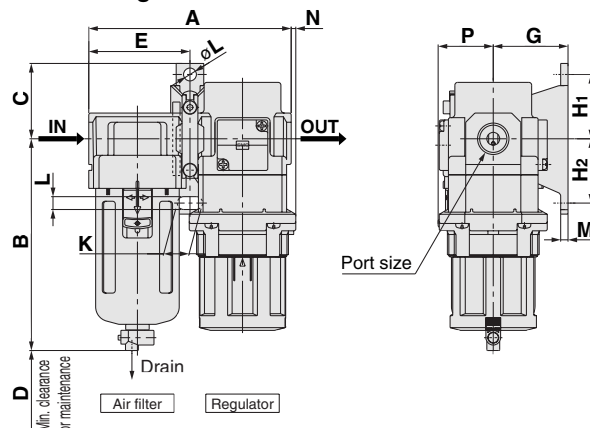


ACG20B Optional (-Y) Upward facing handle

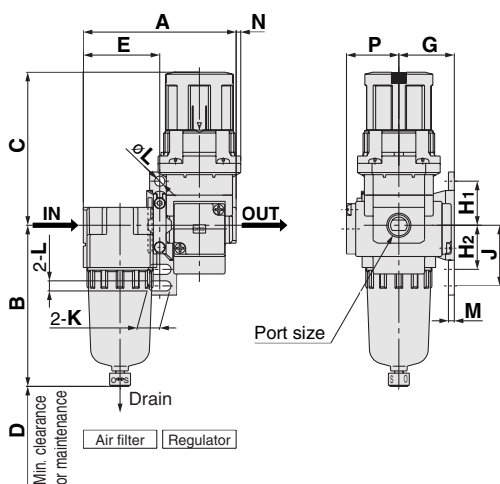

ACG30B/40B Optional (-Y) Upward facing handle

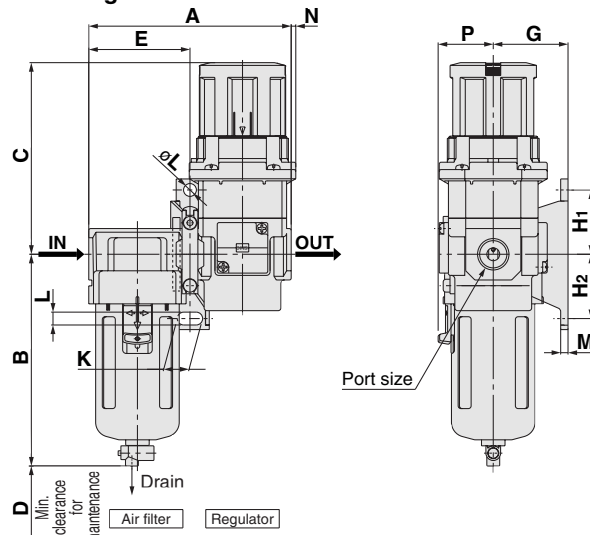

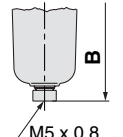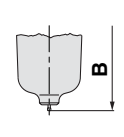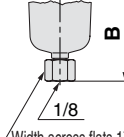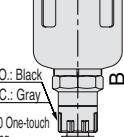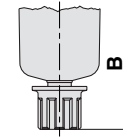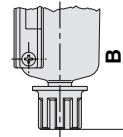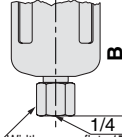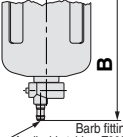Applicable model	ACG20B			ACG30B/40B				
Accessory/Optional specifications	With auto-drain (N.C.)	Metal bowl	With drain guide	With auto-drain (N.O./N.C.)	Metal bowl	Metal bowl with level gauge	With drain guide	Drain cock with barb fitting
Dimensions								

Model	Port size	Standard specifications														
		A	B	C	D	N	P	E	G	H1	H2	J	K	L	øL	M
ACG20B	1/8, 1/4	83	87	29	60	2.5	28.5	41.5	30	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	— ⁽¹⁾	3.2
ACG30B	1/4, 3/8	110	115	41	80	2.5	29.5	55	41	35	35	—	14	7	7	4
ACG40B	1/4, 3/8, 1/2	145	147	48	110	0	38	72.5	50	40	40	—	18	9	9	4

Model	Accessory/Optional specifications										
	Upward facing handle ⁽²⁾							With auto-drain ⁽³⁾	With barb fitting ⁽³⁾	With drain guide ⁽³⁾	Metal bowl ⁽³⁾
	C	H1	H2	J	K	L	øL	B	B	B	B
ACG20B	87	24	24	33	12	5.5	5.5	105	—	91	87
ACG30B	108.5	35	35	—	14	7	7	156	123	122	128
ACG40B	114.5	40	40	—	18	9	9	186	155	154	160

Note 1) In the case of the ACG20B's standard specification (downward facing handle), the wall mounting is not possible using the lower side mounting hole on the spacer with a bracket. Contact SMC.

Note 2) In the case of the downward facing handle in the optional specification, the C dimension will change. Also, in the case of the ACG20B, wall mounting is possible by using the lower side mounting hole on the spacer with a bracket.

Note 3) For the accessory/optional specifications (with auto-drain, with barb fitting, with drain guide, metal bowl, or metal bowl with level gauge), the total length (B dimension) will vary.

Air Combination

Air Filter + Mist Separator + Regulator

Series ACG20C/30C/40C




ACG20C



ACG40C

 JIS Symbol



Air filter Regulator Lubricator

Standard Specifications

Model		ACG20C	ACG30C	ACG40C
Component	Air filter	AF20	AF30	AF40
	Mist separator	AFM20	AFM30	AFM40
	Regulator	ARG20	ARG30	ARG40
Port size		1/8 1/4	1/4 3/8	1/4 3/8 1/2
Fluid		Air		
Proof pressure		1.5 MPa		
Maximum operating pressure		1.0 MPa		
Regulating pressure range		0.05 to 0.85 MPa		
Rated flow (l/min (ANR))		200	450	1100
Relief pressure		Set pressure + 0.05 MPa (at relief flow rate of 0.1 l/min (ANR))		
Ambient and fluid temperature		-5 to 60°C (With no freezing)		
Nominal filtration rating		AF: 5 µm; AFM: 0.3 µm (95% filtered particle size)		
Outlet side oil mist concentration		Maximum 1.0 mg/Nm ³ (approx. 0.8 ppm) ⁽²⁾		
Regulator construction		Relieving type		
Bowl material		Polycarbonate		
Bowl guard		Optional	Standard	
Weight (kg)		0.79	1.06	1.89



Note 1) P1: 0.1 MPa, 0.5 MPa setting and fully open.
Note 2) At compressor discharge 30 mg/Nm³.

Accessory/Attachment Part No.

Description			Accessory/Attachment part no.		
Model			ACG20C	ACG30C	ACG40C
Pressure gauge ⁽¹⁾	Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS
	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
Access-ory	Float type auto-drain ⁽²⁾	Normally closed	AD27	AD37	AD47
		Normally open	—	AD38	AD48
Attachment	Spacer		Y200	Y300	Y400
	Spacer with bracket		Y200T	Y300T	Y400T
	Pressure switch		IS1000M-20	IS1000M-30	IS1000M-40
	Residual pressure relief 3 port valve ⁽³⁾		VHS20-□01, □02	VHS30-□02, □03	VHS40-□02, □03, □04



Note 1) Contact SMC regarding pressure gauge supply for PSI unit specifications.
Note 2) Minimum operating pressure: N.O. type: 0.1 MPa; N.C. type: 0.15 MPa. Contact SMC regarding the PSI and "F" unit specifications.
Note 3) Separate spacers are required for modular unit.
Note 4) Pressure switch cannot be mounted on the inlet and outlet sides of an ARG with an upward facing handle (optional specification: -Y).

Filter Regulator + Mist Separator


Series **ACG20D/30D/40D**

ACG20D



ACG40D

JIS Symbol

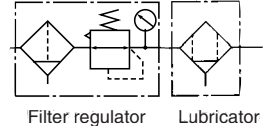

Standard Specifications

Model		ACG20D	ACG30D	ACG40D
Component	Filter regulator	AWG20	AWG30	AWG40
	Mist separator	AFM20	AFM30	AFM40
Port size		1/8 1/4	1/4 3/8	1/4 3/8 1/2
Fluid		Air		
Proof pressure		1.5 MPa		
Maximum operating pressure		1.0 MPa		
Regulating pressure range		0.05 to 0.85 MPa		
Rated flow (ℓ/min (ANR))		150	330	800
Relief pressure		Set pressure + 0.05 MPa (at relief flow rate of 0.1 ℓ/min (ANR))		
Ambient and fluid temperature		-5 to 60°C (With no freezing)		
Nominal filtration rating		AF: 5 μm; AFM: 0.3 μm (95% filtered particle size)		
Outlet side oil mist concentration		Maximum 1.0 mg/Nm ³ (approx. 0.8 ppm) ⁽²⁾		
Regulator construction		Relieving type		
Bowl material		Polycarbonate		
Bowl guard		Optional	Standard	
Weight (kg)		0.63	0.85	1.52



Note 1) P₁ = 0.7 MPa, 0.5 MPa setting and fully open
 Note 2) At compressor discharge 30 mg/Nm³.

Accessory/Attachment Part No.

Description			Accessory/Attachment part no.		
Model			ACG20D	ACG30D	ACG40D
Pressure gauge ⁽¹⁾	Standard	0 to 1.0 MPa	GB2-10AS	GB3-10AS	GB4-10AS
	Optional	0 to 0.3 MPa	GB2-3AS	GB3-3AS	GB4-3AS
Access-ory	Float type auto-drain ⁽²⁾	Normally closed	AD27	AD37	AD47
		Normally open	—	AD38	AD48
Attachment	Spacer		Y200	Y300	Y400
	Spacer with bracket		Y200T	Y300T	Y400T
	Residual pressure relief 3 port valve ⁽³⁾		VHS20-□01, □02	VHS30-□02, □03	VHS40-□02, □03, □04




Note 1) Contact SMC regarding pressure gauge supply for PSI unit specifications.
 Note 2) Minimum operating pressure. N.O. type-0.15 MPa, N.C. type-0.15 MPa. Contact SMC regarding the PSI and °F unit specifications.
 Note 3) Separate spacers are required for modular unit.


Series ACG20D/30D/40D

Dimensions

ACG20D

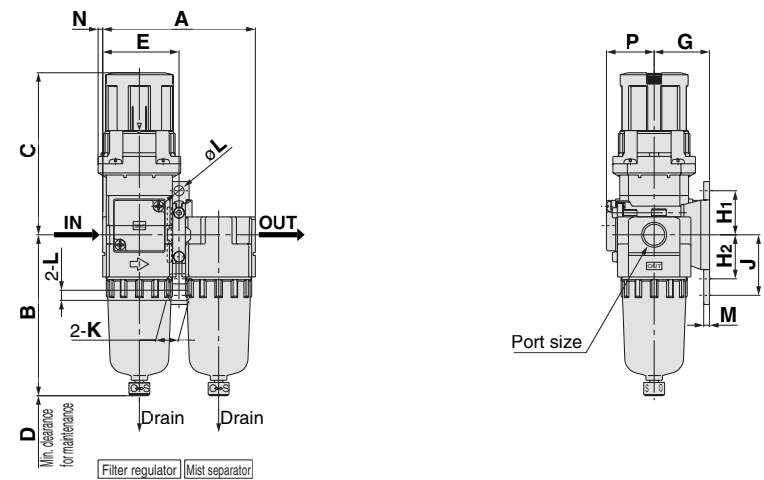

ACG30D/40D

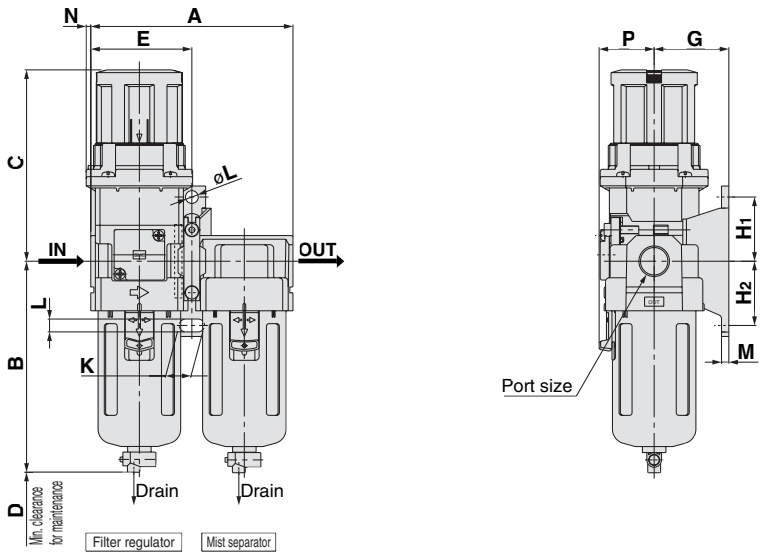

Applicable model	ACG20D				ACG30D/40D			
Accessory/Optional specifications	With auto-drain (N.C.)	Metal bowl	With rain guide	With auto-drain (N.O./N.C.)	Metal bowl	Metal bowl with level gauge	With drain guide	Drain cock with barb fitting
Dimensions								

Model	Port size	Standard specifications															
		A	B	C	D	N	P	Bracket mount									
ACG20D	1/8, 1/4	83	87	91	60	2.5	26	41.5	30	24	24	33	12	5.5	5.5	3.2	
ACG30D	1/4, 3/8	110	115	108.5	80	2.5	30	55	41	35	35	—	14	7	7	4	
ACG40D	1/4, 3/8, 1/2	145	147	114.5	110	0	38	72.5	50	40	40	—	18	9	9	4	


Model	Accessory/Optional specifications ^{Note)}				
	With auto-drain	With barb fitting	With drain guide	Metal bowl	Metal bowl with level gauge
ACG20D	B	B	B	B	B
ACG30D	105	—	91	87	
ACG40D	156	123	122	128	148
ACG40D	186	155	154	160	180

Note) For the accessory/optional specifications (with auto-drain, with barb fitting, with drain guide, metal bowl, or metal bowl with level gauge), the total length (B dimension) will vary.

Series ACG Air Combination Attachments

Check Valve (K) 1/8, 1/4, 3/8



A check valve with intermediate air release port can be easily installed to prevent a back flow of lubricant when redirecting the air flow and releasing the air on the outlet side of the regulator.

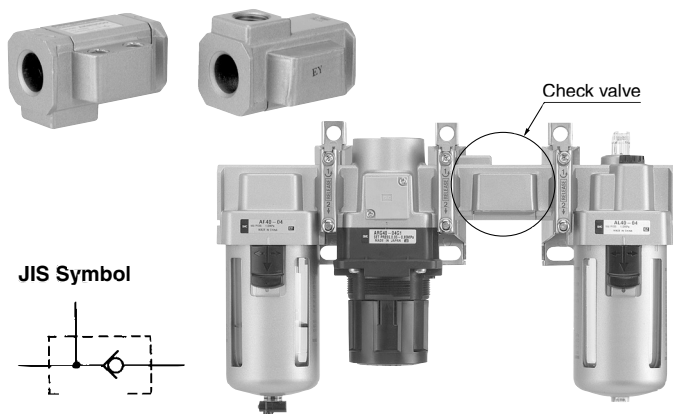

Specifications

Model	Effective area (mm ²)
AKM2000	28
AKM3000	55
AKM4000	

Be sure to use above check valves when redirecting the air flow on the inlet side of the lubricator. Threads for IN and OUT ports are NOT machined.

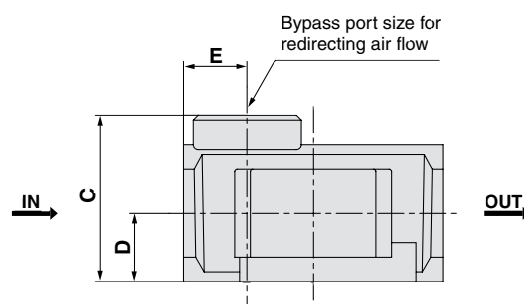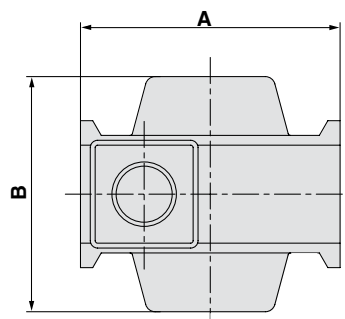

Model	Bypass port size	A	B	C	D	E	Applicable model
AKM2000	1/8, 1/4	40	40	28	11	11	ACG20/ACG20A
AKM3000	1/8, 1/4	53	48	34	14	13	ACG30/ACG30A
AKM4000	1/4, 3/8	70	54	42	18	15	ACG40/ACG40A

* Refer to the attachment table on page 4 or 7 for standard bypass port sizes applicable to ACG.

How to Order

AKM 30 00 01

Check valve

Body size

20	30	40
----	----	----

Bypass port size for redirecting air flow

Symbol	Port size	Body size		
		20	30	40
01	1/8	●	●	—
02	1/4	●	●	●
03	3/8	—	—	●

Thread type

Nil	Rc
N	NPT
F	G

Series ACG

Pressure Switch (S)

A compact integrated pressure switch can be easily installed and facilitates the pressure detection of the line.




Specifications

Fluid	Air
Proof pressure	1.0 MPa
Maximum operating pressure	0.7 MPa
Regulating pressure range (when off)	0.1 to 0.4 MPa
Differential	0.08 MPa
Ambient and fluid temperature	-5 to 60°C (With no freezing)

Switch Characteristics

Contact point configuration	1a
Maximum contact point capacity	2 VA(AC), 2 W(DC)
Operating voltage: AC, DC	100 V or less
Maximum operating current	12 V to 24 VAC, DC : 50 mA 48 VAC, DC : 40 mA 100 VAC, DC : 20 mA

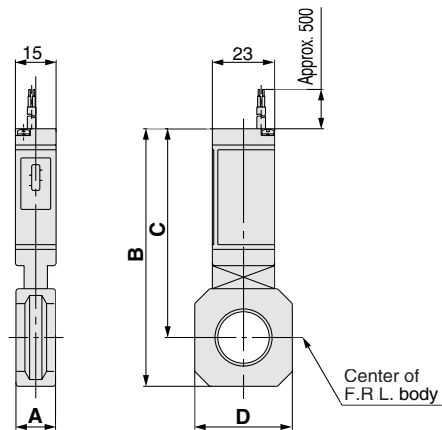

Model	A	B	C	D	Applicable model
IS1000M-20	11	76	66	28	ACG20/ACG20B/ACG20C
IS1000M-30	13	86	72	30	ACG30/ACG30B/ACG30C
IS1000M-40	15	95	77	36	ACG40/ACG40B/ACG40C

Note 1) Separate spacers are required for modular unit.

Note 2) Pressure switch cannot be mounted on the inlet and outlet sides of an ARG with an upward facing handle (optional specification: -Y).

How to Order

IS1000M-30-X201

Pressure switch

Body size

20	For ACG20
30	For ACG30
40	For ACG40


Accessory

X201	Lead wire length: 3 m
X202	Regulating pressure range: 0.1 to 0.6 MPa
X207*	MPa/PSI dual scale
X215	Lead wire length: 3 m; Regulating pressure range: 0.1 to 0.6 MPa

Note) This product is for overseas use only according to the new Measurement Law. (The SI unit type is provided for use in Japan.)

Residual Pressure Relief 3 Port Valve (V)


With the use of a 3 port valve for residual pressure release, pressure left in the line can be easily exhausted.

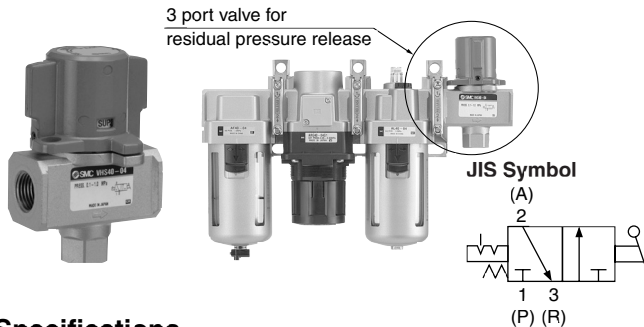

Specifications

Model	Port size		Effective area (mm ²) (: Effective Area mm ² (Cv)	
	IN,OUT	EXH.	IN → OUT	OUT → EXH.
VHS20	1/8	1/8	10 (0.54)	11 (0.60)
	1/4		14 (0.76)	16 (0.87)
VHS30	1/4	1/4	16 (0.87)	14 (0.76)
	3/8		31 (1.68)	29 (1.57)
VHS40	1/4	3/8	27 (1.46)	36 (1.95)
	3/8		38 (2.06)	40 (2.17)
	1/2		55 (2.98)	42 (2.28)

Note) Use an air filter on the IN side for operating protection.

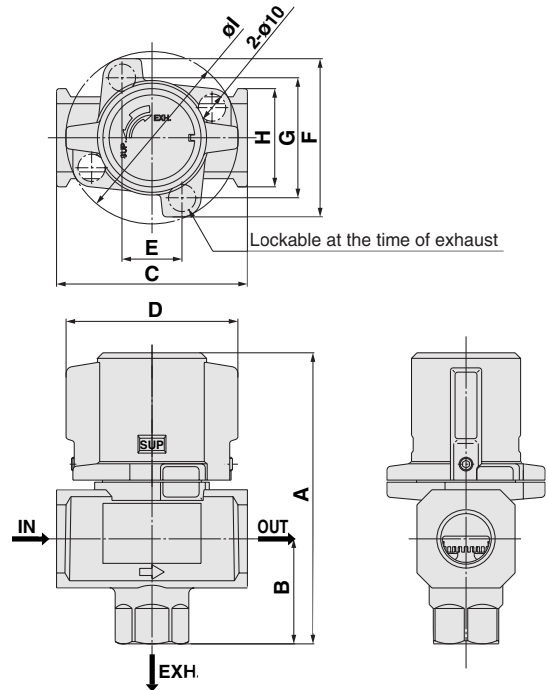

How to Order

VHS 30 03 RZ

Residual pressure relief 3 port valve

Body size

Symbol	Applicable model
20	ACG20
30	ACG30
40	ACG40

Thread type

Nil	Rc
N	NPT
F	G

Port size

Symbol	Port size	Body size		
		20	30	40
01	1/8	●	—	—
02	1/4	●	●	●
03	3/8	—	●	●
04	1/2	—	—	●

Option

Code	Description
R	Flow direction: Right → Left
Z ⁽¹⁾	Name plate in imperial units (PSI, °F)

Note 1) Only for the NPT thread.

This product is for overseas use only according to the new Measurement Law.
(The SI unit type is provided for use in Japan.)

(mm)

Model	A	B	C	D	E	F	G	H	I
VHS20	59	20	40	34	—	45	33	28	45
VHS30	78	29	53	46	—	55	42	30	55
VHS40	107	39	70	63	22	58	44	36	63

Caution

- 1 Consult with SMC when a pressure switch is installed on the outlet of pressure release valve.
2. If a stop valve or a silencer is connected to the exhaust port of VHS20/30, the effective sectional area should be larger than the figure indicated in the following table, to prevent malfunction caused by back pressure. (This is not applicable to VHS40)

Model	Effective area (mm ²)
VHS20	5
VHS30	5


Series AC Spacers and Brackets Accessories

Spacer (X)



Y200

Y400

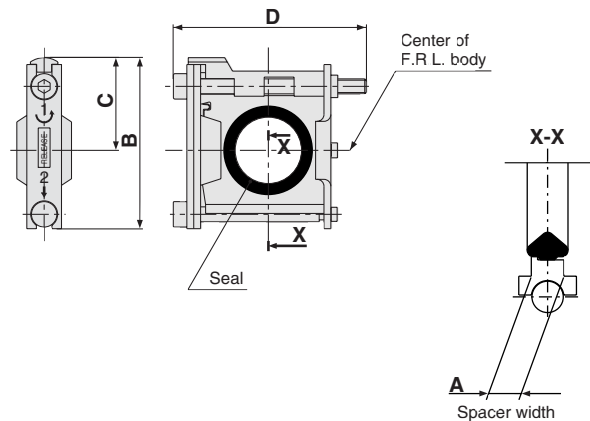

Model	A	B	C	D	Applicable model
Y200	3	35.5	18.5	48	ACG20□
Y300	4	47	26	59	ACG30□
Y400	5	57	31	65	ACG40□

Replacement Parts


Description	Material	Part no.		
		Y200	Y300	Y400
Seal	HNBR	Y200P-060S	Y300P-060S	Y400P-060S

Spacer with Bracket (Z)



Y200T

Y400T

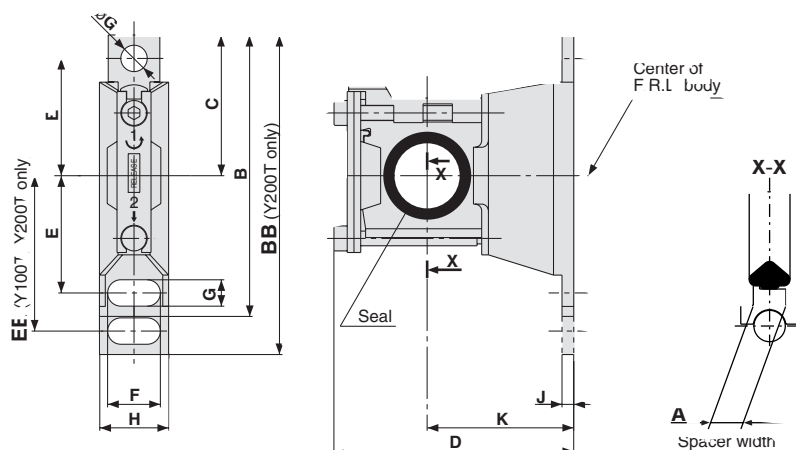

Model	A	B	BB	C	D	E	EE	F	G	øG	H	J	K	Applicable model
Y200T	3	—	67	29	53	24	33	12	5.5	5.5	19	3.2	30	ACG20□
Y300T	4	82	—	41	68	35	—	14	7	7	21	4	41	ACG30□
Y400T	5	96	—	48	81.5	40	—	18	9	9	26	4	50	ACG40□

Replacement Parts

Description	Material	Part no.		
		Y200T	Y300T	Y400T
Seal	HNBR	Y200P-060S	Y300P-060S	Y400P-060S



Series **ACG/ARG/AWG** **Safety Instructions**

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by labels of "**Caution**", "**Warning**" or "**Danger**". To ensure safety, be sure to observe ISO 4414 ^{Note 1)}, JIS B 8370 ^{Note 2)} and other safety practices.

 **Caution :** Operator error could result in injury or equipment damage.

 **Warning :** Operator error could result in serious injury or loss of life.

 **Danger :** In extreme conditions, there is a possible result of serious injury or loss of life.

Note 1) ISO 4414: Pneumatic fluid power--General rules relating to systems.

Note 2) JIS B 8370: General Rules for Pneumatic Equipment

Warning

1. The compatibility of the pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility for the specific pneumatic system must be based on specifications or post analysis and/or tests to meet your specific requirements. The expected performance and safety assurance are the responsibility of the person who has determined the compatibility of the system. This person should continuously review the suitability of all items specified, referring to the latest catalog information with a view to giving due consideration to any possibility of equipment failure when configuring a system.

2. Only trained personnel should operate pneumatically operated machinery and equipment.

Compressed air can be dangerous if handled incorrectly. Assembly, handling or repair of pneumatic systems should be performed by trained and experienced operators.

3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.

1. Inspection and maintenance of machinery/equipment should only be performed once measures to prevent falling or runaway of the driven objects have been confirmed.
2. When equipment is removed, confirm that safety process as mentioned above. Turn off the supply pressure for this equipment and exhaust all residual compressed air in the system.
3. Before machinery/equipment is restarted, take measures to prevent quick extension of a cylinder piston rod, etc.

4. Contact SMC if the product will be used in any of the following conditions:

1. Conditions and environments beyond the given specifications, or if product is used outdoors.
2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, clutch and brake circuits in press applications, or safety equipment.
3. An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.



F.R.L. (Filters/Regulators/Lubricators)

Precautions 1

Be sure to read this before handling.

Design

Warning

1. The standard bowl for the air filter, filter regulator, and lubricator and the pressure gauge cover for the regulator and filter regulator, as well as the sight dome for the lubricator are made of polycarbonate. Do not use in an environment where they are exposed to or come in contact with organic solvents, chemicals, cutting oil, synthetic oil, ester-based compressor oil, alkali, and thread lock solutions.
2. Avoid applications where pressurized air is frequently introduced to and released from the standard bowl of an air filter, filter regulator, or lubricator. It may cause the bowl to be damaged. Use of a metal bowl is recommended for such applications.
3. Consult with SMC if the intended application calls for absolutely zero leakage due to special atmospheric requirements, or if the use of a fluid other than air is required.
4. **Regulator and filter regulator**
Be sure to install a safety device to prevent damage or malfunction of the outlet side components when the output pressure exceeds the set pressure value.

Caution

1. Select a model that is suitable for the desired purity by referring to the SMC's Best Pneumatics catalog.
2. Components cannot be used for applications that are outside the range of specifications. Consult with SMC when you anticipate using the component outside the range of its specifications (such as temperature and pressure).
3. **Mist separator and micro-mist separator**
Design the system so that the mist separator and micro-mist separator are installed where there is less pulsation. A pressure difference between internal and external pressure inside the element should be kept within 0.1 MPa, as exceeding this value can cause damage.
4. **Regulator and filter regulator**
Air consumption is 0.1 ℓ /min (ANR) or less under standard specifications. Consult with SMC, if this value is not allowable.
5. **Air combination**
 - 1) When using a 2-unit combination such as ACG□0A, ACG□0B, ACG□0D, secure the top and bottom of the bracket. However, when choosing the ACG20B with a downward facing handle, note that it cannot be fixed with brackets in both the upper and lower side. Consult with SMC if you need to fix the product with brackets in both the upper and lower side.
 - 2) The bracket position varies depending on the attachment (pressure switch) mounting.
 - 3) Brackets cannot be mounted on both sides of pressure switch.
 - 4) Contact SMC for changing the bracket mounting position.

Design

Caution

6. Regarding specific product precautions on air filters, lubricators and mist separators, refer to the catalog, "SMC Best Pneumatics 2004 catalog Vol. 14" or "Precautions for Handling Pneumatic Devices (M-03-E3A)".

Selection

Warning

1. The mineral grease used on internal sliding parts and seals may run down to outlet side components. Consult with SMC if this is not desirable.

2. Regulator and filter regulator

- 1) Residual pressure release (outlet pressure release) is not complete even by releasing the inlet pressure. To release residual pressure, select a model with a back flow mechanism. Using a model without a back flow mechanism makes for inconsistent residual pressure release (i.e., residual pressure may or may not be released) depending upon the operating conditions.
- 2) Contact SMC if air will not be consumed in the system for a long period of time, or if the outlet side will be used with a sealed circuit and a balanced circuit, as this may cause the set pressure of the outlet side to fluctuate.
- 3) Set the regulating pressure range for the outlet pressure of the regulator in a range that is 85% or less of the inlet pressure. If set to above 85%, the outlet pressure will be easily affected by fluctuations in the flow rate and inlet pressure, and become unstable.
- 4) A safety margin is calculated into the maximum regulating pressure range appearing in the catalog's specification table. However, the pressure settings may exceed the number in the specifications.
- 5) Contact SMC when a circuit requires the use of a regulator having relief sensitivity with high precision and setting accuracy.

3. Lubricator

- 1) Contact SMC when the lubricator is used in high frequency operations, such as in a press.
- 2) Lubrication cannot be properly performed if the operating flow rate is too low. Select proper size lubricator by referring the minimum dripping flow rate provided in this catalog.
- 3) Avoid the use of a lubricator that causes back flow as this may cause damage to internal parts.
- 4) Use a check valve (Series AKM) to prevent the lubricant from back flowing when branching the piping on the inlet side.



F.R.L. (Filters/Regulators/Lubricators)

Precautions 2

Be sure to read this before handling.

Design

Warning

4. Float-type auto-drain

Use auto-drain under the following conditions to avoid malfunction.

<N.O. type>

- Operating compressor: 0.75 kW (100 ℓ/min (ANR)) or more
When using 2 or more auto-drains, multiply the above value by the number of auto-drains to find the capacity of the compressors you will need.

For example, when using 2 auto-drains, the compressor capacity with 1.5 kW (200 ℓ/min (ANR)) or greater is required.

- Operating pressure: 0.1 MPa or more

<N.C. type>

- Operating pressure for AD17/27: 0.1 MPa or more
- Operating pressure for AD37/47: 0.15 MPa or more

Mounting

Caution

1. To avoid reversed connections of the air inlet/outlet, make connections after confirming the "IN/OUT" mark or arrows that indicate the direction of air flow. Reversed connections can cause malfunction.
2. Components with a bowl, e.g., air filter, filter regulator, lubricator, must be installed vertically with the bowl facing downward. Otherwise, faulty drain discharge and dripping cannot be verified.
3. Ensure sufficient top, bottom, and front clearance for maintenance and operation of each component. Refer to the dimensions section for the minimum clearance for each component.
4. **Regulator and filter regulator**
 - 1) Be sure to unlock the handle before adjusting the pressure and to lock it after the pressure is set.
 - 2) During transport and installation, do not apply shock to the product, such as by dropping doing so will affect its precision.
 - 3) Do not install it in an area that is exposed to high temperature or humidity, because doing so will lead to improper operation.

Adjustment

Warning

1. Regulator and filter regulator

- 1) Set the regulator while verifying the displayed values of the inlet and outlet pressure gauges. Turning the handle excessively can cause damage to the internal parts.
- 2) Do not use a tool on the pressure regulator handle as this can cause damage. It must be operated manually.

Caution

1. Regulator and filter regulator

- 1) Check the inlet pressure carefully before setting the product.
- 2) To set the pressure using the handle, turn the handle in the direction that increases pressure and lock the handle after the pressure is set. If this is done in the direction that decreases pressure, the pressure may drop from the original set pressure. Turning the handle clockwise increases the outlet pressure, and turning it counterclockwise reduces the pressure.
- 3) After setting the pressure, there may be an occurrence in which the outlet pressure increases when the inlet pressure is removed and then supplied again. In this case, once the air is consumed at the outlet side, the pressure becomes close to the original set pressure.
- 4) Using a product for a long period of time may fluctuate the outlet pressure. Confirm the set pressure periodically.



F.R.L. (Filters/Regulators/Lubricators)

Precautions 3

Be sure to read this before handling.

Piping


⚠ Caution

1. Before piping, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.
2. When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not get inside the piping. Also, when the pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.
3. To screw piping materials into components, tighten with a recommended tightening torque while holding the female thread side. If the minimum tightening torque is not observed, this can cause a looseness and seal failure. On the other hand, excess tightening torque can cause damage to the threads. Furthermore, tightening without holding the female thread side can cause damage due to the excess force that is applied directly to the piping bracket.


Recommended Tightening Torque

(N·m)

Connection thread	1/8	1/4	3/8	1/2
Torque	7 to 9	12 to 14	22 to 24	28 to 30

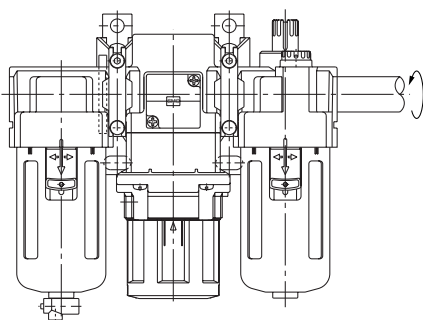

4. Avoid excessive torsional moment or bending moment other than those caused by the equipment's own weight as this can cause damage. Support external piping separately.

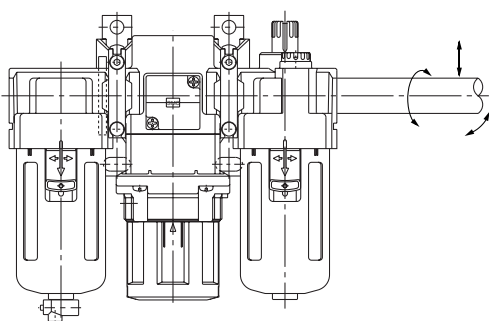

5. Piping materials without flexibility such as steel tube piping are prone to be affected by excess moment load and vibration from the piping side. Use flexible tubing in between to avoid such an effect.
6. Be sure to provide piping for discharging the drainage because there is no valve function equipped with the drain guide. Without piping, drainage or compressed air will be discharged. Also, when performing the piping work, secure the drain guide using a wrench, etc. The case can be damaged if the drain guide is not fixed.

Piping

⚠ Warning

1. Lubricator

Try to avoid riser piping and branch lines as much as possible on the outlet side, otherwise proper lubrication will be compromised.

2. Float type auto-drain

Drain piping should be performed under the following conditions to avoid malfunction.

<N.O. type>

- Use piping whose I.D. is $\phi 6.5$ or larger, and whose length is 5 m or less. Avoid riser piping.

<N.C. type>

- AD27: Use piping whose I.D. is $\phi 2.5$ or larger
AD37/47: Use piping whose I.D. is $\phi 4$ or larger
Length is 5 m or less. Avoid riser piping.

Air Supply

⚠ Caution

1. Use clean air. If chemicals, organic solvents, synthetic oil or corrosive gases are included in the compressed air, parts could be damaged or they can cause a malfunction.
2. When there is excessive condensate, install a device that eliminates water, such as a dryer or water separator (Drain Catch) on the inlet side of the air filter.

Maintenance

⚠ Warning

1. When disassembly or installation is required during the maintenance, repair, or replacement of a device, be sure to follow the instructions provided in the instruction manual or safety instructions in this catalog.
2. Perform periodical inspections to detect any cracks, scratches, or other deterioration of the transparent resin bowl of the air filter, filter regulator, and lubricator or the sight dome of the lubricator.
Replace with a new bowl, sight dome, or metal bowl when any kind of deterioration is found, otherwise this can cause damage.
3. Perform periodical inspections to detect dirt on the transparent resin bowl of the air filter, filter regulator, and lubricator or the sight dome of the lubricator or the pressure gauge cover of regulator and filter regulator. When you find dirt on any of the above devices, clean with a mild household cleanser. Do not use other cleaning agents, otherwise this can cause damage.
4. Manually open or close the drain cock of air filters, filter regulators and lubricators. Using tools can cause the product to be damaged.
5. Air filter
 - 1) Replace the element every 2 years or when the pressure drop becomes 0.1 MPa, whichever comes first, to prevent damage to the element.
 - 2) Release accumulated condensate periodically before it reaches the maximum capacity. Condensate that flows out to the outlet side can cause malfunctions.



F.R.L. (Filters/Regulators/Lubricators)

Precautions 4

Be sure to read this before handling.

Maintenance

Warning

1 Lubricator

Use class 1 turbine oil (without additives) ISO VG32. Using other lubricant can cause damage to devices and result in malfunctions.

Caution

1 Perform periodical inspections of the filter element and replace it as necessary. Check the element whenever the outlet pressure drops below normal or air does not flow smoothly during operation.

2 Regulator and filter regulator

Check the sliding part or seat of the internal valve when a setting malfunction or relief leakage occur and temporary or emergency repairs need to be made.

3 Lubricator

Check the dripping amount once a day. Drip failure can cause damage to the components being lubricated.

4. Float type auto-drain

- 1 Turn the handle counterclockwise to release the drain manually. Avoid applying excessive torque to the handle, such as by using a tool, as this can damage an auto-drain. After releasing the condensate, turn the handle clockwise until it stops.
- 2) Air leakage or other performance malfunctions can occur if premature clogging of the element or pressure drop causes the pressure inside the bowl to get outside the specified pressure range parameters. Check the pressure whenever such an irregularity occurs.



Series ACG/ARG/AWG

Specific Product Precautions

Be sure to read this before handling.


Procedure for replacing or changing the mounting angle of a pressure gauge

Warning

When replacing a pressure gauge and/or changing the mounting angle, release the inlet and outlet pressure completely. It is dangerous to replace the pressure gauge or change the mounting angle while it is under pressure.


1. Advance preparation

Keep the handle unlocked and completely loosened. The unlocked condition of the handle can be visually confirmed by the "Orange line" shown near the bottom of the handle.

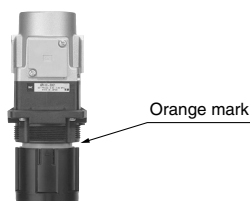

2. Removing the handle


To remove the handle, align the ▼ mark on the handle and the ▲ mark on the bonnet and then pull the handle.

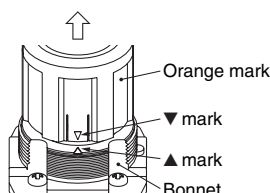

3. Removing the clip

When the ▲ mark on the bonnet and the ▼ mark on the pressure regulator guide are aligned, the clip can be seen from the side view of the bonnet. The clip can be picked and removed with tweezers.


* When adjusting the mark, turn the pressure regulator guide clockwise for adjustment.

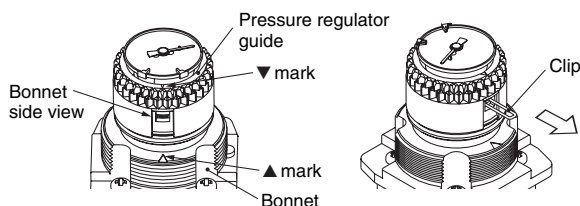

4. Removing the pressure gauge

Pull the pressure gauge out by holding the outer edge of the dial.

* Do not touch the internal mechanical portion (shown inside the dotted box). Accuracy of the pressure gauge may be adversely affected.

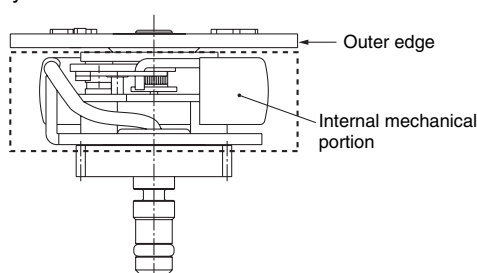

5. Setting the pressure gauge

After the mounting angle is adjusted as required, hold the outer edge of the pressure gauge dial and gently press down. For reference, the required clearance between the bottom of the dial and the top of the pressure regulator guide is shown in table 1.

Note 1) When the pressure gauge cannot be easily positioned, slightly rotate it. (The cog from the planet gear of the pressure regulator guide may be caught vertically in the cog from the sun gear which is mounted and integrated with the pressure gauge)

Note 2) Position the pressure gauge to the very bottom.

Note 3) Attached to the tip of the pressure gauge is an O-ring with grease applied to it. Please use caution to prevent particles and/or dust from entering the pressure gauge when it is set. Otherwise, they may cause air leakage.

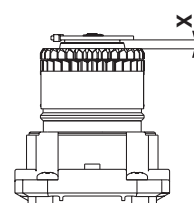


Table 1. Clearance Dimensions

	ARG20 AWG20	ARG30 AWG30	ARG40 AWG40
X dimension (reference value)	2.6 mm	3.3 mm	3.3 mm

6. Setting the clip


Insert the clip in the side of the bonnet when the ▼ mark on the pressure regulator guide and the ▲ mark on the bonnet are aligned. When inserting and setting the clip, use an instrument with a narrow tip, such as tweezers.

Note 1) The clip is slightly tapered towards its tip to prevent it from being released. Set the clip by slightly opening its tip.

Note 2) When the clip cannot easily be set, the cause may be as follows:

(1) The pressure regulator screw might have been in a lower position than then the current one. (The pressure regulator screw may reach a lower position if the pressing force of the pressure regulator screw is excessively applied. This occurs because there is a clearance between the pressure regulator nut and pressure spring, when the pressure regulator screw is loosened completely.)

(2) The pressure gauge is not firmly set.
Countermeasures Refer to 5 "Setting the pressure gauge".

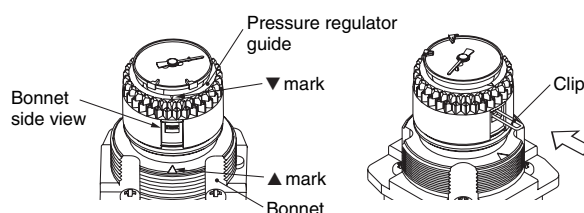


7. Setting the handle

Finished when the handle is set.



SMC'S GLOBAL MANUFACTURING, DISTRIBUTION AND SERVICE NETWORK

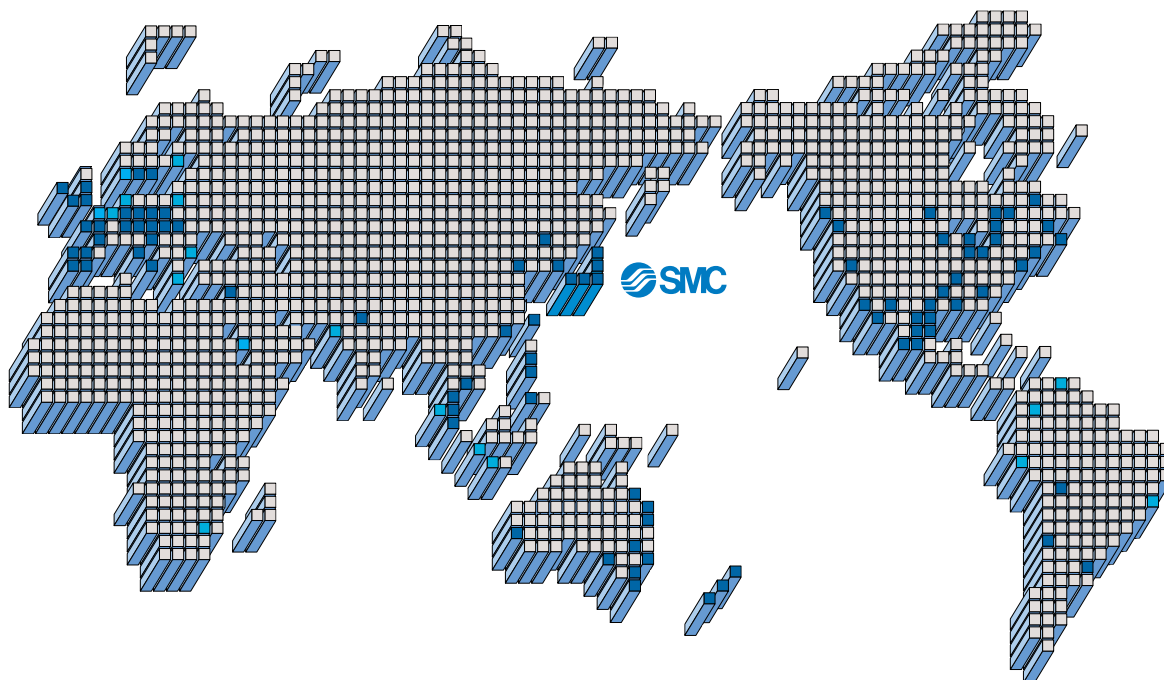

EUROPE

AUSTRIA

SMC Pneumatik GmbH

BELGIUM

SMC Pneumatics N.V./S.A.

BULGARIA

SMC Industrial Automation Bulgaria EOOD

CROATIA

SMC Industrijska automatika d.o.o.

CZECH REPUBLIC

SMC Industrial Automation CZ s.r.o.

DENMARK

SMC Pneumatik A/S

ESTONIA

SMC Pneumatics Estonia OÜ

FINLAND

SMC Pneumatics Finland OY

FRANCE

SMC Pneumatique SA

GERMANY

SMC Pneumatik GmbH

HUNGARY

SMC Hungary Ipari Automatizálási Kft.

IRELAND

SMC Pneumatics (Ireland) Ltd.

ITALY

SMC Italia S.p.A.

LATVIA

SMC Pnuematics Latvia SIA

NETHERLANDS

SMC Pneumatics BV

NORWAY

SMC Pneumatics Norway A/S

POLAND

SMC Industrial Automation Polska Sp.z.o.o.

ROMANIA

SMC Romania s.r.l.

RUSSIA

SMC Pneumatik LLC.

SLOVAKIA

SMC Priemyselná automatizácia, s.r.o.

SLOVENIA

SMC INDUSTRIJSKA AVTOMATIKA d.o.o.

SPAIN/PORTUGAL

SMC España, S.A.

SWEDEN

SMC Pneumatics Sweden AB

SWITZERLAND

SMC Pneumatik AG

UK

SMC Pneumatics (U.K.) Ltd.

ASIA

CHINA

SMC (China) Co., Ltd.

HONG KONG

SMC Pneumatics (Hong Kong) Ltd

INDIA

SMC Pneumatics (India) Pvt. Ltd.

INDONESIA

PT SMC Pneumatics Indonesia

MALAYSIA

SMC Pneumatics (S.E.A.) Sdn. Bhd.

PHILIPPINES

SHOKETSU-SMC Corporation

SINGAPORE

SMC Pneumatics (S.E.A.) Pte. Ltd.

SOUTH KOREA

SMC Pneumatics Korea Co., Ltd.

TAIWAN

SMC Pneumatics (Taiwan) Co., Ltd

THAILAND

SMC Thailand Ltd.

NORTH AMERICA

CANADA

SMC Pneumatics (Canada) Ltd.

MEXICO

SMC Corporation (Mexico) S.A. de C.V.

USA

SMC Corporation of America

SOUTH AMERICA

ARGENTINA

SMC Argentina S.A.

BOLIVIA

SMC Pneumatics Bolivia S.R.L.

BRAZIL

SMC Pneumaticos Do Brazil Ltda.

CHILE

SMC Pneumatics (Chile) S.A.

VENEZUELA

SMC Neumatica Venezuela S.A.

OCEANIA

AUSTRALIA

SMC Pneumatics (Australia) Pty Ltd.

NEW ZEALAND

SMC Pneumatics (N.Z.) Ltd.



Safety Instructions

Be sure to read "Precautions for Handling Pneumatic Devices" (M-03-E3A) before using.

SMC Corporation

1-16-4 Shimbashi, Minato-ku, Tokyo 105-8659 JAPAN

Tel: 03-3502-2740 Fax: 03-3508-2480

URL <http://www.smcworld.com>

© 2005 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice
and any obligation on the part of the manufacturer.

D-DN

1st printing JR printing JR 120DN Printed in Japan.

This catalog is printed on recycled paper with concern for the global environment.