


SMC Pneumatic Clean Series

Particle generation level of SMC pneumatic clean series equipment can be classified into 1-4 grades by the particle generation measurement test, and each equipment can be used according to the clean room cleanliness class.

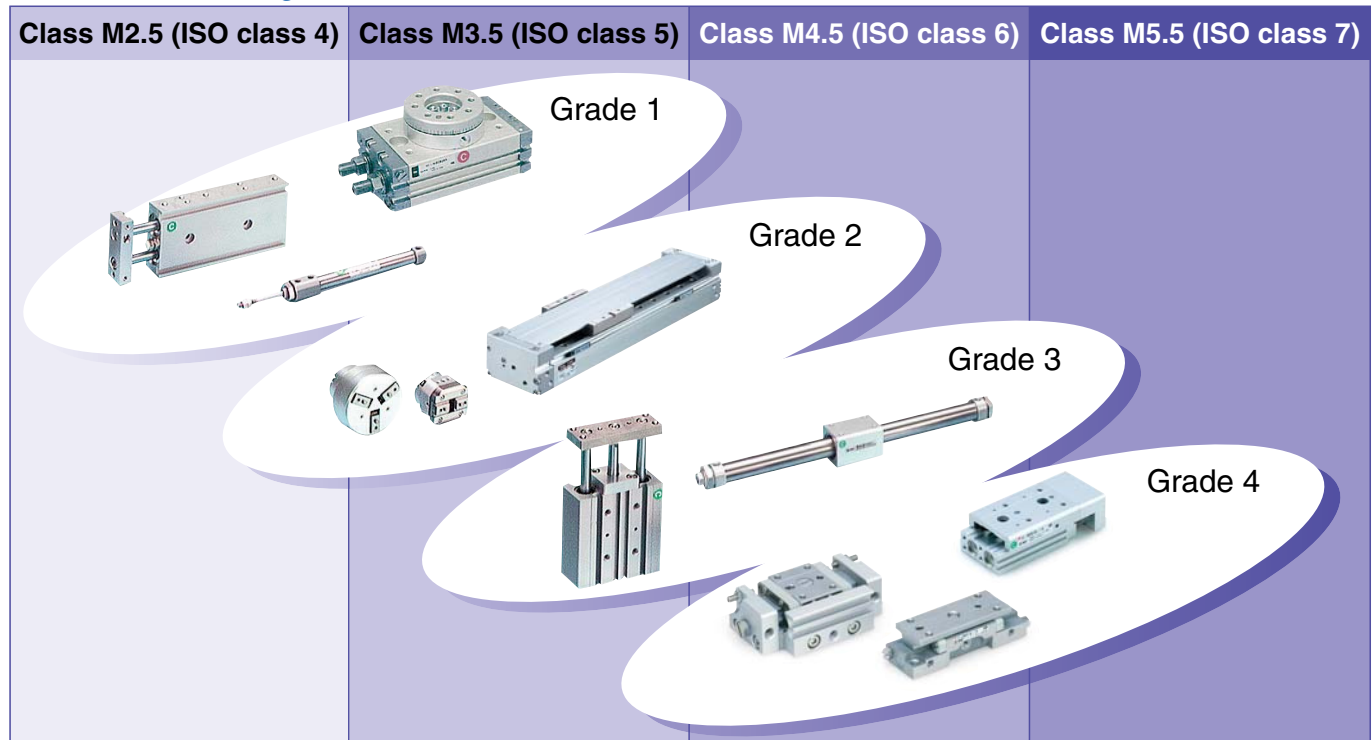

The view above shows an image. Refer to front matter 13 to 22 and the specifications for particle generation grade of each equipment.

Clean Series

Series 10-/11-/12-/13-

Available for clean environment.

Particle generation in a clean room can be prevented.

Applicable model

Actuator, (Air cylinder, Rotary actuator, Air gripper), Directional control valve, Flow control equipment, Filter & Pressure control equipment, Fittings & Tubing, Air preparation equipment, Pressure switch, Clean gas filter

Note) 11-/12-/13- are available only for actuators.

Special Clean Series

Special clean series pursues improvement of cleanliness than the clean series.

This series was developed considering construction, material and assembly environment for use in a clean environment.

Applicable model

Clean rodless cylinder, Clean regulator, Clean one-touch fitting, Clean tubing, Clean gas filter

Copper, Fluorine, and Silicon free + Low particle generation

Series 21-/22-

For the environment in which the use of copper, fluorine and silicon are restricted.


The same structure as clean series. (Grease and package style are different.)

Applicable model

Actuator (Air cylinder, Rotary actuator, Air gripper), Directional control valve, Flow control equipment, Pressure control equipment, Fittings & Tubing

Note) 22-: Available only for actuators.

Particle generation grade classification

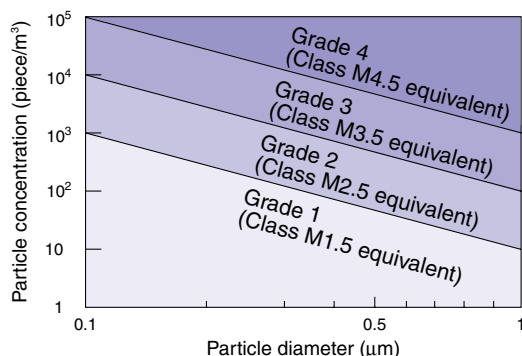

Cleanliness class

SMC	Fed.Std.209E	ISO 14644-1
	SI unit	
Grade 1	M1.5	ISO class 3
Grade 2	M2.5	ISO class 4
Grade 3	M3.5	ISO class 5
Grade 4	M4.5	ISO class 6
	M5.5	ISO class 7
	M6.5	ISO class 8



The grade classification is the SMC original method. The smaller the grade no., the less the particle generation.
The upper concentration limit of the cleanliness class based on Fed. Std. 209E-1992 is shown in parentheses.

(Refer to Front matter 23 "Particle generation measuring method" and)
Front matter 24 "Comparison of cleanliness standards" for details.


Note) Do not use one-touch fittings 10-KQ (including solenoid valves with built-in one-touch fittings and speed controllers with one-touch fittings) in Grade 1 or Grade 2 areas because internal pressure change may move the collet chuck slightly, which may cause particle generation. This does not apply to insert fittings (KF), miniature fittings (M, MS), clean one-touch fittings (KP, KPQ, KPG) and speed controllers with clean one-touch fittings (AS-FPQ/FPG).

No dust is carried into the clean room.


After inspection, products are blown with high purity air (clean bench/class M3.5) in a clean environment. Products are sealed and shipped in anti-static double bags.






10-/11-/12-/13- (Clean series.)

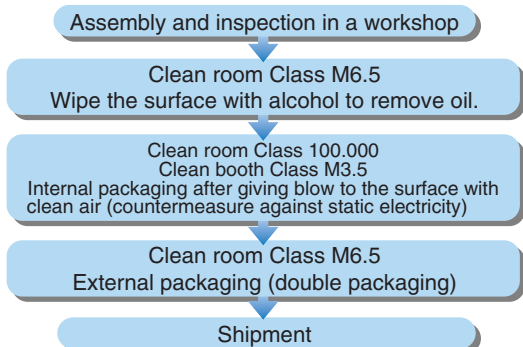



Products assembled in a clean room (Special clean series)

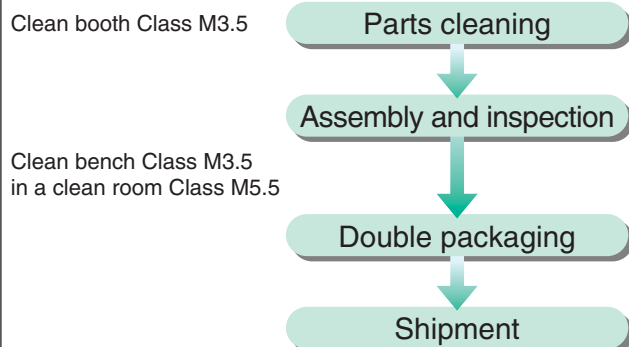

21-/22-series are packed in an usual manner (assembly and inspection in a workshop — packaging — shipment). Please contact SMC for clean packaging.

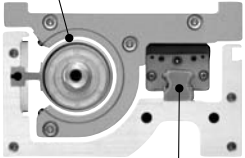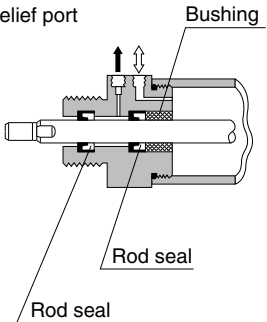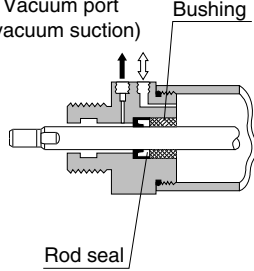Series 13-	Special clean series	Series 21-	Series 22-
• Guide cylinder • Air slide table Single seal type/ vacuum suction (Series 11- equivalent) and specially treated guide  Ball bushing guide Linear guide	• Clean rodless cylinder No contact between the cylinder tube exterior and the slider interior  Linear guide Special treatment	• Double seal type / release to atmosphere 	• Single seal type/ vacuum suction 
	No	Copper, fluorine and silicon-free	
	Fluorine grease	Lithium soap base grease	
	Parts are cleaned and assembled in a clean room.	General environment (Assembly and inspection in a workshop)	
blow to the surface with clean air.		Standard packaging ^(Note)	

(Note) Contact SMC for clean packaging.

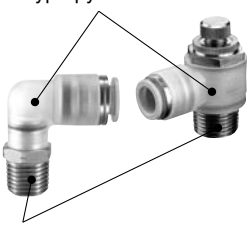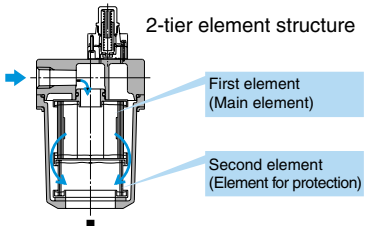
Special clean	Series 21-		
• Clean one-touch fittings(for drive system air piping) • Clean speed controller Polypropylene resin  Metal part Brass (Electroless nickel plated) or Stainless steel 304	• Exhaust cleaner for clean room  Possible to exhaust in a clean room. • Clean gas filter PTFE membrane element 	• Directional control valve • Pressure control equipment • The same construction as Series 10-	• Clean one-touch fittings (for drive system air piping) • Clean speed controller No seal to the thread parts * Available for uni thread. (Made to Order)
No		Copper, fluorine and silicon-free	
Fluorine grease	—	Lithium soap base grease	
assembled in a clean room.		General environment (Assembly and inspection in a workshop)	Parts are cleaned and assembled in a clean room.
giving blow to the surface with clean air.		Standard packaging ^(Note)	

(Note) Contact SMC for clean packaging.

System Circuit in Clean Room

Following are the actuator driving system and circuit configuration of blow system employed to reduce particle generation when using pneumatic equipment in a clean room.


• Actuator driving system

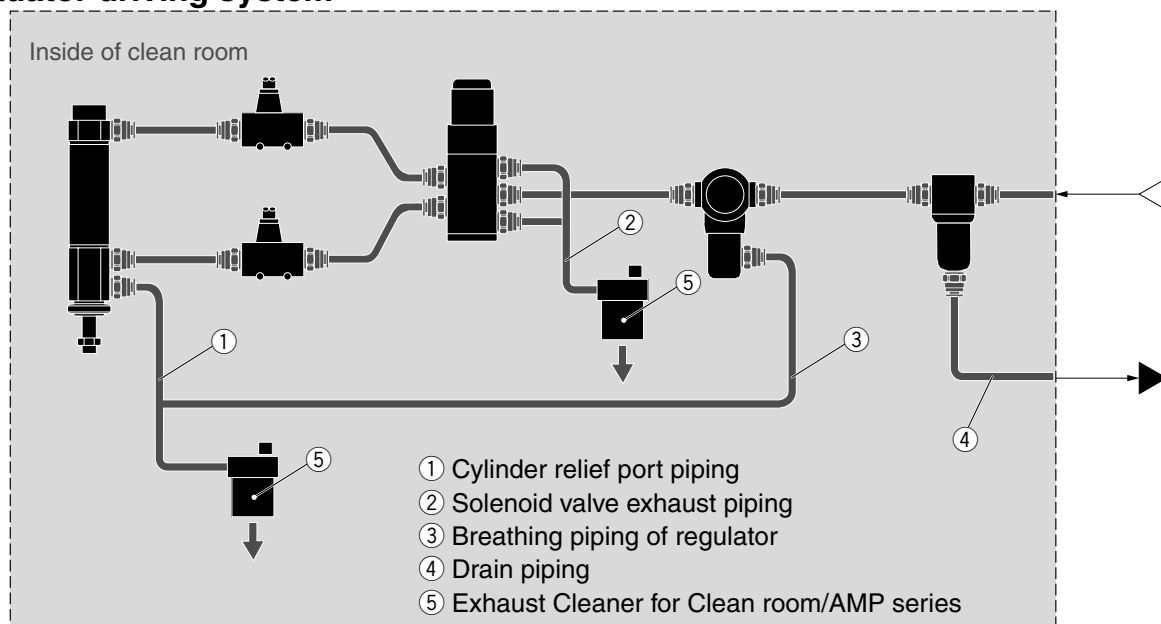

• Cylinder relief port piping

Series 10-/12-/21- (atmospheric release type)


Connect the relief port piping with the dedicated duct piping installed outside the clean room or with the exhaust cleaner for clean room/AMP series.

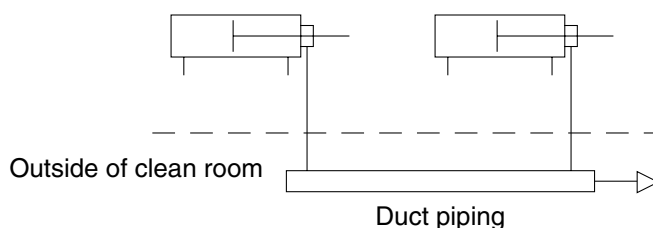

Series 11-/13-/22- (Vacuum suction type)


With a vacuum pump

When several air cylinders are used together or a model with high vacuum suction flow is used.

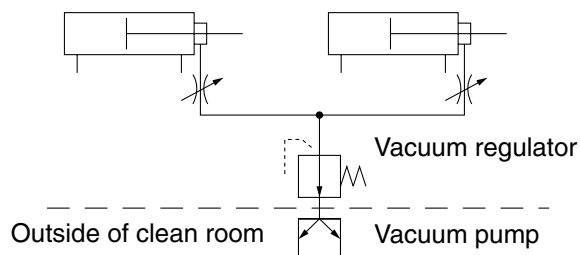

With an ejector

When a few air cylinders are locally used.

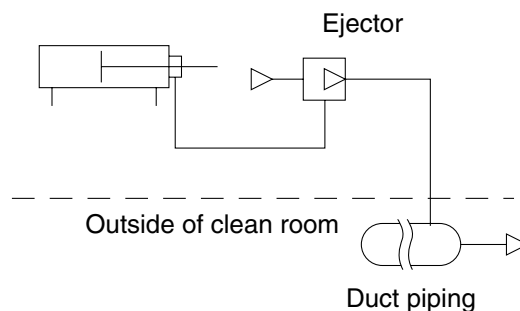

System Circuit in Clean Room

• Clean blow system

Example of equipment to suit each clean blow grade



Line A: For oil-free air blow

Line B: For clean blow


Line C: For clean blow
(With clean gas filter)

Line D: For N₂ blow

Change in particle generation with time

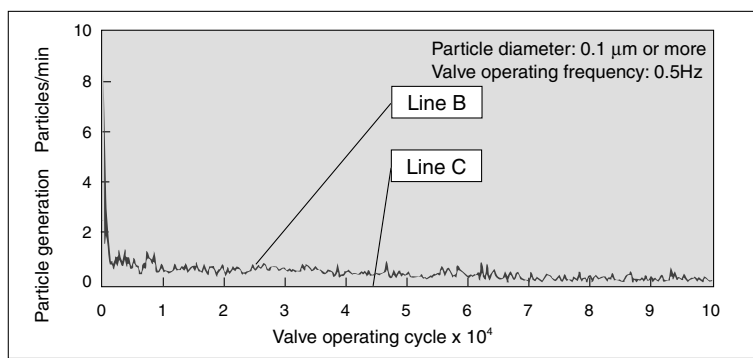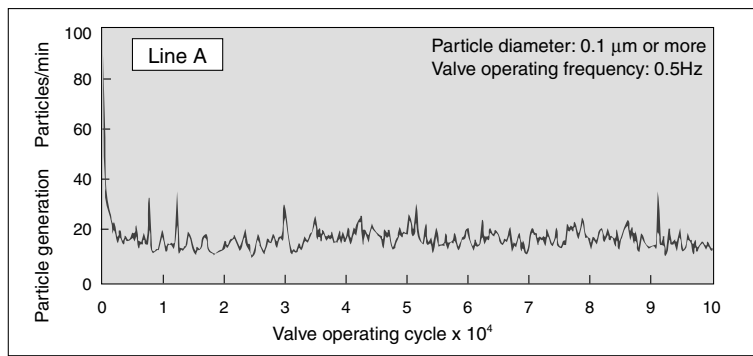


• Example of air line equipment

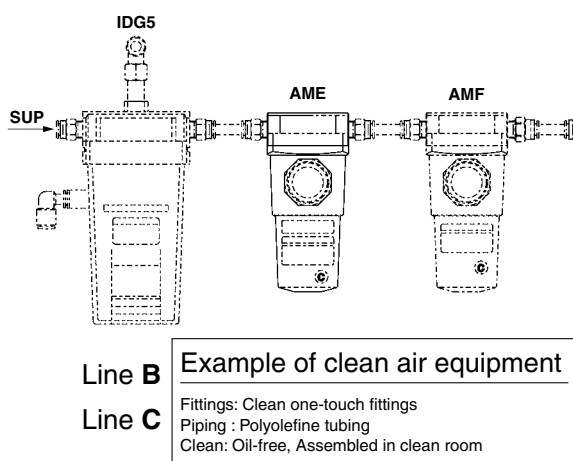


Line A Example of oil-free air equipment

Fitting: Oil-free one-touch fitting
Piping: Urethane tuing
Oil-free: Wetted parts oil-free

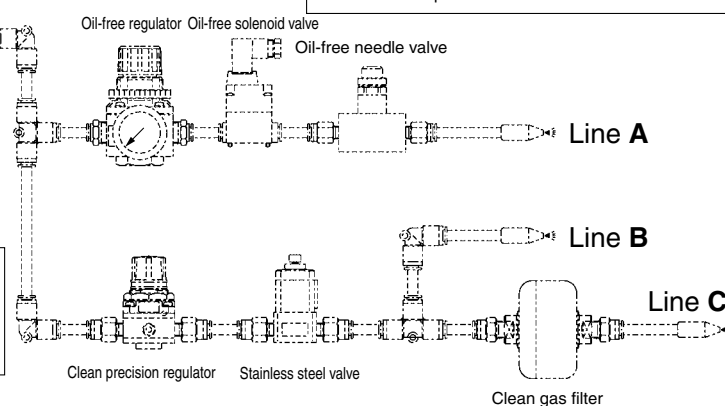

• Example of N₂ equipment

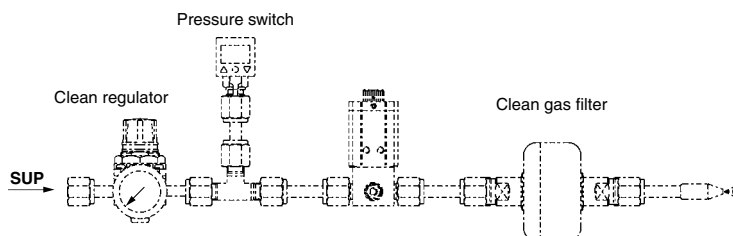

Feature (Line D)


Excellent corrosion resistance (Body SUS316L)
Integral fitting type
Seal material : Fluoro resin or Stainless steel
Precision cleaning, Assembly in a clean room

How to Use Clean Series

The position of the pneumatic equipment to the workpiece is determined by the particle generation degree.

$$\boxed{\text{Particle generation grade no. of the pneumatic equipment}} \leq \boxed{\text{The article concentration grade no. around the workpiece}}$$

Classification of particle generation grades

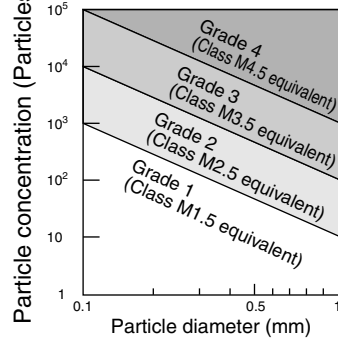

The grade classification is the SMC original method. The smaller the grade number, the less the particle generation. The upper concentration limit of the cleanliness class based on Fed. Std. 209E-1992 is shown in parentheses. (Refer to Front matter 23 "Particle generation measuring method" and Front matter 24 "Comparison of cleanliness standards" for details.)

Note) Do not use one-touch fittings 10-KQ (including solenoid valves with built-in one-touch fittings and speed controllers with one-touch fittings) in Grade 1 or Grade 2 areas because internal pressure change may cause slight move of the collet chuck, which may cause particle generation. This does not apply to insert fittings (KF), miniature fittings (M, MS), clean one-touch fittings (KP, KPQ, KPG) and speed controllers with clean one-touch fittings (AS-FPQ/FPQ).

Cleanliness class

SMC	Fed.Std.209E	ISO 14644-1
	SI unit	
Grade 1	M1.5	ISO class 3
Grade 2	M2.5	ISO class 4
Grade 3	M3.5	ISO class 5
Grade 4	M4.5	ISO class 6
—	M5.5	ISO class 7
—	M6.5	ISO class 8

Selection procedure

(1) Required clean room cleanliness?

Class M2.5 or Class M3.5 or Class M4.5?

(2) Air flow to the workpiece (Refer to Diagram 1.)

(3) Where is the pneumatic equipment located? (Refer to Diagram 2.)

(4) Determine the particle concentration grade no. around the workpiece based on above (1) to (3). (Refer to Table 1.)

(5) Select the equipment to be used. (Refer to Front matter 13 to 22.)

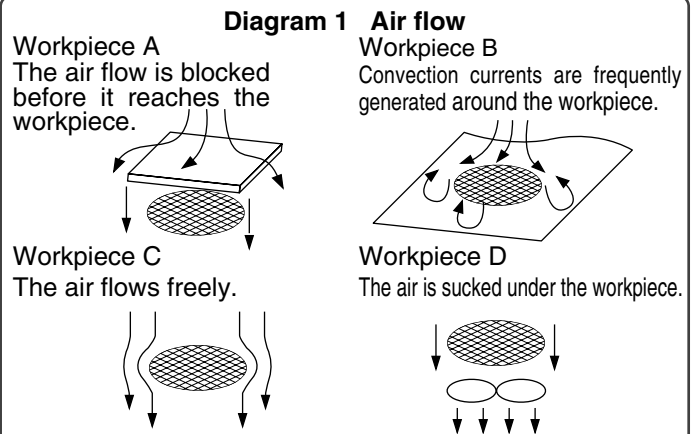


Diagram 2 Installation location of equipment

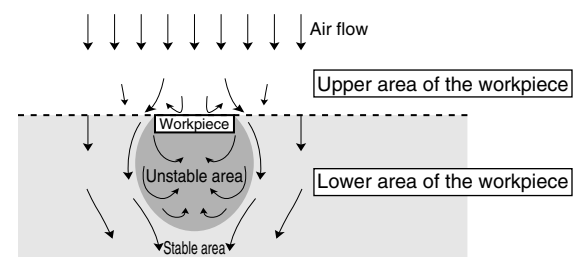


Table 1 Particle concentration grade around the workpiece

(2) Workpiece		A,B			C			D		
(3) Position of the equipment to be used		Upper area of the workpiece	Lower area of the workpiece		Upper area of the workpiece	Lower area of the workpiece		Upper area of the workpiece	Lower area of the workpiece	
			Unstable area	Stable area		Unstable area	Stable area		Unstable area	Stable area
(1) Cleanliness	Class M2.5				Grade 1		Grade 2	Grade 1	Grade 2	
	Class M3.5					Grade 2	Grade 3			Grade 3
	Class M4.5	Grade 1	Grade 2	Grade 3	Grade 2	Grade 3	Grade 4	Grade 2	Grade 3	Grade 4

: Class M2.5 and M3.5 levels of cleanliness cannot be achieved in area due to dust accumulation or flotation.

Cylinder

Description			Model	Particle generation grade by series						
				Standard	10-	11-	12-	13-	21-	22-
	Air Cylinder	Standard	10-/11- 21-/22- CJ2	3	2	1			2	1
		Double rod	10-/11- 21-/22- CJ2W							
		Direct mount type	10-/11- 21-/22- CJ2RA							
	Air Cylinder	Standard	10-/11- 21-/22- CM2	3	2	1			3	1
		Double rod	10-/11- 21-/22- CM2W							
		Direct mount type	10-/11- 21-/22- CM2R							
		End lock	10-/11- 21-/22- CBM2							
	Air Cylinder	Standard	10-/11- 21-/22- CG1	3	2	1			3	1
		Double rod	10-/11- 21-/22- CG1W							
		Direct mount type	10-/11- 21-/22- CG1R							
	Air Cylinder Standard		10-/11- 21-/22- CA2	3	2	1			3	1
	Mini-free Mount Cylinder		10- 11- CUJ	3	2	1				
	Free Mount Cylinder		10-/11- 21-/22- CDU	3	2	1			3	1
	Compact Cylinder		10-/11- 21-/22- CQS	3	2	1			2	1
			10-/11- 21-/22- CQ2	3	2	1			2	1
	Sine Cylinder		10- 11- REC	3	2	1				
	Dual Rod Cylinder		11-/12- 21-/22- CXSJ	3, 4 ^{Note)}		1	2		3	1
			10-/11-/12- 21-/22- CXS	3, 4 ^{Note)}	2	1	2		3	1

Note) Grade is different depending on the type of the ball bearing.

Values in show grades.

 No grade applies to the blanks.

CXSJ

Model	Bearing type	Standard
CXSJL	Ball bushing bearing	3
CXSJM	Slide bearing	4

CXS

Model	Bearing type	Standard
CXSL	Ball bushing bearing	3
CXSM	Slide bearing	4

Particle Generation Measuring Method


The particle generation data for SMC CLEAN SERIES are measured in the following test method.

Test method (Example)

Place the specimen in the acrylic resin chamber and operate it while supplying the same flow rate of clean air as the suction flow rate of the measuring instrument (15ℓ/min). Measure the changes of the particle concentration over time until the number of cycles reaches the specified point. The chamber is placed in a Class M3.5 clean bench.

Measuring conditions

Chamber	Internal volume	15ℓ
	Supply air quality	Same quality as the supply air for driving
Measuring instrument	Description	Laser dust monitor (Automatic particle counter by light-scattering method)
	Model no.	TS-1500
	Minimum measurable particle diameter	0.17μm
	Suction flow rate	15ℓ/min
	Manufacturer	Hitachi Electronics Engineering Co. Ltd.
Setting conditions	Sampling time	5min
	Interval time	55min
	Sampling air flow	75ℓ

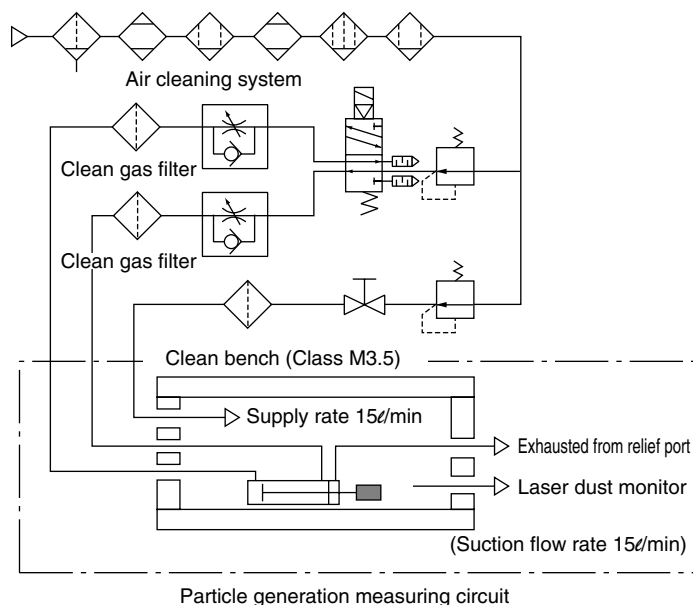

Evaluation method

To obtain the measured values of particle concentration, the accumulated value ^{Note 1)} of particles captured every 5 minutes, by the laser dust monitor, is converted into the particle concentration in every 1m³.

When determining particle generation grades, the 95% upper confidence limit of the average particle concentration (average value), when each specimen is operated at a specified number of cycles ^{Note 2)} is considered.


The plots in the graphs indicate the 95% upper confidence limit of the average particle concentration of particles with a diameter within the horizontal axis range.

Note 1) Sampling air flow rate: Number of particles contained in 75ℓ of air


Note 2) Actuator: 1 million cycles

Solenoid valve: 2 million cycles


Particle generation characteristics of CM2

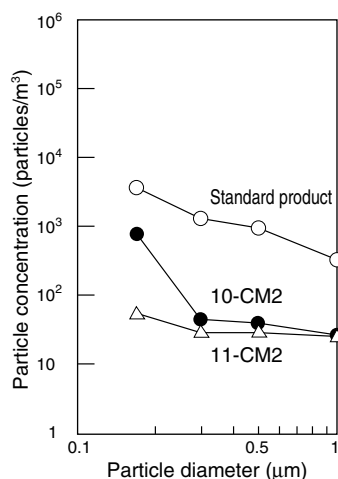

Particle generation characteristics of CXSL

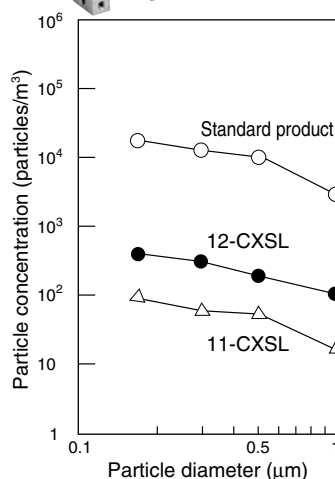


Particle generation characteristics of CY1B

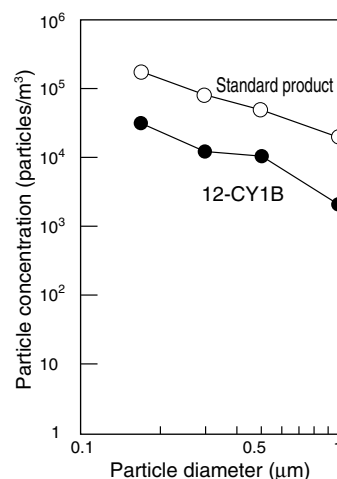

Comparison of Cleanliness Standards

Standard	Fed.Std.209E		ISO 14644-1
Cleanliness classes	Corresponding class indication	British unit: Class 1 to 100.000 SI unit: Class M1 to M7 U descriptor: Particles diameter smaller than 0.1 µm	ISO Class 1 to 9 Intermediate classes available U descriptor: Particles smaller than 0.1 µm M descriptor: Particles larger than 5.0 µm
		(British unit)	(SI unit)
		1	M1.5
		10	M2.5
		100	M3.5
		1000	M4.5
		10000	M5.5
		100000	M6.5
			ISO Class 9
Cleanliness class indication		The number of particles diameter larger than 0.5 µm in an air volume of 1m³ is expressed in 10M or coefficient Nc. Cleanliness class: Nc or M	The number of particles larger than 0.1 µm in an air volume of 1m³ is expressed in 10 ^N . ISO Class N: Occupancy state: Considered particle size
Calculation of the maximum permitted concentration of particulate cleanliness classes		British unit: Number of particles/ft³ = Nc x (0.5/D) ²² SI unit: Number of particles/m³ = 10M x (0.5/D) ²²	Cn = 10 ^N x (0.1/D) ^{2.08}
Evaluation method using a simple sampling		① Number of sampling locations: 2 to 9 95% UCL of the mean and the mean of the averages ② Number of sampling locations: 10 or more The mean	① Number of sampling locations: 2 to 9 95% UCL of the mean and the mean of the averages ② Number of sampling locations: 1, or 10 or more The mean
Number of sampling locations		① Non-unidirectional airflow: at least two locations N _L = A x 64/(10M) ^{0.5} ② Unidirectional airflow: at least two locations Smaller value between N _L =A/2.32 and N _L =A x 64/(10M) ^{0.5}	Derive it from the area of the cleanroom or clean air controlled space. The number of sampling locations N _L = (A) ^{0.5} At least one location
Min. sampling air flow volume		2 liters or a sufficient volume of air that a minimum of 20 particles could be counted if the particle concentration were at the class limit.	2 liters or a sufficient volume of air that a minimum of 20 particles could be counted if the particle concentration were at the class limit. Min. sampling time: 1 minute
Number of samplings		Total number of samplings in each clean zone: 5 times or more	Where only one sampling location is required, take a minimum of three single sample volumes at that location.
Sampling method		5.0 µm and larger: Constant velocity and suction in the same direction of the air flow 0.5 to 5 µm: Correction possible when it is sucked at a nonconstant velocity	Suction in the same direction as the airflow If the direction of the airflow is not predictable, the inlet of the sampling probe shall be directed vertically upward.

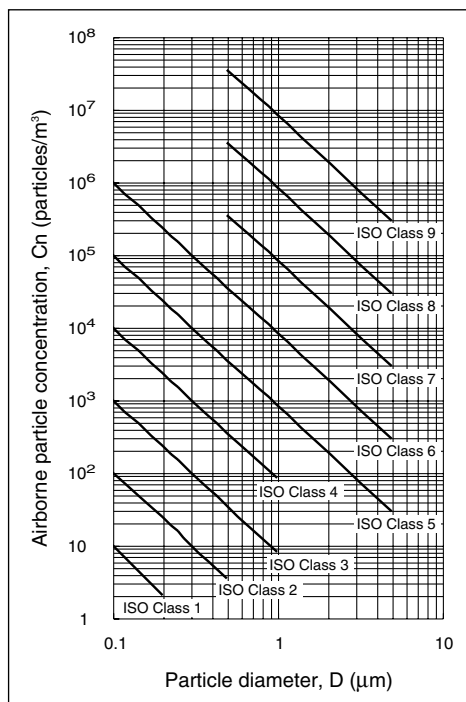

Cleanliness class (N)	Maximum concentration limit (particles/m³)					
	Considered particle diameter (µm)					
	0.1	0.2	0.3	0.5	1	5
ISO Class	1	10	2			
	2	100	24	10	4	
	3	1000	237	102	35	8
	4	10000	2370	1020	352	83
	5	100000	23700	10200	3520	832
	6	1000000	237000	102000	35200	8320
	7			352000	83200	2930
	8			3520000	832000	29300
	9			35200000	8320000	293000

Note) Concentration data with no more than three significant figures be used in determining the classification level.

$$Cn = 10^N \times (0.1/D)^{2.08}$$

Cn: The maximum permitted concentration of airborne particles that are equal to or larger than the considered particle size (D). Cn is rounded down to the nearest whole number, using no more than three significant figures.

N: Class no.(1 to 9), intermediate class (1.1 to 8.9)

D: Measured particle diameter (µm)

0.1: Constant number (µm)



Series 10-/11- 21-/22-CM2

Air cylinder / ø20, ø25, ø32, ø40

How to Order

• **Clean series**

10	Relief type
11	Vacuum suction type

• **Built-in magnet**

Nil	No
D	With auto switch (Built-in magnet)

• **Mounting style**

B	Basic style
L	Axial foot style
F	Rod side flange style
G	Head side flange style
BZ	Boss-cut basic style
FZ	Boss-cut rod side flange style

• **Copper, fluorine and silicon-free + Low particle generation**

21	Relief type
22	Vacuum suction type

• **Bore size (mm)**

• **Port thread type**

Nil	Rc
TN	NPT
TF	G

• **Cushion**

Nil	Rubber bumper
A	Air cushion

• **Number of auto switches**

Nil	2 pcs.
S	1 pc.
n	"n" pcs.

• **Type of auto switch**

Reed switch	C73
Solid state switch	H7B, H7A1

• **Cylinder stroke (mm)**



Model

Model	Bore size (mm)	Port size	Lubrication	Action	Standard stroke (mm)	Auto switch mounting	Cushion	
							Rubber	Air
Relief type	10-/21-CM2□20	20	Non-lube	Double acting, single rod	25, 50, 75, 100, 125, 150, 175, 200, 250, 300	○	○	○
	10-/21-CM2□25	25						
	10-/21-CM2□32	32						
	10-/21-CM2□40	40						
Vacuum suction type	11-/22-CM2□20	20	Non-lube	Double acting, single rod	25, 50, 75, 100, 125, 150, 175, 200, 250, 300	○	○	○
	11-/22-CM2□25	25						
	11-/22-CM2□32	32						
	11-/22-CM2□40	40						

Specifications

Item	Bore size (mm)
	20/25/32/40
Proof pressure	1.5MPa
Maximum operating pressure	1.0MPa
Minimum operating pressure	0.05MPa
Ambient and fluid temperature	Without auto switch: - 10°C to 70°C With auto switch: - 10°C to 60°C (No freezing)
Piston speed	10-/11-: 30 to 400 mm/s, 21-/22-: 50 to 400 mm/s
Stroke length tolerance	$+1.4$ 0
Mounting style	Basic style/Axial foot style/Rod side flange style/Head side flange style
Grease	10-/11-: Fluorine grease 21-/22-: Lithium soap based grease
Particle generation grade (Refer to front matter pages 13 to 22 for details.)	10-: Grade 2, 21-: grade 3 11-/22-: Grade 1

Suction flow rate of vacuum suction type (Reference values)

Bore size	Suction flow rate d/min (ANR)
20/25/32/40	2

Auto switch specifications (Refer to Best Pneumatics catalog for detailed specifications and auto switches not in the following table.)


Type	Auto switch part no.	Load voltage	Load current range	Indicator light	Application
Reed switch	D-C73	24 VDC, 100 VAC	5 to 40 mA, 5 to 20 mA	○	Relay, PLC
Solid state switch	2-wire D-H7B	24 VDC (10 to 28 VDC)	5 to 40 mA	○	24 VDC relay, PLC
	3-wire D-H7A1	28 VDC or less	40 mA or less	○	IC circuit, Relay, PLC

Refer to page 182 for a list of applicable auto switches.


PLC: Programmable Logic Controller

Proper auto switch mounting position (Detection at stroke end)

D-C73

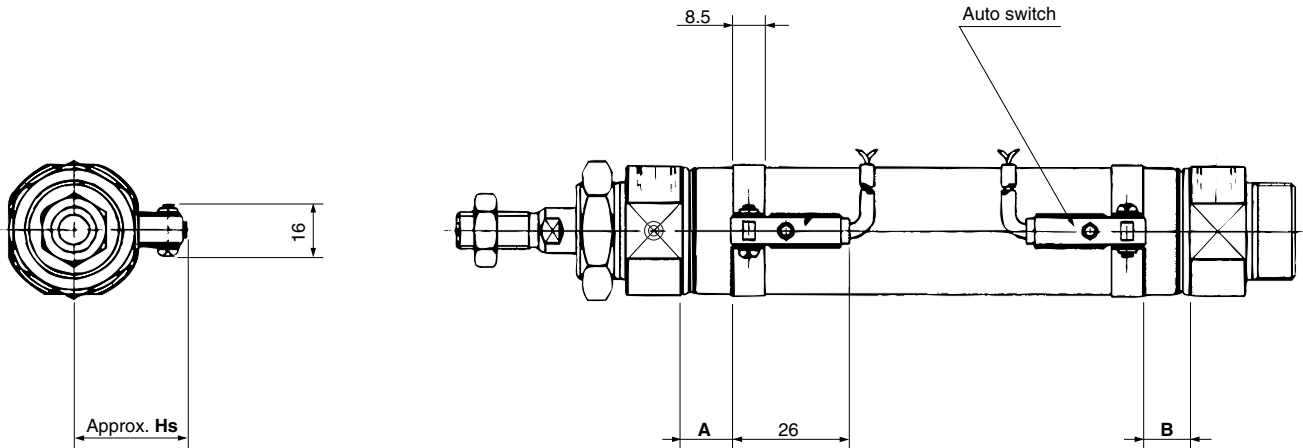

D-H7A1/H7B

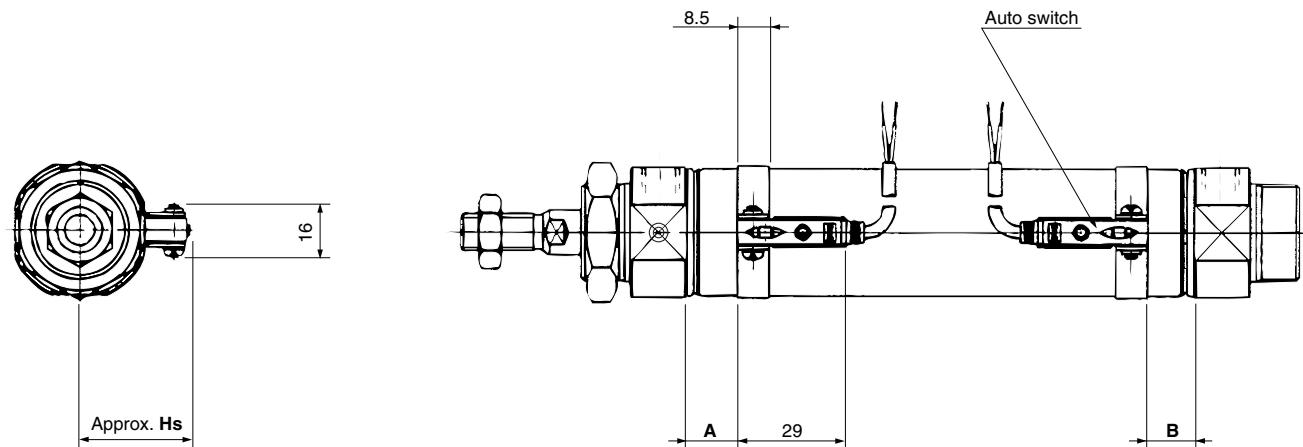


Bore size	D-C73			D-H7A1/H7B		
	A	B	Hs	A	B	Hs
20	7 (4.5)	6 (3.5)	22.5	6 (3.5)	5 (2.5)	22.5
25	7 (4.5)	6 (3.5)	25	6 (3.5)	5 (2.5)	25
32	8 (5.5)	7 (4.5)	28.5	7 (4.5)	6 (3.5)	28.5
40	14	12	32.5	13	11	32.5

Note 1) Descriptions in parentheses are for types with air cushion.

Note 2) The above values should be used as a guide for detection at stroke end. When actually mounting the auto switch, adjust the position after confirming the operating conditions of the auto switch.


Basic style (B) / ¹⁰⁻₁₁₋CM2B, ²¹⁻₂₂₋CM2B

With rubber bumper

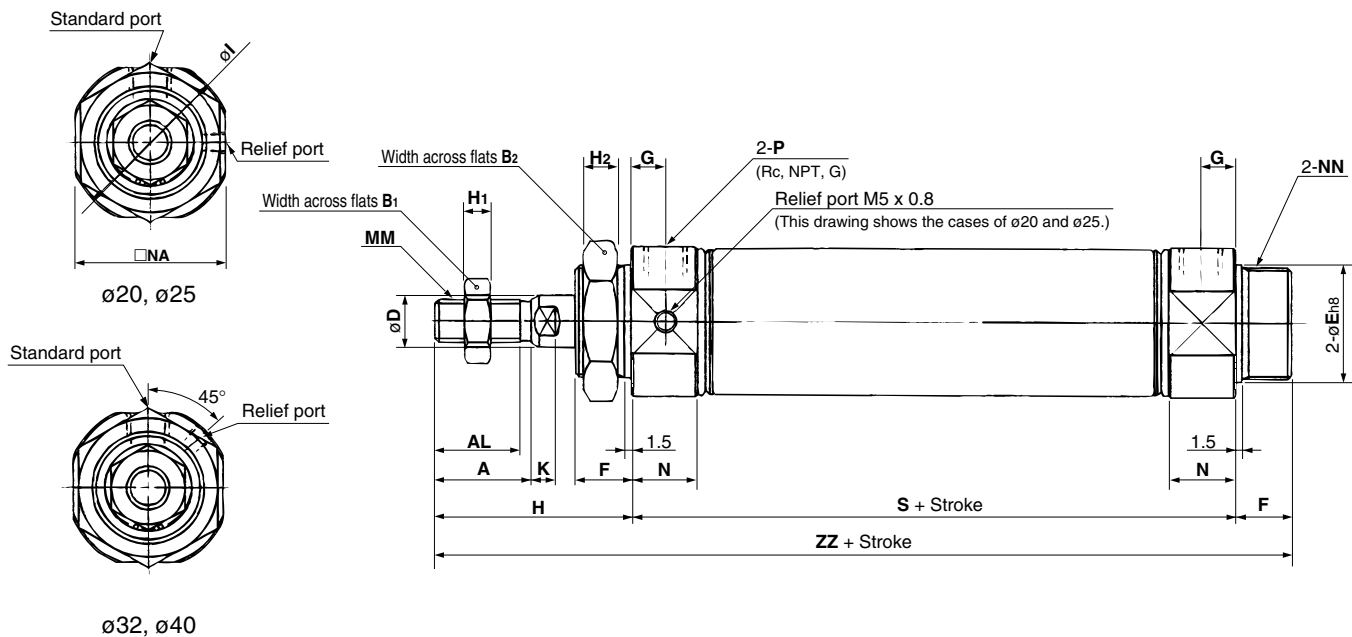

(mm)																				
Bore size	A	AL	B ₁	B ₂	D	E	F	G	H	H ₁	H ₂	I	K	MM	N	NA	NN	P	S	ZZ
20	18	15.5	13	26	8	20 ⁰ _{0.033}	13	8	41	5	8	28	5	M8 x 1.25	15	24	M20 x 1.5	1/8	62	116
25	22	19.5	17	32	10	26 ⁰ _{0.033}	13	8	45	6	8	33.5	5.5	M10 x 1.25	15	30	M26 x 1.5	1/8	62	120
32	22	19.5	17	32	12	26 ⁰ _{0.033}	13	8	45	6	8	37.5	5.5	M10 x 1.25	15	34.5	M26 x 1.5	1/8	64	122
40	24	21	22	41	14	32 ⁰ _{0.039}	16	11	50	8	10	46.5	7	M14 x 1.5	21.5	42.5	M32 x 2	1/4	88	154


With air cushion

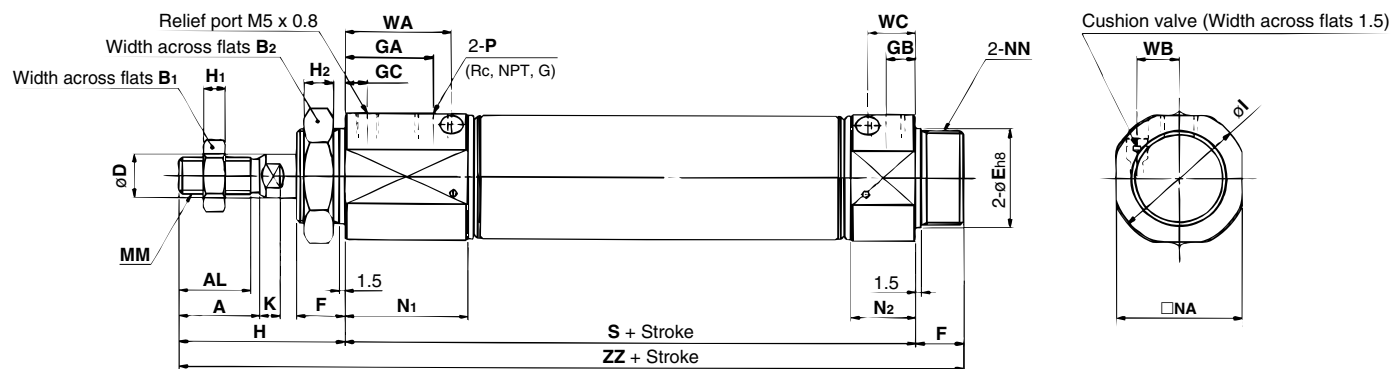

																										(mm)	
Bore size	A	AL	B ₁	B ₂	D	E	F	G	AG	B	GC	H	H ₁	H ₂	I	K	MM	N ₁	N ₂	NA	NN	P	S	WA	WB	WC	ZZ
20	18	15.5	13	26	8	20 ^{0.033}	13	26	8	6	41	5	8	28	5	M8 x 1.25	35.5	17.5	24	M20 x 1.5	1/8	80	31	8.5	13	134	
25	22	19.5	17	32	10	26 ^{0.033}	13	26	8	6	45	6	8	33.5	5.5	M10 x 1.25	35.5	17.5	30	M26 x 1.5	1/8	80	31	10.5	13	138	
32	22	19.5	17	32	12	26 ^{0.033}	13	26	8	6	45	6	8	37.5	5.5	M10 x 1.25	35.5	17.5	34.5	M26 x 1.5	1/8	82	31	11.5	13	140	
40	24	21	22	41	14	32 ^{0.039}	16	31	11	6	50	8	10	46.5	7	M14 x 1.5	41.5	21.5	42.5	M32 x 2	1/4	108	36	15	16	174	


Boss-cut basic style (BZ) / 10-**CM2BZ**, 21-**CM2BZ**

With rubber bumper

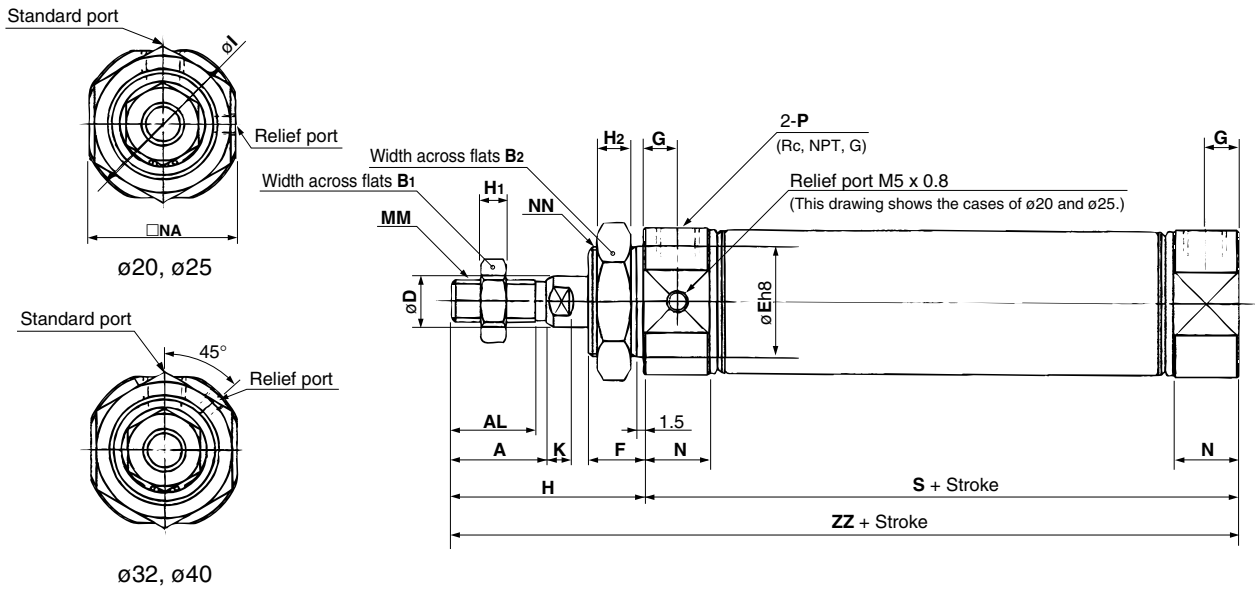

Bore size	A	AL	B ₁	B ₂	D	E	F	G	H	H ₁	H ₂	I	K	MM	N	NA	NN	P	S	ZZ
20	18	15.5	13	26	8	20 ⁰ _{0.033}	13	8	41	5	8	28	5	M8 x 1.25	15	24	M20 x 1.5	1/8	62	103
25	22	19.5	17	32	10	26 ⁰ _{0.033}	13	8	45	6	8	33.5	5.5	M10 x 1.25	15	30	M26 x 1.5	1/8	62	107
32	22	19.5	17	32	12	26 ⁰ _{0.033}	13	8	45	6	8	37.5	5.5	M10 x 1.25	15	34.5	M26 x 1.5	1/8	64	109
40	24	21	22	41	14	32 ⁰ _{0.039}	16	11	50	8	10	46.5	7	M14 x 1.5	21.5	42.5	M32 x 2	1/4	88	138


With air cushion

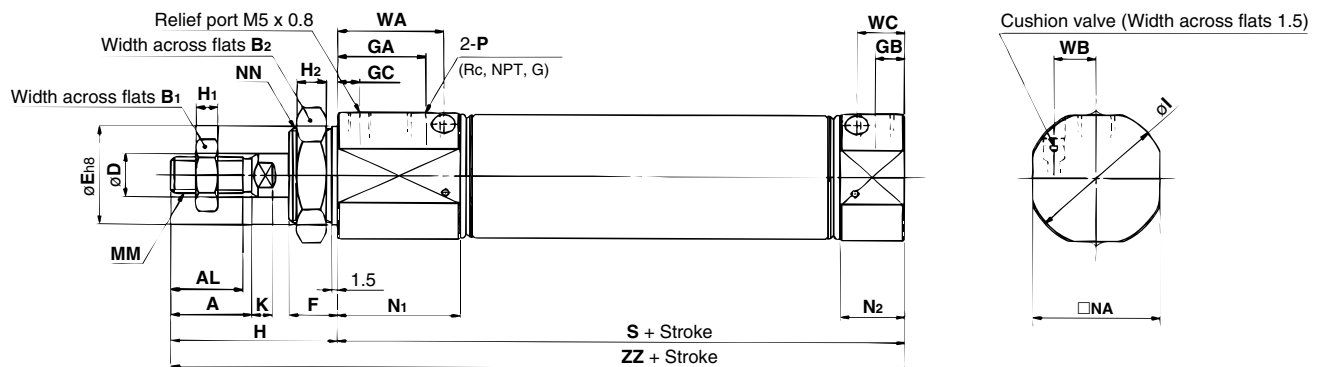

(mm)																											
Bore size	A	AL	B ₁	B ₂	D	E	F	G	AG	B	GC	H	H ₁	H ₂	I	K	MM	N ₁	N ₂	NA	NN	P	S	WA	WB	WC	ZZ
20	18	15.5	13	26	8	20 ⁰ _{0.033}	13	26	8	6	41	5	8	28	5	M8 x 1.25	35.5	17.5	24	M20 x 1.5	1/8	80	31	8.5	13	121	
25	22	19.5	17	32	10	26 ⁰ _{0.033}	13	26	8	6	45	6	8	33.5	5.5	M10 x 1.25	35.5	17.5	30	M26 x 1.5	1/8	80	31	10.5	13	125	
32	22	19.5	17	32	12	26 ⁰ _{0.033}	13	26	8	6	45	6	8	37.5	5.5	M10 x 1.25	35.5	17.5	34.5	M26 x 1.5	1/8	82	31	11.5	13	127	
40	24	21	22	41	14	32 ⁰ _{0.039}	16	31	11	6	50	8	10	46.5	7	M14 x 1.5	41.5	21.5	42.5	M32 x 2	1/4	108	36	15	16	158	


Axial foot style (L) / 10-**CM2L**, 21-**CM2L**

With rubber bumper

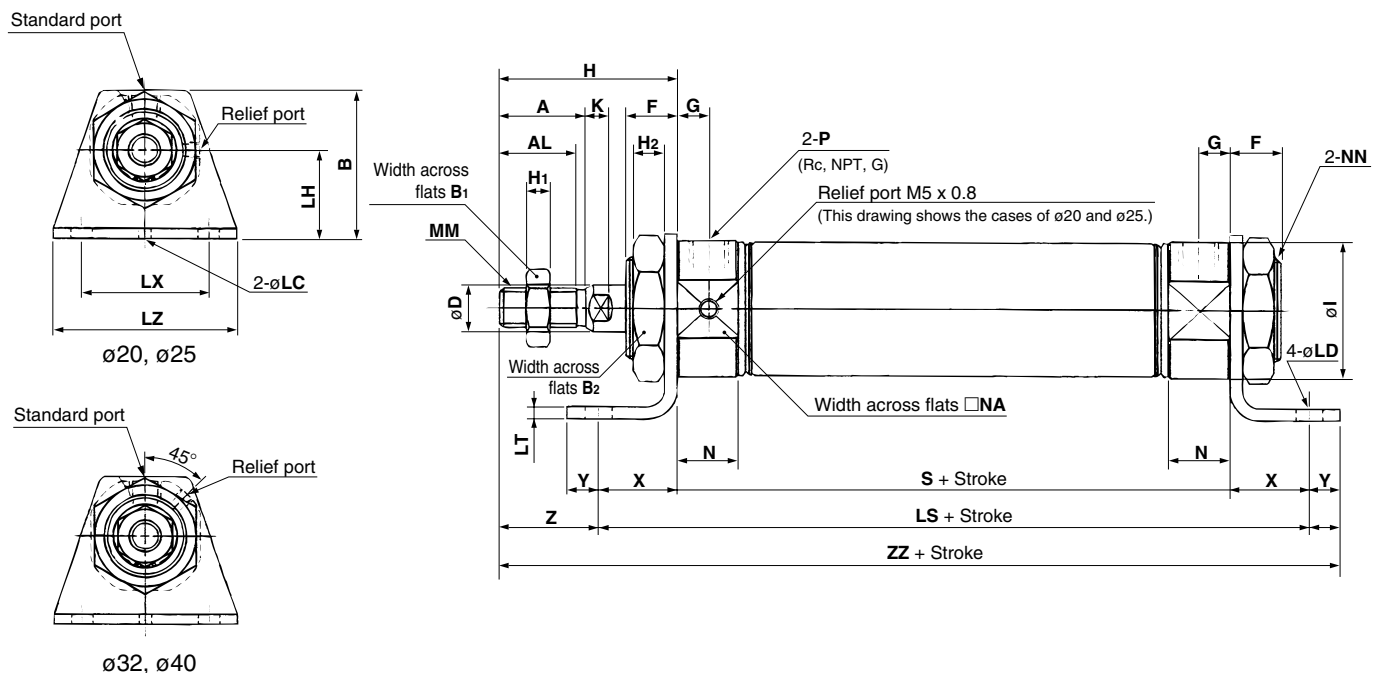

Bore size	A	AL	B	B ₁	B ₂	D	F	G	H	H ₁	H ₂	I	K	LC	LD	LH	LS	LT	LX	LZ	MM	N	NA	NN	P	S	X	Y	Z	ZZ
20	18	15.5	40	13	26	8	13	8	41	5	8	28	5	4	6.8	25	102	3.2	40	55	M8 x 1.25	15	24	M20 x 1.5	1/8	62	20	8	21	131
25	22	19.5	47	17	32	10	13	8	45	6	8	33.5	5.5	4	6.8	28	102	3.2	40	55	M10 x 1.25	15	30	M26 x 1.5	1/8	62	20	8	25	135
32	22	19.5	47	17	32	12	13	8	45	6	8	37.5	5.5	4	6.8	28	104	3.2	40	55	M10 x 1.25	15	34.5	M26 x 1.5	1/8	64	20	8	25	137
40	24	21	54	22	41	14	16	11	50	8	10	46.5	7	4	7	30	134	3.2	55	75	M14 x 1.5	21.5	42.5	M32 x 2	1/4	88	23	10	27	171


With air cushion

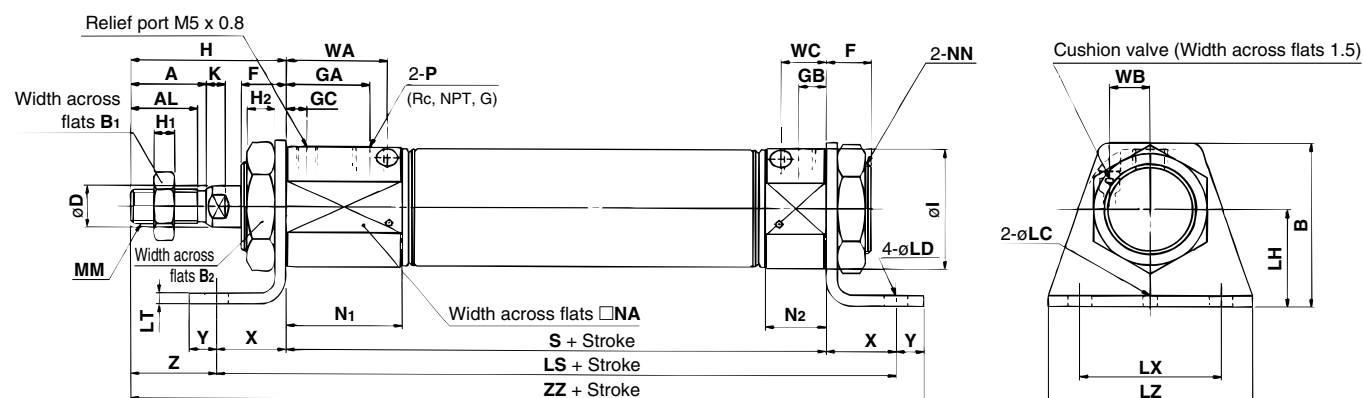

Bore size	A	AL	B	B ₁	B ₂	D	F	GA	GB	GC	H	H ₁	H ₂	I	K	LC	LD	LH	LS	LT	LX	LZ	MM	N ₁	N ₂	NA	NN	P	S	WA	WB	WC	X	Y	Z	ZZ
20	18	15.5	40	13	26	8	13	26	8	6	41	5	8	28	5	4	6.8	25	120	3.2	40	55	M8 x 1.25	35.5	17.5	24	M20 x 1.5	1/8	80	31	8.5	13	20	8	21	149
25	22	19.5	47	17	32	10	13	26	8	6	45	6	8	33.5	5.5	4	6.8	28	120	3.2	40	55	M10 x 1.25	35.5	17.5	30	M26 x 1.5	1/8	80	31	10.5	13	20	8	25	153
32	22	19.5	47	17	32	12	13	26	8	6	45	6	8	37.5	5.5	4	6.8	28	122	3.2	40	55	M10 x 1.25	35.5	17.5	34.5	M26 x 1.5	1/8	82	31	11.5	13	20	8	25	155
40	24	21	54	22	41	14	16	31	11	6	50	8	10	46.5	7	4	7	30	154	3.2	55	75	M14 x 1.5	41.5	21.5	42.5	M32 x 2	1/4	108	36	15	16	23	10	27	191


Rod side flange style (F) / 10-**CM2F**, 21-**CM2F**

With rubber bumper

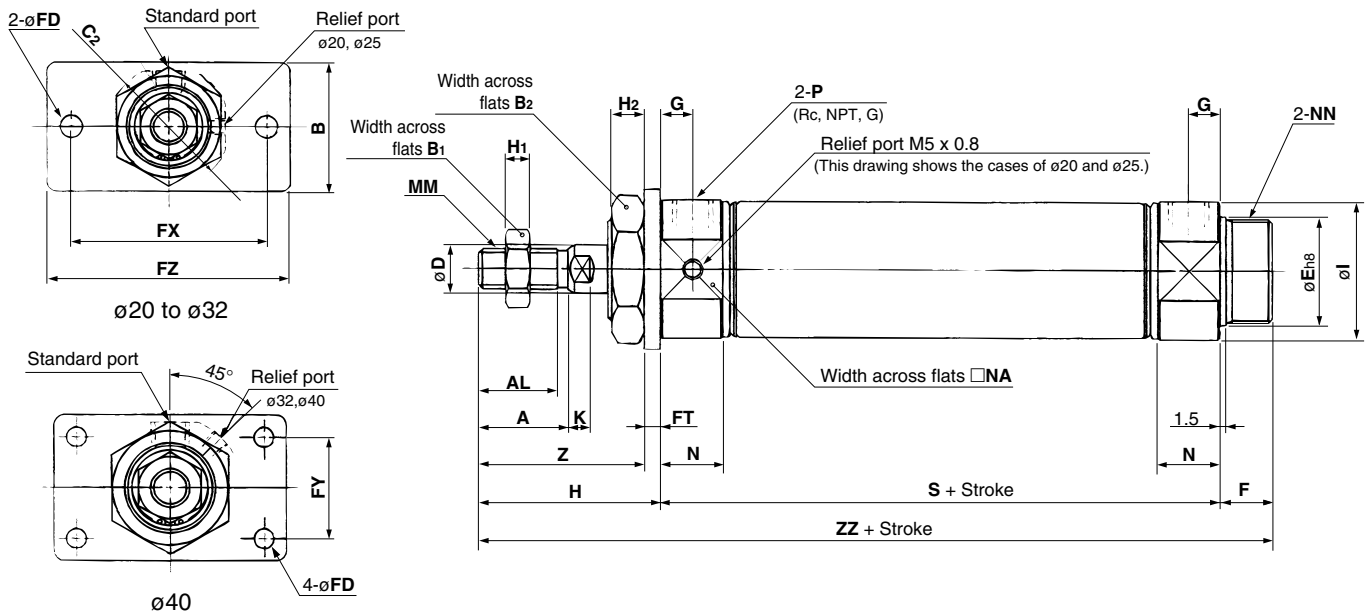

Bore size	A	AL	B	B ₁	B ₂	C ₂	D	E	F	FD	FT	FX	FY	FZ	G	H	H ₁	H ₂	I	K	MM	N	NA	NN	P	S	Z	ZZ
20	18	15.5	34	13	26	30	8	20 ^{0.033}	13	7	4	60	—	75	8	41	5	8	28	5	M8 x 1.25	15	24	M20 x 1.5	1/8	62	37	116
25	22	19.5	40	17	32	37	10	26 ^{0.033}	13	7	4	60	—	75	8	45	6	8	33.5	5.5	M10 x 1.25	15	30	M26 x 1.5	1/8	62	41	120
32	22	19.5	40	17	32	37	12	26 ^{0.033}	13	7	4	60	—	75	8	45	6	8	37.5	5.5	M10 x 1.25	15	34.5	M26 x 1.5	1/8	64	41	122
40	24	21	52	22	41	47.3	14	32 ^{0.039}	16	7	5	66	36	82	11	50	8	10	46.5	7	M14 x 1.5	21.5	42.5	M32 x 2	1/4	88	45	154


With air cushion

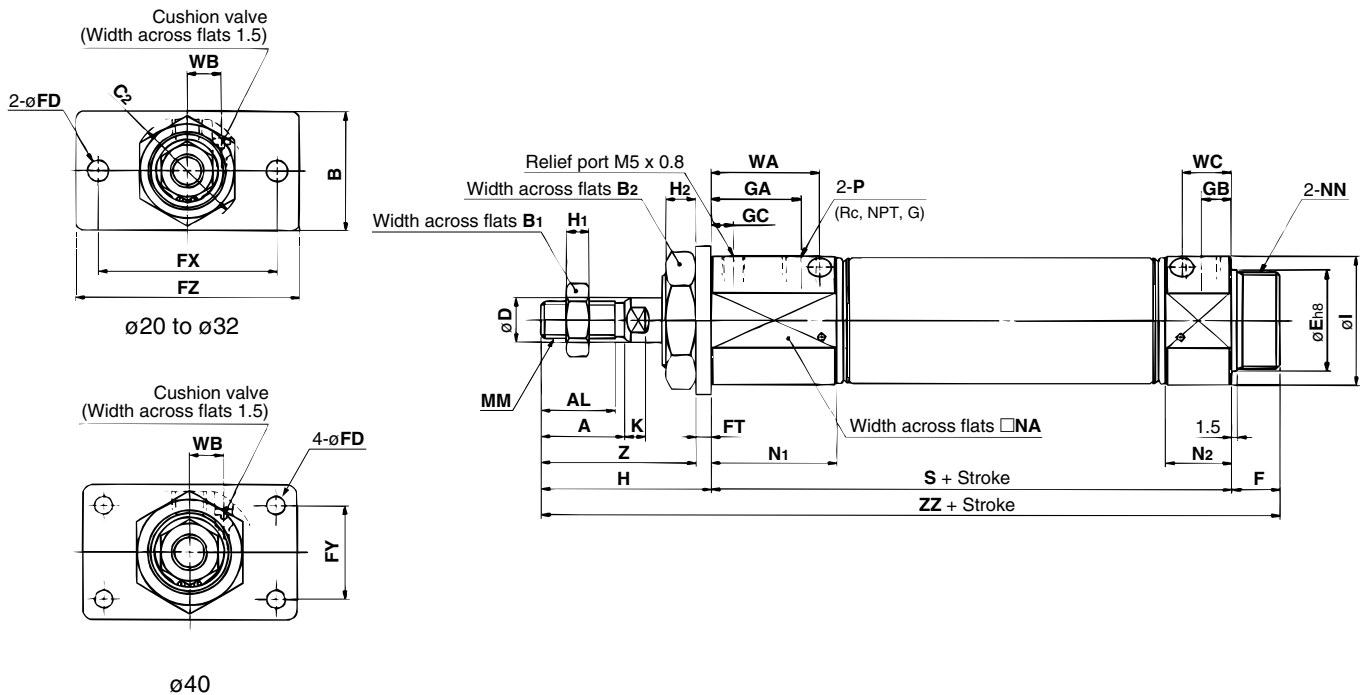

																																	(mm)	
Bore size	A	AL	B	B ₁	B ₂	C ₂	D	E	F	FD	FT	FX	FY	FZ	GA	GB	GC	H	H ₁	H ₂	I	K	MM	N ₁	N ₂	NA	NN	P	S	WA	WB	WC	Z	ZZ
20	18	15.5	34	13	26	30	8	20 ^{0.033}	13	7	4	60	—	75	26	8	6	41	5	8	28	5	M8 x 1.25	35.5	17.5	24	M20 x 1.5	1/8	80	31	8.5	13	37	134
25	22	19.5	40	17	32	37	10	26 ^{0.033}	13	7	4	60	—	75	26	8	6	45	6	8	33.5	5.5	M10 x 1.25	35.5	17.5	30	M26 x 1.5	1/8	80	31	10.5	13	41	138
32	22	19.5	40	17	32	37	12	26 ^{0.033}	13	7	4	60	—	75	26	8	6	45	6	8	37.5	5.5	M10 x 1.25	35.5	17.5	34.5	M26 x 1.5	1/8	82	31	11.5	13	41	140
40	24	21	52	22	41	47.3	14	32 ^{0.039}	16	7	5	66	36	82	31	11	6	50	8	10	46.5	7	M14 x 1.5	41.5	21.5	42.5	M32 x 2	1/4	108	36	15	16	45	174


Head side flange style (G) / ¹⁰⁻₁₁₋CM2G, ²¹⁻₂₂₋CM2G

With rubber bumper

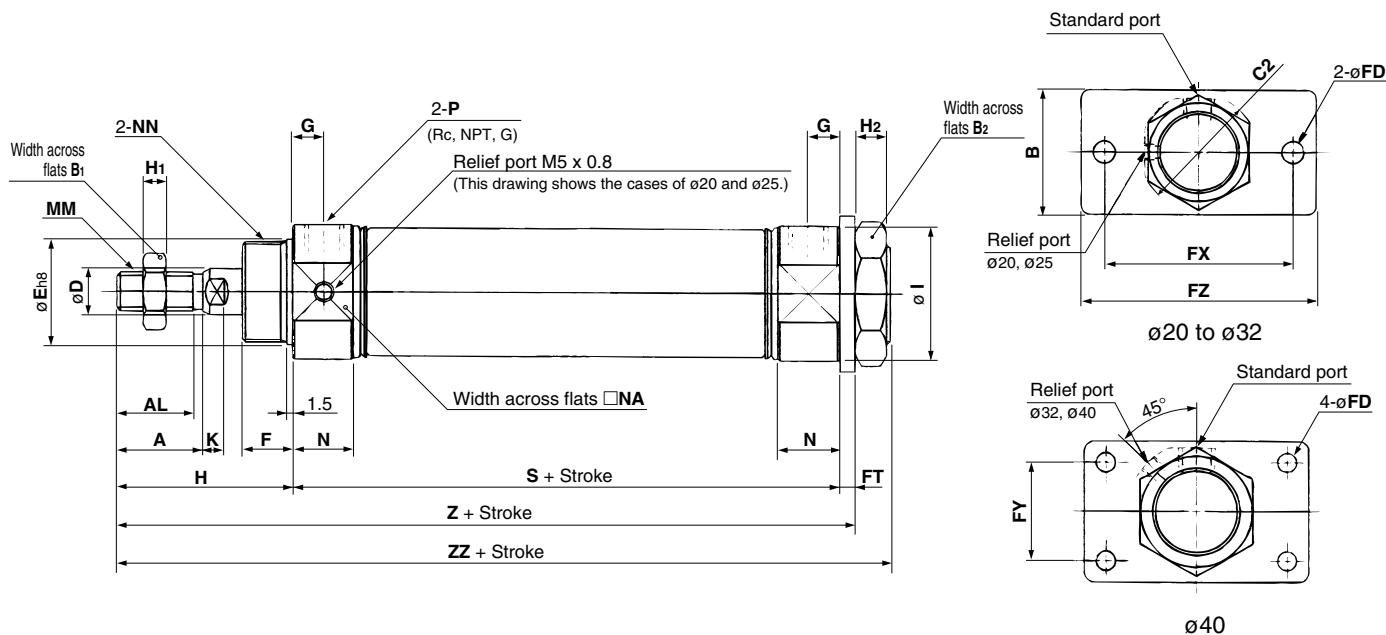

(mm)																												
Bore size	A	AL	B	B ₁	B ₂	C ₂	D	E	F	FD	FT	FX	FY	FZ	G	H	H ₁	H ₂	I	K	MM	N	NA	NN	P	S	Z	ZZ
20	18	15.5	34	13	26	30	8	20 ^{0.033} ₀	13	7	4	60	—	75	8	41	5	8	28	5	M8 x 1.25	15	24	M20 x 1.5	1/8	62	107	116
25	22	19.5	40	17	32	37	10	26 ^{0.033} ₀	13	7	4	60	—	75	8	45	6	8	33.5	5.5	M10 x 1.25	15	30	M26 x 1.5	1/8	62	111	120
32	22	19.5	40	17	32	37	12	26 ^{0.033} ₀	13	7	4	60	—	75	8	45	6	8	33.5	5.5	M10 x 1.25	15	34.5	M26 x 1.5	1/8	64	113	120
40	24	21	52	22	41	47.3	14	32 ^{0.039} ₀	16	7	5	66	36	82	11	50	8	10	46.5	7	M14 x 1.5	21.5	42.5	M32 x 2	1/4	88	143	154

With air cushion

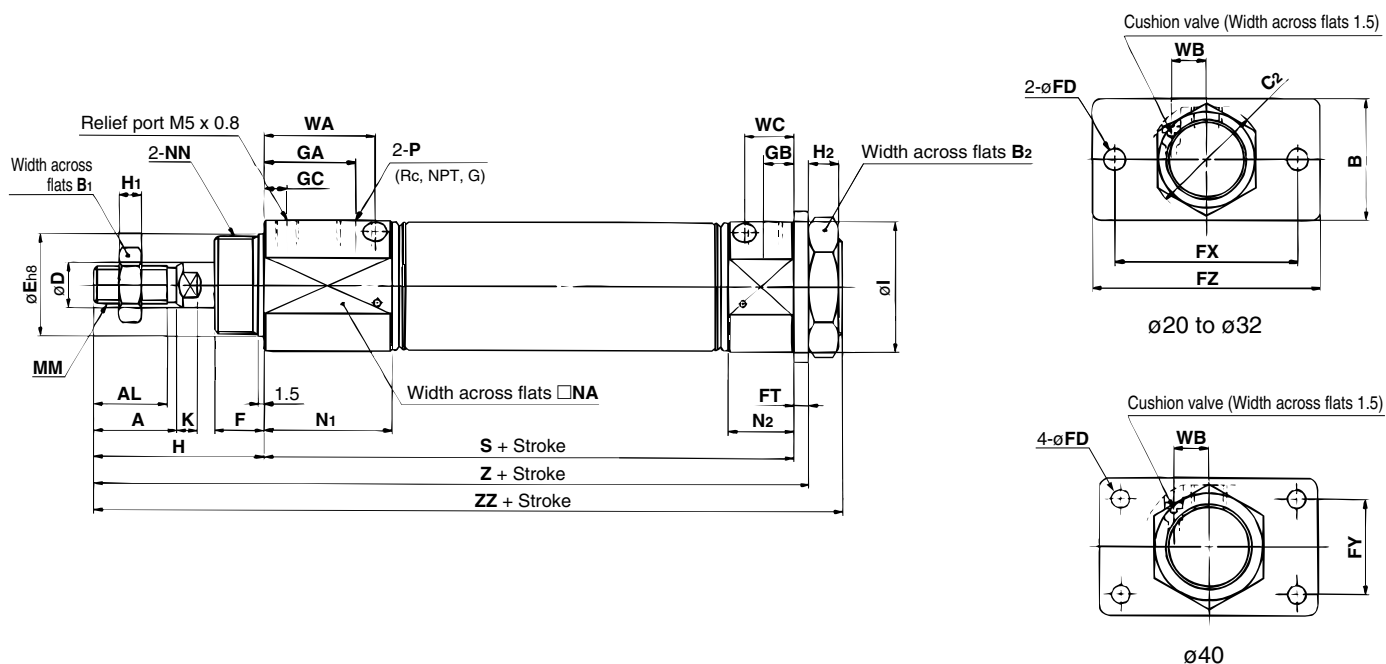

(mm)																																		
Bore size	A	AL	B	B ₁	B ₂	C ₂	D	E	F	FD	FT	FX	FY	FZ	GA	GB	GC	H	H ₁	H ₂	I	K	MM	N ₁	N ₂	NA	NN	P	S	WA	WB	WC	Z	ZZ
20	18	15.5	34	13	26	30	8	20 ^{0.033}	13	7	4	60	—	75	26	8	6	41	5	8	28	5	M8 x 1.25	35.5	17.5	24	M20 x 1.5	1/8	80	31	8.5	13	125	134
25	22	19.5	40	17	32	37	10	26 ^{0.033}	13	7	4	60	—	75	26	8	6	45	6	8	33.5	5.5	M10 x 1.25	35.5	17.5	30	M26 x 1.5	1/8	80	31	10.5	13	129	138
32	22	19.5	40	17	32	37	12	26 ^{0.033}	13	7	4	60	—	75	26	8	6	45	6	8	37.5	5.5	M10 x 1.25	35.5	17.5	34.5	M26 x 1.5	1/8	82	31	11.5	13	131	140
40	24	21	52	22	41	47.3	14	32 ^{0.039}	16	7	5	66	36	82	31	11	6	50	8	10	46.5	7	M14 x 1.5	41.5	21.5	42.5	M32 x 2	1/4	108	36	15	16	163	174



Specific Product Precautions

Be sure to read before handling.

Operating Precautions

Warning


1. Do not rotate the cover.

When installing a cylinder or screwing a pipe fitting into the port, the coupling portion of the cover could break if the cover is rotated.

2. Do not open the cushion valve beyond the stopper.

- A snap ring is installed as a cushion valve retention mechanism. Do not open the cushion valve beyond the snap ring or remove the ring.
- If air is supplied and operation started without confirming the above condition, the cushion valve may be ejected from the cover.
- Use a hexagon wrench key below to adjust the cushion valve.

Bore size (mm)	Cushion valve Width across flats (mm)	Socket wrench
20, 25, 32, 40	1.5	JISB4648 Hexagon spanner wrench 1.5

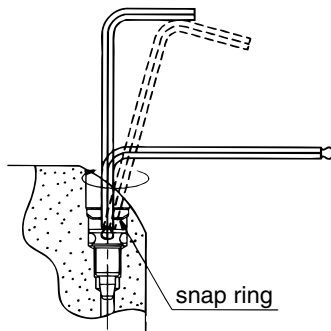

Caution

1. Use caution to the popping of a snap ring.

When replacing the rod seal, take special precautions not to allow the snap ring to pop out.

2. Do not touch the cylinder during operation.

Use caution when handling a cylinder, which is running at a high speed and a high frequency, because the surface of a cylinder tube could get so hot enough as to cause you get burned.

Series 10-/11- 21-/22-*CM2W*

Double acting, Double rod cylinder/
ø20, ø25, ø32, ø40

How to Order



• **Clean series**

10	Relief type
11	Vacuum suction type

10 - C D M 2 W L 40 - 150 - H7B

21 - C D M 2 W L 40 - 150 - H7B

• **Built-in magnet**

Nil	No
D	With auto switch (Built-in magnet)

• **Cylinder stroke (mm)**

• **Port thread type**

Nil	Rc
TN	NPT
TF	G

• **Number of auto switches**

Nil	2 pcs.
S	1 pc.
n	"n" pcs.

• **Type of auto switch**

Reed switch	C73
Solid state switch	H7B, H7A1

• **Bore size (mm)**

• **Mounting style**

B	Basic style
L	Axial foot style
F	Flange style

• **Copper, fluorine and silicon-free+ Low particle generation**

21	Relief type
22	Vacuum suction type

Model

Model		Bore size (mm)	Port size	Lubrication	Action	Standard stroke (mm)	Auto switch mounting	Cushion							
								Rubber	Air						
Relief type	10-/21-CM2W□20	20	1/8	Non-lube	Double acting, double rod	25, 50, 75, 100, 125 150, 200, 250, 300	Available	Available	Not available						
	10-/21-CM2W□25	25													
	10-/21-CM2W□32	32													
	10-/21-CM2W□40	40	1/4												
Vacuum suction type	11-/22-CM2W□20	20	1/8												
	11-/22-CM2W□25	25													
	11-/22-CM2W□32	32													
	11-/22-CM2W□40	40	1/4												

Specifications

Item	Bore size (mm)
	20/25/32/40
Proof pressure	1.5 MPa
Maximum operating pressure	1.0MPa
Minimum operating pressure	0.08 MPa
Ambient and fluid temperature	Without auto switch: -10°C to 70°C With auto switch: -10°C to 60°C (No freezing)
Piston speed	10-/11-: 30 to 400 mm/s, 21-/22-: 50 to 400 mm/s
Stroke length tolerance	$+1.4$ -0
Mounting style	Basic, Axial foot, Flange
Grease	10-/11-: Fluorine grease 21-/22-: Lithium soap based grease
Particle generation grade (Refer to front matter pages 13 to 22 for details.)	10-: Grade 2, 21-: Grade 3 11-/22-: Grade 1

Suction flow rate of vacuum suction type (Reference values)

Bore size	Suction flow rate ℓ /min (ANR)
20/25/32/40	2

Auto switch specifications (Refer to Best Pneumatics catalog for detailed specifications and auto switches not in the following table.)

Type	Auto switch part no.	Load voltage	Load current range	Indicator light	Application
Reed switch	D-C73	24 VDC, 100 VAC	5 to 40 mA, 5 to 20 mA	Yes	Relay, PLC
Solid state switch	2-wire D-H7B	24 VDC (10 to 28 VDC)	5 to 40 mA	Yes	24 VDC relay, PLC
	3-wire D-H7A1	28 VDC or less	40 mA or less	○	IC circuit, Relay, PLC



Refer to page 182 for a list of applicable auto switches.

PLC: Programmable Logic Controller

Proper auto switch mounting position (Detection at stroke end)

D-C7

D-H7A1/H7B

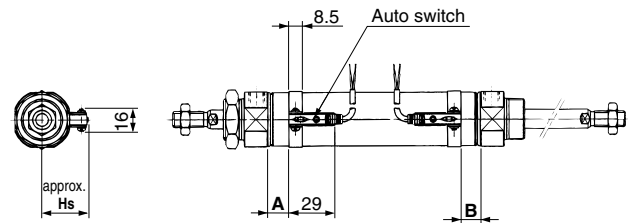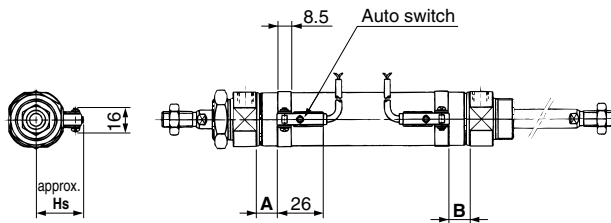

(mm)

Bore size	D-C73			D-H7A1/H7B		
	A	B	Hs	A	B	Hs
20	7	6	22.5	6	5	22.5
25	7	6	25	6	5	25
32	8	7	28.5	7	6	28.5
40	14	12	32.5	13	11	32.5

Note) The above values should be used as a guide for detection at stroke end. When actually mounting the auto switch, adjust the position after confirming the operating conditions of the auto switch.



Specific Product Precautions

Be sure to read before handling.

Operating Precautions

Warning

1. Do not rotate the cover.

If a cover is rotated when installing a cylinder or screwing a fitting into the port, it is likely to damage the junction part with cover.

Caution


1. Use caution to the popping of a snap ring.

When replacing rod seals and removing and mounting a snap ring, use a proper tool.

2. Do not touch the cylinder during operation.


Use caution when handling a cylinder, which is running at a high speed and a high frequency, because the surface of a cylinder tube could get so hot enough as to cause you get burned.

Basic style (B) / 10-**CM2WB**, 21-**CM2WB**

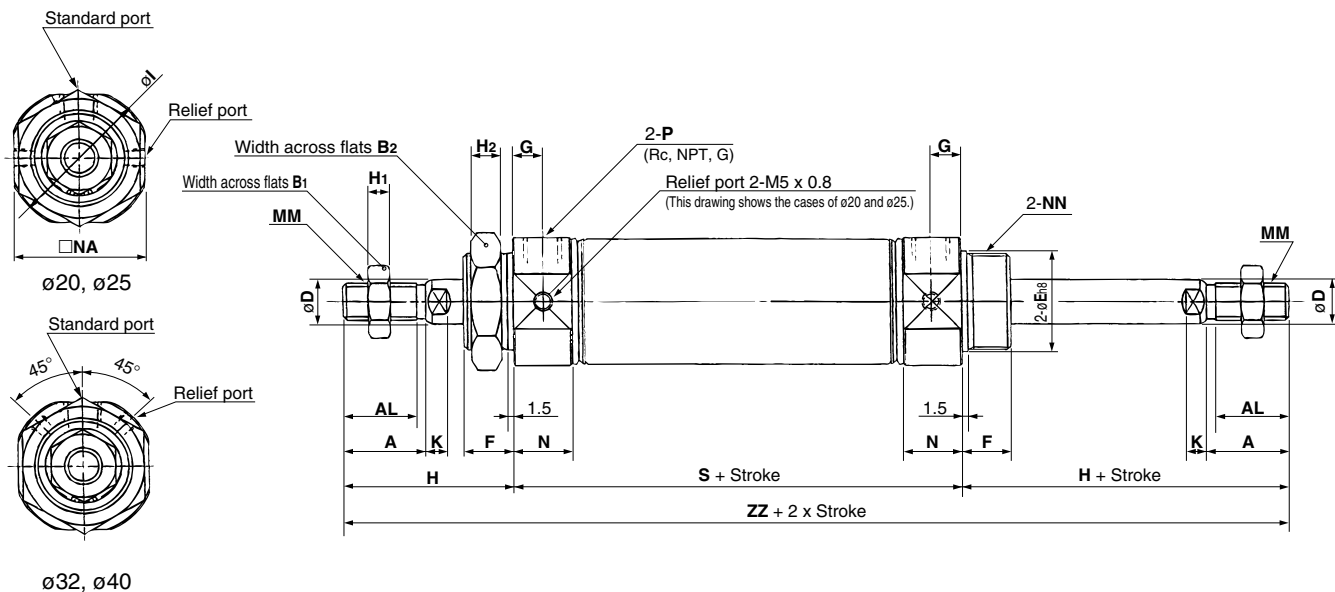


Bore size	A	AL	B ₁	B ₂	D	E	F	G	H	H ₁	H ₂	I	K	MM	N	NA	NN	P	S	ZZ
20	18	15.5	13	26	8	20 ^{0.033} ₀	13	8	41	5	8	28	5	M8 x 1.25	15	24	M20 x 1.5	1/8	62	144
25	22	19.5	17	32	10	26 ^{0.033} ₀	13	8	45	6	8	33.5	5.5	M10 x 1.25	15	30	M26 x 1.5	1/8	62	152
32	22	19.5	17	32	12	26 ^{0.033} ₀	13	8	45	6	8	37.5	5.5	M10 x 1.25	15	34.5	M26 x 1.5	1/8	64	154
40	24	21	22	41	14	32 ^{0.039} ₀	16	11	50	8	10	46.5	7	M14 x 1.5	21.5	42.5	M32 x 2	1/4	88	188

Axial foot style (L) / 10-**CM2WL**, 21-**CM2WL**

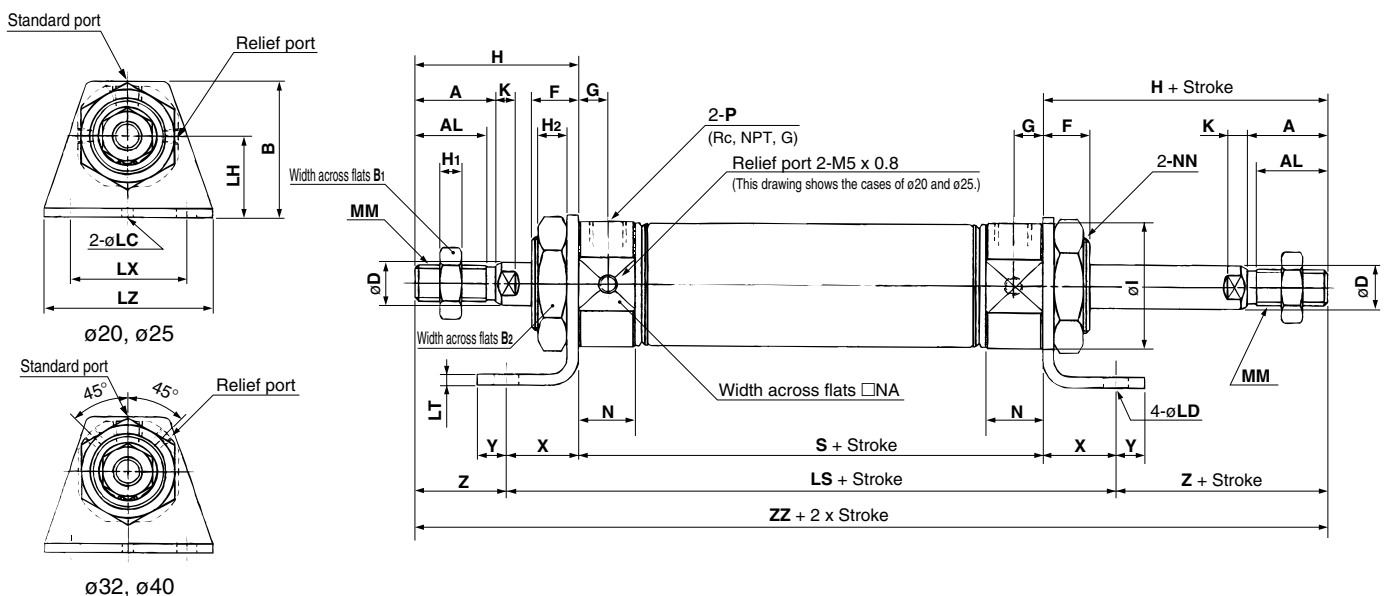

Bore size	A	AL	B	B ₁	B ₂	D	F	G	H	H ₁	H ₂	I	K	L	LD	LH	LS	LT	LX	LZ	MM	N	NA	NN	P	S	X	Y	Z	ZZ
20	18	15.5	40	13	26	8	13	8	41	5	8	28	5	4	6.8	25	102	3.2	40	55	M8 x 1.25	15	24	M20 x 1.5	1/8	62	20	8	21	144
25	22	19.5	47	17	32	10	13	8	45	6	8	33.5	5.5	4	6.8	28	102	3.2	40	55	M10 x 1.25	15	30	M26 x 1.5	1/8	62	20	8	25	152
32	22	19.5	47	17	32	12	13	8	45	6	8	37.5	5.5	4	6.8	28	104	3.2	40	55	M10 x 1.25	15	34.5	M26 x 1.5	1/8	64	20	8	25	154
40	24	21	54	22	41	14	16	11	50	8	10	46.5	7	4	7	30	134	3.2	55	75	M14 x 1.5	21.5	42.5	M32 x 2	1/4	88	23	10	27	188

Flange style (F) / 10-**CM2WF**, 21-**CM2WF**

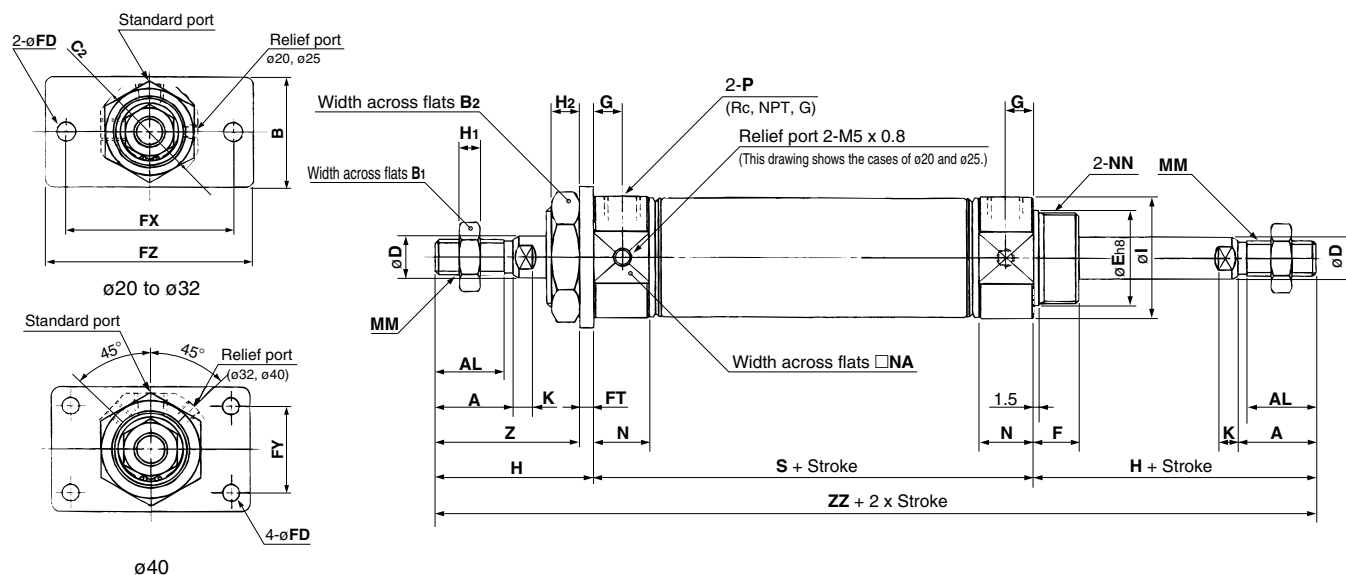

Bore size	A	AL	B	B ₁	B ₂	C ₂	D	E	F	FD	FT	FX	FY	FZ	G	H	H ₁	H ₂	I	K	MM	N	NA	NN	P	S	Z	ZZ
20	18	15.5	34	13	26	30	8	20 ⁰ _{0.033}	13	7	4	60	—	75	8	41	5	8	28	5	M8 x 1.25	15	24	M20 x 1.5	1/8	62	37	144
25	22	19.5	40	17	32	37	10	26 ⁰ _{0.033}	13	7	4	60	—	75	8	45	6	8	33.5	5.5	M10 x 1.25	15	30	M26 x 1.5	1/8	62	41	152
32	22	19.5	40	17	32	37	12	26 ⁰ _{0.033}	13	7	4	60	—	75	8	45	6	8	37.5	5.5	M10 x 1.25	15	34.5	M26 x 1.5	1/8	64	41	154
40	24	21	52	22	41	47.3	14	32 ⁰ _{0.039}	16	7	5	66	36	82	11	50	8	10	46.5	7	M14 x 1.5	21.5	42.5	M32 x 2	1/4	88	45	188

Series 10-/11-21-/22-**CM2R** Direct mount type cylinder ø20, ø25, ø32, ø40

How to Order

• **Clean series**

10	Relief type
11	Vacuum suction type

10 - C D M 2 R A 40 - 150 - C73

21 - C D M 2 R A 40 - 150 - C73

• **Copper, fluorine and silicon-free+ Low particle generation**

21	Relief type
22	Vacuum suction type

• **Mounting style**

A	Bottom mounting style
B	Front mounting style

• **Built-in magnet**

Nil	No
D	With auto switch (Built-in magnet)

• **Bore size (mm)**

• **Port thread type**

Nil	Rc
TN	NPT
TF	G

• **Cylinder stroke (mm)**

• **Number of auto switches**

Nil	2 pcs.
S	1 pc.
n	"n" pcs.

• **Type of auto switch**

Reed switch	C73
Solid state switch	H7B, H7A1



Model

Model		Bore size (mm)	Port size	Lubrication	Action	Standard stroke (mm)	Auto switch mounting	Cushion						
								Rubber	Air					
Relief type	10-/21-CM2R□20	20	1/8	Non-lube	Double acting, single rod	25, 50, 75, 100, 125, 150	Available	Available	Not available					
	10-/21-CM2R□25	25				25, 50, 75,100, 125, 150, 200								
	10-/21-CM2R□32	32				25, 50, 75, 100, 125, 150, 200, 250, 300								
	10-/21-CM2R□40	40				25, 50, 75, 100, 125, 150								
Vacuum suction type	11-/22-CM2R□20	20	1/8			Non-lube				Double acting, single rod	25, 50, 75, 100, 125, 150, 200	Available	Available	Not available
	11-/22-CM2R□25	25									25, 50, 75, 100, 125, 150			
	11-/22-CM2R□32	32									25,50,75,100,125,150,200			
	11-/22-CM2R□40	40									25,50,75,100,125,150,200,250,300			

Specifications

Bore size (mm)		20/25/32/40
Item		
Proof pressure		1.5 MPa
Maximum operating pressure		1.0 MPa
Minimum operating pressure		0.05 MPa
Ambient and fluid temperature		Without auto switch: -10°C to 70°C With auto switch: -10°C to 60°C (No freezing)
Piston speed		10-/11-: 30 to 400 mm/s, 21-/22-: 50 to 400 mm/s
Stroke length tolerance		$^{+1.4}_0$
Mounting style		Bottom mounting style/Front mounting style
Grease		10-/11-: Fluorine grease 21-/22-: Lithium soap based grease
Particle generation grade		10-: Grade 2, 21-: Grade 3 11-/22-: Grade 1
(Refer to front matter pages 13 to 22 for details.)		

Suction flow rate of vacuum suction type (Reference values)

Bore size	Suction flow rate l/min (ANR)
20/25/32/40	2

Auto Switch Specifications (Refer to Best Pneumatics catalog for detailed specifications and auto switches not in the following table.)

Type	Auto switch part no.	Load voltage	Load current range	Indicator light	Application
Reed switch	D-C73	24 VDC, 100 VAC	5 to 40 mA, 5 to 20 mA	○	Relay, PLC
Solid state switch	2-wire D-H7B	24 VDC (10 to 28 VDC)	5 to 40 mA	○	24 VDC relay, PLC
	3-wire D-H7A1	28 VDC or less	40 mA or less	○	IC circuit, Relay, PLC

Refer to page 182 for a list of applicable auto switches.

PLC: Programmable Logic Controller


Proper auto switch mounting position (Detection at stroke end)

Same as double acting, single rod type

⚠ Specific Product Precautions


Refer to page 21.

Bottom mounting style / 10-**CM2RA**, 21-**CM2RA**

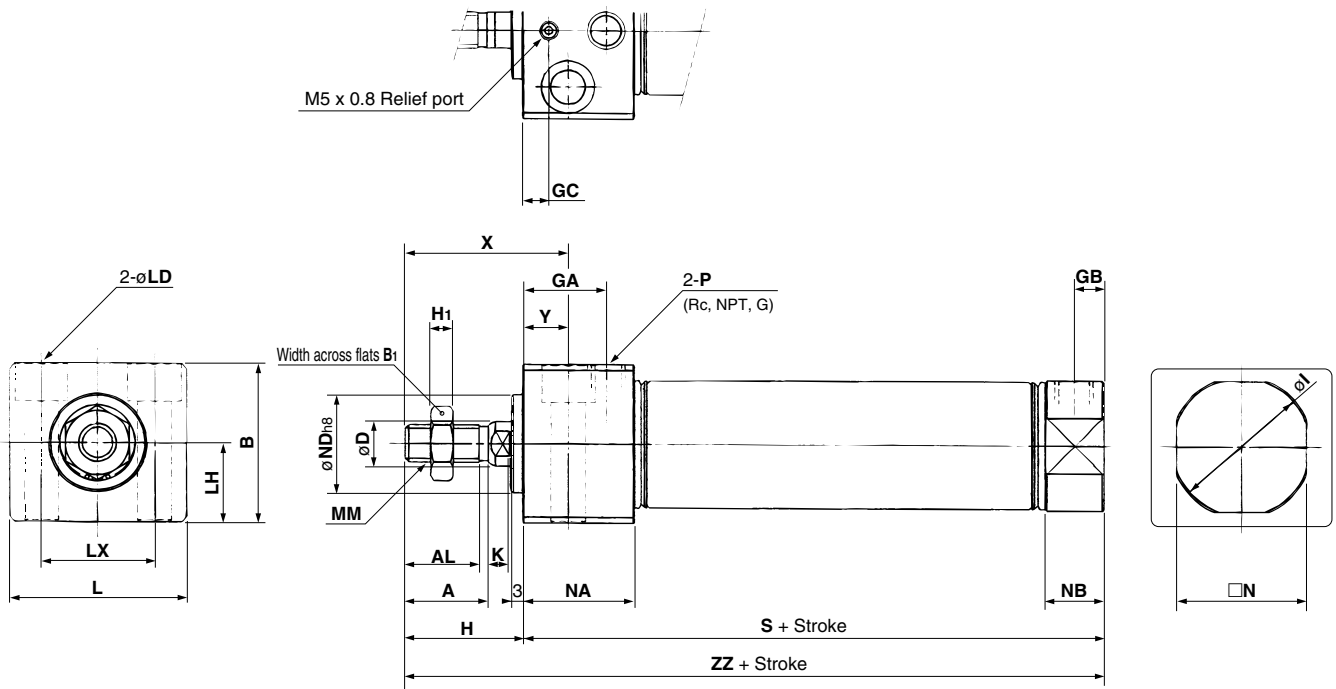

Bore size	A	AL	B	B ₁	D	GA	GB	GC	H	H ₁	I	K	L	LD	LH	LX	MM	N	NA	NB	ND	P	S	X	Y	ZZ
20	18	15.5	30.3	13	8	22	8	6	27	5	28	5	33.5	ø5.5, ø9.5 counterbore depth 6.5	15	21	M8 x 1.25	24	29	15	20 ^{0.033}	1/8	76	39	12	103
25	22	19.5	36.3	17	10	22	8	6	31	6	33.5	5.5	39	ø6.6, ø11 counterbore depth 7.5	18	25	M10 x 1.25	30	29	15	26 ^{0.033}	1/8	76	43	12	107
32	22	19.5	42.3	17	12	22	8	7	31	6	37.5	5.5	47	ø9, ø14 counterbore depth 10	21	30	M10 x 1.25	34.5	29	15	26 ^{0.033}	1/8	78	43	12	109
40	24	21	52.3	22	14	27	11	9	34	8	46.5	7	58.5	ø11, ø17.5 counterbore depth 12.5	26	38	M14 x 1.5	42.5	37.5	21.5	32 ^{0.039}	1/4	104	49	15	138

Front mounting style / 10-**CM2RB**, 21-**CM2RB**

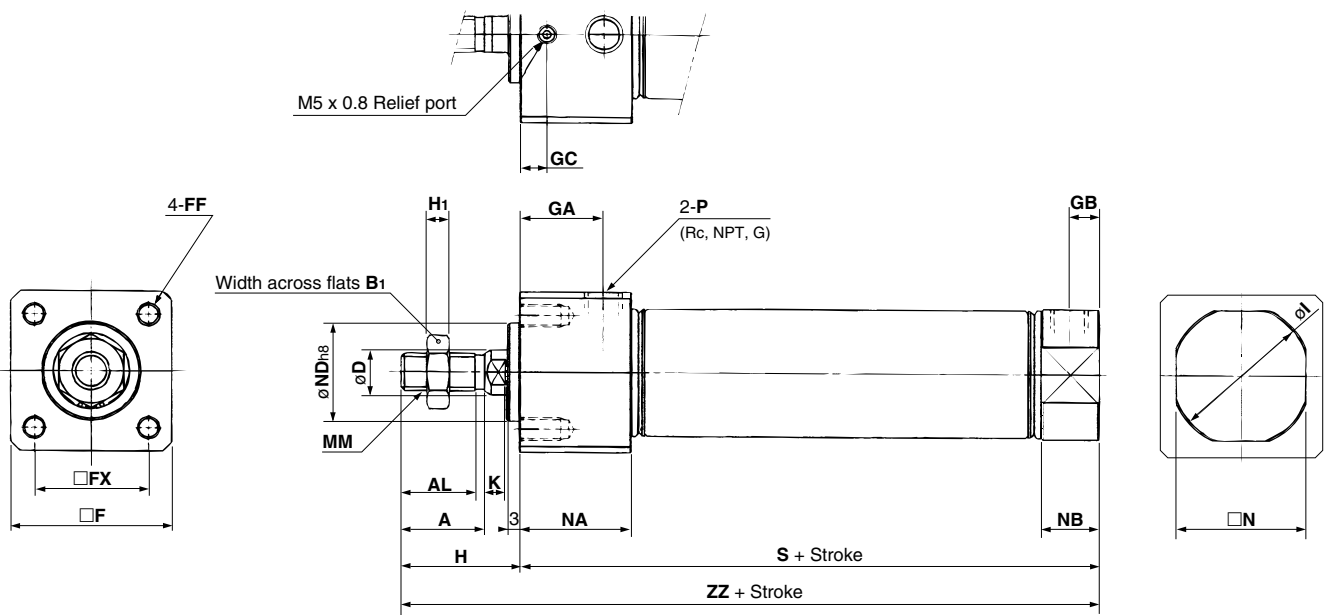


Bore size	A	AL	B ₁	D	F	FF	FX	GA	GB	GC	H	H ₁	I	K	MM	N	NA	NB	ND	P	S	ZZ
20	18	15.5	13	8	30.4	M5 x 0.8 depth 9	22	22	8	6	27	5	28	5	M8 x 1.25	24	29	15	20 ^{0.033}	1/8	76	103
25	22	19.5	17	10	36.4	M6 x 1 depth 11	26	22	8	6	31	6	33.5	5.5	M10 x 1.25	30	29	15	26 ^{0.033}	1/8	76	107
32	22	19.5	17	12	42.4	M6 x 1 depth 11	30	22	8	7	31	6	37.5	5.5	M10 x 1.25	34.5	29	15	26 ^{0.033}	1/8	78	109
40	24	21	22	14	52.4	M8 x 1.25 depth 14	36	27	11	9	34	8	46.5	7	M14 x 1.5	42.5	37.5	21.5	32 ^{0.039}	1/4	104	138

Series 10-/11- 21-/22- CBM2

Cylinder with end lock/
ø20, ø25, ø32, ø40 (Head side lock)

How to Order

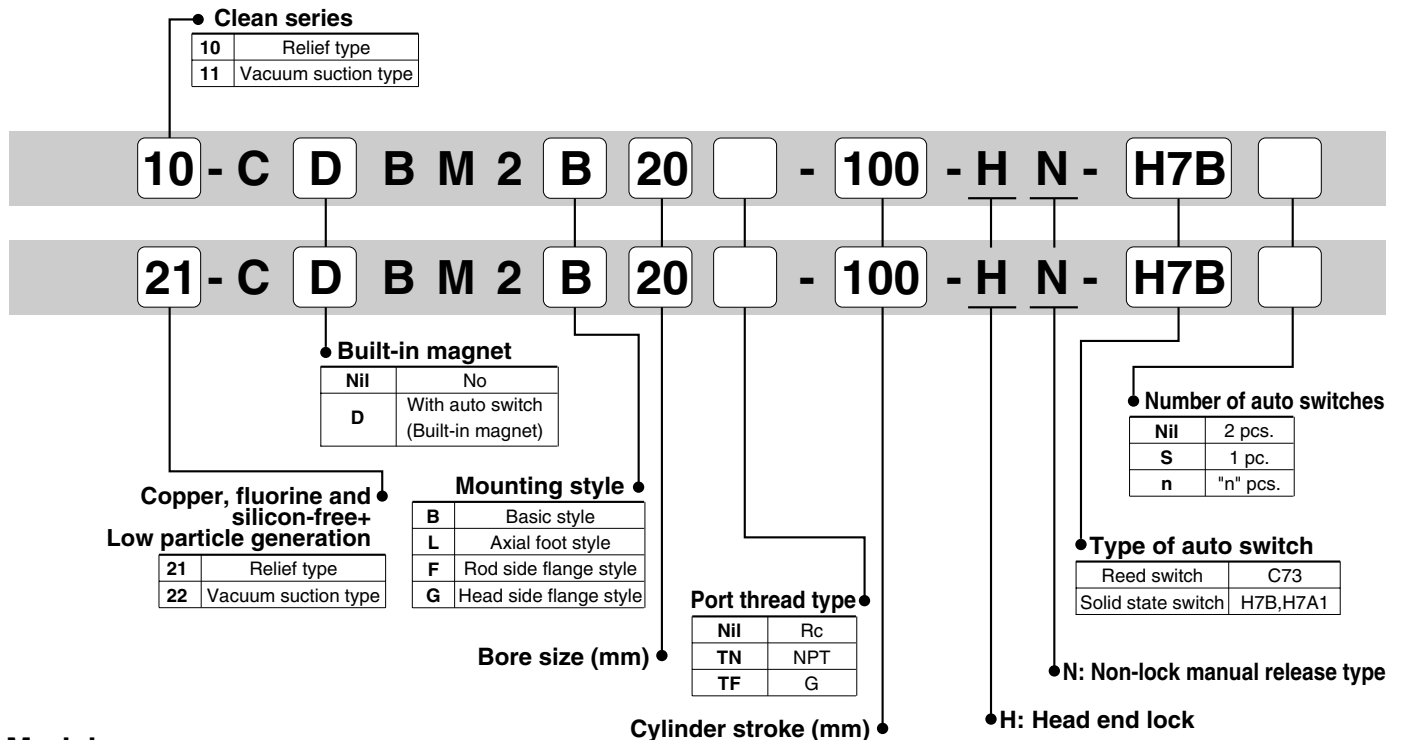

Model

Model		Bore size (mm)	Port size	Lubrication	Action	Standard stroke (mm)	Auto switch mounting	Cushion							
								Rubber	Air						
Relief type	10-/21-CBM2□20	20	1/8	Non-lube	Double acting, single rod	25, 50, 75, 100, 125, 150, 200, 250, 300	Available	Available	Not available						
	10-/21-CBM2□25	25													
	10-/21-CBM2□32	32													
	10-/21-CBM2□40	40	1/4												
Vacuum suction type	11-/22-CBM2□20	20	1/8												
	11-/22-CBM2□25	25													
	11-/22-CBM2□32	32													
	11-/22-CBM2□40	40	1/4												

Specifications

Bore size (mm)		20/25/32/40
Item		
Proof pressure		1.5 MPa
Maximum operating pressure		1.0 MPa
Minimum operating pressure		0.15 MPa *
Ambient and fluid temperature		Without auto switch: -10°C to 70°C, With auto switch: -10°C to 60°C (No freezing)
Piston speed		10-/11-: 30 to 400 mm/s, 21-/22-: 50 to 400 mm/s
Stroke length tolerance		$^{+1.4}_0$
Mounting style		Basic style/Axial foot style/Rod side flange style/Head side flange style
Grease		10-/11-: Fluorine grease 21-/22-: Lithium soap based grease
Particle generation grade		10-: Grade 2, 21-: Grade 3
(Refer to front matter pages 13 to 22 for details.)		11-/22-: Grade 1

*0.05 MPa for other part than the lock unit

Lock specifications

Lock position		Head end			
Holding force (Max.) N		ø20	ø25	ø32	ø40
		215	330	550	860
Backlash		1 mm or less			
Manual release		Non-lock type			

Suction flow rate of vacuum suction type (Reference values)

Bore size	Suction flow rate l/min (ANR)
20/25/32/40	2

Auto switch specifications (Refer to Best Pneumatics catalog for detailed specifications and auto switches not in the following table.)


Type	Auto switch part no.	Load voltage	Load current range	Indicator light	Application
Reed switch	D-C73	24 VDC, 100 VAC	5 to 40 mA, 5 to 20 mA	Yes	Relay, PLC
Solid state switch	2-wire D-H7B	24 VDC (10 to 28 VDC)	5 to 40 mA	Yes	24 VDC relay, PLC
	3-wire D-H7A1	28 VDC or less	40 mA or less	Yes	IC circuit, Relay, PLC

Refer to page 182 for a list of applicable auto switches.


PLC: Programmable Logic Controller

Proper Auto Switch Mounting Position (Detection at stroke end)

D-C73

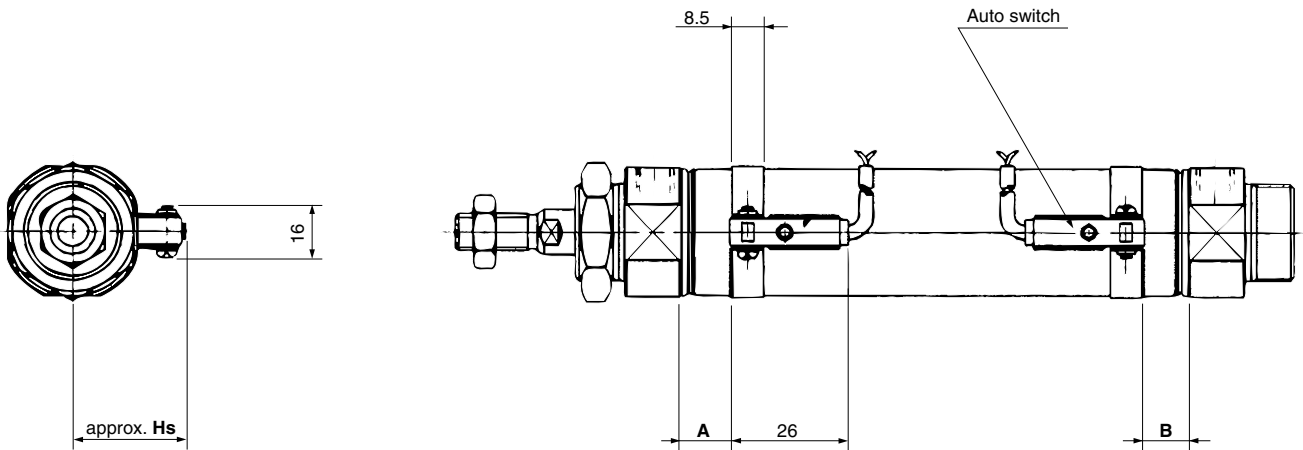

D-H7A1/H7B

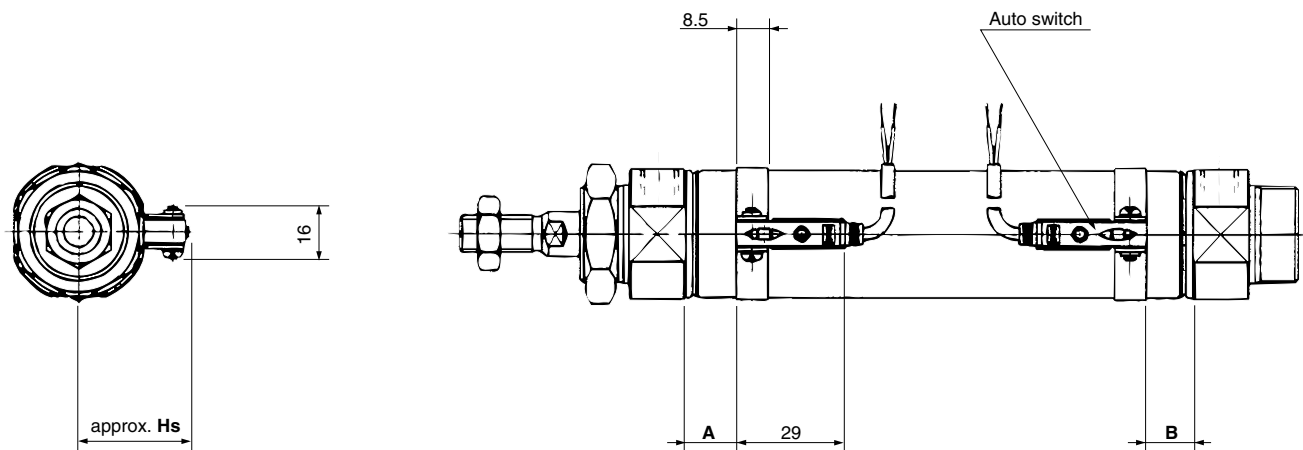


(mm)

Bore size	D-C73			D-H7A1/H7B		
	A	B	Hs	A	B	Hs
20	7	6	22.5	6	5	22.5
25	7	6	25	6	5	25
32	8	7	28.5	7	6	28.5
40	14	12	32.5	13	11	32.5


Note) The above values should be used as a guide for detection at stroke end. When actually mounting the auto switch, adjust the position after confirming the operating conditions of the auto switch.

Basic style (B) / ¹⁰⁻₁₁₋CBM2B, ²¹⁻₂₂₋CBM2B

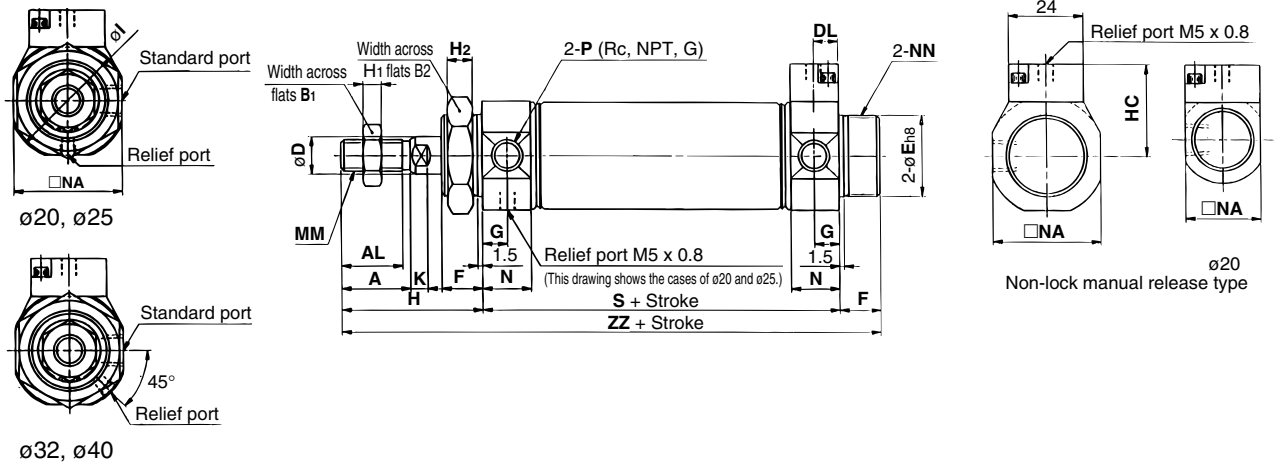



Bore size	A	AL	B ₁	B ₂	D	DL	E	F	G	H	H ₁	H ₂	HC	I	K	MM	N	NA	NN	P	S	ZZ
20	18	15.5	13	26	8	7.5	20 ⁰ _{-0.033}	13	8	41	5	8	24	28	5	M8 x 1.25	15	24	M20 x 1.5	1/8	62	116
25	22	19.5	17	32	10	7.5	26 ⁰ _{-0.033}	13	8	45	6	8	27	33.5	5.5	M10 x 1.25	15	30	M26 x 1.5	1/8	62	120
32	22	19.5	17	32	12	7.5	26 ⁰ _{-0.033}	13	8	45	6	8	29.3	37.5	5.5	M10 x 1.25	15	34.5	M26 x 1.5	1/8	64	122
40	24	21	22	41	14	10.7	32 ⁰ _{-0.039}	16	11	50	8	10	33.3	46.5	7	M14 x 1.5	21.5	42.5	M32 x 2	1/4	88	154

Axial foot style (L) / ¹⁰⁻₁₁₋CBM2L, ²¹⁻₂₂₋CBM2L

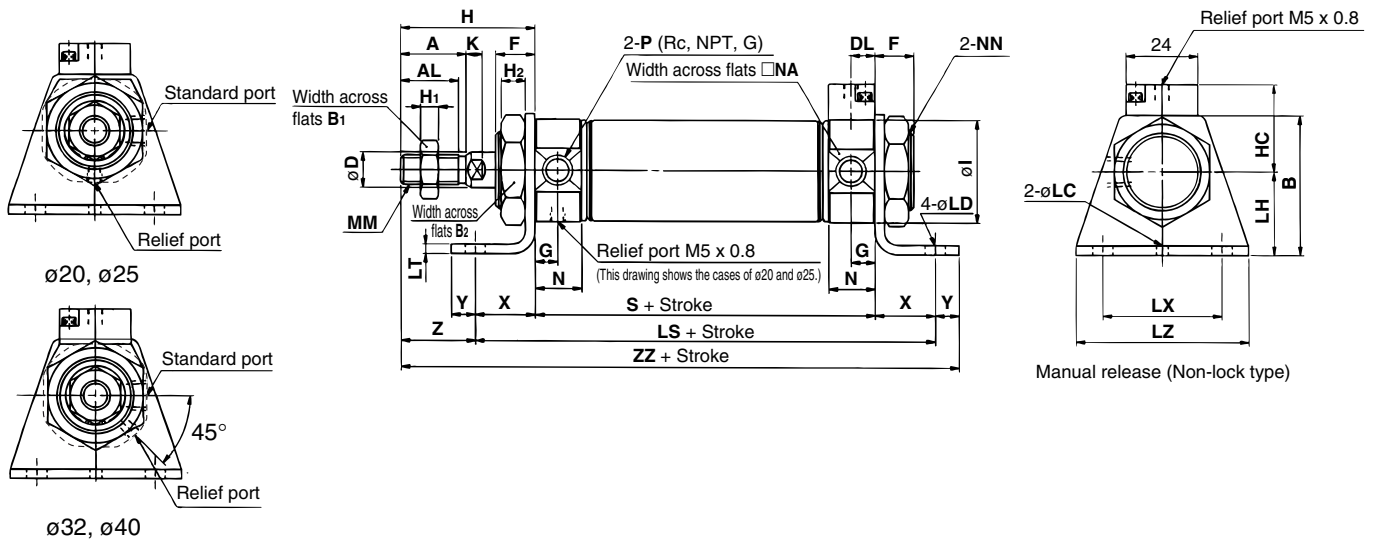

Bore size	A	AL	B	B ₁	B ₂	D	DL	F	G	H	H ₁	H ₂	HC	I	K	LC	LD	LH	LS	LT	LX	LZ	MM
20	18	15.5	40	13	26	8	7.5	13	8	41	5	8	24	28	5	4	6.8	25	102	3.2	40	55	M8 x 1.25
25	22	19.5	47	17	32	10	7.5	13	8	45	6	8	27	33.5	5.5	4	6.8	28	102	3.2	40	55	M10 x 1.25
32	22	19.5	47	17	32	12	7.5	13	8	45	6	8	29.3	37.5	5.5	4	6.8	28	104	3.2	40	55	M10 x 1.25
40	24	21	54	22	41	14	10.5	16	11	50	8	10	33.3	46.5	7	4	7	30	134	3.2	55	75	M14 x 1.5

Bore size	N	NA	NN	P	S	X	Y	Z	ZZ
20	15	24	M20 x 1.5	1/8	62	20	8	21	131
25	15	30	M26 x 1.5	1/8	62	20	8	25	135
32	15	34.5	M26 x 1.5	1/8	64	20	8	25	137
40	21.5	42.5	M32 x 2	1/4	88	23	10	27	171

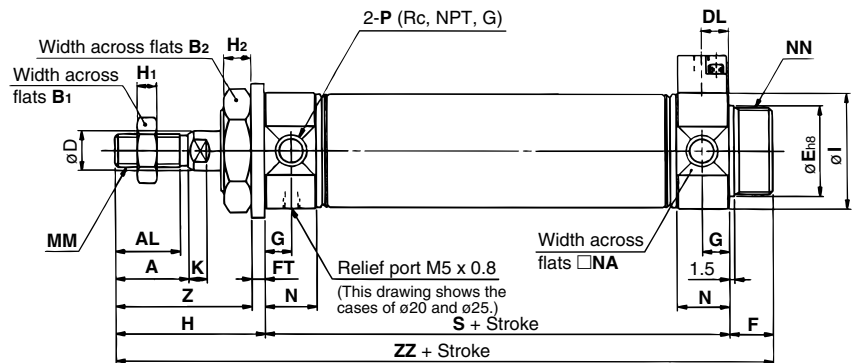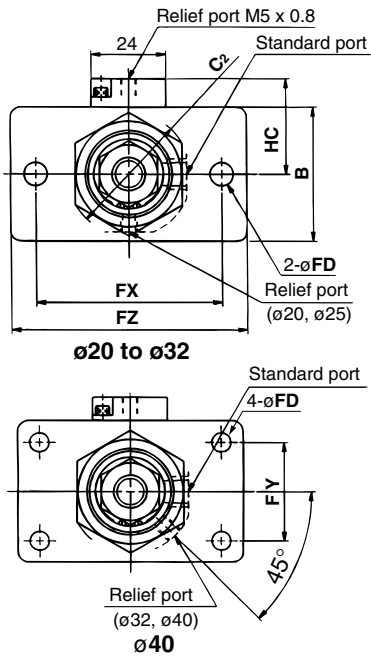Rod side flange style (F) / ¹⁰⁻~~11-~~CBM2F, ²¹⁻~~22-~~CBM2F


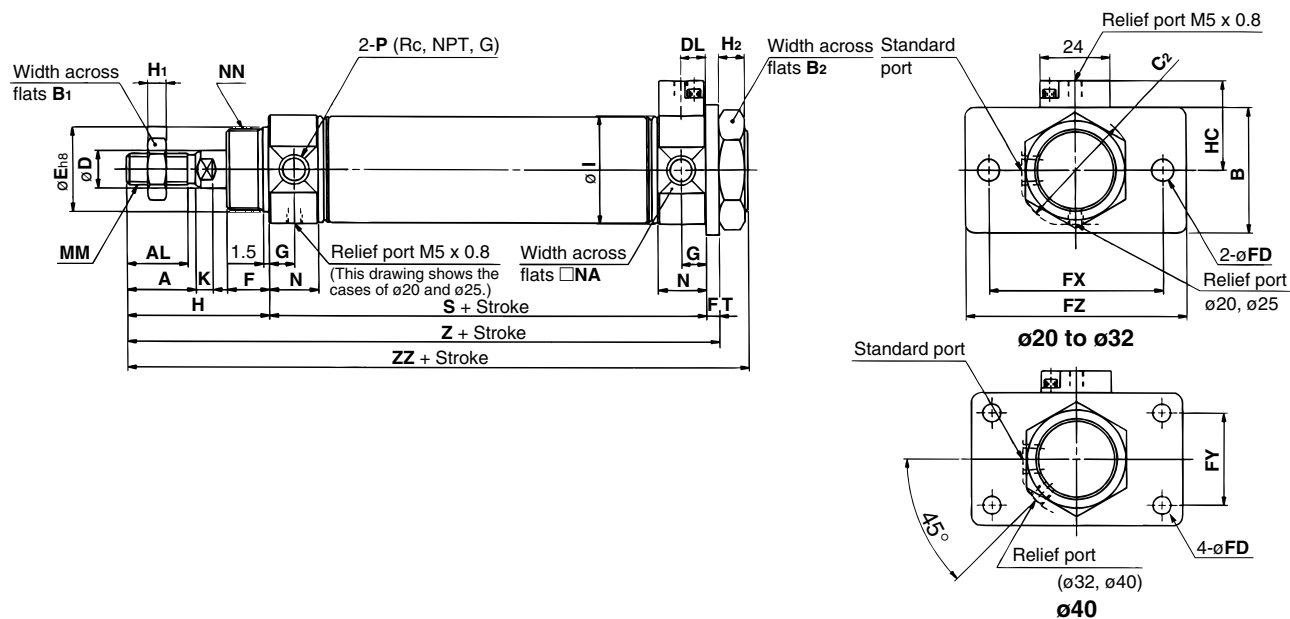
(mm)

Bore size	A	AL	B	B ₁	B ₂	C ₂	D	DL	E	F	FD	FT	FX	FY	FZ	G	H	H ₁	H ₂	HC	I	K	MM
20	18	15.5	34	13	26	30	8	7.5	20 ⁰ _{-0.033}	13	7	4	60	—	75	8	41	5	8	24	28	5	M8 x 1.25
25	22	19.5	40	17	32	37	10	7.5	26 ⁰ _{-0.033}	13	7	4	60	—	75	8	45	6	8	27	33.5	5.5	M10 x 1.25
32	22	19.5	40	17	32	37	12	7.5	26 ⁰ _{-0.033}	13	7	4	60	—	75	8	45	6	8	29.3	37.5	5.5	M10 x 1.25
40	24	21	52	22	41	47.3	14	10.5	32 ⁰ _{-0.039}	16	7	5	66	36	82	11	50	8	10	33.3	46.5	7	M14 x 1.5

(mm)

Bore size	N	NA	NN	P	S	Z	ZZ
20	15	24	M20 x 1.5	1/8	62	37	116
25	15	30	M26 x 1.5	1/8	62	41	120
32	15	34.5	M26 x 1.5	1/8	64	41	122
40	21.5	42.5	M32 x 2	1/4	88	45	154

Head side flange style (G) / 10-**CBM2G**, 21-**CBM2G**



(mm)																							
Bore size	A	AL	B	B ₁	B ₂	C ₂	D	DL	E	F	FD	FT	FX	FY	FZ	G	H	H ₁	H ₂	HC	I	K	MM
20	18	15.5	34	13	26	30	8	7.5	20 ⁰ _{-0.033}	13	7	4	60	—	75	8	41	5	8	24	28	5	M8 x 1.25
25	22	19.5	40	17	32	37	10	7.5	26 ⁰ _{-0.033}	13	7	4	60	—	75	8	45	6	8	27	33.5	5.5	M10 x 1.25
32	22	19.5	40	17	32	37	12	7.5	26 ⁰ _{-0.033}	13	7	4	60	—	75	8	45	6	8	29.3	37.5	5.5	M10 x 1.25
40	24	21	52	22	41	47.3	14	10.7	32 ⁰ _{-0.039}	16	7	5	66	36	82	11	50	8	10	33.3	46.5	7	M14 x 1.5

(mm)							
Bore size	N	NA	NN	P	S	Z	ZZ
20	15	24	M20 x 1.5	1/8	62	107	116
25	15	30	M26 x 1.5	1/8	62	111	120
32	15	34.5	M26 x 1.5	1/8	64	113	122
40	21.5	42.5	M32 x 2	1/4	88	143	154




Specific Product Precautions

Be sure to read before handling.

Use the recommended pneumatic circuit.

! Caution

1. This is necessary for proper operation and release of the lock.

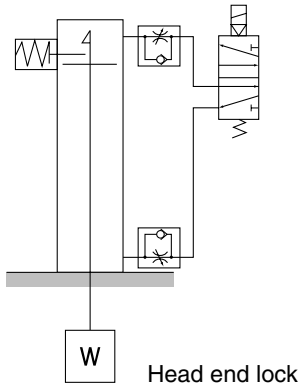

Operating Precautions

! Caution

1. Do not use 3 position solenoid valves.

Avoid use in combination with 3 position solenoid valves (especially closed center metal seal types). If pressure is trapped in the port on the lock mechanism side, the cylinder cannot be locked.

Furthermore, even after being locked, the lock may be released after some time, due to air leaking from the solenoid valve and entering the cylinder.

2. Back pressure is required to release end lock.

Before starting operation, be sure to control the system so that air is supplied to the side without the lock mechanism as shown in the figure above. There is a possibility that the lock may not be released. (Refer to "Releasing the Lock".)

3. Release the lock when mounting or adjusting the cylinder.

If mounting or other work is performed when the cylinder is locked, the lock unit may be damaged.

4. Operate with a load ratio of 50% or less.

If the load ratio exceeds 50%, this may cause problems such as failure of the lock to release, or damage to the lock unit.

5. Do not operate multiple cylinders in synchronization.

Avoid applications in which two or more end lock cylinders are synchronized to move one workpiece, as one of the cylinder locks may not be able to release when required.

6. Use a speed controller with meter-out control.

Lock cannot be released occasionally by meter-in control.

7. Be sure to operate completely to the cylinder stroke end on the side with the lock.

If the cylinder piston does not reach the end of the stroke, locking might not work or locking might not be released.

Operating pressure

! Caution

1. Supply air pressure of 0.15 MPa or higher to the port on the side that has the lock mechanism, as it is necessary for disengaging the lock.

Exhaust speed

! Caution

1. Locking will occur automatically if the pressure applied to the port on the lock mechanism side falls to 0.05 MPa or less. In cases where the piping on the lock mechanism side is long and thin, or the speed controller is separated at some distance from the cylinder port, the exhaust speed will be reduced. Take note that some time may be required for the lock to engage. In addition, clogging of a silencer mounted on the solenoid valve exhaust port can produce the same effect.

Releasing the Lock

! Warning

1. Before releasing the lock, be sure to supply air to the side without the lock mechanism, so that there is no load applied to the lock mechanism when it is released. (Refer to the recommended pneumatic circuits.) If the lock is released when the port on the other side is in an exhaust state, and with a load applied to the lock unit, the lock unit may be subjected to an excessive force and be damaged. Furthermore, sudden movement of the piston rod is very dangerous.

Manual release

! Caution

1. Insert the accessory bolt from the top of the rubber cap, and after screwing it into the lock piston, pull it to release the lock. If you stop pulling the bolt, the lock will return to an operational state. Bolt sizes, pulling forces and strokes are as shown below.

Bore size (mm)	Bolt size	Pulling force	Stroke (mm)
ø20, ø25, ø32	M2.5 x 0.45 x 25L or more	4.9N	2
ø40	M3 x 0.5 x 30L or more	10N	3


Remove the bolt for normal operation.

It can cause lock malfunction or faulty release.

Series 10-11-CM2X

Low speed cylinder
Double acting single rod / ø20, ø25, ø32, ø40

How to Order

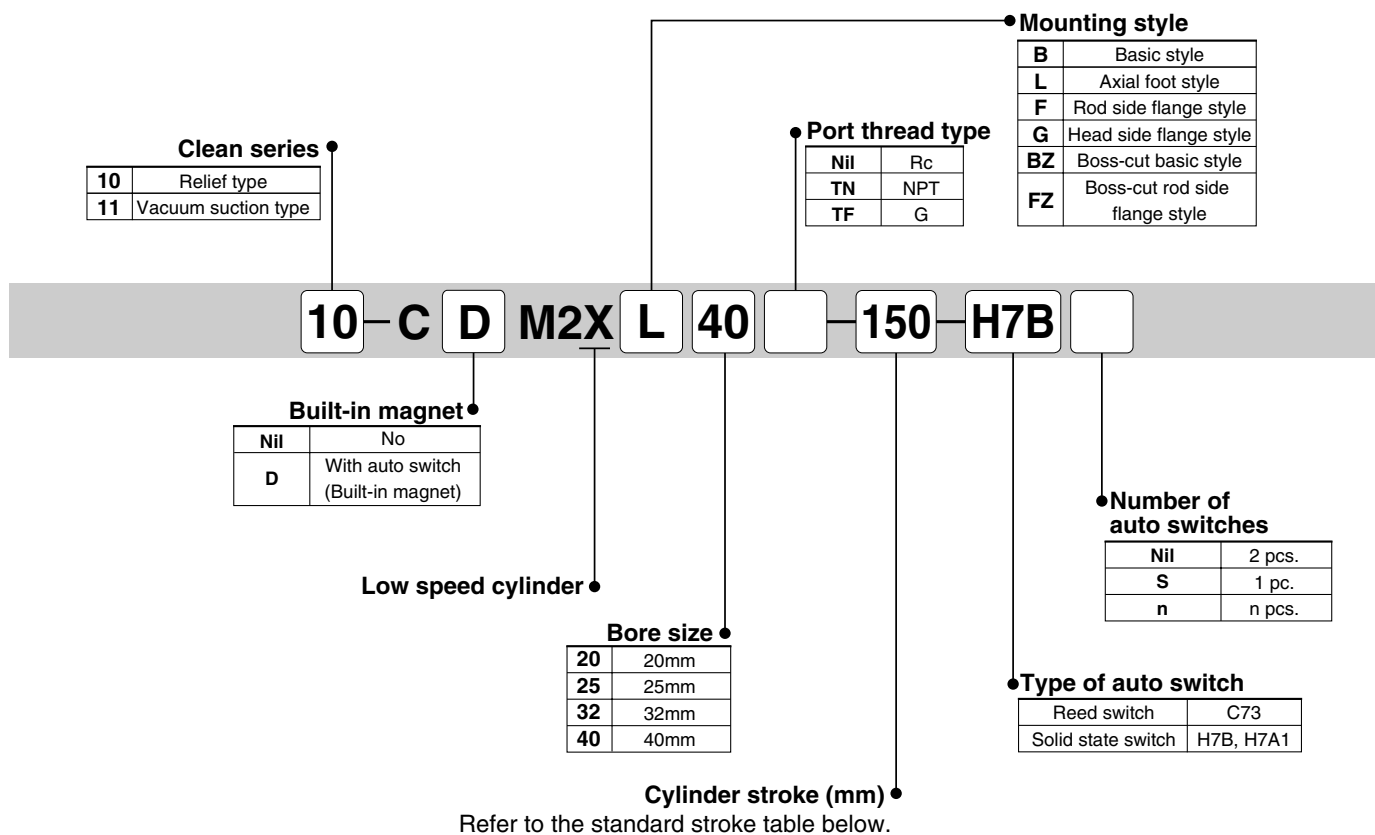

Model

Model		Bore size (mm)	Port size	Lubrication	Action	Standard stroke (mm)	Auto switch mounting	Cushion							
								Rubber	Air						
Relief type	10-CM2X□20	20	1/8	Non-lube	Double acting single rod	25, 50, 75, 100, 125 150, 200, 250, 300	○	○	—						
	10-CM2X□25	25													
	10-CM2X□32	32													
	10-CM2X□40	40													
Vacuum suction type	11-CM2X□20	20	1/8												
	11-CM2X□25	25													
	11-CM2X□32	32													
	11-CM2X□40	40	1/4												

Specifications

Bore size (mm)	10- (Relief type)				11- (Vacuum suction type)			
	20	25	32	40	20	25	32	40
Fluid	Air							
Proof pressure	1.5 MPa							
Max. operating pressure	1.0 MPa							
Min. operating pressure	0.035 MPa				0.025 MPa			
Ambient and fluid temperature	Without auto switch : −10°C to 70°C (With no freezing)							
	With auto switch : −10 to 60°C (With no freezing)							
Cushion	Rubber bumper							
Piston speed	1 to 200 mm/s				0.5 to 200 mm/s			
Piston rod diameter	ø8	ø10	ø12	ø14	ø8	ø10	ø12	ø14
Rod end thread	M8 x 1.25	M10 x 1.25		M14 x 1.5	M8 x 1.25	M10 x 1.25		M14 x 1.5
Rod end thread tolerance	JIS Class 2							
Stroke tolerance	$\begin{smallmatrix} +1.4 \\ 0 \end{smallmatrix}$ mm							
Port size	1/8			1/4	1/8			1/4
Vacuum suction port, Relief port	M5 x 0.8							
Grease	Fluorine grease							
Particle generation grade	Grade 2				Grade 1			
Suction flow rate (Reference values)	—				2 ℓ/min (ANR)			

 External dimensions and applicable auto switches are the same as 10-/11-CM2. Please refer to pages 15 to 20.



Specific Product Precautions

Be sure to read before handling.

Precautions

Warning

1. Do not rotate the cover.

When installing a cylinder or screwing a pipe fitting into the port, the coupling portion of the cover could break if the cover is rotated.

Caution

1. Be careful of the snap ring to pop out.

When replacing the rod seal, take care that the snap ring does not spring out while you are removing it.

Maintenance

Caution

1. Grease pack

Use the following part number to order grease for maintenance.

Grease pack
GR-X-005 (5g)



Actuator / Common Precautions 1

Be sure to read before handling. Refer to the main text for precautions for each series.

Precaution on designing

Warning

1. **There is a possibility of dangerous sudden action by air cylinders if sliding parts of machinery are twisted due to external forces, etc.**

In such cases, personal injury by catching hands or feet in the machinery, or damage to the machinery itself may occur. Therefore, the machine should be adjusted to operate smoothly and designed to avoid such dangers.

2. **A protective cover is recommended to minimize the risk of personal injury.**

If a driven object and moving parts of a cylinder are in close proximity, personal injury may occur. Design the structure to avoid contact with the human body.

3. **Securely tighten all stationary parts and connected parts so that they will not become loose.**

Particularly when a cylinder operates at a high frequency or is installed in a place where there is a lot of vibration, ensure that all parts remain secure.

4. **A deceleration circuit may be required.**

When a driven object is operated at high speed or the load is heavy, a cylinder's cushion will not be sufficient to absorb the impact. Install a deceleration circuit to reduce the speed before cushioning to relieve the impact.

In this case, the rigidity of the machinery should also be examined.

5. **Consider a possible drop in circuit pressure due to a power outage, etc.**

When a cylinder is used in a clamping mechanism, there is a danger of workpiece dropping if there is a decrease in clamping force due to a drop in circuit pressure caused by a power outage, etc. Therefore, safety equipment should be installed to prevent damage to machinery and personal injury. Suspension mechanisms and lifting devices also require consideration for drop prevention.

6. **Consider a possible loss of power source.**

Measures should be taken to avoid personal injury and equipment damage in the event that there is a loss of power to equipment controlled by pneumatics, electricity, or hydraulics.

7. **Design circuitry to prevent the sudden lurching of driven objects.**

When a cylinder is driven by an exhaust center type directional control valve or when it is started up after residual pressure is exhausted from the circuit, etc., the piston and its driven object will lurch when the cylinder is operated at high speed if pressure is applied to one side of the cylinder, due to the absence of air pressure inside the cylinder. Therefore, equipment should be selected and circuits should be designed to prevent this sudden lurching, because there is a danger of personal injury and/or damage to equipment when this occurs.

8. **Consider emergency stops.**

Design the machinery so that personal injury and/or damage to machinery and equipment will not occur when the machinery is stopped by a safety device under abnormal conditions, such as a power outage or a manual emergency stop.

9. **Consider the action when operation is restarted after an emergency stop or abnormal stop.**

Design the machinery so that personal injury or equipment damage will not occur upon restart of operation.

When the cylinder has to be reset at the start position, install safety manual control equipment.

Selection

Warning

1. **Confirm the specifications.**

The products featured in this catalog are designed for use in industrial compressed air systems. If the products are used in conditions where pressure and/or temperature are outside the range of specifications, damage and/or malfunctions may occur. Do not use in these conditions. (Refer to the specifications).

Please consult with SMC if you use a fluid other than compressed air.

2. **Intermediate Stops**

With a 3-position closed center type valve, it is difficult to accurately and precisely stop a piston at the required position in the same way as can be done with hydraulic pressure due to the compressibility of air.

Furthermore, since valves and cylinders, etc. are not guaranteed for zero air leakage, it may not be possible to hold a stopped position for an extended period of time. Please contact with SMC when it is necessary to hold a stopped position for an extended period of time.

Caution

1. **Operate within the limits of the maximum feasible stroke.**

Operation that exceeds the maximum stroke may damage a piston rod. Refer to the air cylinder model selection procedures for the maximum feasible strokes.

2. **Operate a cylinder within a range such that collision damage will not occur to a piston at the stroke end.**

Operate a cylinder within a range so that a piston having inertial force will not be damaged when it collides against the cover at the stroke end. Refer to the air cylinder model selection procedures for the maximum feasible strokes.

3. **Use a speed controller to adjust the cylinder speed, gradually increasing from a low speed to the desired speed setting.**

4. **Provide intermediate supports for long stroke cylinders.**

An intermediate support should be provided in order to prevent damage to a long stroke cylinder, due to problems such as sagging of the rod, deflection of the cylinder tube, vibration and external load.



Actuator / Common Precautions 2

Be sure to read before handling. Refer to the main text for precautions for each series.

Mounting

Caution

1. **Be certain to match the rod shaft center with the load and direction of movement when connecting.**

When not properly matched, problems may arise with the rod and tube, and damage may be caused due to friction on areas such as the inner tube surface, bushings, rod surface, and seals.

2. **When using an external guide, connect the rod end and the load in such a way that there is no interference at any point within the stroke.**

3. **Do not scratch or gouge the sliding portion of the cylinder tube or the piston rod by striking it with an object, or squeezing it.**

The tube bore is manufactured under precise tolerances. Thus, even a slight deformation could lead to a malfunction.

Moreover, scratches or gouges, etc. in the piston rod may lead to damaged seals and cause air leakage.

4. **Do not use until you verify that the equipment can operate properly.**

After mounting, repairs, or modification, etc., connect the air supply and electric power, and then confirm proper mounting by means of appropriate function and leak tests.

5. **Instruction manual**

Install the products and operate them only after reading the instruction manual carefully and understanding its contents.

Also keep the manual where it can be referred to as necessary.

Cushion

Caution

1. **Readjust with a cushion needle.**

Cushions are adjusted at the time of shipment; however, the cushion needle on the cover should be readjusted, when the product is put into service based on factors such as the size of the load and the operating speed. When the cushion needle is turned clockwise, the restriction becomes smaller and the cushion's effectiveness is increased. Tighten the lock nut securely after adjustment is performed.

2. **Do not operate the actuator with the cushion needle fully closed.**

This could damage the seals.

Air Supply

Warning

1. **Use clean air.**

Do not use compressed air which contains chemicals, synthetic oil containing organic solvents, salts or corrosive gases, etc. as this may cause damage or malfunction.

Caution

1. **Install air filters.**

Install air filters close to valves at their upstream side. A filtration degree of 5 μ m or less should be selected.

2. **Install an aftercooler, air dryer, or water separator (Drain Catch).**

Compressed air that includes excessive drainage may cause malfunction of valves and other pneumatic equipment. To prevent this, install an air dryer, aftercooler or water separator (drain catch), etc.

3. **Use the product within the specified range of fluid and ambient temperature.**

Take measures to prevent freezing at temperature below 5°C, since moisture in circuits may freeze and cause damage to seals and lead to malfunctions.



Actuator / Common Precautions 3

Be sure to read before handling. Refer to the main text for precautions for each series.

Operating Environment

Warning

1. Do not use in atmospheres or locations where corrosion hazards exist.
Refer to the construction drawings regarding cylinder materials.
2. In locations where ultrapure water or cleaning solvent, etc. splashes on the equipment, take suitable measures to protect the rod.

Maintenance

Warning

1. Perform maintenance procedures as shown in the instruction manual.
Improper handling may result in malfunction and damage of machinery or equipment.
2. Removal of equipment, and supply / exhaust of compressed air
Before any machinery or equipment is removed, first ensure that the appropriate measures are in place to prevent the fall or erratic movement of driven objects and equipment, then cut off the electric power and release the compressed air in the system.
When machinery is restarted, proceed with caution after confirming that appropriate measures are in place to prevent cylinders from sudden movement.

Caution

1. Drain flushing
Remove drainage from air filters regularly.



Auto switch / Common Precautions 1

Be sure to read before handling. Refer to the main text for precautions for each series.

Design/Selection

Warning

1. Confirm the specifications.

Read the specifications carefully and use this product appropriately. The product may be damaged or malfunction if it is used outside the specifications of current voltage, temperature or impact.

2. Use caution when multiple cylinders are used in close proximity to each other.

When two or more auto switch cylinders are lined up in close proximity to each other, magnetic field interference may cause the switches to malfunction. Maintain a minimum cylinder separation of 40mm. (When the allowable interval is specified for each cylinder series, use the indicated value.)

3. Use caution to the ON time of a switch at the intermediate position of stroke.

When an auto switch is placed at an intermediate position of the stroke and a load is driven at the time the piston passes, the auto switch will operate, but if the speed is too fast, the operating time will be shortened and the load may not operate properly. The maximum detectable piston speed is :

$$V \text{ (mm/s)} = \frac{\text{Auto switch operation range (mm)}}{\text{Load operating time (ms)}} \times 1000$$

In cases of high piston speed, the use of an auto switch (D-F5NT, F7NT, G5NT and M5□T) with a built-in OFF delay timer (approx. 200ms) makes it possible to extend the load operating time.

4. Wiring should be kept as short as possible.

<Reed switch>

As the length of the wiring to a load gets longer, the rush current at switching ON becomes greater, and this may shorten the product's life. (The switch will stay ON all the time).

- 1) For an auto switch without a contact protection circuit, use a contact protection box when the wire length is 5m or longer.
- 2) Even if an auto switch has a built-in contact protection circuit, when the wiring is more than 30m long, it is not able to adequately absorb the rush current and its life may be reduced. It is again necessary to connect a contact protection box in order to extend its life. Please contact SMC in this case.

<Solid state switch>

- 3) Although wire length should not affect switch function, use a wire 100m or shorter.

5. Use caution to internal voltage drop of a switch.

 
<Reed switch>

1. Switches with an indicator light (except D-A56/A76H/ A96/A96 V/C76/E76A/Z76)

- If auto switches are connected in series as shown below, please note that there will be a large voltage drop because of internal resistance in the light emitting diodes. (Refer to internal voltage drop in the auto switch specifications.)

- [The voltage drop will be "n" times larger when "n" auto switches are connected.]

The load may be ineffective even though the auto switch function is normal.



- Similarly, when operating below a specified voltage, it is possible that the load may be ineffective even though the auto switch function is normal. Therefore, the formula below should be satisfied after confirming the minimum operating voltage of the load.

Power voltage – Internal voltage drop of switch > Minimum operating voltage of load

- 2) If the internal resistance of a light emitting diode causes a problem, select a switch without an indicator light (D-A6□, A80, A80H, A90, A90V, C80, R80, 90, E80A, Z80).

<Solid state switch>

- 3) Generally, the internal voltage drop will be greater with a 2-wire solid state auto switch than with a reed switch. Take the same precautions as in 1).

Also please note that a 12VDC relay is not applicable.

6. Use caution to the leakage current.

<Solid state switch>

With a 2-wire solid state auto switch, current (leakage current) flows to the load to operate the internal circuit even when in the OFF state.

Current to operate load (OFF condition) > Leakage current
If the condition given in the above formula is not met, it will not reset correctly (stays ON). Use a 3-wire switch if this specification cannot be satisfied.

Moreover, leakage current flow to the load will be "n" times larger when "n" auto switches are connected in parallel.

7. Do not use a load that generates surge voltage.

<Reed switch>

When driving a load such as a relay that generates a surge voltage, use a switch with a built-in contact protection circuit or a contact protection box.

<Solid state switch>

Although a zener diode for surge protection is connected to the output side of a solid state auto switch, damage may still occur if the surge is applied repeatedly. When a load, such as a relay or solenoid, which generates surge is directly driven, use a type of switch with a built-in surge absorbing element.

8. Cautions for use in an interlock circuit

When an auto switch is used for an interlock signal requiring high reliability, devise a double interlock system to avoid trouble by providing a mechanical protection function, or by also using another switch (sensor) together with the auto switch.

Also perform periodic maintenance inspections and confirm proper operation.

9. Ensure sufficient space for maintenance activities.

When designing an application, be sure to allow sufficient space for maintenance and inspection.



Auto switch / Common Precautions 2

Be sure to read before handling. Refer to the main text for precautions for each series.

Mounting/Adjustment

Warning

1. Do not drop or bump.

Do not drop, bump, or apply excessive impacts (300m/s² or more for reed switches and 1000m/s² or more for solid state switches) while handling. Although the body of the switch may not be damaged, the inside of the switch could be damaged and cause a malfunction.

2. Do not carry a cylinder by the auto switch lead wires.

Never carry a cylinder by its lead wires. This may not only cause broken lead wires, but it may cause internal elements of the switch to be damaged by the stress.

3. Mount switches using the proper tightening torque.

When a switch is tightened beyond the range of tightening torque, the mounting screws or switch may be damaged.

On the other hand, tightening below the range of tightening torque may allow the switch to slip out of position.

4. Mount a switch at the center of the operating range.

Adjust the mounting position of an auto switch so that the piston stops at the center of the operating range (the range in which a switch is ON). (The mounting positions shown in the catalog indicate the optimum position at the stroke end.) If mounted at the end of the operating range (around the borderline of ON and OFF), the operation will be unstable.

<D-M9□>

If this auto switch replaces the conventional model, it may not function depending on the application (shown below) because its operation range is shorter.

- Applications where at the end, the stopping position shifting range is larger than the operation range

e.g. Workpiece pushing, pressing into a hole, or clamping

- Applications where an auto switch is used to detect intermediate stopping positions (Detecting time is shortened).

As indicated above, mount a switch at the center of the operating range.

Wiring

Warning

1. Avoid repeatedly bending or stretching lead wires.

Broken lead wires will result from repeatedly applying bending stress or stretching force to lead wires.

2. Be sure to connect the load before power is applied.

<2-wire type>

If the power is turned on when an auto switch is not connected to a load, the switch will be instantly damaged because of excess current.

3. Confirm proper insulation of wiring.

Be certain that there is no faulty wiring insulation (contact with other circuits, ground fault, improper insulation between terminals, etc.). Damage may occur due to excess current flow into a switch.

4. Do not wire with power lines or high voltage lines.

Wire separately from power lines or high voltage lines, avoiding parallel wiring or wiring in the same conduit with these lines. Control circuits, including auto switches, may malfunction due to

Wiring

Warning

5. Do not allow short circuiting of loads.

<Reed switch>

If the power is turned on with a load in a short circuited condition, the switch will be instantly damaged because of excess current flow into the switch.

<Solid state switch>

Models M-F9□(V), F9□W(V), J51, G5NB and all models of PNP output switches do not have built-in short circuit prevention circuits. If loads are short circuited, the switches will be instantly damaged.

Use caution to avoid reverse wiring with the brown power supply line and the black output line on 3-wire type switches.

6. Avoid incorrect wiring.

<Reed switch>

A 24VDC switch with indicator light has polarity. The brown lead wire or terminal No.1 is (+), and the blue lead wire or terminal No.2 is (-).

[In the case of model D-97, the side without indicator is (+) and the blue line side is (-).]

1) If connections are reversed, a switch will operate, however, the light emitting diode will not light up.

Also please note that a current greater than the maximum specified one will damage a light emitting diode and make it inoperable.

Applicable models

D-A73, A73H, A73C, C73, C73C, E73A, Z73, R73

D-97, 93A, A93, A93V

D-A33, A34, A33A, A34A, A44, A44A

D-A53, A54, B53, B54

2) However, when using a 2 color indication auto switch (D-A79W, A59W, B59W), be aware that the switch will constantly remain ON if the connections are reversed.

<Solid state switch>

1) If connections are reversed on a 2-wire type switch, the switch will not be damaged if protected by a protection circuit, but the switch will always stay in an ON state. However, it is still necessary to avoid reversed connections, since the switch could be damaged by a load short circuit in this condition.

2) If connections are reversed (power supply line (+) and power supply line (-) on a 3-wire type switch, the switch will be protected by a protection circuit. However, if the power supply line (+) is connected to the blue wire and the power supply line (-) is connected to the black wire, the switch will be damaged.

<D-M9□>

D-M9□ does not have built-in short-circuit prevention circuits. Reverse connection of power supply line (+) and (-) may damage the switch.



Auto switch / Common Precautions 3

Be sure to read before handling. Refer to the main text for precautions for each series.

Environment

Warning

1. Never use in the presence of explosive gases.

Our auto switches are not explosion proof. Never use them in the presence of explosive gas, as this may cause a serious explosion.

2. Do not use in an area where a magnetic field is generated.

Auto switches will malfunction or magnets inside cylinders will become demagnetized. (Please consult with SMC regarding the availability of a magnetic field resistant auto switch.)

3. Do not use in environments where the auto switches will be constantly exposed to water.

Although switches except D-A3□/A44□/G39□/K39□ satisfy the IEC standard IP67 structure (JIS C 0920: anti-immersion structure), do not use switches in applications where continually exposed to water splash or spray. Poor insulation or swelling of the potting resin inside switches may cause malfunction.

4. Do not use in environments with oil or chemicals.

Please consult with SMC if auto switches will be used in an environment with coolants, cleaning solvents, various oils or chemicals. If auto switches are used under these conditions for even a short time, they may be adversely affected by improper insulation, a malfunction due to swelling of the potting resin, or hardening of the lead wires.

5. Do not use in environments with temperature cycles.

Please consult with SMC if switches are to be used where there are temperature cycles other than normal temperature changes, as they may be adversely affected internally.

6. Do not use in environments where there is excessive impact shock.

<Reed switch>

When excessive impact (300 m/s² or more) is applied to a reed switch during operation, the contact point may malfunction and generate or cut off a signal momentarily (1ms or less). Please consult with SMC regarding the need to use a solid state switch depending on the environment.

7. Do not use in locations where surges are generated.

<Solid state switch>

When there are units (solenoid type lifters, high frequency induction furnaces, motors, etc.) which generate a large amount of surge in the area around cylinders with solid state auto switches, this may cause deterioration or damage to the switches. Avoid sources of surge generation and crossed lines.

8. Avoid close contact with magnetic substances.

When a magnetic substance (substance attracted by a magnet) is brought into close proximity with an auto switch cylinder, it may cause the auto switches to malfunction due to a loss of the magnetic force inside the cylinder.

Maintenance

Warning

1. Perform the following maintenance periodically in order to prevent possible danger due to unexpected auto switch malfunction.

1) Securely tighten switch mounting screws.

If screws become loose or the mounting position is dislocated, retighten screws securely after readjusting the mounting position.

2) Confirm that there is no damage to lead wires.

To prevent faulty insulation, replace switches or repair lead wires if damage is discovered.

3) Confirm that the green light on the 2-color indicator type switch lights up.

Confirm that the green LED is ON when stopped at the set position. If the red LED is ON when stopped at the set position, the mounting position is not appropriate. Readjust the mounting position until the green LED lights up.

Other

Warning

1. Please consult with SMC concerning water resistance, elasticity of lead wires, etc.

*Lead wire color changes

Lead wire colors of SMC auto switches have been changed in order to meet NECA (Nippon Electric Control Equipment Industries Association) Standard 0402 for production beginning September, 1996 and thereafter. Special care should be taken regarding wire polarity during the time that both old and new colors exist.

2-wire system

	Old	New
Output (+)	Red	Brown
Output (-)	Black	Blue

3-wire system

	Old	New
Power supply +	Red	Brown
Power supply GND	Black	Blue
Output	White	Black

Solid state with diagnostic output


	Old	New
Power supply +	Red	Brown
Power supply GND	Black	Blue
Output	White	Black
Diagnostic output	Yellow	Orange

Solid state with latch type diagnostic output

	Old	New
Power supply +	Red	Brown
Power supply GND	Black	Blue
Output	White	Black
Latch type diagnostic output	Yellow	Orange

Caution

1. When stripping the cable clad, take care with the orientation of the cable being stripped. The insulator may accidentally be torn or damaged depending on the orientation.(D-M9□ only)

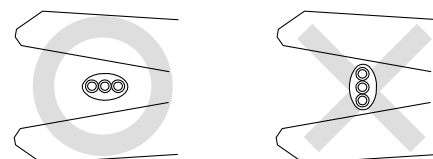

Recommended tools are shown below.

Manufacturer	Model name	Model no.
VESSEL	Wire stripper	No 3000G
TOKYO IDEAL	Strip master	45-089

* Stripper for round cable (ø2.0) can be used for a 2-wire type cable.

Cylinder




Applicable auto switch list

Cylinder series		CDJ2		CDM2	CDBM2	CDG1		CDA2	CUJ	CDU	CDQS	CDQ2	REC	CXSJ	CXS	MGP	MGF	MXP	MXQ	MXS	CYP	CDQX	CDQ2X	CDM2X
Bore size		ø6	ø10/ø16	ø20 to ø40	ø20 to ø40	ø20 to ø63	ø80/ø100	ø40 to ø63	ø6 to ø10	ø6 to ø25	ø12 to ø25	ø32 to ø100	ø20 to ø40	ø6-ø10	ø6 to ø32	ø12 to ø63	ø40/ø63/ø100	ø6 to ø16	ø6 to ø25	ø6 to ø25	ø15/ø32	ø12 to ø25	ø32 to ø63	ø20 to ø40
Feed switch	D-C7/C8																							
	D-C73C/C80C																							
	D-B5/B6																							
	D-B59W																							
	D-A3/A4																							
	D-A3□A/A44A																							
	D-A3□C/A44C																							
	D-A7/A8																							
	D-A7□H/A80H																							
	D-A73C/A80C																							
	D-A79W																							
	D-A5/A6																							
	D-A59W																							
	D-A9	*	*	*	*	*	*	*					*			*								*
	D-A9□V							*								*								
	D-Z7/Z8																							
Solid state switch	D-H7																							
	D-H7C																							
	D-H7BAL																							
	D-H7□F																							
	D-H7□W																							
	D-G5/K5																							
	D-G5BAL																							
	D-G59F																							
	D-G5NTL																							
	D-G5□W/K59W																							
	D-G39/K39																							
	D-G39A/K39A																							
	D-F7/J7																							
	D-J79C																							
	D-F7□F																							
	D-F7BAL																							
	D-F7BAVL																							
	D-F7□V																							
	D-F7NTL																							
	D-F7□W (V)																							
	D-F5/J5																							
	D-F5BAL																							
	D-F5□W/J59W																							
	D-F5□F																							
	D-F5NTL																							
	D-G39C/K39C																							
	D-M9	*	*	*	*	*	*	*					*			*								*
	D-M9□V							*								*								
	D-F9□W	*	*	*	*	*	*	*					*			*								*
	D-F9□WV							*								*								
	D-F9BAL							*								*								
	D-Y59A/Y7P/Y59B																							
	D-Y69A/Y7PV/Y69B																							
	D-Y7□W																							
	D-Y7□WV																							
	D-Y7BAL																							
	D-P5□WL																							
	D-F9G/H	*	*	*	*	*	*	*					*			*								*
	D-Y7G/H																							
	D-G5NBL																							
	D-F8□																							

Please refer to the next page for applicable auto switches and cylinders in the fields marked with asterisks (*).

Compact auto switch mounting bracket

Mounting brackets used for installing the compact auto switches D-A9/M9/F9 onto band mounting / tie-rod mounting / groove mounting style cylinders are available.

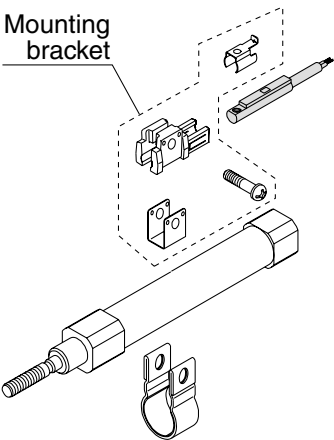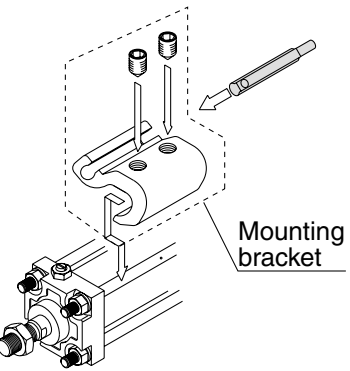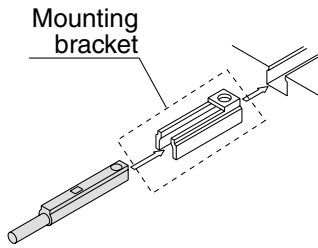Band mounting  Applicable cylinder 10-/11-/21-/22-CDJ2 Series 10-/11-/21-/22-CDM2 Series 10-/11-/21-/22-CDG1 Series 10-/11-REC Series 10-/11-CDM2X Series		Applicable auto switch Solid state switch D-M9 D-F9□W (2-color indication) Reed switch D-A9 Perpendicular entry is unavailable.
Tie-rod mounting  Applicable cylinder 10-/11-/21-/22-CDA2 Series		Applicable auto switch Solid state switch D-M9/M9□V D-F9□W/F9□WV (2-color indication) D-F9BAL (water resistant type) Reed switch D-A9/D-A9□V
Groove mounting  Applicable cylinder 12-/13-/21-/22-MGP Series		Applicable auto switch Reed switch D-A9/D-A9□V

Air cylinder

Rotary actuator

Air gripper

Directional control valve

Flow control equipment

Filter, Pressure control equipment

Fittings & Tubing

Air preparation equipment

Pressure switch

Clean gas filter



Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC), Japan Industrial Standards (JIS)*¹⁾ and other safety regulations*²⁾.

* 1) ISO 4414: Pneumatic fluid power – General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1992: Manipulating industrial robots -Safety.

JIS B 8370: General rules for pneumatic equipment.

JIS B 8361: General rules for hydraulic equipment.

JIS B 9960-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

JIS B 8433-1993: Manipulating industrial robots - Safety.

etc.

* 2) Labor Safety and Sanitation Law, etc.

 **Caution:** Operator error could result in injury or equipment damage.

 **Warning:** Operator error could result in serious injury or loss of life.

 **Danger :** In extreme conditions, there is a possibility of serious injury or loss of life.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.

2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.

3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.

2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.

3. An application which could have negative effects on people, property, or animals requiring special safety analysis.

4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.



Safety Instructions

Caution

The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited Warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited Warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited Warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*3)

Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.

This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.

3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

* 3) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

When the product is exported, strictly follow the laws required by the Ministry of Economy, Trade and Industry (Foreign Exchange and Foreign Trade Control Law).



Clean series: Common Precautions 1

Be sure to read before handling.

Refer to the main text for detailed precautions on every series.

Air Supply


⚠ Caution

System Configuration

Refer to the "Air Preparation System" below for the quality of compressed air before configuring the system.


Main line

Sub-line

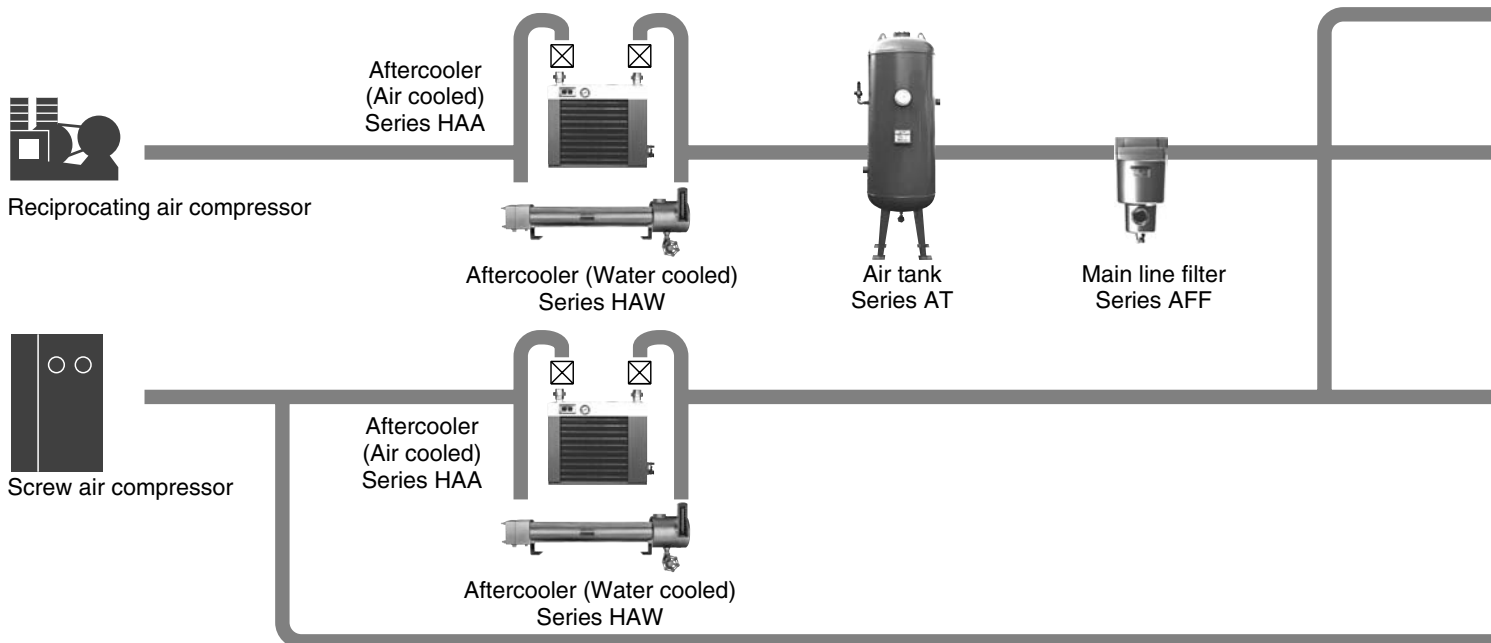

Piping

1. Provide an inclination of 1cm per meter in the direction of the air flow to the main piping.
2. If there is a line branching from the main piping, provide an outlet of compressed air on top using a tee so that drainage accumulated in the piping will not flow out.
3. Provide a drainage mechanism at every recessed point or dead end to prevent drain accumulation.
4. For future piping extensions, plug the end of the piping with a tee.
5. Before piping
Before piping, the piping should be thoroughly blown out with air (flushed) or washed to remove chips, cutting oil and other debris from inside the pipe.
6. Wrapping of pipe tape
When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not get inside the valve. Also, when pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

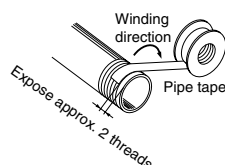

7. If air with a low dew point (-40°C or less) is required, do not use nylon tube or resin fitting (except for fluorine resin) for the outlet side of the membrane air dryer or heatless air dryer. Nylon tubing could be affected by the ambient air and it thus might not be possible to achieve the prescribed low dew point at the end of the tube. Therefore, for low dew point air, use stainless steel or fluorine tube.

Maintenance

1. If the heatless air dryer Series ID is left unused for a long period, the absorbent may be moistened. Prior to use, close the valve on the outlet side of the dryer for regeneration and drying.


Caution on Design

Employ a safe design, so that the following unexpected conditions will not occur.

⚠ Warning

1. **Provide a design that prevents high-temperature compressed air from flowing into the outlet side of the cooling equipment.**
If the flow of the coolant water in a water-cooled aftercooler is stopped or if the fan motor of an air cooled aftercooler is stopped, the high-temperature compressed air will flow to the outlet side of the cooling equipment, causing the equipment on the outlet side (such as the AFF, AM, AD, or IDF series) to be damaged or to malfunction.
2. **Provide a design in which interruptions in the supply of compressed air are taken into consideration.**

Air Supply

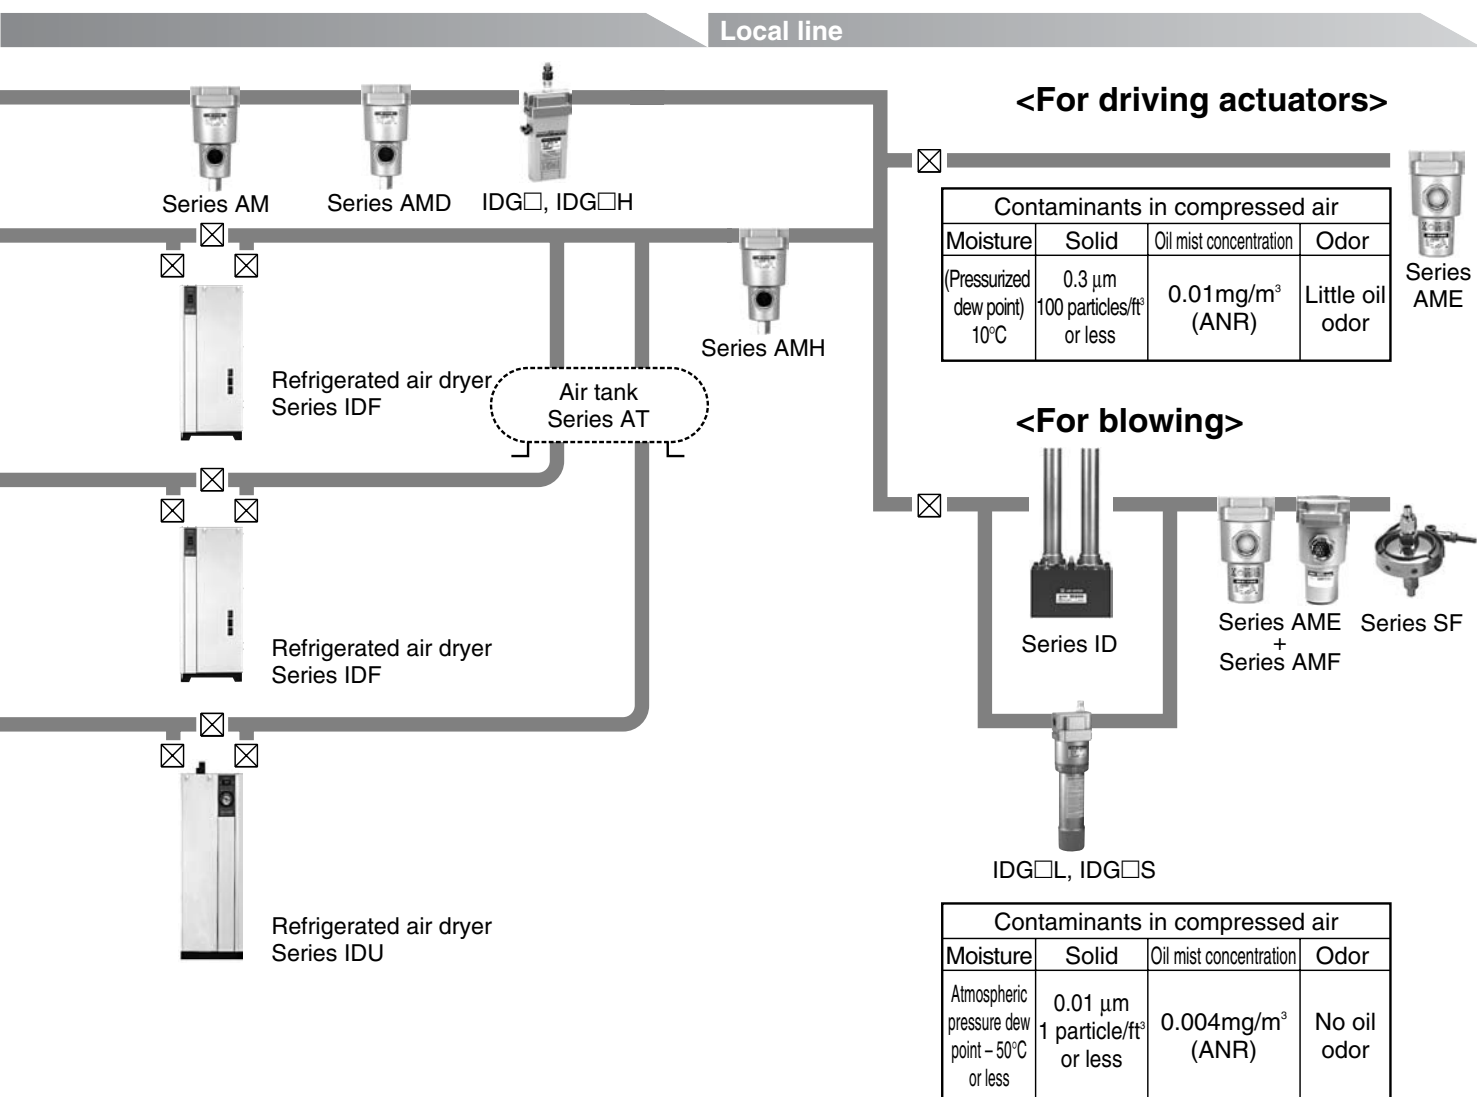

There are cases in which compressed air cannot flow due to the freezing of the refrigerated air dryer or a malfunction (heatless dryer) in the switching valve.

⚠ Caution

3. Design a layout in which the leakage of the coolant water and the dripping of condensation are taken into consideration.

A water-cooled aftercooler that uses coolant water could lead to water leakage due to freezing. Depending on the operating conditions, the refrigerated air dryer and its downstream pipes could create a dripping of water droplets due to condensation formed by supercooling.

4. Provide a design that prevents back pressure and backflow.

The generation of back pressure and backflow could lead to

equipment damage.

Take appropriate safety measures, including the proper installation methods.

5. Depending on the model and operating conditions, the life span of air cylinders may be shortened when they are used in an environment of super dry air (atmospheric pressure dew point: -50°C) or high-purity nitrogen gas or when such super dry air or high-purity nitrogen gas is used as the fluid.

Please contact with SMC for further details on applicable series, models, operating conditions and life spans.

6. Blowing system

Even a small amount of dust can be a problem for blowing systems.

Install Clean Gas Filter Series SF to the end of the blowing line.



Clean series: Common Precautions 2

Be sure to read before handling.

Refer to the main text for detailed precautions on every series.

Piping: Inside of Clean Room

⚠ Caution

1. Do not make the piping for the air cylinder relief port and regulator breathing vent piping common with solenoid valve exhaust piping.

This can cause malfunctions in the air cylinder or regulator pressure change.

2. Arrange the piping so that the exhaust air of the solenoid valves is exhausted outside of the clean room.

3. Air filter drain piping


Exhaust drainage outside the clean room through piping from the drain guide of the air filter.

4. Arrange the membrane dryer air purge piping using a standard size tubing so that air is exhausted outside the clean room.

5. Take precautions so that the threaded portion of the piping connection or the tubing connection will not be loosened.

Take sufficient precautions against the piping shaking along with the vibration of the equipment.

6. Use polyurethane tubing containing no plasticizer.

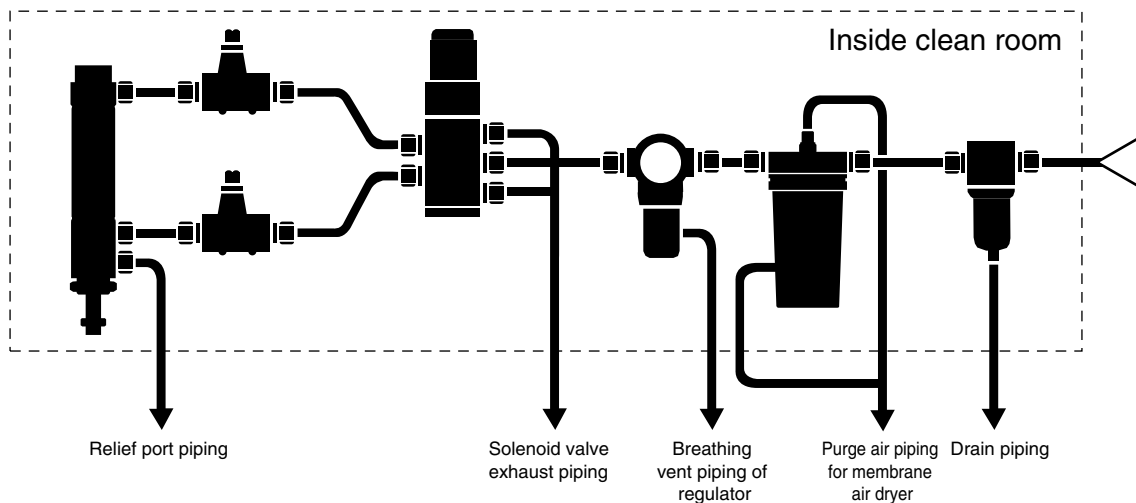

Handling

⚠ Caution

1. The inner bag of a double-packed clean series package should be opened in a clean room or clean environment.
2. When standard pneumatic equipment is brought into a clean room, spray high-purity air upon it and remove dust thoroughly by wiping the external surfaces of the cylinder tube, solenoid valves and air line equipment with alcohol.
3. To replace parts or disassemble the product in a clean room, first exhaust the compressed air inside the piping to the outside of the clean room before the work.
4. Do not use rotation type mounting brackets such as clevises, trunnions, etc.. They will generate a considerable amount of particulate matter due to the sliding friction between the metal parts.

Lubrication / In the Case of Actuator

⚠ Warning

Be sure to wash your hands after handling fluororesin grease.

The grease itself is not hazardous but it can produce a hazardous gas at temperatures exceeding 260°C.

⚠ Caution

1. Do not use any greases but those specified by SMC.
Use of greases not specified will cause malfunctions or particle generation.
2. Do not lubricate the products since they are of a nonlubricant type.
As the clean series actuators are lubricated at the factory with fluororesin grease, the product specifications may not be satisfied if turbine oil or other such lubricants are applied.

Piston speed

⚠ Caution

The cylinder speed upper limit that retains the particle generation grade is 400 mm/s.



Clean series: Common Precautions 3

Be sure to read before handling.




Refer to the main text for detailed precautions for every series.

Suction flow rate of vacuum suction types

⚠ Caution

For the vacuum suction types (Series 11-/13-/22-), perform vacuum suction at the vacuum port to retain the particle generation grade.

The optimum suction flow rate varies depending on series and sizes. Refer to "Suction flow rate of vacuum suction type (Reference values)" for each series. (The vacuum pressure will be approximately -27 kPa at around 1 m from the vacuum suction port.) Please consult SMC for further details.

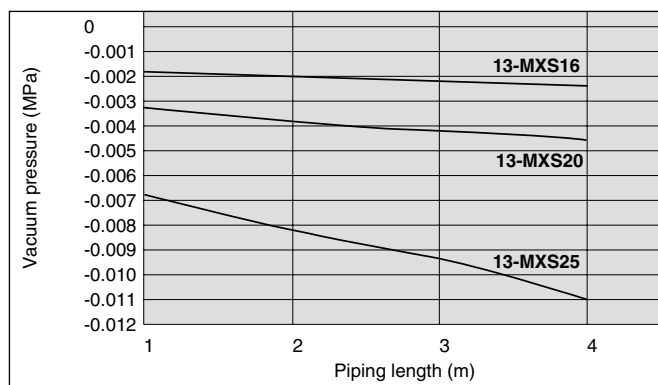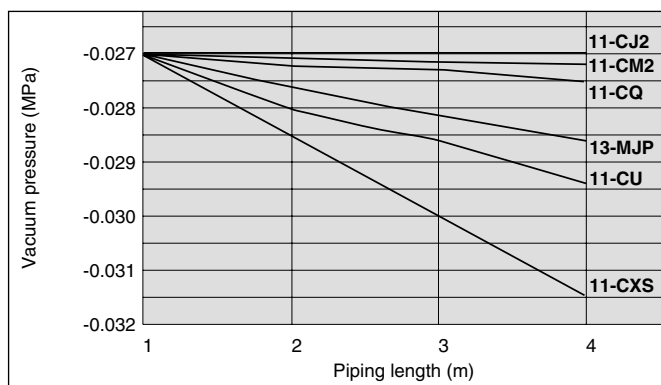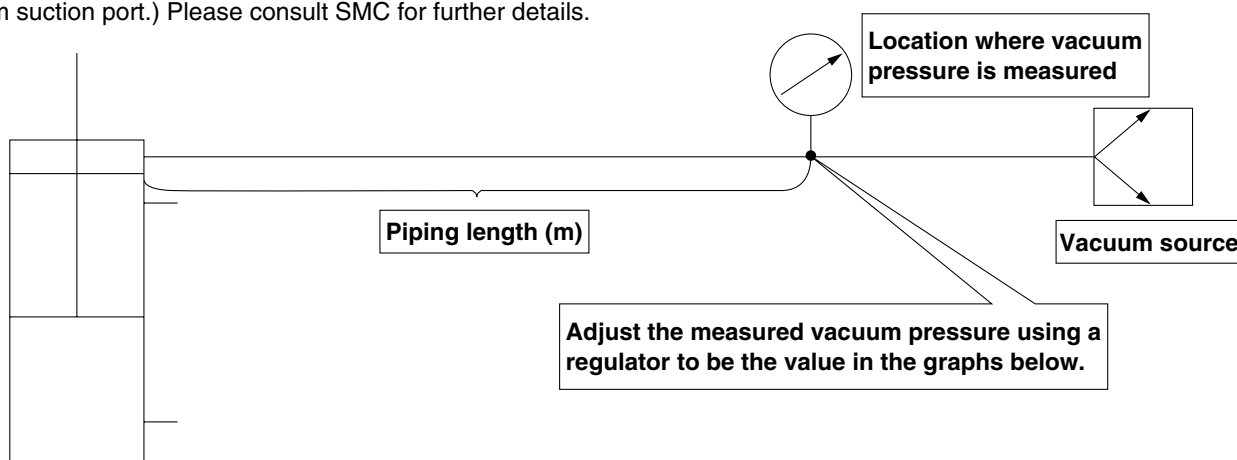



SMC Corporation

Akihabara UDX 15F,
4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN
Phone: 03-5207-8249 FAX: 03-5298-5362
URL <http://www.smcworld.com>
© 2008 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice
and any obligation on the part of the manufacturer.

D-SZ 1st printing MT printing MT 16400SZ Printed in Japan.