Fieldbus System

(Output device for driving 5 port solenoid valves)



















Manifold length is shortened by the small fieldbus output module (SI unit).

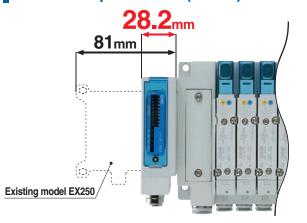


Wiring and piping from the same direction is possible. (for side ported)
Effective for installation in locations where space is limited above the valve.



External branch connector is not necessary. Daisy-chain wiring is possible. Reduced wiring space

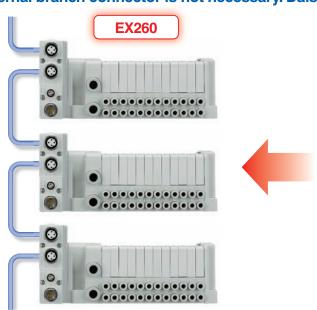

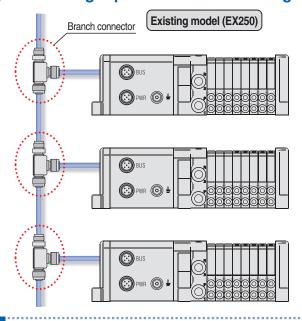


External terminating resistor is not necessary.

(Only available for M12 PROFIBUS DP, CC-Link communication connectors)

ON/OFF switching is possible with an internal terminating resistor. External terminating resistor is not necessary.

External terminating resistor

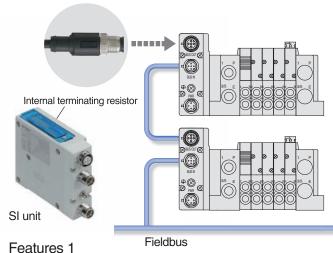

Product Specification Variations

	PROFII® TBUST	DeviceNet >	CC-Link	PROFII [®] NET	Ether CAT.
Number of outputs	16	16	16 32	16	16
Output polarity	PNP NPN	PNP NPN	PNP NPN	PNP NPN	PNP NPN
Communication connector	M12 D-sub	M12	M12	M12	M12


■ Communication connector examples






Series SY3000/5000 Valve piping direction variations

Piping is possible from 3 directions.

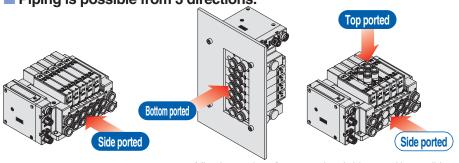


Mixed mounting of top ported and side ported is possible.

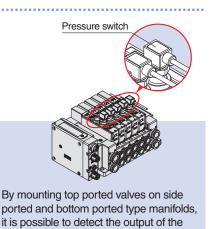

A/B port with a pressure switch.

Valves can be freely connected up to 24 stations.

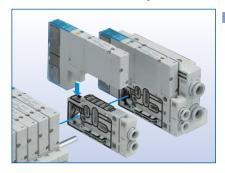

It is possible to connect only the number of valves required, from 1 to 24 stations, to suit the application. (Maximum number of solenoids connected: 32)

Mixed valve sizes manifold

Valves of different sizes, SY3000 and SY5000, can be mounted on the same manifold.

Series S0700

7 mm width valves can be connected.




It is possible to connect only the number of 7 width valves required, from 1 to 24 stations. (Maximum number of solenoids connected: 32)

Applicable Valve Series

Series	Flow-rate characterist	ics (4/2→5/3)	Maximum number of	Power	Enclosure	Standards	
Series		C[dm³/(s·bar)]	b	solenoids	consumption (W)	Enclosure	Standards
1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	SY3000	1.6	0.19	32	0.35 (standard) 0.1 (with power-	IP67	C€
A CHAPPER	SY5000	3.6	0.17	02	saving circuit)	11-07	
	S0700	0.37	0.39	32	0.35	IP40	C€
	SV1000	1.1	0.35				C€
o didition	SV2000	2.4	0.18	32	0.6	IP67	
A CENTRAL	SV3000	4.3	0.21				<i>9</i> 1
enner	VQC1000	1.0	0.30		0.4 (standard)		
Constitution of the second	VQC2000	3.2	0.30	24	0.4 (Standard)	IP67	(€
in Chair	VQC4000	7.3	0.38		1.0 (standard)		

Fieldbus System Variations

IP67/65 specification models

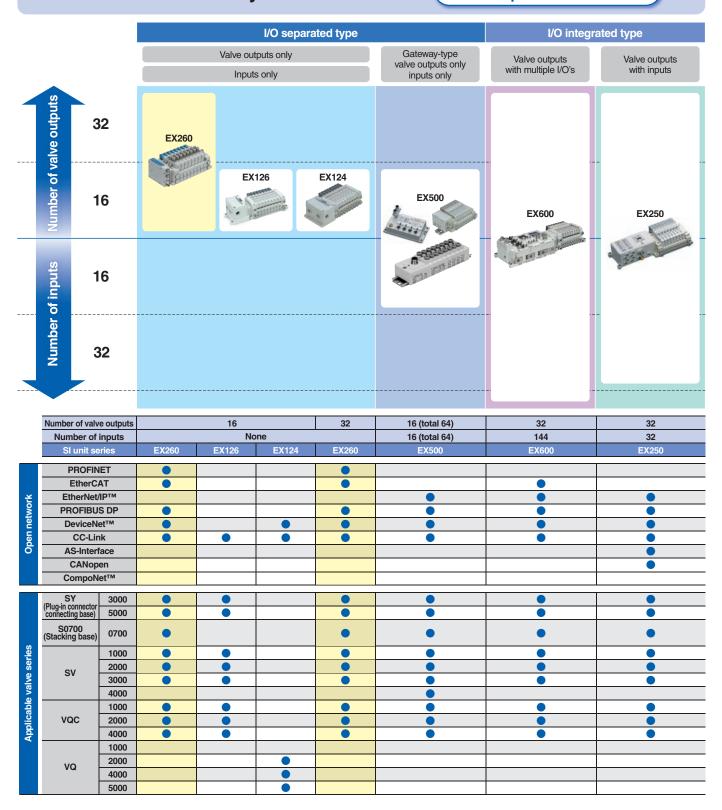

Fieldbus System Variations IP20 specification models

					I/O	separate	I/O integ	ated type		
				Val	ve outputs			Gateway-type		
	Inputs only				valve outputs only inputs only	Valve outputs with multiple I/O's	Valve outputs with inputs			
					. ,			process of		
1	ςς.									
	Tage (32								
	e or						EX180			
	Number of valve outputs									
	er o		EX120	EX121	EX122	EX140				
	de .	16		6.0				EX510		
	2				16	1		EXSTO		
_										
	(0)									
	str.	16								
	Ë									
	Number of inputs									
	nbe									
	N :	32								
	Number of val			1	None		32	16 (total 64) 16 (total 64)		
	SI unit s		EX120	EX121	EX122	EX140	EX180	EX510		
	PROFINET									
논	EtherCAT EtherNet/IP™									
Open network	PROFIBI	JS DP						•		
u u	Devicel CC-L		•			•	•	•		
ŏ	AS-Inte CANo									
	Compol	Net™	•	•	•					
	SY (Plug-in connector	3000	•							
	connecting base)	5000	•					•		
	SJ	3000					•			
	SY (Plug-in metal base)	3000 5000						•		
	S0700 (Bar stock)	0700					•	•		
		3000						•		
	SY (Bar stock)	5000 7000						•		
S	SY	3000						•		
serie	(Stacking base)	5000 7000		•	•			•		
/alve		1000	•							
able v	sv	2000 3000								
Applicable valve series		4000 1000	•					•		
¥	VQ	2000						•		
	VG	4000 5000								
	SQ	1000				•		•		
	SZ	2000 3000				•		•		
		1000						•		
	VQZ	2000 3000						•		
	07.	3000						•		
	SYJ	5000 7000								

SI Unit Integrated-type/For Output


Series EX260






	Note)
Compact design	Compact design for space saving
Number of outputs	Each 32/16 digital output type available in the series
Output polarity	Each negative common (PNP) / positive common (NPN) type available in the series
Enclosure	IP67 (For units with D-sub connector, and when connected with S0700 manifolds, it is IP40.)
Internal terminating resistor	ON/OFF switching is possible with an internal terminating resistor for communication. (Only for units compatible with M12 PROFIBUS DP, CC-Link communication connectors)

 
SY3000/5000





S0700

SV1000/2000/3000

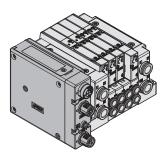

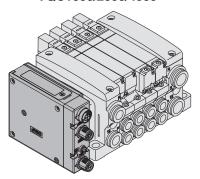

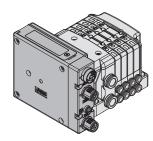

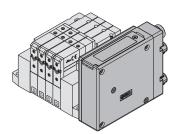

Note) The SY3000/5000, VQC1000/2000/4000, and S0700 are not yet UL-compatible.

How to Order SI Units

EX260 - S PR1

Communication protocol

Symbol	Protocol	Number of outputs	SI unit output polarity	Communication connector	Manifold symbol
DN1		00	Source/PNP (Negative common)		QAN
DN2	DeviceNet™	32	Sink/NPN (Positive common)	M40	QA
DN3		10	Source/PNP (Negative common)	M12	QBN
DN4		16	Sink/NPN (Positive common)		QB
PR1		00	Source/PNP (Negative common)		NAN
PR2		32	Sink/NPN (Positive common)	M12	NA
PR3		16	Source/PNP (Negative common)	IVI I Z	NBN
PR4	PROFIBUS	10	Sink/NPN (Positive common)		NB
PR5	DP	32	Source/PNP (Negative common)		NCN
PR6		32	Sink/NPN (Positive common)	D-sub Note)	NC
PR7		16	Source/PNP (Negative common)	D-Sub · · · · ·	NDN
PR8			Sink/NPN (Positive common)		ND
MJ1		32	Source/PNP (Negative common)		VAN
MJ2	CC-Link	32	Sink/NPN (Positive common)	M12	VA
MJ3	CC-LIIK	16	Source/PNP (Negative common)	IVI I Z	VBN
MJ4			Sink/NPN (Positive common)		VB
EC1		32	Source/PNP (Negative common)		DAN
EC2	EtherCAT	32	Sink/NPN (Positive common)	M12	DA
EC3	LuielOAT	16	Source/PNP (Negative common)	IVI I Z	DBN
EC4		10	Sink/NPN (Positive common)		DB
PN1		32	Source/PNP (Negative common)		FAN
PN2	PROFINET	32	Sink/NPN (Positive common)	M12	FA
PN3	INCLINE	16	Source/PNP (Negative common)	IVI I Z	FBN
PN4		10	Sink/NPN (Positive common)		FB

Note) Enclosure is IP40 when the communication connector is D-sub.



SI Unit Specifications

M	odel	EX260-SPR1/3	EX260-SPR2/4	EX260-SPR5/7	EX260-SPR6/8	EX260-SDN1/3	EX260-SDN2/4	EX260-SMJ1/3	EX260-SMJ2/4	EX260-SEC1/3	EX260-SEC2/4	EX260-SPN1/3	EX260-SPN2/4
	Protocol		PROFIE	BUS DP		Device	eNet™	CC-	Link	Ethe	rCAT	PROF	INET
Applicable system	Version Note 1)		DP	-V0			Edition 3.5) Edition 1.5)	Ver.	1.10	Confor Test Rec			Specification on 2.2
	Note 3) Configuration file		GSE) file		EDS	S file	-	_	XMI	_ file	GSE) file
I/O occupa (Inputs/Out		SPR1: 0/32 SPR3: 0/16	SPR2: 0/32 SPR4: 0/16	SPR5: 0/32 SPR7: 0/16	SPR6: 0/32 SPR8: 0/16	SDN1: 0/32 SDN3: 0/16	SDN2: 0/32 SDN4: 0/16	SMJ1: 32/32 SMJ3: 32/32 (1 station, remote I/O stations)	SMJ2: 32/32 SMJ4: 32/32 (1 station, remote I/O stations)	SEC1: 0/32 SEC3: 0/16	SEC2: 0/32 SEC4: 0/16	SPN1: 0/32 SPN3: 0/16	SPN2: 0/32 SPN4: 0/16
Communic	ation speed			5.45 k/93.75 //3 M/6 M/1			/250 k/ kbps		625 k/ 1/10 Mbps		100 Mb	os ^{Note 2)}	
Power supply	Power supply voltage		21.6 to 2	6.4 VDC		_	_			21.6 to 2	6.4 VDC		
for control	Internal current consumption		100 mA	or less		_	_			100 mA	or less		
Power supply for output	Power supply voltage						22.8 to 2	26.4 VDC					
Power supply for	Power supply voltage		_	_		11 to 2	25 VDC			_	_		
communication	Internal current consumption		-	_		100	mA			-	_		
Communication c	onnector specification	M	12	D-9	sub				M	12			
Terminating r	resistor switch	Bui	lt-in		N	one		Bui	lt-in		No	ne	
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)	Source/PNP (Negative common)	Sink/NPN (Positive common)	Source/PNP (Negative common)	Sink/NPN (Positive common)	Source/PNP (Negative common)	Sink/NPN (Positive common)	Source/PNP (Negative common)	Sink/NPN (Positive common)	Source/PNP (Negative common)	Sink/NPN (Positive common)
	Number of outputs	SPR1: 32 points SPR3: 16 points	SPR2: 32 points SPR4: 16 points	SPR5: 32 points SPR7: 16 points	SPR6: 32 points SPR8: 16 points	SDN1: 32 points SDN3: 16 points	SDN2: 32 points SDN4: 16 points	SMJ1: 32 points SMJ3: 16 points	SMJ2: 32 points SMJ4: 16 points	SEC1: 32 points SEC3: 16 points	SEC2: 32 points SEC4: 16 points	SPN1: 32 points SPN3: 16 points	SPN2: 32 points SPN4: 16 points
Output	Load						oltage suppressor 24 VDC, 1.5 W or less (SMC)					Solenoid valve	e with surge essor 24 VDC
	Supplied voltage						24 \	/DC					
	Supplied current	SPR3:	SPR2: Max. 2.0 A SPR4: Max. 1.0 A	SPR5: Max. 2.0 A SPR7: Max. 1.0 A	SPR8:	SDN1: Max. 2.0 A SDN3: Max. 1.0 A	SDN4:	SMJ3:	SMJ2: Max. 2.0 A SMJ4: Max. 1.0 A	SEC3:	SEC2: Max. 2.0 A SEC4: Max. 1.0 A	SPN1: Max. 2.0 A SPN3: Max. 1.0 A	SPN4:
	Enclosure	IP	67	IP	40	IP67							
Operating 14 to 122°F Environmental Operating 35 to 85°CPH					(-10 to 50°C) No condensation)								
resistance	Withstand voltage				500					case			
						0 VAC for 1 minute between whole live part and case 2 or more (500 VDC) between whole live part and case							
Standards				CE marking, UL (CSA) compatible									
Weight		0.44 lbs (200 g)											
	Mounting screw						2 p	ocs.					
Accessories	Seal cap (for M12 connector socket)	EX9-AW	ΓS (1 pc.)	_					EX9-AW	ΓS (1 pc.)			


Note 1) Please note that the version is subject to change.


Note 2) In the case of EtherCAT and PROFINET, please use the communication cable which is CAT5 or higher.

Note 3) Each file can be downloaded from the SMC website, http://www.smcworld.com


SI Unit Dimensions

 
M12 communication connector type



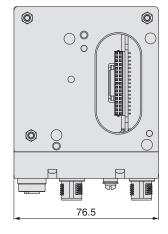


D-sub communication connector type

 

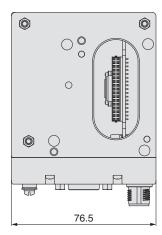

Functions of SI Unit Parts

<LED indication and setting switch>

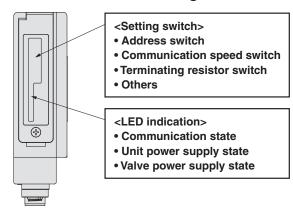


Note) The setting switch varies depending on the model.

Refer to the operation manual for details.

Please download it via the SMC website, http://www.smcworld.com


<Connector>

 M12 communication connector type



Part no.	EX260-SPR1/-SPR2 -SPR3/-SPR4 EX260-SDN□		EX260-SMJ□	EX260-SEC□ EX260-SPN□		
Communication protocol	PROFIBUS DP	DeviceNet™	CC-Link	EtherCAT PROFINET		
Communication connector (M12) BUS OUT	5 pins, socket, B code	5 pins, socket, A code	5 pins, socket, A code	4 pins, socket, D code		
Communication connector (M12) BUS IN	5 pins, plug, B code	5 pins, plug, A code	4 pins, plug, A code	4 pins, socket, D code		
Ground terminal	M3					
Power connector (M12)	5 pins, plug, A code	4 pins, plug, A code	5 pins, plug, B code	5 pins, plug, A code		

 D-sub communication connector type



Part no.	EX260-SPR5/-SPR6/-SPR7/-SPR8		
Communication protocol	PROFIBUS DP		
Ground terminal	M3		
Communication connector (D-sub) BUS IN/OUT	9 pins, socket		
Power connector (M12)	5 pins, plug, A code		

Accessories

1) Communication cable with connector


For SI units compatible with PROFIBUS DP, DeviceNet™, CC-Link

For SI units compatible with EtherCAT, PROFINET

Refer to the catalog (CAT.ES100-73) for details.



EX9-AC <u>020</u> EN-<u>PSRJ</u>

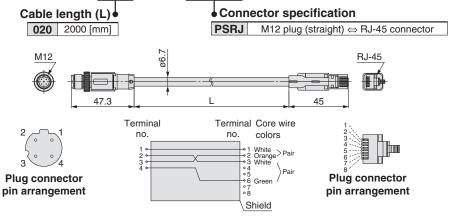


Connections (Straight cable)

For SI units compatible with EtherCAT, PROFINET

PCA-1446566

Cable length


1446566 5000 [mm]

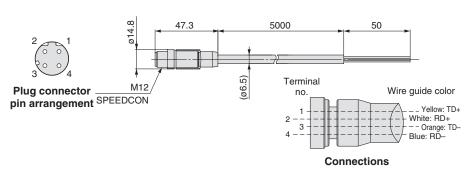

For SI units compatible with EtherCAT, PROFINET

Fieldwireable connector

PCA-1446553

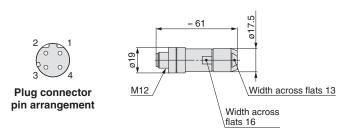



Series EX260

Accessories

2 Power cable with connector (for SI units)

For SI units compatible with PROFIBUS DP, DeviceNet™, EtherCAT, PROFINET



Cable length (L)


010 | 1000 [mm]


050 | 5000 [mm]

Connector specification

S	Straight			
Α	Angle			

 
Straight connector type

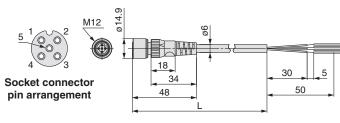




Connections (PROFIBUS DP/EtherCAT)

 Angle connector type

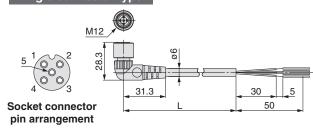





Connections (DeviceNet™)


For SI units compatible with CC-Link

 Straight connector type





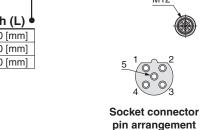

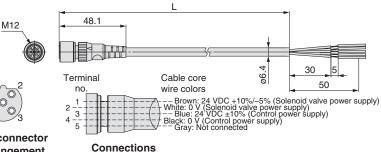


3 Seal cap: For M12 connector socket

Use this on ports that are not being used for communication connector (M12 connector socket).

Use of this seal cap maintains the integrity of the IP67 enclosure.

Note) Tighten the seal cap with the prescribed tightening torque. (For M12: 0.1 N·m)



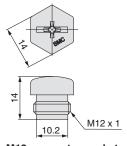

For M12 connector socket

Manifold Solenoid Valves for *Series EX260* Integrated-type (For Output) Serial Transmission System



Series SY3000/5000

P. 7



Series **SV1000/2000/3000**

P. 24



Series VQC1000/2000/4000

P. 29



Series **S0700**

P. 38

Type 10 Side Ported Type 11 **Bottom Ported**

Plug-in Connector Connecting Base: For EX260 Integrated-type (For Output) **Serial Transmission System**

Series SY3000/5000 C

How to Order Manifold

Refer to page 11 for Type 11/Bottom ported dimensions.



Series

<u> </u>	100
3	SY3000
5	SY5000

2 Type

10	Side ported
11	Bottom ported

^{*} The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to Plug-in Mixed Type Manifold (from page 17).

Stunit specifications

o si unit specifications								
Symbol	Protocol	Number of outputs	Communication connector					
0	W	ithout SI un	it					
QA	DeviceNet™	32	M12					
QB	Devicerver	16	IVIIZ					
NA		32	M12					
NB	PROFIBUS	16	IVITZ					
NC	DP	32	D . I. Noto)					
ND		16	D-sub Note)					
VA	CC-Link	32	M12					
VB	CC-LITIK	16	IVIIZ					
DA	EtherCAT	32	M12					
DB	EllierCAT	16	IVIIZ					
FA	PROFINET	32	M12					
FB	FNOFINEI	16	IVITZ					

Note) IP40 for the D-sub applicable communication connector specification.

For SI unit part number, refer to page 1. DIN rail and SI unit output polarity "N" cannot be selected for the product without SI unit.

SI unit output polarity

Nil	Positive common	Note) Without SI unit, the
N	Negative common	symbol is nil.

Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring Note 1)			
16	16 stations	_			
02	2 stations	O a a l'E a l la a a l Noto 2)			
:	:	Specified layout Note 2)			
24	24 stations	(Available up to 32 solenoids)			

In the case of the 16-output SI unit

Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring Note 1)			
08	8 stations	-			
02	2 stations	Connection of Leaves at Note 2)			
:	:	Specified layout Note 2) (Available up to 16 solenoids)			
16	16 stations	(Available up to 16 soleriolds)			

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet.

> (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the lavout is specified, indicate it on the manifold specification sheet

6 P. E port entry

-	O 1, = port onary			
U	U side (2 to 10 stations)			
D		D side (2 to 10 stations)		
В		Both sides (2 to 24 stations)		

SUP/EXH block assembly

	,,	
Nil	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Mounting and Option

Symbol	Mounting	Option
Nil	Diverse	None
AA	Direct mounting	Name plate (With station number)
BA	inounting	Name plate (Without station number)
D□	DIM	Without name plate
A□	DIN rail mounting	Name plate (With station number)
B□		Name plate (Without station number)

Note 1) Enter the number of stations inside \square . (Refer to "DIN Rail Option" below).

Note 2) Only direct mounting is available for Type 11 (Bottom ported).

DIN Rail Option

Nil	Direct mounting					
0	With	Without DIN rail (with bracket)				
3	For 3 stations	Charify a language vail than the total				
:	:	Specify a longer rail than the total				
24	For 24 stations	length of specified stations.				

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for part numbers of DIN rail.

A, B port size (Metric)

Symbol		A, B port		Type 10/ Side ported		Type 11/ Bottom ported	
Syllibol				SY3000	SY5000	SY5000	
C2		ø2	One-touch fitting		_	_	
СЗ	l	ø3	.2 One-touch fitting	•	_	_	
C4	ig	ø4	One-touch fitting	•	•	•	
C6	Straight	ø6	One-touch fitting	•	•	•	
C8		ø8	One-touch fitting	_	•	•	0 000
CM*		Straight port, mixed sizes		•	•	•	
L4		Б	ø4 One-touch fitting	•	•	_	
L6		Upward	ø6 One-touch fitting		•	_	
L8		5	ø8 One-touch fitting	_	•	_	9 9 9 9 9 9
B4	Elbow	ard	ø4 One-touch fitting			_	
B6	ш	Downward	ø6 One-touch fitting			_	
B8		۵	ø8 One-touch fitting	_	•		The little
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•		
P, E	port	siz	e (One-touch fittings)	ø8	ø10	ø10	

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (Refer to the SY3000/5000 series catalog (CAT.ES11-103)).


A, B port size (Inch)

<u></u>							
Symbol			A, B port	Type 10/ S	ide ported	Type 11/ Bottom ported	
Syllibol			A, b port	SY3000	SY5000	SY5000	
N1		ø1	/8" One-touch fitting	•	_	_	
N3	¥	ø5	32" One-touch fitting	•	•	•	
N7	Straight	ø1	4" One-touch fitting	•	•	•	
N9	ξŧ	ø5	16" One-touch fitting	_	•	•	o Singe
CM*		Straight port, mixed sizes		•	•	•	
LN3		5	ø5/32" One-touch fitting	•	_	_	
LN7		Upward	ø1/4" One-touch fitting	•	•	_	
LN9	>	בֿ	ø5/16" One-touch fitting	_	•	_	010055
BN3	Elbow	ard	ø5/32" One-touch fitting	•	_	_	
BN7	Ш	Downward	ø1/4" One-touch fitting	•	•	_	
BN9		á	ø5/16" One-touch fitting	_	•	_	To los
LM*		Elbow port, mixed sizes (Including upward and downward piping)		•	•	_	
P, E p	P, E port size (One-touch fittings)			ø5/16"	ø3/8"	ø3/8"	

- * Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.



How to Order Manifold Assembly

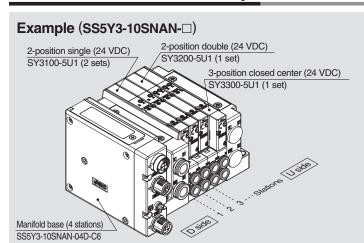


- The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above.
 If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) When mixing top ported configurations, select from page 13. Specify on a manifold specification sheet if plugs are required on the A and B port on the manifold.

How to Order Valves (With two mounting screws)

 Refer to the SY3000/5000 series catalog (CAT.ES11-103) for details on valve specifications.



1 Series

3	SY3000
5	SY5000

2 Type of actuation

• -,,,		
1	2-position single	
2	2-position double	
3	3-position closed center	
4	3-position exhaust center	
5	3-position pressure center	
\mathbf{A}^*	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	7.
0	Rubber seal
1	Metal seal

4 Pilot type

	71
Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

Г	Nil	Standard (101 psi (0.7 MPa))
	В	Quick response type (101 psi (0.7 MPa))
	K*	High pressure type (145 psi (1.0 MPa))

 \ast Only metal seal type is available for the high pressure type.

Coil type

, , , , , , , , , , , , , , , , ,
Standard
With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected.

8 Rated voltage

	24 VDC
ວ	24 VDC


9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)

* Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve from R, U, S or Z when the SI unit output polarity is Nil (Positive common).

Select a valve from R, Ú, NS or NZ when the SI unit output polarity is N (Negative common).

Manual override

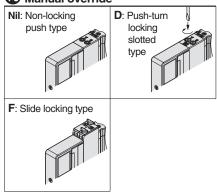


1 Type of mounting screw

- 71	
Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for part numbers of the base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

 Refer to the SMC website or the SY3000/5000 series catalog (CAT.ES11-103) for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.








Series SY3000/5000


Dimensions: Type 10/For EX260/Series SY3000

SS5Y3-10S \square -Stations $_{B}^{U}$ (S, R) - $_{C4, N3}^{C2, N1}$ (D)

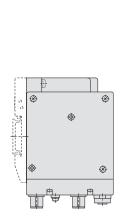

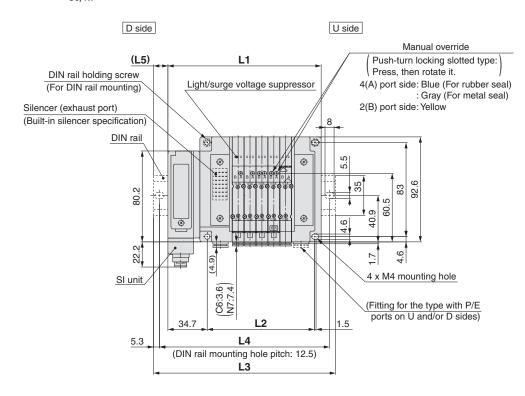

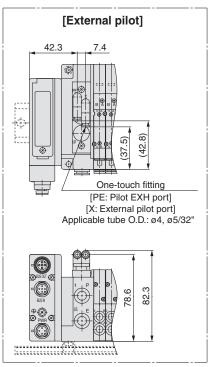

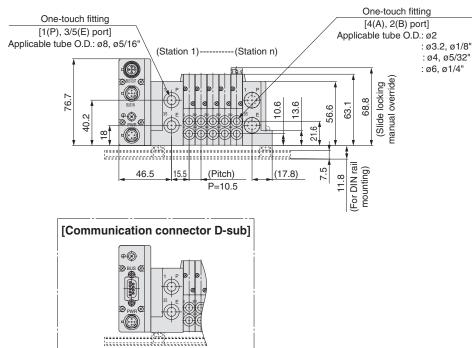


Note) These figures show the "SS5Y3-10SQA-05D-C6".


																							(mm)
n: stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275	287.5	300	312.5	325	337.5	337.5	350
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13


Plug-in Connector Connecting Base Series SY3000/5000


Dimensions: Type 10/For EX260/Series SY5000

SS5Y5-10S□□-Stations ^U_B(S, R) - ^{C4, N3}_{C6, N7}_{C8, N9}(D)

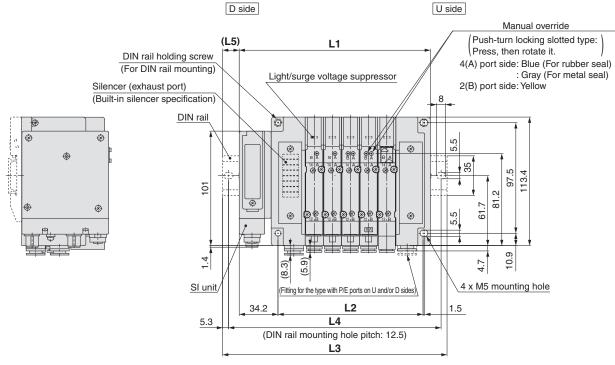

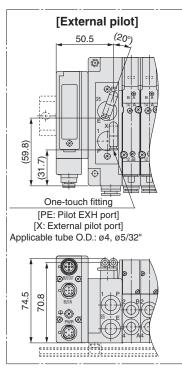

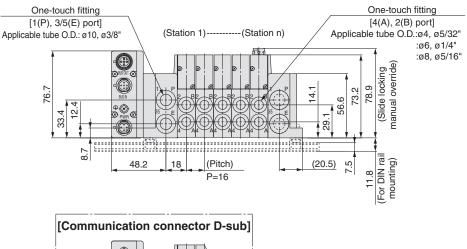

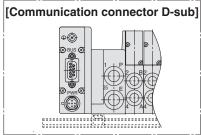


Note) These figures show the "SS5Y5-10SQA-05D-C8".

																							(mm)
n: Station	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5	410.5	423	435.5	448	473	485.5	498
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375	400	412.5	425	437.5	462.5	475	487.5
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5

Series SY3000/5000

Dimensions: Type 11/For EX260/Series SY5000

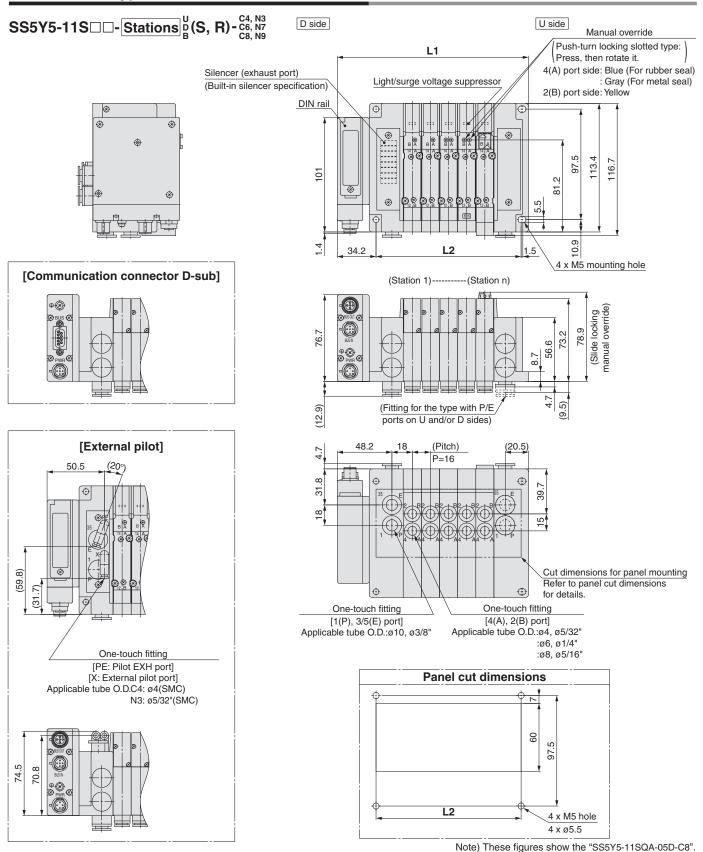

									(mm))
5	16	17	18	10	20	21	22	23	24	

																							(111111)
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7	376.7	392.7	408.7	424.7	440.7	456.7	472.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432


Plug-in Connector Connecting Base: For EX260 Integrated-type (For Output) Serial Transmission System

Type 12
Top Ported

Series SY3000/5000 ()

How to Order Manifold

 Refer to pages 15, 16 for Type 12/Top ported dimensions.



1 Series

	100
3	SY3000
5	SY5000

2 SI unit specifications

Symbol	Protocol	Number of outputs	Communication connector
0	V	Vithout SI un	it
QA	DeviceNet™	32	M12
QB	Devicervet	16	IVITZ
NA		32	M12
NB	PROFIBUS	16	IVITZ
NC	DP	32	D-sub Note)
ND		16	D-sub (1818)
VA	CC-Link	32	M12
VB	CO-LITIK	16	IVITZ
DA	EtherCAT	32	M12
DB	ElilerCAT	16	IVIIZ
FA	PROFINET	32	M12
FB	PROFINET	16	IVITZ

Note) IP40 for the D-sub applicable communication connector specification.

For SI unit part number, refer to page 1. DIN rail and SI unit output polarity "N" cannot be selected for the product without SI unit.

3 SI unit output polarity

Nil	Positive common
N	Negative common

Note) Without SI unit, the symbol is nil.

4 Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note
02	2 stations	
÷	:	Double wiring Note 1)
16	16 stations	
02	2 stations	O
÷	:	Specified layout Note 2) (Available up to 32 solenoids)
24	24 stations	(Available up to 32 soleriolds)

In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
÷	:	Double wiring Note 1)
80	8 stations	
02	2 stations	O '(' 11 1 Note 2)
:	:	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	(Available up to 16 soleriolds)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet

(Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

* For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

* When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

7 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000
Nil	ø8	ø10
N	ø5/16"	ø3/8"

* For N, sizes are in inches.

8 Mounting

Nil		Direct mounting
D	DIN rail	mounting (With DIN rail)
D0	DIN rail m	nounting (Without DIN rail)
D3	For 3 stations	0
:	:	Specify a longer rail than the standard length.
D24	For 24 stations	ilie sialiualu leligili.

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for part numbers of DIN rail.

5 P, E port entry

	. ,
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

Note) 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.



How to Order Manifold Assembly

 
Example (SS5Y3-12SNAN-2-position double (24 VDC) 2-position single (24 VDC) SY3130-5U1-C6 (2 sets) SY3230-5U1-C6 (1 set) 3-position closed center (24 VDC) SY3330-5U1-C6 (1 set) Manifold base (4 stations) SS5Y3-12SNAN-04D

SS5Y3-12SNAN-04D1 set (Type 12 4-station manifold base part no.) *SY3130-5U1-C62 sets (2-position single part no.) *SY3230-5U1-C6 -----1 set (2-position double part no.) *SY3330-5U1-C6 -----1 set (3-position closed center part no.)

- The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

How to Order Valves (With two mounting screws)

Refer to the SY3000/5000 series catalog (CAT.ES11-103) for details on valve specifications.



Series

3	SY3000
5	SY5000

2 Type of actuation

1	2-position single	
2	2-position double	
3	3-position closed center	
4	3-position exhaust center	
5	3-position pressure center	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

	71	
0	Rubber seal	
1	Metal seal	٦

4 Pilot type

Nil	Internal pilot
R	External pilot

5 Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

* Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.

* The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

Nil Standard (101 psi (0.7 MPa))									
B Quick response type (101 psi (0.7 MPa)									
K*	High pressure type (145 psi (1.0 MPa))								

* Only metal seal type is available for the high pressure type.

Coil type

•)
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- Note the specified energizing time when power saving circuit is selected.

8 Rated voltage

5	24 VDC
---	--------

9 Light/surge voltage suppressor and common specification

R	With surge voltage suppressor (Non-polar)
U	With light/surge voltage suppressor (Non-polar)
S	With surge voltage suppressor (Positive common)
Z	With light/surge voltage suppressor (Positive common)
NS	With surge voltage suppressor (Negative common)
NZ	With light/surge voltage suppressor (Negative common)

Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve from R, U, S or Z when the SI unit output polarity is Nil (Positive common).

Select a valve from R, U, NS or NZ when the SI unit output polarity is N (Negative common).

A, B port size

Thread piping

Symb	Port size	Applicable series
M5	M5 x 0.8	SY3000
01	1/8	SY5000

One-touch fitting (Metric)

One-touch fitting (wethe)										
Symbol	A and B port	SY3000	SY5000							
C2	ø2 One-touch fitting		_							
C3	ø3.2 One-touch fitting		_							
C4	ø4 One-touch fitting									
C6	ø6 One-touch fitting									
C8	ø8 One-touch fitting									

One-touch fitting (Inch)

Symbol	A and B port	SY3000	SY5000
N1	ø1/8" One-touch fitting		_
N3	ø5/32" One-touch fitting		
N7	ø1/4" One-touch fitting		
N9	ø5/16" One-touch fitting		•

12 Thread type

Nil	Rc						
F	G						
N NPT							
Т	NPTF						

* Only Nil is available for M5.

13 Type of mounting screw


Nil	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

 (10) Manual override










Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for part numbers of the base gasket and mounting screw.

"B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.

 
Refer to the SMC website or the SY3000/5000 series catalog (CAT.ES11-103) for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.








Series SY3000/5000

Dimensions: Type 12/For EX260/Series SY3000

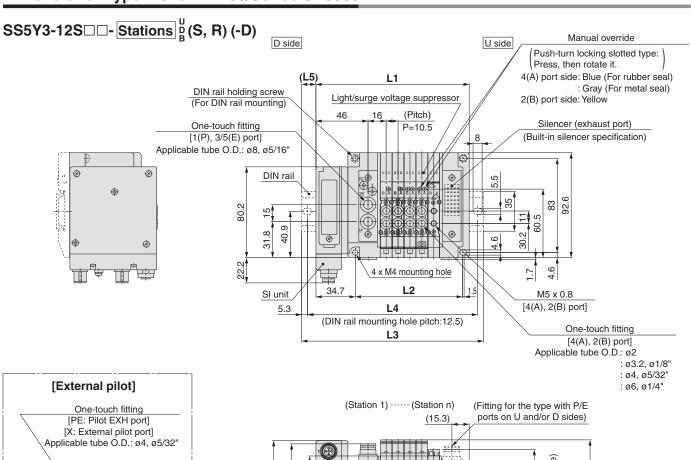

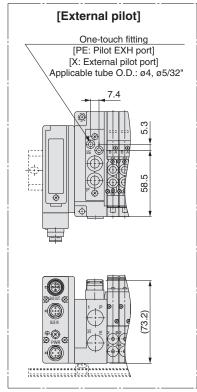

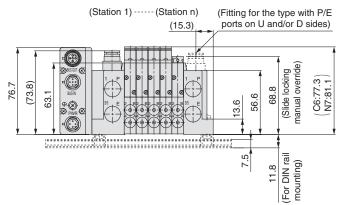

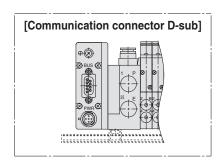


Note 1) These figures show the "SS5Y3-12SQA-05D".

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port.

																							(mm)
n:Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2	271.7	282.2	292.7	303.2	313.7	324.2	334.7
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275	287.5	300	312.5	325	337.5	337.5	350
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13

Plug-in Connector Connecting Base Series SY3000/5000

Dimensions: Type 12/For EX260/Series SY5000

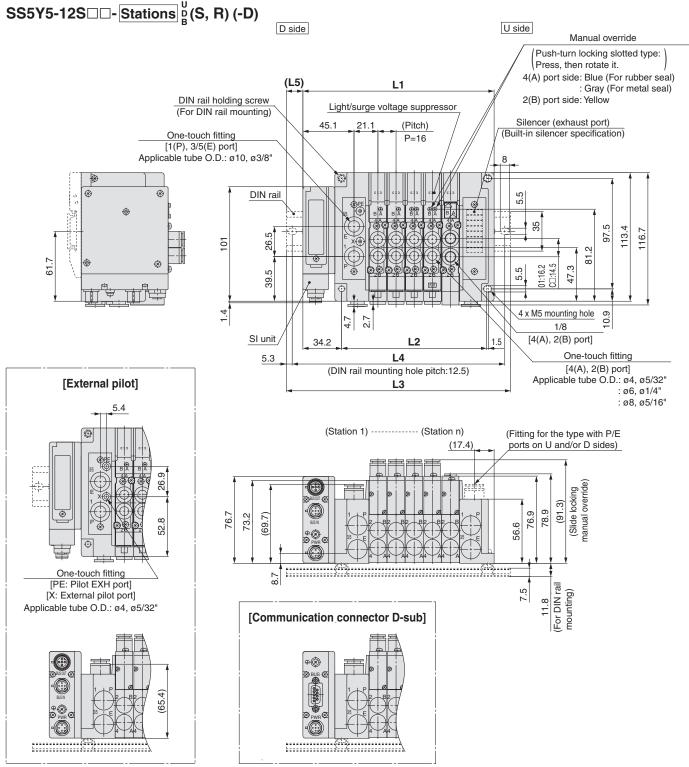

Note 1) These figures show the "SS5Y5-12SQA-05D".

Note 2) For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port.

(mm) n:Stations 2 3 4 5 6 7 8 11 14 17 19 21 22 23 24 9 10 12 13 15 16 18 20 L1 120.7 136.7 152.7 168.7 184.7 200.7 216.7 232.7 248.7 264.7 280.7 296.7 312.7 328.7 344.7 360.7 376.7 392.7 408.7 424.7 440.7 456.7 472.7 L2 80 112 128 144 160 176 192 208 224 240 288 304 320 352 368 384 400 416 432 96 256 272 336 148 160.5 185.5 235.5 248 260.5 310.5 485.5 498 L3 198 210.5 273 298 323 348 360.5 373 385.5 410.5 423 435.5 448 473 L4 237.5 250 287.5 300 350 375 400 425 462.5 475 487.5 137.5 150 175 187.5 200 225 262.5 312.5 337.5 362.5 412.5 437.5 L5 17.5 12.5 12.5 13.5 12 16.5 14.5 13 15.5 14 12 16.5 15 13 17.5 16 17 15 13.5 11.5 16 14.5

Гуре 10 Type 11 Bottom Ported **Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold** For EX260 Integrated-type (For Output) **Serial Transmission System**

Series **SY3000/5000** (5)

SY3000 can be mounted onto SY5000 size manifold.

How to Order Manifold

Refer to page 20 for Type 11/ Bottom ported dimensions.

SS5Y5 - M 10 S NA N -Mixed Mounting Type

It is possible to mount SY3000 size valves on all stations. In this case, there is no need to fill in part 3 in the order code. However, the manifold block width should be 12.5 mm.

O T	уре
------------	-----

10	Side ported
11	Bottom ported

SI unit specifications

Symbol	Protocol	Number of outputs	Communication connector
0	V	it	
QA	DeviceNet™	32	M12
QB	Devicemet	16	IVIIZ
NA		32	M12
NB	PROFIBUS	16	IVI I Z
NC	DP	32	D I- Noto)
ND		16	D-sub Note)
VA	CC-Link	32	M12
VB	CC-LINK	16	IVI I Z
DA	EtherCAT	32	M12
DB	EulerCAT	16	IVI I Z
FA	PROFINET	32	M12
FB	PHOFINE	16	IVIIZ

Note) IP40 for the D-sub applicable communication connector specification.

For SI unit part number, refer to page 1. DIN rail and SI unit output polarity "N" cannot be selected for the product without SI unit.

SI unit output polarity

Nil	Positive common
N	Negative common

Note) Without SI unit, the symbol is nil.

4 Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	-
02	2 stations	O: Hoto 2)
:	:	Specified layout Note 2) (Available up to 32 solenoids)
24	24 stations	(Available up to 32 soleriolds)

In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
80	8 stations	
02	2 stations	O: # Noto 2\
:	:	Specified layout Note 2)
16	16 stations	(Available up to 16 solenoids)

When mounting top ported valves, select from page 21. In

on base side.

base side.

- Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- Note 3) This also includes the number of blanking plate assembly.
- Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

6 SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * 3/5(E) port is plugged for the built-in silencer type.
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

How to Order Manifold Assembly

Example (SS5Y5-M10SNAN-□) 2-position double SY3200-5U1(2 sets) 2-position double SY5200-5U1(3 sets) Manifold base (5 stations) SS5Y5-M10F1-05D-C86

- SS5Y5-M10F1-05D-C86 ...1 set (Type 10 5-station manifold base part no.)
- *SY5200-5U1 -----3 sets (2-position double part no.) *SY3200-5U12 sets (2-position double part no.)
 - The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the valve, etc.
- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above.

If the arrangement becomes complicated, then indicate on the manifold specification sheet.

this case, use caution as there is also output on the A and B port Specify on a manifold specification sheet if plugs are required on the A and B port on

Refer to the page on the right for 7,8,9 Mounting and Option

woulding and Option		
Symbol	Mounting	Option
Nil	Divost	None
AA	mounting	Name plate (With station number)
BA		Name plate (Without station number)
D□	DIM rail	Without name plate
A□		Name plate (With station number)
B	Name plate (Without station number)	

Note 1) Enter the number of stations inside \square . (Refer to "DIN Rail Option" below). Note 2) Only direct mounting is available for Type 11 (Bottom ported).

DIN Rail Option

Nil	Standard length		
0		Without DIN rail (with bracket)	
3	For 3 stations	Specify a longer rail than the total length of specified stations.	
:	:	[The SY5000 valve is now at a mountable	
24	For 24 stations	length (manifold block length of 16 mm).]	

* When it is necessary to mount a DIN rail without an SI unit, select D0 and calculate DIN rail length, referring to L3 in the dimensions on page 19.



Refer to the SMC website or the SY3000/5000 series catalog (CAT.ES11-103) for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.

7 Fitting type

Symbol	A, B port	
С	Metric size: Straight one-touch fitting	
L	Metric size: Elbow one-touch fitting for upward Note)	
В	Metric size: Elbow one-touch fitting for downward Note)	
N	Inch size: Straight one-touch fitting	
LN	Inch size: Elbow one-touch fitting for upward Note)	
BN	Inch size: Elbow one-touch fitting for downward Note)	
CM*	Straight port, mixed sizes	
LM*	Elbow port, mixed sizes (Including upward and downward piping) Note)	

Note) To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly.

- * Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".
- * The direction of P, E port fittings is the same as for A,B port.

 If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.
- * Elbow fittings: ø2, ø3.2 and ø1.8" are not available for the SY3000 series. ø2, ø3.2, ø1.8" and ø5/32" are not available for the SY5000 series.

8 SY5000: A, B port size

| Symbol | Port size | 4 | Ø4 One-touch fitting | 6 | Ø6 One-touch fitting | 8 | Ø8 One-touch fitting | Nil | For all stations of SY3000 |

	(Inch)	
	Symbol	Port size
	3	ø5/32" One-touch fitting
1	7	ø1/4" One-touch fitting
	9	ø5/16" One-touch fitting
1	Nil	For all stations of SY3000

* No symbol needs to be specified when fitting type "CM", "LM" is selected.

9 SY3000: A, B port size

 (Metric)

 Symbol
 Port size

 2
 Ø2 One-touch fitting

 3
 Ø3.2 One-touch fitting

 4
 Ø4 One-touch fitting


 6
 Ø6 One-touch fitting

	(inch)	
	Symbol	Port size
	1	ø1/8" One-touch fitting
	3	ø5/32" One-touch fitting
	7	ø1/4" One-touch fitting
1		

* No symbol needs to be specified when fitting type "CM", "LM" is selected.

How to Order Valves (With two mounting screws)

 Refer to the SY3000/5000 series catalog (CAT.ES11-103) for details on valve specifications.



1 Series

<u> </u>	.00
3	SY3000
5	SY5000

2 Type of actuation

<u> </u>		
1	2-position single	
2	2-position double	
3	3-position closed center	
4	3-position exhaust center	
5	3-position pressure center	
A *	4-position dual 3-port valve (N.C./N.C.)	
B *	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

 Only rubber seal type is available for the 4-position dual 3-port valve.

Seal type

0	Rubber seal
1	Metal seal

Pilot type

	71
Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

	processo encon raite (Saint in raite type)
Nil	None
Н	Built-in

* Only rubber seal type.

Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.

* The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

Nil	Standard (101 psi (0.7 MPa))
В	Quick response type (101 psi (0.7 MPa))
K*	High pressure type (145 psi (1.0 MPa))

* Only metal seal type is available for the high pressure type.

7 Coil type

Nil	Standard
Т	With power saving circuit (Continuous duty type)

- Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
 Note the specified energizing time when power saving
- Note the specified energizing time when power saving circuit is selected.

8 Rated voltage

5	24 VDC
A	

Light/surge voltage suppressor and common specification


Nil Without light/surge voltage suppressor (Non			
R	With surge voltage suppressor (Non-polar)		
U	With light/surge voltage suppressor (Non-polar)		
S	With surge voltage suppressor (Positive common)		
Z	With light/surge voltage suppressor (Positive common)		
NS With surge voltage suppressor (Negative co			
NZ	With light/surge voltage suppressor (Negative common)		

Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve from R, U, S or Z when the SI unit output polarity is Nil (Positive common).

Select a valve from R, U, NS or NZ when the SI unit output polarity is N (Negative common).



Manual override

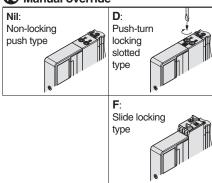

Type of mounting screw

Type of mounting screw		
Nil	Round head combination screw	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

- For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to the SY3000/5000 series catalog (CAT.ES11-103) for part numbers of the base gasket and mounting screw.

* "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly or double check spacer assembly with residual pressure release valve.

Dimensions: Type 10/For EX260/Mixed Mounting Type

(mm)

SS5Y5-M10S \square -Stations $_{p}^{U}$ (-D)

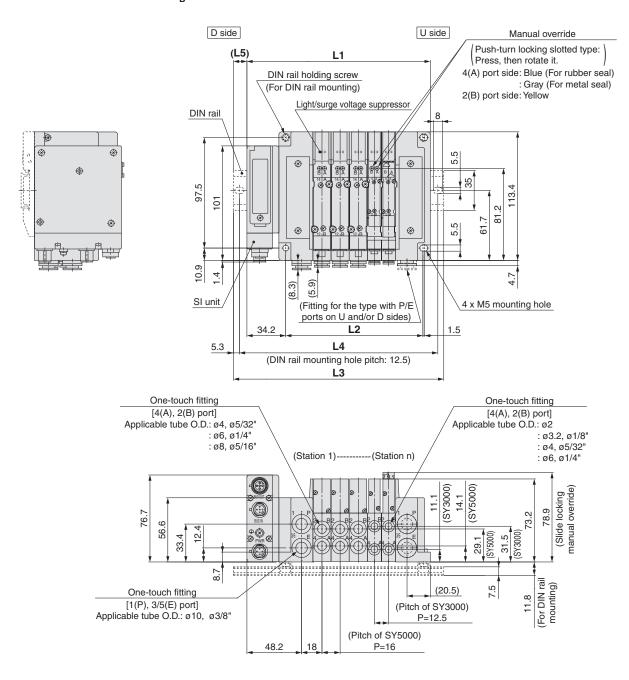

Note 1) These figures show the "SS5Y5-M10SQA-05D-C86".

Note 2) Refer to page 10 for dimensions of D-sub communication connector, external pilot and built-in silencer.

EX260 Serial transmission Calculation of dimensions L1 = $12.5 \times n1 + 16 \times n2 + 88.7$ **L2** = $12.5 \times n1 + 16 \times n2 + 48$ **M** = L1/12.5 + 1 Remove all numbers after the decimal **L3** = $12.5 \times M + 23$ **L4** = L3 - 10.5 **L5** = (L3 - L1)/2


n1: SY3000 Valve stations n2: SY5000 Valve stations





Dimensions: Type 11/For EX260/Mixed Mounting Type


(mm)




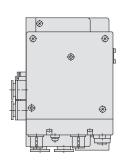

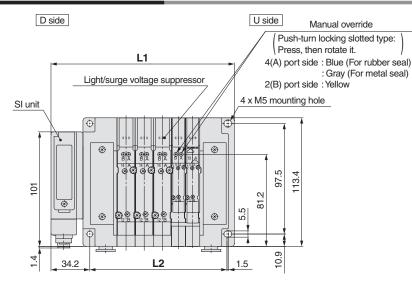

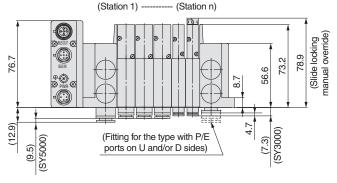

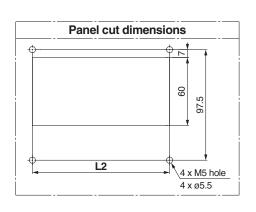

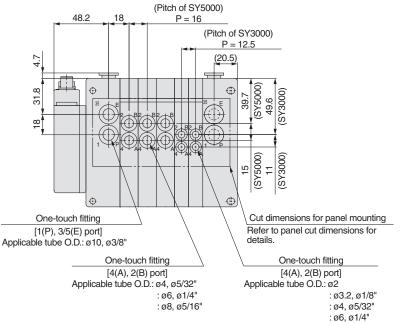

Note 1) These figures show the "SS5Y5-M11SQA-05D-C86".

Note 2) Refer to page 11 for dimensions of D-sub communication connector, external pilot and built-in silencer.

EX260 Serial transmission Calculation of dimensions

 $\mathbf{L1} = 12.5 \, \text{x} \, \text{n1} + 16 \, \text{x} \, \text{n2} + 88.7$

 $\mathbf{L2} = 12.5 \times n1 + 16 \times n2 + 48$

n1: SY3000 Valve stations n2: SY5000 Valve stations



Type 12

Plug-in Connector Connecting Base: For EX260 Integrated-type (For Output) **Serial Transmission System**

Series SY3000/5000

SY3000 can be mounted onto SY5000 size manifold.

How to Order Manifold

Refer to page 23 for Type 12/ Top ported dimensions.

SS5Y5 - M 12S | NA | N | Mixed Mounting Type

SI unit output polarity

It is possible to mount SY3000 size valves on all stations. However, the manifold block width should be 12.5 mm.

Positive common

Negative common 3 Valve stations Note) Without SI unit, the symbol is nil.

🛈 SI u	ınit specific	ations
Symbol	Protocol	Number of ou

Symbol	Protocol	Number of outputs	Communication connector
0	Without SI unit		it
QA	DeviceNet™	32	M12
QB	Device Net	16	IVITZ
NA		32	M12
NB	PROFIBUS	16	IVITZ
NC	DP	32	D l- Noto)
ND		16	D-sub Note)
VA	CC-Link	32	M12
VB	CC-LINK	16	IVITZ
DA	EtherCAT	32	M12
DB	EllierCAT	16	IVITZ
FA	PROFINET	32	M12
FB	ITIOFINE	16	IVITZ

Note) IP40 for the D-sub applicable communication connector specification.

For SI unit part number, refer to page 1. DIN rail and SI unit output polarity "N" cannot be selected for the product without SI unit.

In the case of the 32-output SI unit Symbol Stations

02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	
02	2 stations	O :f I I + Noto 2\
:	i	Specified layout Note 2) (Available up to 32 solenoids)
24 24 s	24 stations	(Available up to 32 soleriolds)

In the case of the 16-output SI unit

	Symbol	Stations	Note
	02	2 stations	
	:	i i	Double wiring Note 1)
	08	8 stations	_
1	02	2 stations	O (C 11 1 Note 2)
	:	:	Specified layout Note 2)
	16	16 stations	(Available up to 16 solenoids)

Note 1) Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.


Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Note 4) For the model without the SI unit (S0), note the maximum number of solenoids of the SI unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

How to Order Manifold Assembly

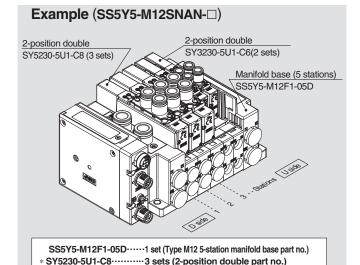

* SY3230-5U1-C6·······2 sets (2-position double part no.) The asterisk denotes the symbol for assembly. Prefix it to the part nos, of the valve, etc.

• The valve arrangement is numbered as the 1st station from the D side. • Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

P. E port entry

	. ,
U Note)	U side (2 to 10 stations)
D Note)	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

Note) For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

SUP/EXH block assembly

Nil	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- * For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- * When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

6 P, E port size (One-touch fittings)

Nil	ø10
N	ø3/8"

* For N. sizes are in inches.

Mounting

_	9		
Nil		Direct mounting	
D		DIN rail mounting (With DIN rail)	
D0		DIN rail mounting (Without DIN rail)	
D3	For 3 stations	Specify a longer rail than the standard length.	
:		The SY5000 valve is now at a mountable	
D24 For 24 stations length (manifold block length of		length (manifold block length of 16 mm).]	

* When it is necessary to mount a DIN rail without an SI unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for part numbers of DIN rail.

 


Plug-in Connector Connecting Base Series SY3000/5000

Refer to the SMC website or the SY3000/5000 series catalog (CAT.ES11-103) for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.

How to Order Valves (With two mounting screws)

Refer to the SY3000/5000 series catalog (CAT.ES11-103) for details on valve specifications.



1 Series

	100
3	SY3000
5	SY5000

2 Type of actuation

-,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		
1	2-position single	
2	2-position double	
3	3-position closed center	
4	3-position exhaust center	
5	3-position pressure center	
A *	4-position dual 3-port valve (N.C./N.C.)	
B*	4-position dual 3-port valve (N.O./N.O.)	
C*	4-position dual 3-port valve (N.C./N.O.)	

* Only rubber seal type is available for the 4-position dual 3-port valve.

3 Seal type

	71
0	Rubber seal
1	Metal seal

4 Pilot type

Nil	Internal pilot
R	External pilot

Back pressure check valve (Built-in valve type)

Nil	None
Н	Built-in

- * Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- * The built-in valve type back pressure check valve is not available for the 3-position type.

6 Pilot valve option

Nil	Standard (101 psi (0.7 MPa))
В	Quick response type (101 psi (0.7 MPa))
K*	High pressure type (145 psi (1.0 MPa))

* Only metal seal type is available for the high pressure type.

Coil type

	A1
Nil	Standard
Т	With power saving circuit (Continuous duty type)

- * Be sure to select the power saving circuit type when a valve is continuously energized for long periods of time.
- * Note the specified energizing time when power saving circuit is selected.

8 Rated voltage


- Hui	ica voltage
5	24 VDC

9 Light/surge voltage suppressor and common specification

	<u>-</u>	
Nil	Without light/surge voltage suppressor (Non-polar)	
R	With surge voltage suppressor (Non-polar)	
U	With light/surge voltage suppressor (Non-polar)	
S	With surge voltage suppressor (Positive common)	
Z	With light/surge voltage suppressor (Positive common)	
NS	S With surge voltage suppressor (Negative common)	
NZ	With light/surge voltage suppressor (Negative common)	

* Only "Z" and "NZ" types are available for the product with power saving circuit. Select a valve from R, U, S or Z when the SI unit output polarity is Nil (Positive common). Select a valve from R, U, NS or NZ when the SI unit output polarity is N (Negative common).

Manual override

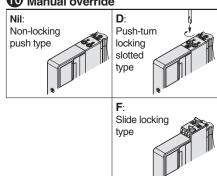

A, B port size

Thread piping

3 3				
Symbol	Port size	Applicable series		
M5	M5 x 0.8	SY3000		
01	1/8	SY5000		

One-touch fitting (Metric)

one todon many (mount)			
Symbol	A and B port	SY3000	SY5000
C2	ø2 One-touch fitting	•	_
C3	ø3.2 One-touch fitting	•	_
C4 ø4 One-touch fitting		•	
C6 ø6 One-touch fitting		•	
C8	ø8 One-touch fitting	_	

One-touch fitting (Inch)

Symbol	A and B port	SY3000	SY5000	
N1	ø1/8" One-touch fitting	•	_	
N3	ø5/32" One-touch fitting		•	
N7	ø1/4" One-touch fitting	•	•	
N9	ø5/16" One-touch fitting	_	•	

12 Thread type

Nil	Rc
F	G
N	NPT
Т	NPTF

* Only Nil is available for M5.

B Type of mounting screw


by Type of Inounting Screw			
Nil	Round head combination screw		
В	Hexagon socket head cap screw		
K	Round head combination screw (Falling-out-prevention type)		
н	Hexagon socket head cap screw (Falling-out-prevention type)		


- * For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- * When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service. Refer to the SY3000/5000 series catalog (CAT.ES11-103) for part numbers of base gasket and mounting screw.
- * "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly.



Dimensions: Type 12/Mixed Mounting Type

(mm)

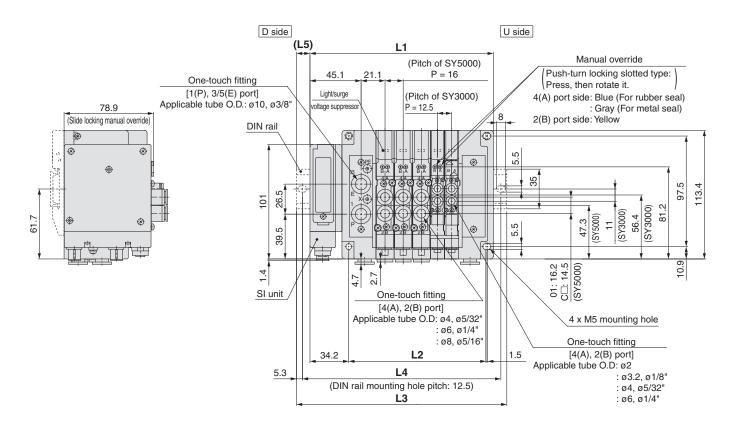

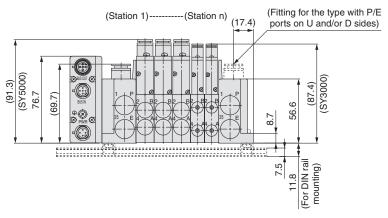

Note 1) These figures show the "SS5Y5-M12SQA-05D".

Note 2) Refer to page 16 for dimensions of D-sub communication connector, external pilot and built-in silencer.

EX260 Serial transmission Calculation of dimensions

 $\mathbf{L1} = 12.5 \text{ x n1} + 16 \text{ x n2} + 88.7$

 $L2 = 12.5 \times n1 + 16 \times n2 + 48$

 $\mathbf{M} = L1/12.5 + 1$ Remove all numbers after the decimal.

 $L3 = 12.5 \times M + 23$

L4 = L3 - 10.5

L5 = (L3 - L1)/2

n1: SY3000 Valve stations n2: SY5000 Valve stations



 
Tie-rod Base:

For EX260 Integrated-type (For Output) **Serial Transmission System**

Series S



How to Order Manifold



*Refer to Note 1) of the 2 SI unit specifications.

Series

1	SV1000
2	SV2000
3	SV3000

2 SI unit specifications

Currente el	Protocol	Number of	Communication	
Symbol		outputs	connector	
0	V	Vithout SI ur	nit	
QA	DeviceNet™	32	M12	
QB	Devicemet	16	IVITZ	
NA		32	M12	
NB	PROFIBUS	16	IVIIZ	
NC	DP	32	D I- Noto 1)	
ND		16	D-sub ^{Note 1)}	
VA	CC-Link	32	M12	
VB	CC-LITIK	16	IVITZ	
DA	EtherCAT	32	M12	
DB	EulerCAT	16	IVIIZ	
FA	PROFINET	32	M12	
FB	FUCTINE	16	IVITZ	

• DIN rail cannot be selected for the product without SI unit.

Note 1) IP40 for the D-sub applicable communication connector specification. (The manifold part number is "SS5V□-10S1NC/ND□D".)

Note 2) For SI unit part number, refer to page 1.

4 Valve stations

In the case of the 32-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
16	16 stations	
02	2 stations	On a siff and Lawrent Note 2)
:	:	Specified layout Note 2) (Available up to 32 solenoids)
20	20 stations	

In the case of the 16-output SI unit

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring Note 1)
08	8 stations	
02	2 stations	O = = :f = -1 + Noto 2)
:	:	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	

Note 1) Double wiring: single, double, 3-position and 4-position solenoid valves can be used on all manifold stations.

> Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification

> (Note that double, 3-position and 4- position valves cannot be used where single solenoid wiring has been specified.)

P. E port entry

<u> </u>	
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

6 SUP/EXH block assembly

Nil	Internal pilot
SNote)	Internal pilot, Built-in silencer
R	External pilot
RS ^{Note)}	External pilot, Built-in silencer

Note) When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

8 Mounting

Nil	Direct mounting DIN rail mounting (With DIN rail)		
D			
D0	DIN rail m	DIN rail mounting (Without DIN rail)	
D3	For 3 stations When a longer DIN rail is desi		
:	:	than the specified stations. (Specify a longer rail than the	
D20	For 20 stations	standard length.)	

3 SI unit output polarity

Nil	Positive common
N	Negative common


A. B port size (Metric)

<u> </u>	A, B port dize (metro)		
Symbol	A, B port	P, E port	Applicable series
C3	ø3.2 One-touch fitting	0	
C4	ø4 One-touch fitting	ø8 One-touch fitting	SV1000
C6	ø6 One-touch fitting	One-touch litting	
C4	ø4 One-touch fitting	-:10	
C6	ø6 One-touch fitting	ø10 One-touch fitting	SV2000
C8	ø8 One-touch fitting	One-touch litting	
C6	ø6 One-touch fitting	-:40	
C8	ø8 One-touch fitting	ø12 One-touch fitting	SV3000
C10	ø10 One-touch fitting	One-touch litting	
M	A, B ports mixed		


A, B port size (inch)				
Symbol	A, B port	P, E port	Applicable series	
N1	ø1/8" One-touch fitting	~F/10II		
N3	ø5/32" One-touch fitting	ø5/16" One-touch fitting	SV1000	
N7	ø1/4" One-touch fitting	One-touch litting		
N3	ø5/32" One-touch fitting	~0/0		
N7	ø1/4" One-touch fitting	ø3/8" One-touch fitting	SV2000	
N9	ø5/16" One-touch fitting	One-touch litting		
N7	ø1/4" One-touch fitting	0/01		
N9	ø5/16" One-touch fitting	ø3/8" One-touch fitting	SV3000	
N11	ø3/8" One-touch fitting	One-touch litting		
M	A, B ports mixed			

- * In the case of mixed specifications (M), indicate separately on the manifold specification sheet.
- * The X and PE port size of External pilot type (R, RS) are ø4 (mm) or ø5/32" (inch) for the SV1000/2000 series, and ø6 (mm) or ø1/4" (inch) for the SV3000 series.

How to Order Manifold Assembly

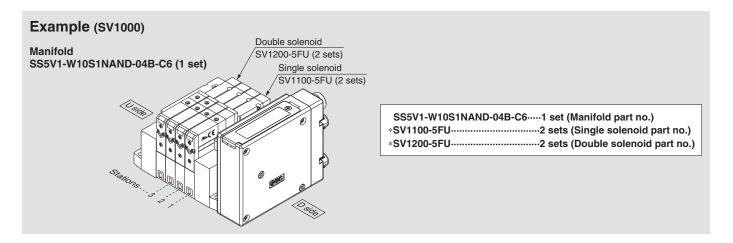

How to Order Valves

 

A	Series
•	Series

1	SV1000
2	SV2000
3	SV3000

2 Type of actuation

	Type of actuation	
1	2-position single	
2	2-position double	
3	3-position closed center	
4	3-position exhaust center	
5	3-position pressure center	
Α	4-position dual 3-port valve: N.C./N.C.	
В	4-position dual 3-port valve: N.O./N.O.	
С	4-position dual 3-port valve: N.C./N.O.	

* 4-position dual 3-port valves are applicable to the SV1000/2000 series only.

3 Pilot type

Nil	Internal pilot
R	External pilot

* External pilot specification is not available for 4-position dual 3-port valves.

4 Back pressure check valve

K	Built-in
* Built-in	back pressure check valve type is

- applicable to the SV1000 series only.

 * Back pressure check valve is not available for
- 3-position valve.

Note) Refer to Specific Product Precautions 2 in Best Pneumatics No. 1.

5 Rated voltage

<u> </u>	ica voltage
5	24 VDC

6 Light/surge voltage suppressor

	ing an go rounge cappinger.
U	With light/surge voltage suppressor
R	With surge voltage suppressor

Note) Available with manifold block for station additions. Refer to Best Pneumatics No. 1.

8 Made to Order

	Nil	_
	X90	Main valve fluororubber (Refer to page 448 in Best Pneumatics No. 1.)
ľ		


Manual override	
Nil: Non-locking push type	D : Push-turn locking slotted type


Refer to the SMC website or the SV series in Best Pneumatics No.1 for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.




Dimensions: For EX260 Integrated-type (For Output) Serial Transmission System/Series SV1000

- Tie-rod base manifold: SS5V1-W10S1□□D-Stations D (S, R, RS)-C4, N3 (-D)
 - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

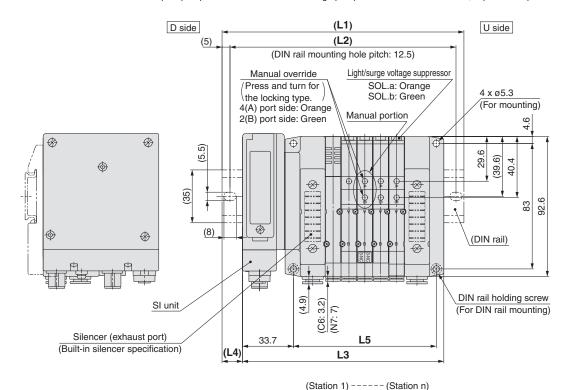

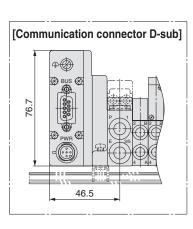

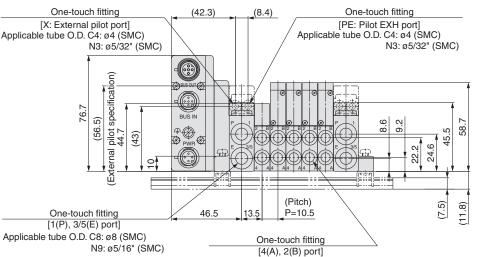

Applicable tube O.D. C3: ø3.2 (SMC) C4: ø4 (SMC)


> C6: ø6 (SMC) N1: Ø1/8" (SMC) N3: ø5/32" (SMC) N7: ø1/4" (SMC)


L: DIN Rail Overall Length										(mm) n: Stations										
	L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
	L1	135.5	148	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323
	L2	125	137.5	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5
	L3	102.2	112.7	123.2	133.7	144.2	154.7	165.2	175.7	186.2	196.7	207.2	217.7	228.2	238.7	249.2	259.7	270.2	280.7	291.2
	L4	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	17	12	13	14	15	16
	L5	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252

Series SV

Dimensions: For EX260 Integrated-type (For Output) Serial Transmission System/Series SV2000

- Tie-rod base manifold: SS5V2-W10S1□□D-Stations DCS, R, RS)-C6, N7 (-D)
 - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

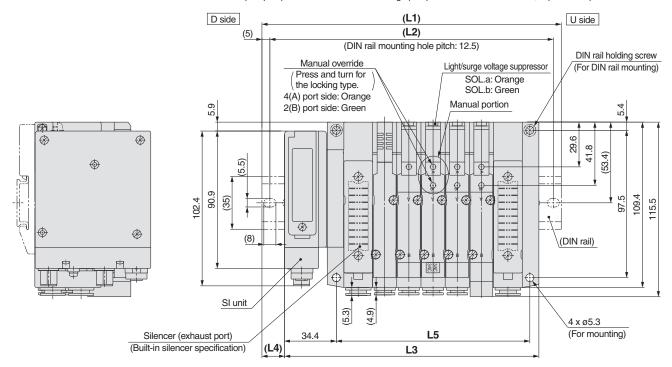

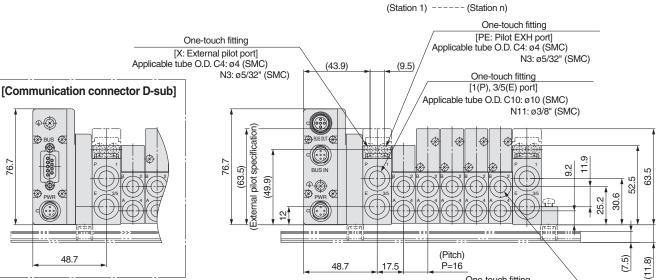

17.5

Applicable tube O.D. C4: ø4 (SMC) C6: ø6 (SMC)

One-touch fitting [4(A), 2(B) port]

P=16

C8: Ø8 (SMC) N3: ø5/32" (SMC) N7: ø1/4" (SMC)

N9: ø5/16" (SMĆ)

(mm) n: Stations

L: DIN Rail Overall Length

L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	335.5	360.5	373	385.5	410.5	423	435.5
L2	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425
L3	120.2	136.2	152.2	168.2	184.2	200.2	216.2	232.2	248.2	264.2	280.2	296.2	312.2	328.2	344.2	360.2	376.2	392.2	408.2
L4	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5	12.5	17	15.5	13.5
L5	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368

48.7

Ф**Ф**

⊗ BUS

76.7


(3)


8

48.7

Dimensions: For EX260 Integrated-type (For Output) Serial Transmission System/Series SV3000

- Tie-rod base manifold: SS5V3-W10S1□□D-Stations B (S, R, RS)-C8, N7 (-D)
 - When P, E port outlets are indicated on the U side or D side, the P, E ports on the opposite side are plugged.
 - External pilot port positions and silencer discharge port positions are the same as P, E port outlet positions.

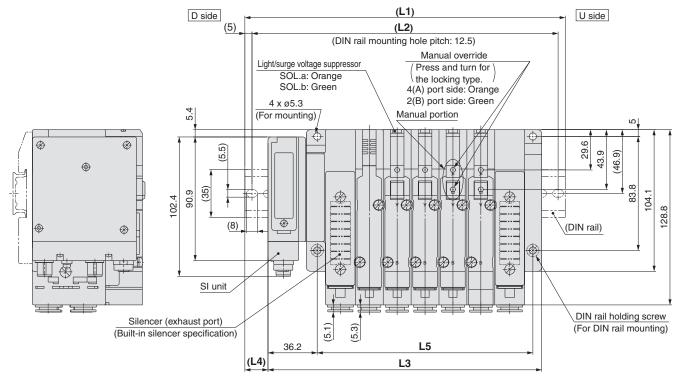

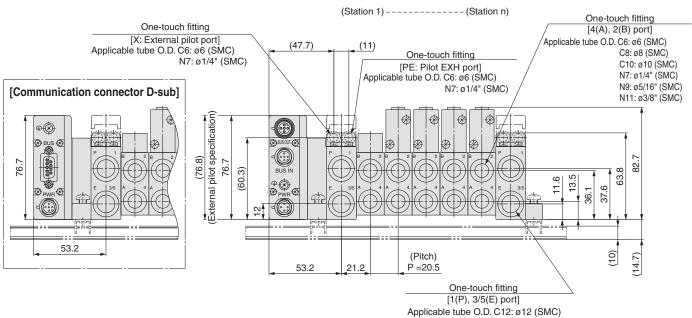

L: DIN Rail Overall Length

(mm) n: Stations 3 4 5 6 7 10 11 12 13 14 15 16 17 18 19 20 L1 173 185.5 210.5 235.5 248 273 298 310.5 335.5 348 373 398 410.5 435.5 460.5 473 498 523 535.5 L2 162.5 175 200 225 237.5 262.5 287.5 300 325 337.5 362.5 387.5 400 425 450 462.5 487.5 512.5 525 221.7 L3 139.7 160.2 180.7 201.2 242.2 262 7 283.2 303.7 324 2 344.7 365.2 385.7 406.2 426.7 447.2 467 7 488.2 508.7 L4 16.5 12.5 15 17 13 15.5 17.5 13.5 16 12 14 16.5 12.5 14.5 17 13 15 17.5 13.5 L5 445.5 117.5 322.5 466 138 158.5 179 199.5 220 240.5 261 281.5 302 363.5 404.5 425

 
N11: ø3/8" (SMC)

Base Mounted

Plug-in Unit: For EX260 Integrated-type (For Output) Serial Transmission System

Series VQC1000 (EROHS)

How to Order Manifold



1 Series

1 VQC1000

2 Manifold model

1 Plug-in unit

3 Stations

In the case of the 32-output SI unit

Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring Note 1)				
12	12 stations					
02	2 stations	O : f + Noto 2)				
÷	:	Specified layout Note 2)				
24	24 stations	(Available up to 24 solenoids				

In the case of the 16-output SI unit

Symbol	Stations	Note						
02	2 stations							
:	:	Double wiring Note 1)						
08	8 stations	-						
02	2 stations	On a siff and the second Note 2)						
:	:	Specified layout Note 2)						
16	16 stations	(Available up to 16 solenoids						

Note 1) Double wiring: single, double, 3-position and 4-position solenoid valves can be used on all manifold stations.

Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet.
(Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

4 Cylinder port size

C3	With ø3.2 One-touch fitting						
C4	With ø4 One-touch fitting						
C6	With ø6 One-touch fitting						
M5	M5 thread						
CM	Mixed sizes and with port plug						
L3	Top ported elbow						
LJ	with ø3.2 One-touch fitting						
L4	Top ported elbow						
L-4	with ø4 One-touch fitting						
L6	Top ported elbow						
LO	with ø6 One-touch fitting						
L5	M5 thread						
В3	Bottom ported elbow						
D3	with ø3.2 One-touch fitting						
B4	Bottom ported elbow						
D4	with ø4 One-touch fitting						
В6	Bottom ported elbow						
В	with ø6 One-touch fitting						
B5	M5 thread						
LM	Elbow port, mixed sizes						
MM Note2)	Mixed size for different types of piping, option installed						

Note 1) Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.

Note 3) Symbols for inch sizes are as follows:

- N1: ø1/8"
- N3: ø5/32"
- N7: ø1/4"
- NM: Mixed

The top ported elbow is LN \square and the bottom ported elbow is BN \square .

6 SI unit output polarity

	-			-		
Nil		Positi	ive c	comm	non	
N		Negat	ive	comr	non	

Option

Nil	None				
В	Vith back pressure check valve (All stations) Note 2)				
D	With DIN rail (Rail length: Standard)				
D□	Vith DIN rail (Rail length: Special) Note 3)				
K	Special wiring spec. (Except double wiring) Note 4)				
N	With name plate				
R	External pilot Note 5)				
S	Built-in silencer, Direct exhaust Note 6)				

Note 1) When two or more symbols are specified, indicate them alphabetically.

Example: -BRS

Note 2) When the back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position on the manifold specification sheet.

Note 3) For special DIN rail length, indicate "D□". (Enter the number of stations inside □.) Example: -D08

In this case, stations will be mounted on a DIN rail for 8 stations regardless of the actual number of manifold stations.

The specified number of stations must be larger than the number of stations on the manifold. Indicate "-D0" for the option without DIN rail.


Note 4) Specify wiring type of each station on the manifold specification sheet.

Note 5) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.

Note 6) Built-in silencer type does not satisfy IP67.

Note 7) When the "SD0" (Without SI unit) is specified, "-D", "-D□" cannot be selected.

6 Kit type

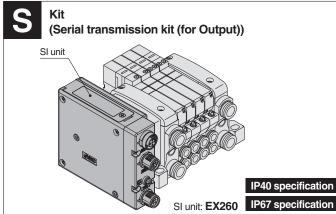



Symbol	Protocol	Number of outputs	Communication connector
SD0		Without SI ur	nit
SQA	DeviceNet™	32	M12
SQB	Devicemet	16	IVITZ
SNA		32	M12
SNB	PROFIBUS DP	16	IVITZ
SNC	PHOLIDO2 DE	32	D-subNote 1)
SND		16	D-Sub-rece 17
SVA	CC-Link	32	M12
SVB	CC-LINK	16	IVIIZ
SDA	EtherCAT	32	M12
SDB	EulerCAT	16	IVIIZ
SFA	PROFINET	32	M12
SFB	PHOPINEI	16	IVII∠

Note 1) D-sub S kit: IP40 specification (IP67 specification for all other S kits) Note 2) For SI unit part number, refer to page 1.



 How to Order Valves



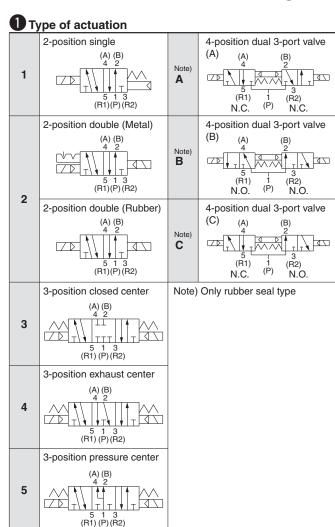


9	9 9 0
2 Se	al type
0	Metal seal
1	Rubber seal
3 Fu	nction
Nil	Standard (0.4 W)
В	Quick response type (0.95 W)
K Note 2)	High pressure type (145 psi (1.0 MPa, 0.95 W))
Note 3)	110gaaro committee
R Note 4)	External pilot
Note 2) Note 3)	When two or more symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible. Only metal seal type When negative common is specified for SI unit, select and mount the valve of negative common. Not applicable for dual 3-port valves
4 Co	il voltage
5	24 VDC

5 Light/surge voltage

Yes

suppressor

Nil

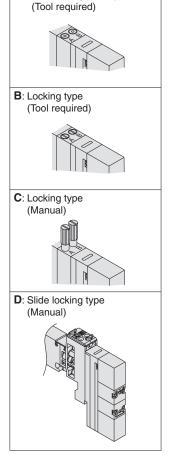

6 Manual override

Nil: Non-locking push type

Refer to the SMC website or the VQC1000/2000 series catalog (CAT.ES11-101) for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.


SMC





Kit (Serial transmission) For EX260 Integrated-type (For Output) Serial Transmission System

VV5QC11

S Kit (Serial transmission kit: EX260)

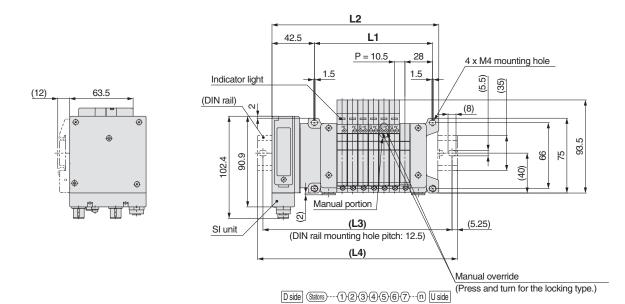

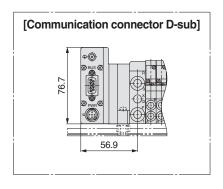

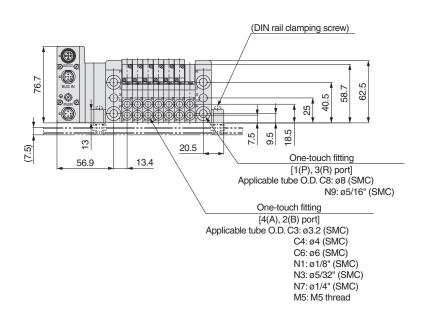

|--|

L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	55.5	66	76.5	87	97.5	108	118.5	129	139.5	150	160.5	171	181.5	192	202.5	213	223.5	234	244.5	255	265.5	276	286.5	297
L2	104.2	114.7	125.2	135.7	146.2	156.7	167.2	177.7	188.2	198.7	209.2	219.7	230.2	240.7	251.2	261.7	272.2	282.7	293.2	303.7	314.2	324.7	335.2	345.7
L3	127	139.5	152	164.5	177	177	189.5	202	214.5	227	239.5	239.5	252	264.5	277	289.5	302	314.5	314.5	327	339.5	352	364.5	377
L4	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	387.5



Base Mounted

 
Plug-in Unit: For EX260 Integrated-type (For Output) **Serial Transmission System**

Series VQC2000 (E





How to Order Manifold



Series

U donico								
2 VQC2000								
2 Manifold model								

Plug-in unit

Stations

In the case of the 32-output SI unit

Symbol	Stations	Note				
02	2 stations	Double wiring Note 1)				
:	:					
12	12 stations					
02	2 stations	On a siff and Lawrent Note 2)				
:	:	Specified layout Note 2) (Available up to 24 solenoids)				
24	24 stations					

In the case of the 16-output SI unit

Symbol	Stations	Note				
02	2 stations					
:	:	Double wiring Note 1)				
08	8 stations					
02	2 stations	O: f! I Noto 2\				
÷	:	Specified layout Note 2) (Available up to 16 solenoids)				
16	16 stations					

Note 1) Double wiring: single, double, 3-position and 4-position solenoid valves can be used on all manifold stations.

> Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification

> (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

Cylinder port size

C4	ø4 One-touch fitting
C6	ø6 One-touch fitting
C8	ø8 One-touch fitting
CM	Mixed sizes and with port plug
L4	Top ported elbow with ø4 One-touch fitting
L6	Top ported elbow with ø6 One-touch fitting
L8	Top ported elbow with ø8 One-touch fitting
B4	Bottom ported elbow with ø4 One-touch fitting
В6	Bottom ported elbow with ø6 One-touch fitting
В8	Bottom ported elbow with ø8 One-touch fitting
LM	Elbow port, mixed sizes
MM Note 2)	Mixed size for different types of piping, option installed

Note 1) Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.

Note 3) Symbols for inch sizes are as follows:

- N3: ø5/32"
- N7: ø1/4"
- N9: ø5/16"

The top ported elbow is LN□ and the bottom ported elbow is BN□.

6 SI unit output polarity

Nil	Positive common
N	Negative common

Option

•	
Nil	None
В	With back pressure check valve (All stations) Note 2)
D	With DIN rail (Rail length: Standard)
D□	With DIN rail (Rail length: Special) Note 3)
K	Special wiring spec. (Except double wiring) Note 4)
N	With name plate
R	External pilot Note 5)
S	Built-in silencer, Direct exhaust Note 6)
Т	P and R ports included on both sides of the U side Note 7)

Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BRS

Note 2) When the back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position on the manifold specification sheet.

Note 3) For special DIN rail length, indicate "D□". (Enter the number of stations inside \square .) Example: -D08 In this case, stations will be mounted on a DIN

rail for 8 stations regardless of the actual number of manifold stations The specified number of stations must be

larger than the number of stations on the Indicate "-D0" for the option without DIN rail.

Note 4) Specify wiring type of each station on the

manifold specification sheet. Note 5) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.

Note 6) Built-in silencer type does not satisfy IP67.

Note 7) 2 ports for SUP and EXH are included on both sides of U side (cylinder port and coil side) with ø12 one-touch fittings

Note 8) When the "SD0" (Without SI unit) is specified, "-D", "-D□" cannot be selected.

Kit type

(Serial transmission kit (for Output)) SI unit

Symbol	Protocol	Number of outputs	Communication connector		
SD0		Without SI u	nit		
SQA	DeviceNet™	32	M12		
SQB	Devicemet	16	IVITZ		
SNA		32	M12		
SNB	PROFIBUS DP	16	IVITZ		
SNC	PHOFIBUS DF	32	D-sub Note 1)		
SND		16	D-Sub Hele 17		
SVA	CC-Link	32	M12		
SVB	CC-LITIK	16	IVITZ		
SDA	EtherCAT	32	M12		
SDB	ElliefCAT	16	IVITZ		
SFA	PROFINET	32	M12		
SFB	FNOTINE	16	IVI IZ		


Note 1) D-sub S kit: IP40 specification (IP67 specification for all other S kits) Note 2) For SI unit part number, refer to page 1.





IP40 specification

SI unit: EX260 IP67 specification

  How to Order Valves





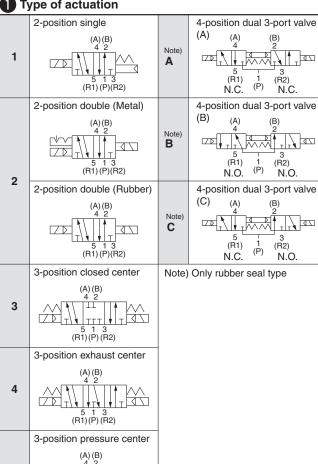

2 Seal type

0 Metal sea	11
1 Rubber se	al

3 Function

Nil	Standard (0.4 W)
В	Quick response type (0.95 W)
K Note 2)	High pressure type (145 psi (1.0 MPa, 0.95 W))
N Note 3)	Negative common
R Note 4)	External pilot

Note 1) When two or more symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible.

Note 2) Only metal seal type

Note 3) When negative common is specified for SI unit, select and mount the valve of negative common.

Note 4) Not applicable for dual 3-port valves

4 Coil voltage

24 VDC

5 Light/surge voltage suppressor

Nil Yes

6 Manual override



Nil: Non-locking push type






C: Locking type (Manual)



D: Slide locking type (Manual)

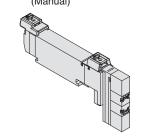

Refer to the SMC website or the VQC1000/2000 series catalog (CAT.ES11-101) for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.


5


(R1)(P)(R2)


Kit (Serial transmission) For EX260 Integrated-type (For Output) Serial Transmission System

VV5QC21

S Kit (Serial transmission kit: EX260)

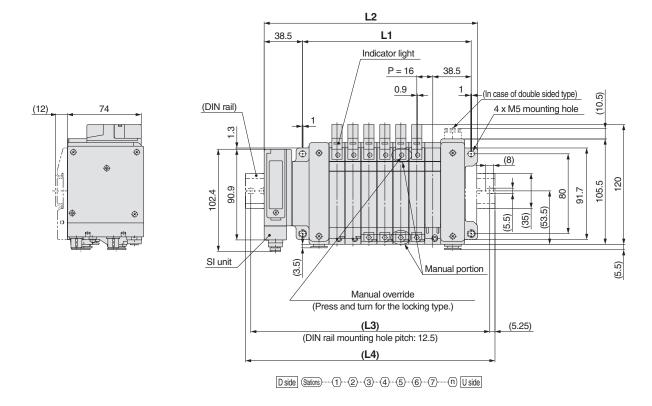

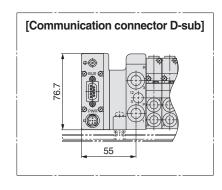

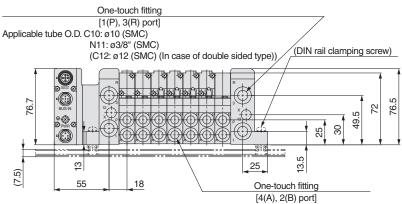

(mm)	n: Stations	(Maximum	24	etatione)


L n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	73	89	105	121	137	153	169	185	201	217	233	249	265	281	297	313	329	345	361	377	393	409	425	441
L2	118	134	150	166	182	198	214	230	246	262	278	294	310	326	342	358	374	390	406	422	438	454	470	486
L3	139.5	164.5	177	189.5	202	227	239.5	252	277	289.5	302	314.5	339.5	352	364.5	389.5	402	414.5	427	452	464.5	477	489.5	514.5
L4	150	175	187.5	200	212.5	237.5	250	262.5	287.5	300	312.5	325	350	362.5	375	400	412.5	425	437.5	462.5	475	487.5	500	525

Base Mounted

Plug-in Unit: For EX260 Integrated-type (For Output) Serial Transmission System

Series VQC4000 (EROHS)

 How to Order Manifold



1 Series

4 VQC4000

2 Manifold model

1 Plug-in unit

4 Cylinder port size

C8	With ø8 One-touch fitting				
C10 With ø10 One-touch fitting					
C12	With ø12 One-touch fitting				
02	Rc1/4				
03	Rc3/8				
B Bottom ported Rc1/4					
CM Mixed					

Note 1) Indicate the sizes on the manifold specification sheet in the case of "CM".

Note 2) Symbols for inch sizes are as follows: <In the case of One-touch fittings>

- N7: ø1/4"
- N9: ø5/16"
- N11: ø3/8"
- NM: Mixed

5 Thread type

Nil	Rc
F	G
Т	NPT/NPTF

3 Stations

In the case of the 32-output SI unit

Symbol	Stations	Note
01	1 station	
:	:	Double wiring Note 1)
12	12 stations	
01	1 station	O: f! I + Noto 2\
÷	:	Specified layout Note 2) (Available up to 24 solenoids)
16	16 stations	(Available up to 24 soleriolus)

In the case of the 16-output SI unit

Symbol	Stations	Note
01	1 station	
:	÷	Double wiring Note 1)
08	8 stations	
01	1 station	O 'f' II I Note 2\
:	:	Specified layout Note 2) (Available up to 16 solenoids)
16	16 stations	(Available up to 16 soleriolds)

Note 1) Double wiring: single, double, 3-position and 4-position solenoid valves can be used on all manifold stations.

Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet

(Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

7 SI unit output polarity

Nil	Positive common
N	Negative common


8 Option

	<u> </u>		
	Nil	None	
S Built-in silencer, Direct exhaust Note 1)			
	K	Special wiring spec. (Except double wiring) Note 2)	

Note 1) Built-in silencer type does not satisfy IP67.

Note 2) Specify wiring type of each station on the manifold specification sheet.

6 Kit type

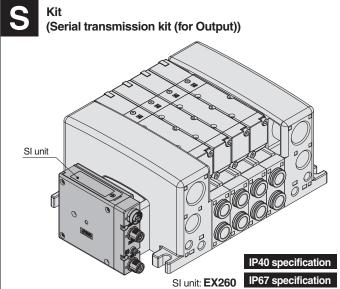


Symbol	Protocol	Number of outputs	Communication connector			
SD0A		Without SI unit				
SQA	DeviceNet™	32	M12			
SQB	Devicemet	16	IVITZ			
SNA		32	M12			
SNB	PROFIBUS DP	16	IVITZ			
SNC	PHOFIBUS DF	32	D-sub Note 1)			
SND		16	D-Sub Hote 17			
SVA	CC-Link	32	M12			
SVB	CC-LITIK	16	IVITZ			
SDA	EtherCAT	32	M12			
SDB	ElnerCAT	16	IVI IZ			
SFA	PROFINET	32	M12			
SFB	FNOFINET	16	IVIIZ			

Note 1) D-sub S kit: IP40 specification (IP67 specification for all other S kits) Note 2) For SI unit part number, refer to page 1.



 How to Order Valves



1 Type of actuation

U	, II	pe of actuation		
	1	2-position single (A) (B) 4 2 5 1 3 (R1) (P) (R2)	4	3-position exhaust center (A) (B) 4 2 (B) 5 1 3 (R1) (P)(R2)
	0	2-position double (Metal) (A) (B) 4 2 5 1 3 (R1) (P) (R2)	5	3-position pressure center (A) (B) 4 2 THE PROPERTY OF T
	2	2-position double (Rubber) (A) (B) 4 2 5 1 3 (R1) (P) (R2)	6	3-position double check (A) (B) 4 2 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7
	3	3-position closed center (A) (B) 4 2 4 2 5 1 3 (R1) (P) (R2)		

2 Seal type

0	Metal seal
1	Rubber seal

3 Function

Nil	Standard (1 W)				
R External pilot					
Y Note 2)	Low wattage type (0.5 W)				

Note 1) When two or more symbols are specified, indicate them alphabetically.

Note 2) Select "Y" when a valve is continuously energized for long periods of time.

4 Coil voltage


5 24 VDC

5 Light/surge voltage suppressor

Nil	Yes
Е	Without light, with surge
_	voltage suppressor

6 Manual override




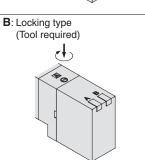


Refer to the SMC website or the VQC4000 series in Best Pneumatics No.1 for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.

VV5QC41

S Kit (Serial transmission kit: EX260)

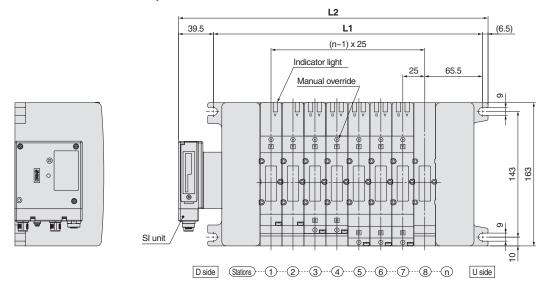

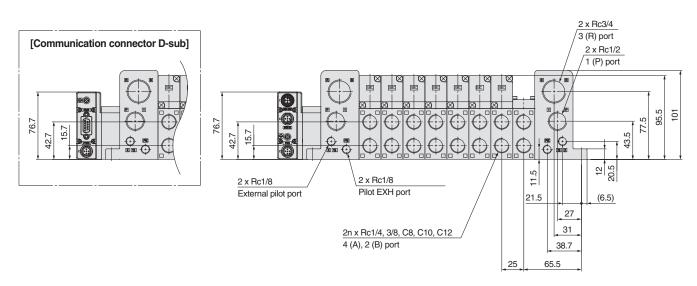

	(mm) n: Stations (Maximum 16 stations								6 stations)							
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	177	202	227	252	277	302	327	352	377	402	427	452	477	502	527	552

SMC

Plug-in Manifold Stacking Base S Kit (Serial Transmission):

For EX260 Integrated-type (For Output)

 
Serial Transmission System

Series S0700





How to Order Manifold



1 Stations

In the case of the 32-output SI unit

Symbol	Stations	Note		
01	1 station			
:	:	Double wiring Note 1)		
16	16 stations	_		
01	1 station	On a sifi and Laurant Note 2)		
:	:	Specified layout Note 2) (Available up to 32 solenoids)		
24 24 stations		(Available up to 32 soleholds)		

In the case of the 16-output SI unit

Symbol	Stations	Note			
01	1 station				
:	i	Double wiring Note 1)			
08	8 stations	-			
01	1 station	O 'C II I Note 2)			
:	:	Specified layout Note 2)			
16	16 stations	(Available up to 16 solenoids)			

Note 1) Double wiring: single, double, 3-position and 4-position solenoid valves can be used on all manifold stations.

Use of a single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Specified layout: Indicate the wiring specifications on the manifold specification sheet

(Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

Note 3) This also includes the number of blanking plate assembly.

2 Cylinder port size

•	•				
Symbol	Port size				
C2	With ø2 One-touch fitting				
C3	With ø3.2 One-touch fitting	Metric			
C4	With ø4 One-touch fitting				
CM	CM Mixed sizes and with port plug Note)				
N1	With ø1/8" One-touch fitting				
N3					
NM	Mixed sizes and with port plug Note)				

Note) Indicate the sizes on the manifold specification sheet in the case of "CM", "NM".

3 P, R port size

Symbol	Port size		
Nil	With ø8 One-touch fitting Note)		
C6	With ø6 One-touch fitting	Metric	
C8	With ø8 One-touch fitting		
N7	N7 With ø1/4" One-touch fitting		
N9	With ø5/16" One-touch fitting	Inch	

Note) The cylinder port is ø5/16" when measured in inches.

4 Kit type

Symbol	Protocol	Number of outputs	Communication connector				
SD0	Without SI unit						
SQA	DeviceNet™	32	M12				
SQB	Devicerver	16	IVIIZ				
SNA	PROFIBUS DP	32	M12				
SNB		16	IVIIZ				
SNC		32	D-sub Note 1)				
SND		16	D-Sub Note 1)				
SVA	CC-Link	32	M12				
SVB	CC-LITIK	16	IVIIZ				
SDA	EtherCAT	32	M12				
SDB	EulerCAT	16	IVI 12				
SFA	PROFINET	32	M12				
SFB	PHOFINEI	16	IVIIZ				

Note 1) The maximum number of stations is determined by the total number of solenoids. For mixed single and double wirings, enter "-K" to the order code options.

Note 2) For SI unit part number, refer to page 1.

Type of actuation	Single	Double, Dual 3-port	
Number of solenoids	1	2	

SI unit output polarity

or arm output polarity						
	Nil	Positive common				
	N	Negative common				

6 Option

Symbol	Option
Nil	None
B Note 2)	With back pressure check valve (All stations)
D	With DIN rail (Rail length: Standard)
D0	Without DIN rail (With bracket)
D☐ Note 3)	With DIN rail (Rail length specified, □: Stations)
K Note 4)	Special wiring specifications (Except double wiring)
N	With name plate
R Note 5)	External pilot
S	Built-in silencer

Note 1) When two or more options are specified, indicate them alphabetically.

Example) -BKN

Note 2) When the back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position on the manifold specification sheet.


Note 3) The available number of stations is larger than the number of manifold stations.

Note 4) Indicate the wiring specifications for mixed single and double wirings.


Note 5) Refer to the S0700 series catalog (CAT.ES11-88) for details.

- * Refer to the S0700 series catalog (CAT.ES11-88) for manifold optional parts.
- Refer to the S0700 series catalog (CAT.ES11-88) for manifold exploded view.
- * When the "SD0" (Without SI unit) is specified,
- "-D", "-D \square " cannot be selected.

How to Order Manifold Assembly

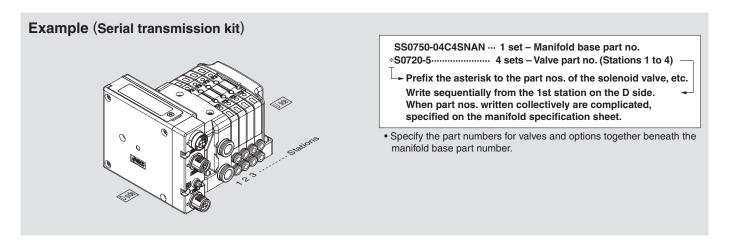

How to Order Valves

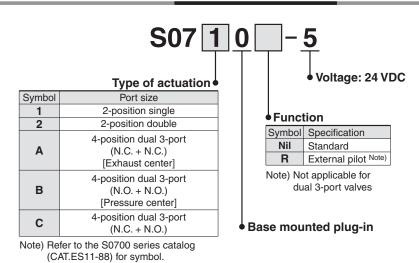



Refer to the SMC website or the S0700 series catalog (CAT.ES11-88) for details on solenoid valve specifications, Common Precautions and Specific Product Precautions.

Dimensions (mm)


SS0750


S Kit (Serial transmission kit: EX260)

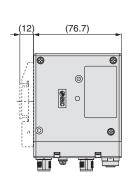

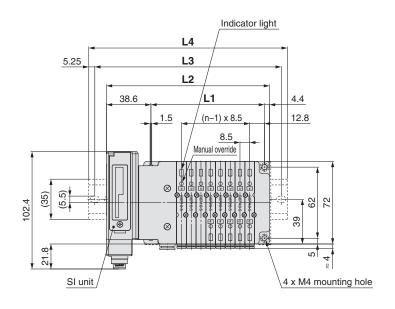

D side Stations---123456780 U side

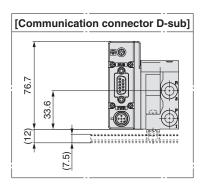

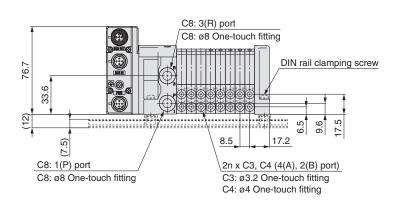

Dimensions									Formula $L1 = 8.5n + 31$, $L2 = 8.5n + 74$ n: Station (Maximun 16 stations)									
L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
L	1	39.5	48	56.5	65	73.5	82	90.5	99	107.5	116	124.5	133	141.5	150	158.5	167	
L	2	82.5	91	99.5	108	116.5	125	133.5	142	150.5	159	167.5	176	184.5	193	201.5	210	
L	3 1	112.5	112.5	125	137.5	137.5	150	162.5	162.5	175	187.5	187.5	200	212.5	212.5	225	237.5	
L4	1 1	123	123	135.5	148	148	160.5	173	173	185.5	198	198	210.5	223	223	235.5	248	

SMC



Series EX260 Specific Product Precautions 1

Be sure to read before handling. Refer to back cover for Safety Instructions,

"Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" for 3/4/5 Port Solenoid Valve Precautions. The Operation Manual can be downloaded from the SMC website, http://www.smcworld.com

Design/Selection

⚠ Warning

1. Use this product within the specification range.

Using beyond the specified specifications range can cause fire, malfunction, or damage to the system.

Check the specifications before operation.

- 2. When using for an interlock circuit:
 - Provide a multiple interlock system which is operated by another system (such as mechanical protection function).
 - Perform an inspection to confirm that it is working properly.

This may cause possible injury due to malfunction.

∧ Caution

- When applicable to UL, use a Class 2 power supply unit conforming to UL1310 for direct current power supply.
- 2. Use this product within the specified voltage range.

Using beyond the specified voltage range is likely to cause the units and connecting devices to be damaged or to malfunction.

3. Do not install a unit in a place where it can be used as a foothold.

Applying any excessive load such as stepping on the unit by mistake or placing a foot on it, will cause it to break.

4. Keep the surrounding space free for maintenance.

When designing a system, take into consideration the amount of free space needed for performing maintenance.

5. Do not remove the name plate.

Improper maintenance or incorrect use of operation manual can cause failure and malfunction. Also, there is a risk of losing conformity with safety standards.

Mounting

- 1. When handling and assembling units:
 - Do not apply excessive force to the unit when disassembling.

The connecting portions of the unit are firmly joined with seals.

 When joining units, take care not to get fingers caught between units.

Injury can result.

2. Do not drop, bump, or apply excessive impact.

Otherwise, the unit can become damaged, malfunction, or fail to function.

3. Observe the tightening torque range.

Tightening outside of the allowable torque range will likely damage the screw.

IP67 cannot be guaranteed if the screws are not tightened to the specified torque.

Mounting

∧ Caution

 When lifting a large size manifold solenoid valve unit, take care to avoid causing stress to the valve connection joint.

The connection parts of the unit may be damaged. Because the unit may be heavy, carrying and installation should be performed by more than one operator to avoid strain or injury.

5. When placing a manifold, mount it on a flat surface.

Torsion in the whole manifold can lead to trouble such as air leakage or defective insulation.

Wiring

∧ Caution

 Check the grounding to maintain the safety of the reduced wiring system and for anti-noise performance.

Provide a specific grounding as close to the unit as possible to minimize the distance to grounding.

2. Avoid repeatedly bending or stretching the cable and applying a heavy object or force to it.

Wiring applying repeated bending and tensile stress to the cable can break the circuit.

3. Avoid miswiring.

If miswired, there is a danger of malfunction or damage to the reduced wiring system.

4. Do not wire while energizing the product.

There is a danger of malfunction or damage to the reduced wiring system or output device.

Avoid wiring the power line and high pressure line in parallel.

Noise or surge produced by signal line resulting from the power line or high pressure line could cause malfunction. Wiring of the reduced wiring system or output device and the power line or high pressure line should be separated from each other.

6. Check the wiring insulation.

Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the reduced wiring system or output device due to excessive voltage and current.

7. When a reduced wiring system is installed in machinery/equipment, provide adequate protection against noise by using noise filters, etc.

Noise in signal lines may cause malfunction.





Series EX260 Specific Product Precautions 2

Be sure to read before handling. Refer to back cover for Safety Instructions,

"Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" for 3/4/5 Port Solenoid Valve Precautions. The Operation Manual can be downloaded from the SMC website, http://www.smcworld.com

Wiring

When connecting wires of output device, prevent water, solvent or oil from entering inside the connector section.

This can cause damage, equipment failure or malfunction.

9. Avoid wiring patterns in which excessive stress is applied to the connector.

This may cause malfunction or damage to the unit due to contact failure.

Operating Environment

Marning

1. Do not use in an atmosphere containing aninflammable gas or explosive gas.

Use in such an atmosphere is likely to cause a fire or explosion. This system is not explosion-proof.

⚠ Caution

1. Select the proper type of enclosure according to the environment of operation.

IP67 is achieved when the following conditions are met.

- Provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors.
- 2) Suitable mounting of each unit and manifold valve.
- 3) Be sure to mount a seal cap on any unused connectors.

If using in an environment that is exposed to water splashes, please take measures such as using a cover.

When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapor. When connected to the EX260-SPR5/6/7/8, manifold enclosure is IP40.

2. Provide adequate protection when operating in locations such as the following.

Failure to do so may cause damage or malfunction.

The effect of countermeasures should be checked in individual equipment and machine.

- 1) Where noise is generated by static electricity, etc.
- 2) Where there is a strong electric field
- 3) Where there is a danger of exposure to radiation
- 4) When in close proximity to power lines or high voltage lines
- Do not use in an environment where oil and chemicals are used.

Operating in environments with coolants, cleaning solvents, various oils or chemicals may cause adverse effects (damage, malfunction) to the unit even in a short period of time.

4. Do not use in an environment where the product could be exposed to corrosive gas or liquid.

This may damage the unit and cause it to malfunction.

Operating Environment

⚠ Caution

5. Do not use in locations with sources of surge generation.

Installation of the unit in an area around the equipment (electromagnetic lifters, high frequency induction furnaces, welding machine, motors, etc.), which generates the large surge voltage could cause to deteriorate an internal circuitry element of the unit or result in damage. Implement countermeasures against the surge from the generating source, and avoid touching the lines with each other.

- The product is CE marked, but not immune to lightning strikes. Take measures against lightning strikes in your system.
- 7. Keep dust, wire scraps and other extraneous material from getting inside the product.

This may cause malfunction or damage.

Mount the unit in such locations, where no vibration or shock is affected.

This may cause malfunction or damage.

9. Do not use in places where there are cyclic temperature changes.

In case that the cyclic temperature is beyond normal temperature changes, the internal unit is likely to be adversely effec-ted.

10. Do not use in direct sunlight.

Do not use in direct sunlight. It may cause malfunction or damage.

11. Use this product within the specified ambient temperature range.

This may cause malfunction.

Do not use in places where there is radiated heat around it.

Such a place is likely to cause malfunction.





Series EX260 Specific Product Precautions 3

Be sure to read before handling. Refer to back cover for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" for 3/4/5 Port Solenoid Valve Precautions. The Operation Manual can be downloaded from the SMC website, http://www.smcworld.com

Adjustment/Operation

Marning

1. Do not perform operation or setting with wet hands.

There is a risk of electrical shock.

⚠ Caution

 Use a watchmakers' screwdriver with thin blade for the setting of each switch of the SI unit.

When setting the switch, do not touch other unrelated parts.

This may cause parts damage or malfunction due to a short circuit.

2. Provide adequate setting for the operating conditions.

Failure to do so could result in malfunction.

Refer to the operation manual for setting of the switches.

3. For details on programming and address setting, refer to the manual from the PLC manufacturer.

The content of programming related to protocol is designed by the manufacturer of the PLC used.

4. For the EX260-SPN□, the side of the SI unit may become hot.

It may cause burns.

Maintenance

Marning

 Do not disassemble, modify (including circuit board replacement) or repair this product.

Such actions are likely to cause injuries or breakage.

- 2. When an inspection is performed,
 - Turn off the power supply.
 - Stop the air supply, exhaust the residual pressurein piping and verify that the air is released before performing maintenance work.

Unexpected malfunction of system components and injury can result.

⚠ Caution

- 1. When handling and replacing the unit:
 - Do not apply excessive force to the unit when disassembling.

The connecting portions of the unit are firmly joined with seals.

 When joining units, take care not to get fingers caught between units.

Injury can result.

2. Perform periodic inspection.

Unexpected malfunction in the system composition devices is likely to occur due to malfunction of machinery or equipment.

3. After maintenance, make sure to perform an appropriate functionality inspection.

In cases of abnormality such as faulty operation, stop operation. Unexpected malfunction in the system composition devices is likely to occur.

4. Do not use benzene and thinner for cleaning units.

Damage to the surface or erasure of the display can result. Wipe off any stains with a soft cloth.

If the stain is persistent, wipe off with a cloth soaked in a dilute solution of neutral detergent and wrung out tightly, and then finish with a dry cloth.

Other

 Refer to the catalog of each series for Common Precautions and Specific Product Precautions on manifold solenoid valves.

■ Trademark

DeviceNet™ is a trademark of ODVA.

 $\label{lem:entropy:e$



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury.

⚠ Danger :

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*2)
 - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will
 - This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.
 - A vacuum pad is a consumable part, so it is warranted for a year after it is
 - Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Safety Instructions

Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.



Global Manufacturing, Distribution and Service Network

Worldwide Subsidiaries

North & South America

- U.S.A. SMC Corporation of America
- CANADA SMC Pneumatics (Canada) Ltd.
- MEXICO SMC Corporation(México), S.A. de C.V.
- BRAZII SMC Pneumáticos do Brasil Ltda.
- CHILE SMC Pneumatics (Chile) S.A.
- COLOMBIA SMC Colombia Sucursal de SMC Chile S.A.
- ARGENTINA SMC Argentina S.A.
- BOLIVIA SMC Pneumatics Bolivia S.r.I.
- VENEZUELA SMC Neumatica Venezuela S.A.
- PERU (Distributor) IMPECO Automatización Industrial S.A.C.
- ECUADOR (Distributor) ASSISTECH CIA. LTDA.

Asia/Oceania

- CHINA SMC(China)Co.,Ltd.
- CHINA SMC Pneumatics (Guangzhou) Ltd.
- HONG KONG SMC Pneumatics(Hong Kong)Ltd.
- TAIWAN SMC Pneumatics(Taiwan)Co.,Ltd.
- ** KOREA SMC Pneumatics Korea Co., Ltd.
- SINGAPORE SMC Pneumatics(S.E.A.)Pte.Ltd.
- MALAYSIA SMC Pneumatics(S.E.A.)Sdn.Bhd.
- THAILAND SMC (Thailand) Ltd.
- PHILIPPINES Shoketsu SMC Corporation
- INDIA SMC Pneumatics(India)Pvt.Ltd.
- ISRAEL (Distributor) Baccara Geva A.C.S. Ltd.
- INDONESIA (Distributor) PT. Sinar Mutiara Cemerlang
- VIETNAM (Distributor) Dv Dan Trading Co., Ltd.
- PAKISTAN (Distributor) Jubilee Corporation

Asia/Oceania

- SRI LANKA (Distributor) Electro-Serv(Pvt.)Ltd.
- IRAN (Distributor) Abzarchian Co. Ltd.
- U.A.E. (Distributor) Machinery People Trading Co. L.L.C.
- KUWAIT (Distributor) Esco Kuwait Equip & Petroleum App. Est.
- SAUDI ARABIA (Distributor) Assaggaff Trading Est.
- BAHRAIN (Distributor)
- Mohammed Jalal & Sons W.L.L. Technical & Automative Services
- SYRIA (Distributor) Miak Corporation
- JORDAN (Distributor) Atafawok Trading Est.
- BANGLADESH (Distributor) Chemie International
- AUSTRALIA SMC Pneumatics(Australia)Pty.Ltd.
- NEW ZEALAND SMC Pneumatics(N.Z.)Ltd. JAPAN SMC Corporation

Europe/Africa

- GERMANY SMC Pneumatik GmbH
- SWITZERLAND SMC Pneumatik AG
- U.K. SMC Pneumatics (U.K.) Ltd.
- FRANCE SMC Pneumatique SA
- SPAIN / PORTUGAL SMC España S.A.
- ITALY SMC Italia S.p.A.
- GREECE SMC HELLAS E.P.E
- IRELAND SMC Pneumatics (Ireland) Ltd.
- NETHERLANDS (Associated company) SMC Pneumatics BV
- BELGIUM (Associated company) SMC Pneumatics N.V./S.A.
- DENMARK SMC Pneumatik A/S
- AUSTRIA SMC Pneumatik GmbH (Austria)

Europe/Africa

- CZECH REPUBLIC SMC Industrial Automation CZ s.r.o.
- HUNGARY SMC Hungary Ipari Automatizálási Kft.
- POLAND SMC Industrial Automation Polska Sp. z o.o.
- SLOVAKIA SMC Priemyselná Automatizácia Spol s.r.o.
- SLOVENIA SMC Industrijska Avtomatika d.o.o.
- BULGARIA SMC Industrial Automation Bulgaria EOOD
- CROATIA SMC Industrijska Automatika d.o.o.
- BOSNIA AND HERZEGOVINA(Distributor) A.M. Pneumatik d.o.o.
- SERBIA(Distributor) Best Pneumatics d.o.o.
- UKRAINE(Distributor) PNEUMOTEC Corp.
- FINLAND SMC Pneumatics Finland Ov
- NORWAY SMC Pneumatics Norway AS
- SWEDEN SMC Pneumatics Sweden AB
- ESTONIA SMC Pneumatics Estonia Oü
- LATVIA SMC Pneumatics Latvia SIA
- LITHUANIA(LIETUVA) UAB "SMC Pneumatics"
- ROMANIA SMC Romania S.r.I.
- RUSSIA SMC Pneumatik LLC.
- KAZAKHSTAN SMC Kazakhstan, LLC.
- TURKEY (Distributor) Entek Pnömatik Sanayi ve. Ticaret Sirketi
- MOROCCO (Distributor) Soraflex
- TUNISIA (Distributor) Bvms
- EGYPT (Distributor) Saadani Trading & Industrial Services
- NIGERIA (Distributor) Faraday Engineering Company Ltd.
- SOUTH AFRICA (Distributor) Hyflo Southern Africa (Pty.) Ltd.

U.S. & Canadian Sales Offices

Austin Dallas Los Angeles

Phoenix

Portland San Francisco

Vancouver

CENTRAL

Chicago Cincinnati

Cleveland

Detroit Indianapolis

Milwaukee

Minneapolis St. Louis

Toronto

Windsor

EAST

Atlanta

Boston

Charlotte **Nashville**

Richmond

Rochester Tampa **Montreal**



Vancouver Montreal Boston Livermore Atlanta Sales Branches Regional Distribution Centers Austin Central warehouse



SMC Corporation of America

10100 SMC Blvd., Noblesville, IN 46060

www.smcusa.com

SMC Pneumatics (Canada) Ltd. www.smcpneumatics.ca

(800) SMC.SMC1 (762-7621)

e-mail: sales@smcusa.com For International inquires: www.smcworld.com