


**Air Saving Valve
Pressure Valve**

Flow Valve


Series ASR/Series ASQ

**40% reduction in
air consumption**

Cuts air consumption by
operating the return stroke
at a reduced pressure.

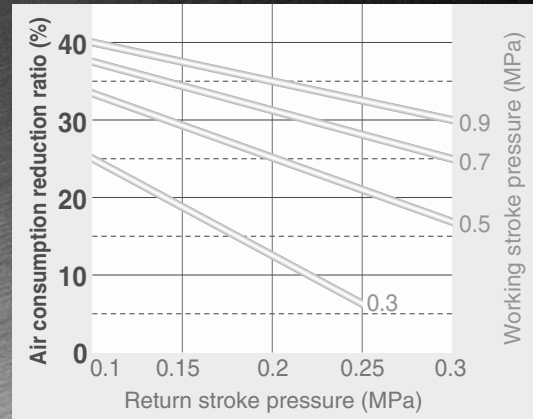

- AS
- ASP
- ASN
- AQ
- ASV
- AK
- ASS
- ASR**
- ASF

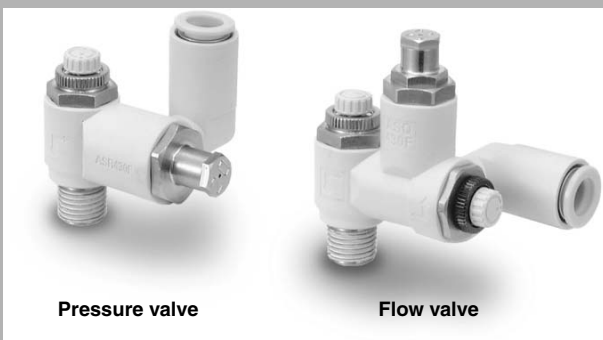


Pressure valve



Flow valve

Cuts air consumption by operating the return stroke at a reduced pressure.

Conventional valve

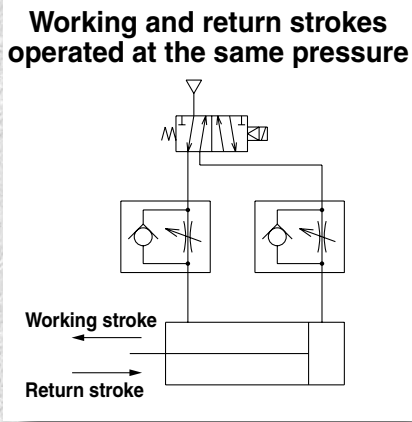

Air saving valve

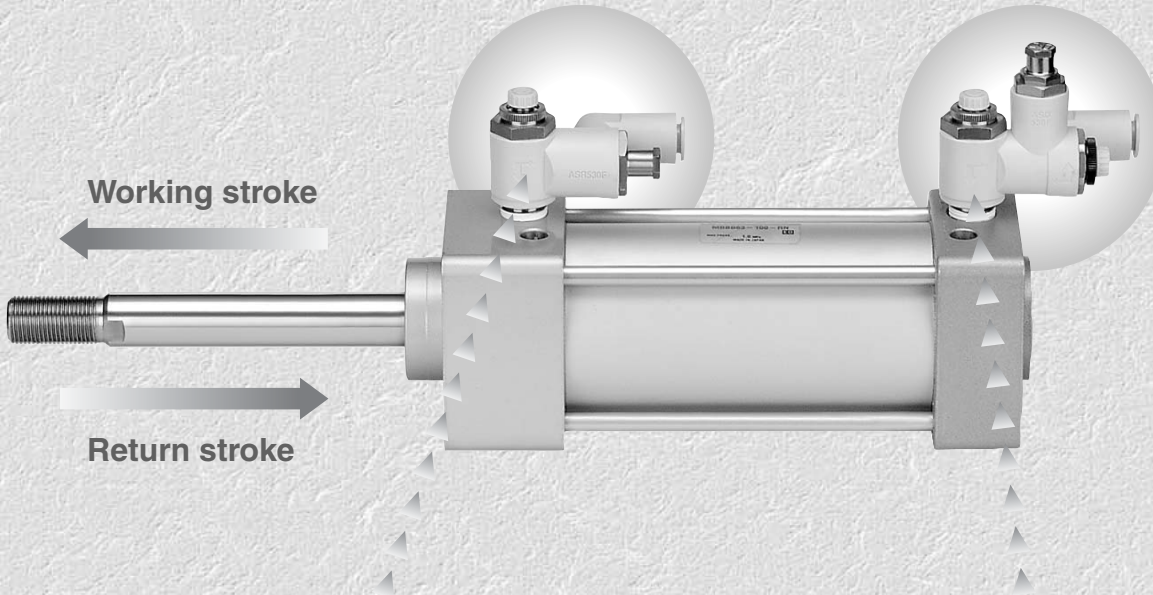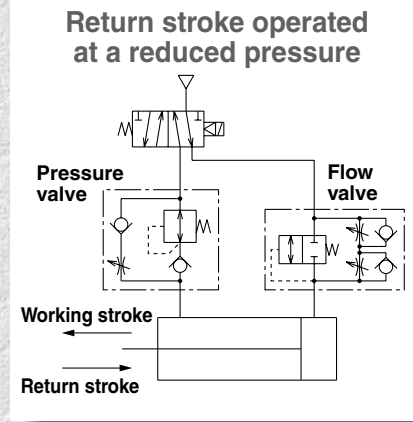

Pressure valve


Regulator with check valve
+
Speed controller



Series ASR

Flow valve

Quick supply and exhaust valve
+
Speed controller
(Meter-in, Meter-out)

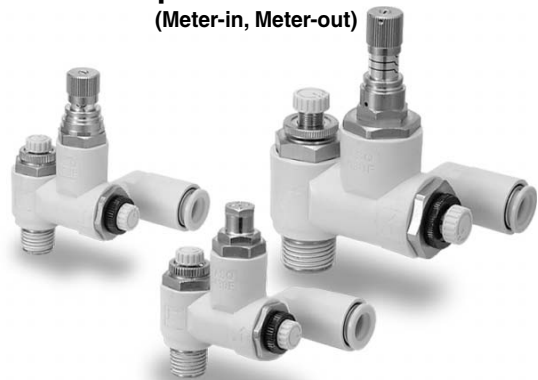

Series ASQ

Smooth operation of working and return strokes possible.


Consistent speed control achieved by preventing jerky movement of working strokes.

Improved response time


Operation delay in a return stroke is reduced by the use of a quick supply and exhaust valve.

Delay in return operation

- Cylinder operation by conventional 2 pressure control
- Cylinder operation by air saving valve
- - - Cylinder operation by speed controller

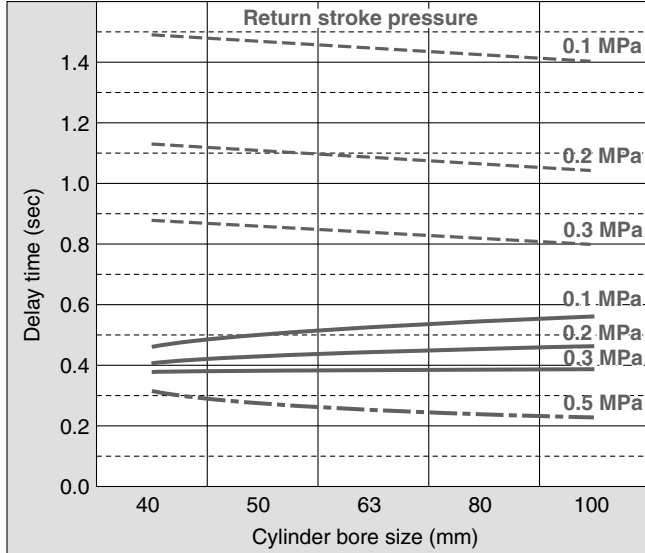


Cylinder speed: 200 mm/sec
Cylinder stroke: 200 mm

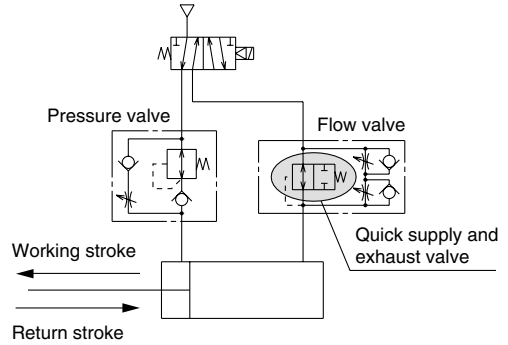

Cylinder operating pressure (MPa)	Air consumption reduction ratio (%)	
	Working stroke	Return stroke
0.5		0.5
		0.3
		0.2
		0.1

Easy piping

The body and one-touch fitting allow 360° rotation. The sealant on the male thread is standardized.

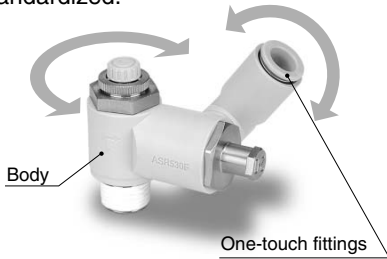

The set pressure can be either fixed or variable.


Fixed set pressure type (Fixed at 0.2 MPa) **Variable set pressure type** (Variable between 0.1 and 0.3 MPa) **Graduated knob**




A knob cap is attached to the variable set pressure type.

Other applications

Jerk prevention in vertical operation of the cylinder

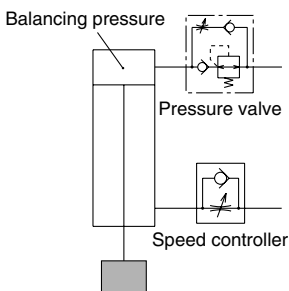

Quick air charge at the end of stroke for press applications

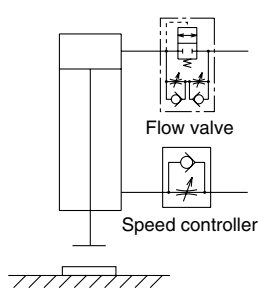

Series Variations

Model		Port size	Applicable tubing O.D. (mm)			
Pressure valve	Flow valve		6	8	10	12
ASR430F-02	ASQ430F-02	R1/4	●	●	●	
ASR530F-02	ASQ530F-02	R1/4	●	●	●	●
ASR530F-03	ASQ530F-03	R3/8	●	●	●	●
ASR630F-03	ASQ630F-03	R3/8			●	●
ASR630F-04	ASQ630F-04	R1/2			●	●

Air Saving Valve Pressure Valve


Flow Valve

Series ASR/Series ASQ

Pressure valve: Series ASR




Regulator with check valve and flow control valve integrated into a single construction

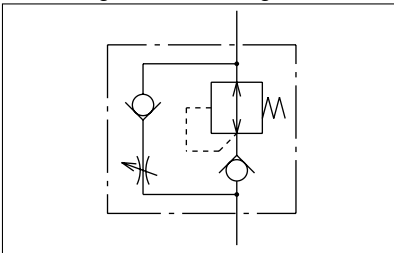

Flow valve: Series ASQ



Pilot valve and two-way flow control valve integrated into a single construction

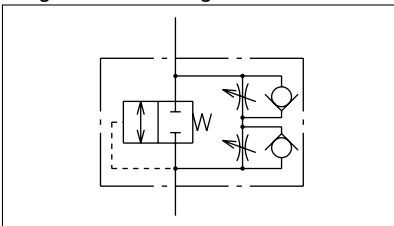

How to Order

ASR 4 3 0 F - 02 - 06 S - F20

- Model**
 - ASR Pressure valve
 - ASQ Flow valve
- Body size**
 - 4 1/4 standard
 - 5 3/8 standard
 - 6 1/2 standard
- Type**
 - 3 Universal

With One-touch fitting
- With seal**
 - Option
 - Nil Variable set pressure type (0.1 to 0.3 MPa)
 - F20 Fixed set pressure type (0.2 MPa)
- Applicable tubing O.D.**
 - 06 6 mm
 - 08 8 mm
 - 10 10 mm
 - 12 12 mm
- Port size**
 - 02 R1/4
 - 03 R3/8
 - 04 R1/2

Model

Model		Port size	Applicable tubing O.D. (mm)			
Pressure valve	Flow valve		6	8	10	12
ASR430F-02	ASQ430F-02	R1/4	●	●	●	
ASR530F-02	ASQ530F-02	R1/4	●	●	●	●
ASR530F-03	ASQ530F-03	R3/8	●	●	●	●
ASR630F-03	ASQ630F-03	R3/8			●	●
ASR630F-04	ASQ630F-04	R1/2			●	●

Specifications

Proof pressure	1.5 MPa	
Maximum operating pressure	1.0 MPa	
Set pressure range	Variable	0.1 to 0.3 MPa
	Fixed (option)	0.2 MPa
Ambient and fluid temperature	-5 to 60°C (with no freezing)	
Number of needle rotations	10 rotations	
Applicable tubing material	Nylon, Soft nylon, Polyurethane	

Effective Area

Pressure Valve: Series ASR


Type	Free flow mm ²	Controlled flow mm ²
ASR430F-02-06S(-F20)	5.4	5.9
ASR430F-02-08S(-F20)	5.9	6.7
ASR430F-02-10S(-F20)	5.9	6.7
ASR530F-02-06S(-F20)	7.3	8.1
ASR530F-02-08S(-F20)	8.9	11.8
ASR530F-02-10S(-F20)	9.2	13.3
ASR530F-02-12S(-F20)	9.5	13.7
ASR530F-03-06S(-F20)	7.3	8.1
ASR530F-03-08S(-F20)	8.9	11.8
ASR530F-03-10S(-F20)	9.2	13.3
ASR530F-03-12S(-F20)	9.5	13.7
ASR630F-03-10S(-F20)	15.3	17.8
ASR630F-03-12S(-F20)	16.0	19.1
ASR630F-04-10S(-F20)	15.3	17.8
ASR630F-04-12S(-F20)	16.0	19.1

Flow Valve: Series ASQ


Type	Meter-out mm ²	Meter-in mm ²
ASQ430F-02-06S(-F20)	4.1	4.9
ASQ430F-02-08S(-F20)	4.6	5.5
ASQ430F-02-10S(-F20)	4.6	5.5
ASQ530F-02-06S(-F20)	6.6	7.8
ASQ530F-02-08S(-F20)	9.2	10.1
ASQ530F-02-10S(-F20)	9.8	10.8
ASQ530F-02-12S(-F20)	10.8	11.6
ASQ530F-03-06S(-F20)	6.6	7.8
ASQ530F-03-08S(-F20)	9.2	10.1
ASQ530F-03-10S(-F20)	9.8	10.8
ASQ530F-03-12S(-F20)	10.8	11.6
ASQ630F-03-10S(-F20)	15.3	17.1
ASQ630F-03-12S(-F20)	16.2	18.0
ASQ630F-04-10S(-F20)	15.3	17.1
ASQ630F-04-12S(-F20)	16.2	18.0

Operating Principle


Working Stroke

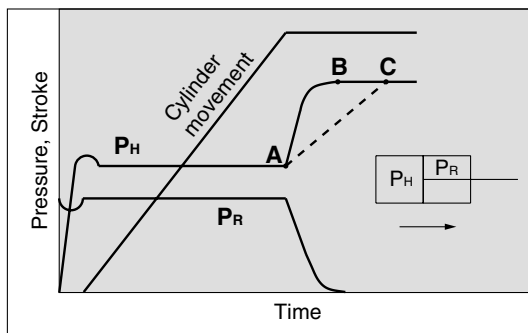


1. The cylinder starts smoothly because jerks are prevented by meter-in control.

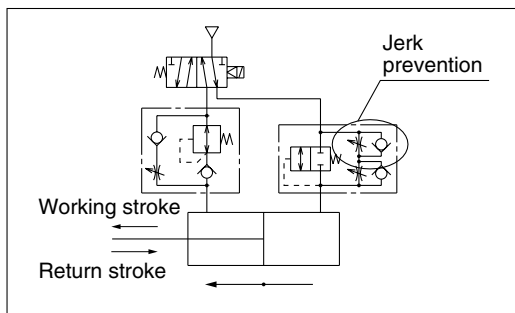


2. When the cylinder reaches the stroke end, the quick air charge by the flow valve rapidly increases the rear side pressure (PH) from A to B. If a speed controller is used instead of the flow valve, charging air will take more time as illustrated by line A-C, causing delay in the pressure rise.

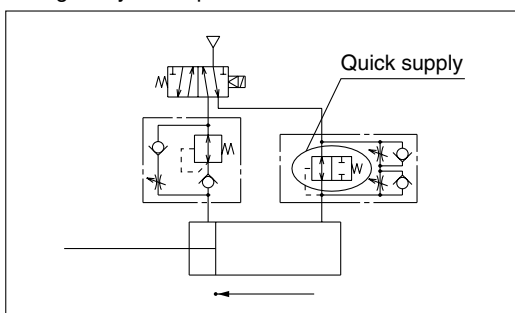


Return Stroke

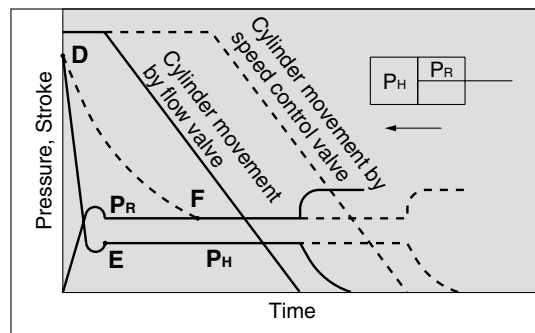

3. To prevent delay due to the pressure gap, air is rapidly exhausted to decrease the pressure from D to E, after which the piston moves at a constant speed. If a speed controller is used instead of the flow valve, exhausting air will take more time as illustrated by line D-F, resulting in longer stop time of the cylinder and a consequent time loss.

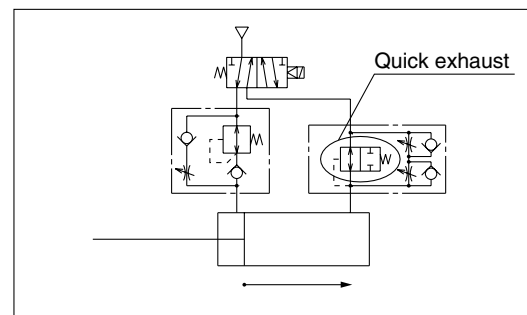

4. The cylinder operates at a low pressure required for a return.

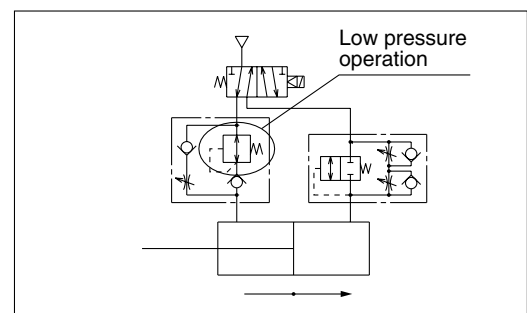

AS

ASP

ASN

AQ

ASV

AK

ASS

ASR

ASF


Series ASR/ASQ

Selection and Adjustment

Install a flow valve on the working side which requires the cylinder output and a pressure valve on the return side. The product cannot be used in cases where the same pressure is necessary for both working and return strokes. In such cases use a speed controller.

Horizontal mounting

Low pressure side: Pressure valve
High pressure side: Flow valve

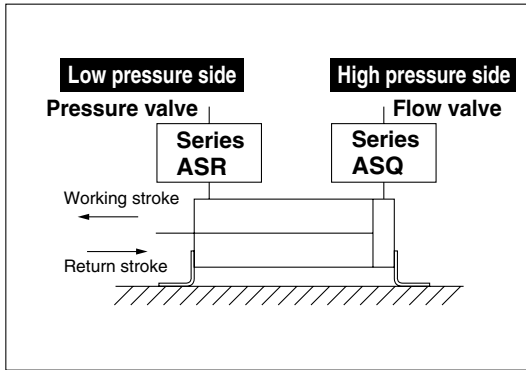


Refer to

Adjustment Procedure 1
for pressure and speed adjustment.

Vertical mounting

Low pressure side: Pressure valve
High pressure side: Flow valve

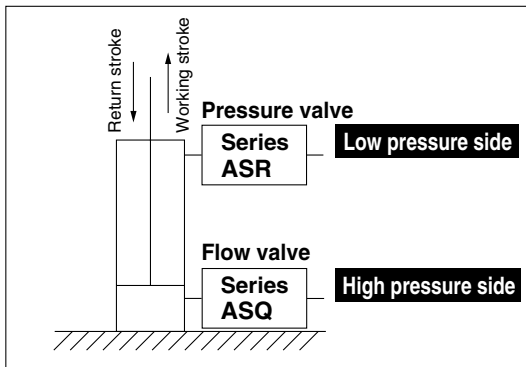

In case the load ratio is 50% or lower
at the set pressure of the flow valve:


Refer to

Adjustment Procedure 1
for pressure and speed adjustment.



If the load ratio at the set pressure of the flow valve exceeds
50%, install a dual speed controller (meter-in and meter-out
control) on the high pressure side.

Low pressure side: Pressure valve
High pressure side: Dual speed controller

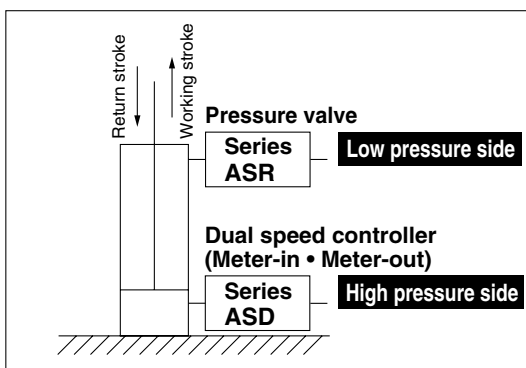


Refer to

Adjustment Procedure 2
for pressure and speed adjustment.

Adjustment Procedure 1

Pressure Adjustment

1. The fixed set pressure type (-F20) does not require adjustment because the pressure is fixed at 0.2 MPa for both the pressure valve and the flow valve.
2. The set pressures of the variable set pressure type pressure valve and flow valve are adjusted with knob (A) and knob (B) respectively. Turn the knob clockwise to increase the pressure and counterclockwise to decrease the pressure.
3. The graduations 1, 2 and 3 correspond to 0.1, 0.2 and 0.3 MPa respectively. Align the bottom end of the knob with the graduated line for adjustment.

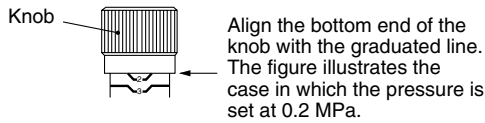

4. Set the same pressure for the pressure valve and the flow valve (0.2 MPa as the recommended value).
5. The inlet side should be supplied with a pressure which is higher than the set pressure by 0.1 MPa or more.
6. Cap the valve after adjustment.


Pressure Valve: Series ASR



Speed Control

1. The cylinder speed is adjusted with knobs (C), (D) and (E). First have all the knobs fully closed and then open them gradually for adjustment. Turn the knob clockwise to close (decrease the speed of the piston rod) and counterclockwise to open (increase the speed of the piston rod).
2. Speed adjustment for the working stroke
The speed is adjusted with the pressure valve and the flow valve.
Open knobs (C) and (E) gradually until the required speed is achieved. Make sure that knobs (C) and (E) are opened by the same number of rotations.
Note 1) If the piston rod jerks, close knob (E) until the smooth operation is achieved.
3. Speed adjustment for return stroke
The speed is adjusted with the flow valve.
Open knob (D) gradually until the required speed is achieved.
4. Be sure to tighten the lock nut after adjustment.

Flow Valve: Series ASQ

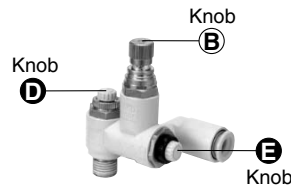

Adjustment Procedure 2

Pressure Adjustment

1. The fixed set pressure type (-F20) does not require adjustment because the pressure is fixed at 0.2 MPa.
2. The pressure at the low pressure side (return stroke side) is adjusted by the pressure valve.
3. The set pressure is adjusted with knob (A). Turn the knob clockwise to increase the pressure and counterclockwise to decrease the pressure.
4. The graduations 1, 2 and 3 correspond to 0.1, 0.2 and 0.3 MPa respectively. Align the bottom end of the knob with the graduated line for adjustment.
5. Keep the set pressure as low as possible in order to achieve good air saving effect.
6. Cap the valve after adjustment.

Pressure Valve: Series ASR



Speed Control

1. The cylinder speed is adjusted with knobs (C), (F) and (G). First have all the knobs fully closed and then open them gradually for adjustment. Turn the knob clockwise to close (decrease the speed of the piston rod) and counterclockwise to open (increase the speed of the piston rod).
2. Speed adjustment for the working stroke
The speed is adjusted with the pressure valve and the dual speed controller.
Open knobs (C) and (G) gradually until the required speed is achieved. Make sure that knobs (C) and (G) are opened by the same number of rotations.
Note 1) If the piston rod jerks, close knob (G) until the smooth operation is achieved.
3. Speed adjustment for return stroke
The speed is adjusted with the dual speed controller.
Open knob (F) gradually until the required speed is achieved.
4. Be sure to tighten the lock nut after adjustment.

Dual Speed Controller: Series ASD



AS

ASP

ASN

AQ

ASV

AK

ASS

ASR


ASF

Series ASR/ASQ


Construction

Pressure Valve: Series ASR


Variable type

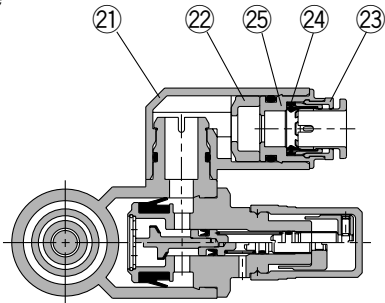


Fixed type

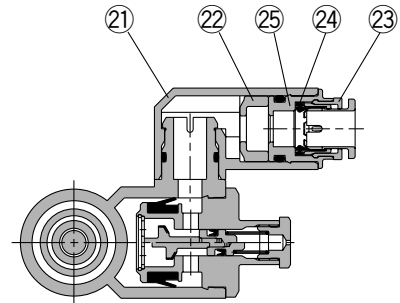


ASR430F-02 type ASR530F-03 type ASR630F-04 type

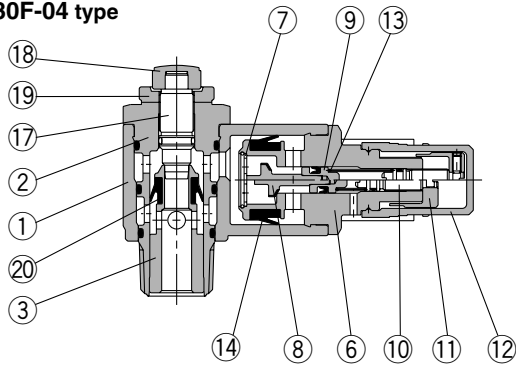


ASR430F-02 type ASR530F-03 type ASR630F-04 type

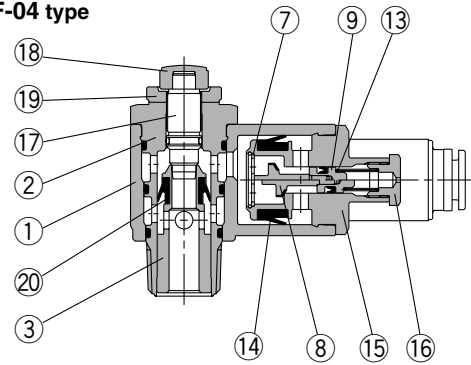

ASR530F-02 type ASR630F-03 type

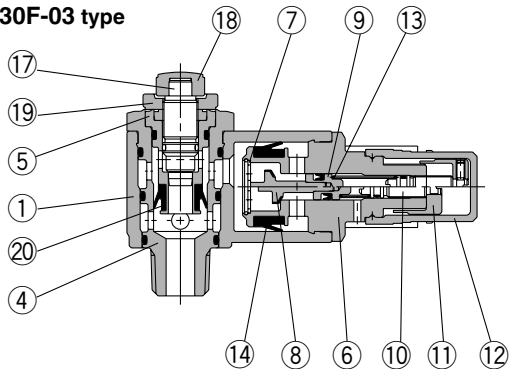

ASR530F-02 type ASR630F-03 type

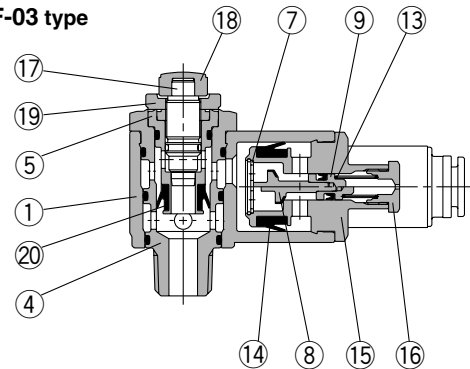

Component Parts

No.	Description	Material	Note
①	Body A	PBT	
②	Body B	Brass	Electroless nickel plated
③	Seat ring	Brass	Electroless nickel plated
④	Body B1	Brass	Electroless nickel plated
⑤	Body B2	Brass	Electroless nickel plated
⑥	Body C	Brass	Electroless nickel plated
⑦	Stopper	Stainless steel	
⑧	Valve	HNBR/Brass	
⑨	Piston	Brass	
⑩	Adjustment screw	Brass	Electroless nickel plated
⑪	Knob	Brass	Electroless nickel plated
⑫	Cap	Polypropylene	
⑬	Adjustment spring	Steel wire	Zinc chromated

No.	Description	Material	Note
⑭	U seal	HNBR	
⑮	Body C	Brass	Electroless nickel plated
⑯	Adjustment plug	Brass	Electroless nickel plated
⑰	Needle	Brass	Electroless nickel plated
⑱	Knob	PBT	
⑲	Lock nut ^{Note 1)}	Steel	Electroless nickel plated
⑳	U seal	HNBR	
㉑	Elbow body	PBT	
㉒	Spacer ^{Note 2)}	PBT	
㉓	Cassette	Stainless steel/POM	
㉔	Seal	NBR	
㉕	Drive body ^{Note 3)}	Brass	Electroless nickel plated


Note 1) Brass is used for the material ASR530F and ASR630F.

Note 2) Not used for $\phi 6$ and $\phi 8$.


Note 3) Not used for $\phi 10$ and $\phi 12$.

Flow Valve: Series ASQ


Variable type

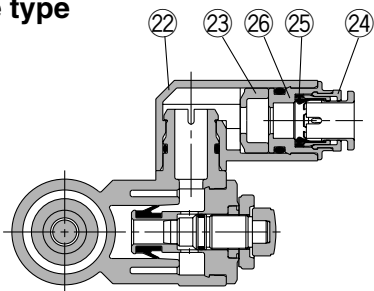


ASQ430F-02 type
ASQ530F-03 type
ASQ630F-04 type

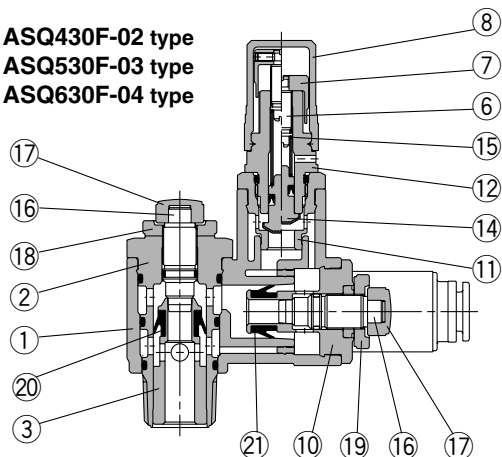


ASQ530F-02 type
ASQ630F-03 type

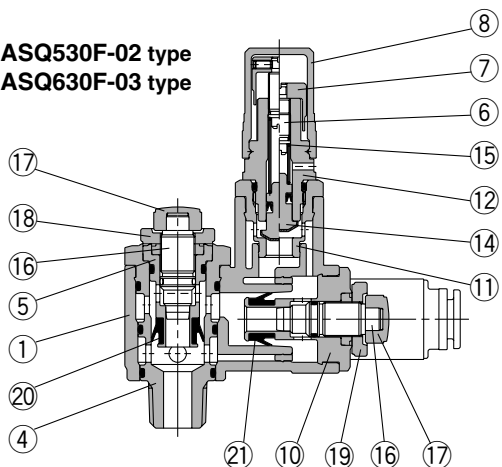


Fixed type

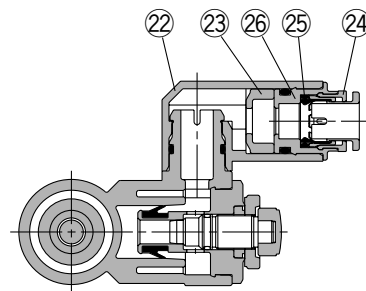

ASQ430F-02 type
ASQ530F-03 type
ASQ630F-04 type

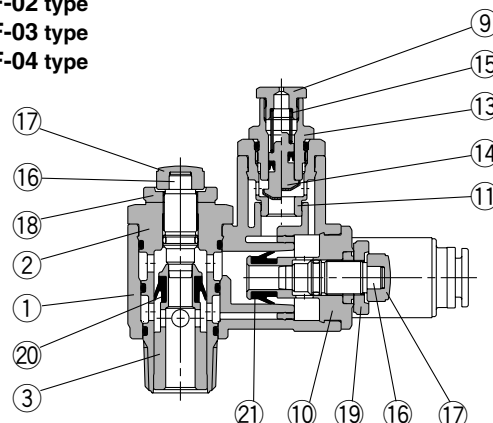

ASQ530F-02 type
ASQ630F-03 type

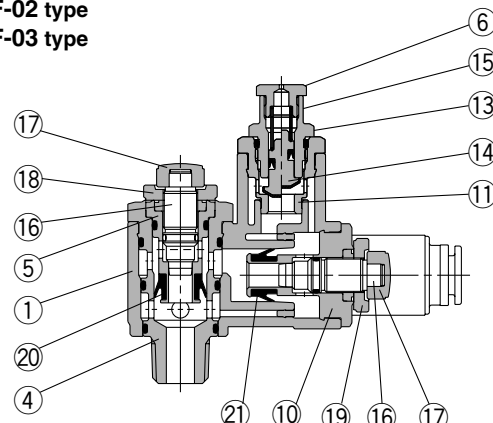

AS

ASP

ASN

AQ

ASV

AK

ASS

ASR

ASF

Component Parts

No.	Description	Material	Note
①	Body A	PBT	
②	Body B	Brass	Electroless nickel plated
③	Seat ring	Brass	Electroless nickel plated
④	Body B1	Brass	Electroless nickel plated
⑤	Body B2	Brass	Electroless nickel plated
⑥	Adjustment screw	Brass	Electroless nickel plated
⑦	Knob	Brass	Electroless nickel plated
⑧	Cap	Polypropylene	
⑨	Adjustment plug	Brass	Electroless nickel plated
⑩	Body C	Brass	Electroless nickel plated
⑪	Body D1	Brass	Electroless nickel plated
⑫	Body D2	Brass	Electroless nickel plated
⑬	Body D3	Brass	Electroless nickel plated

No.	Description	Material	Note
⑭	Piston valve	HNBR/Brass	
⑮	Adjustment spring	Steel wire	Zinc chromated
⑯	Needle	Brass	Electroless nickel plated
⑰	Knob	PBT	
⑱	Lock nut ^{Note 1)}	Steel	Electroless nickel plated
⑲	Lock nut ^{Note 1)}	Steel	Black zinc chromated
⑳	U seal	HNBR	
㉑	U seal	HNBR	
㉒	Elbow body	PBT	
㉓	Spacer ^{Note 2)}	PBT	
㉔	Cassette	Stainless steel/POM	
㉕	Seal	NBR	
㉖	Drive body ^{Note 3)}	Brass	Electroless nickel plated

Note 1) Brass is used for the material ASQ530F and ASQ630F.

Note 2) Not used for $\phi 6$ and $\phi 8$.


Note 3) Not used for $\phi 10$ and $\phi 12$.

Series ASR/ASQ


Flow Characteristics

Pressure Valve: Series ASR (Inlet pressure: 0.5 MPa)


ASR430F

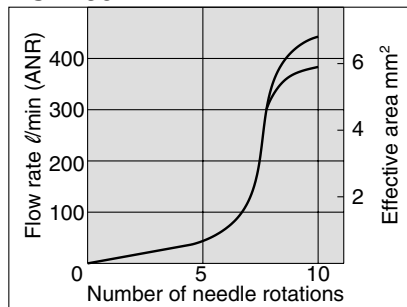

ASR530F

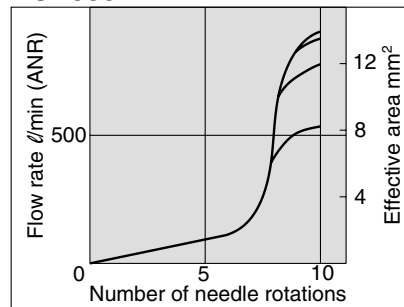


ASR630F

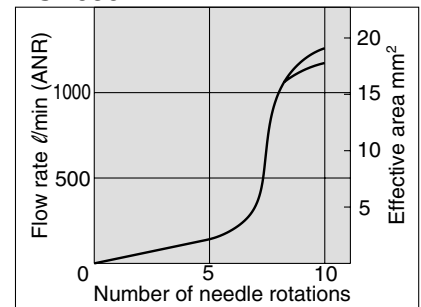


Flow Valve: Series ASQ

Meter-out Type (Inlet pressure: 0.3 MPa)


ASQ430F

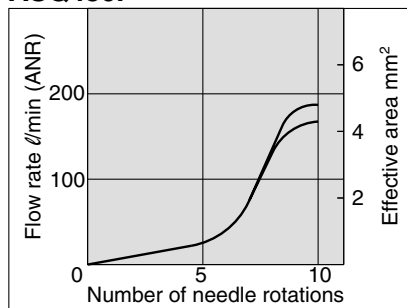

ASQ530F

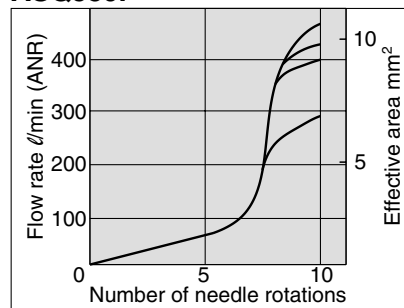


ASQ630F

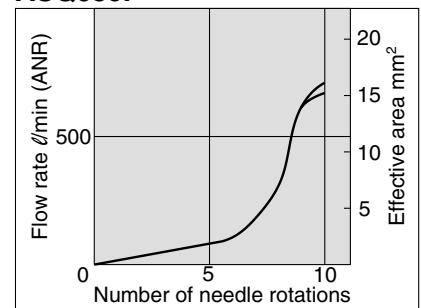


Meter-in Type (Inlet Pressure: 0.5 MPa)


ASQ430F

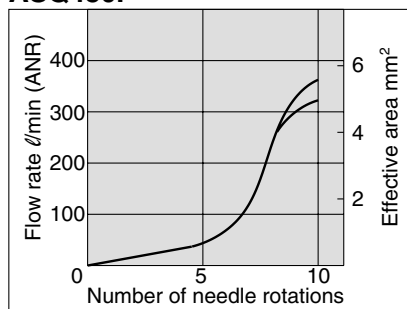

ASQ530F

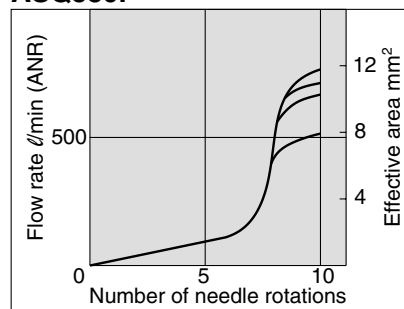


ASQ630F

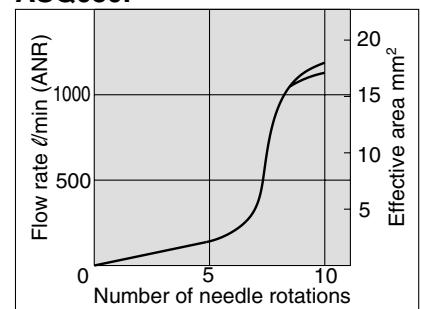


Pressure Characteristics (ASR)

ASR430F, ASR530F

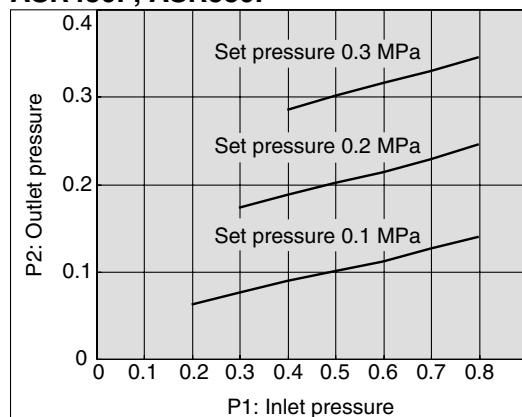

ASR630F

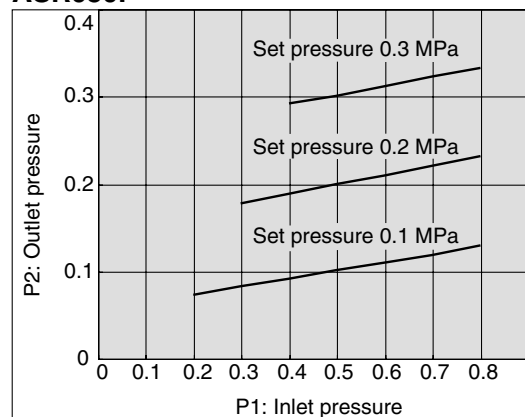





Air Saving Valve Pressure Valve/Flow Valve **Series ASR/ASQ**

Dimensions

Pressure Valve: Series ASR

Variable set pressure type

Fixed set pressure type (-F20)

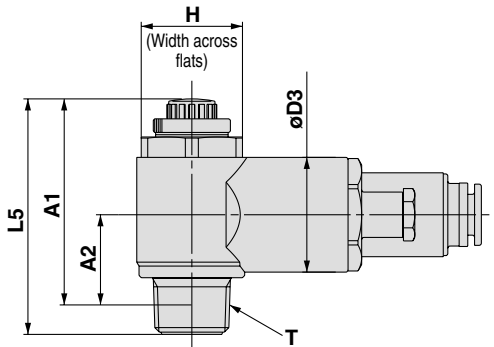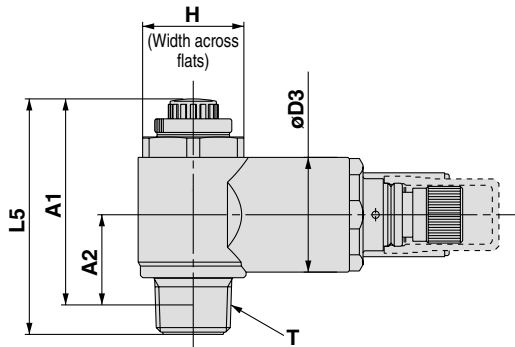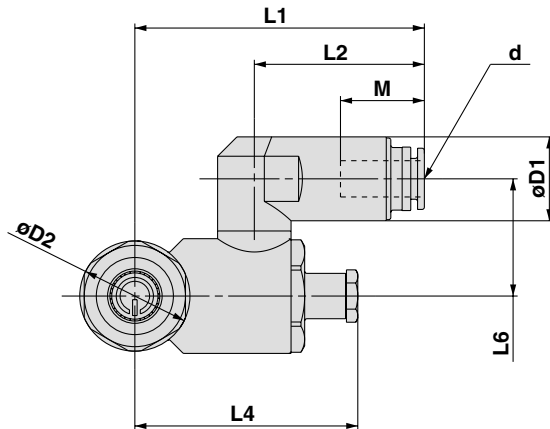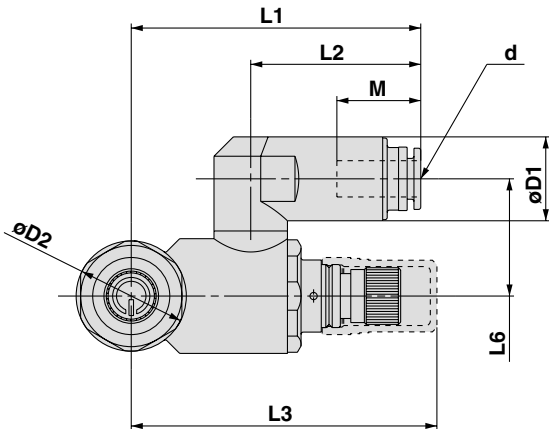

- AS
- ASP
- ASN
- AQ
- ASV
- AK
- ASS
- ASR**
- ASF

Model	Note 1) d	T	H	D1	D2	D3	L1	L2	Note 2) L3	Note 3) L4	L5		L6	A1		A2	M	Weight (g) Note 5)	
											MAX.	MIN.		MAX.	MIN.			*1	*2
ASR430F-02-06S,-F20	6	R1/4	17	18.5	20	21.5	57.7	34.9	63.7	45.6	50.6	45.6	23	44.6	39.6	16.8	17	111	89
ASR430F-02-08S,-F20	8						58.7	35.9									18.5	114	93
ASR430F-02-10S,-F20	10						53.8	31									21	105	82
ASR530F-02-06S,-F20	6	R1/4	21	18.5	24.3	25.3	62.9	36.5	67.3	49.2	55.8	50.8	25.9	49.8	44.8	18.8	17	150	127
ASR530F-02-08S,-F20	8						63.9	37.5									18.5	153	130
ASR530F-02-10S,-F20	10						59	32.6									21	143	120
ASR530F-02-12S,-F20	12						60.8	34.4									20.9	146	122
ASR530F-03-06S,-F20	6	R3/8	21	18.5	24.3	25.3	62.9	36.5	67.3	49.2	57.4	52.4	25.9	51	46	20	17	160	137
ASR530F-03-08S,-F20	8						63.9	37.5									18.5	163	140
ASR530F-03-10S,-F20	10						59	32.6									21	153	130
ASR530F-03-12S,-F20	12						60.8	34.4									20.9	156	133
ASR630F-03-10S,-F20	10	R3/8	25	18.5	29.7	30	62.8	32.6	86.3	65.5	67.6	60.1	27.7	61.2	53.7	20.6	21	237	219
ASR630F-03-12S,-F20	12			20.9			64.6	34.4									22	239	221
ASR630F-04-10S,-F20	10	R1/2	25	18.5	29.7	30	62.8	32.6	86.3	65.5	71.1	63.6	27.7	62.9	55.4	24.1	21	257	239
ASR630F-04-12S,-F20	12			20.9			64.6	34.4									22	259	239


Note 1) "d" indicates the applicable tubing O.D.
 Note 2) L3 is the dimension for the variable set pressure type.
 Note 3) L4 is the dimension for the fixed set pressure type.
 Note 4) A1 and A2 are reference dimensions after installation.
 Note 5) *1 is the weight for the variable set pressure type and *2 is that for the fixed set pressure type.

Series ASR/ASQ




Dimensions

Flow Valve: Series ASQ

Variable set pressure type

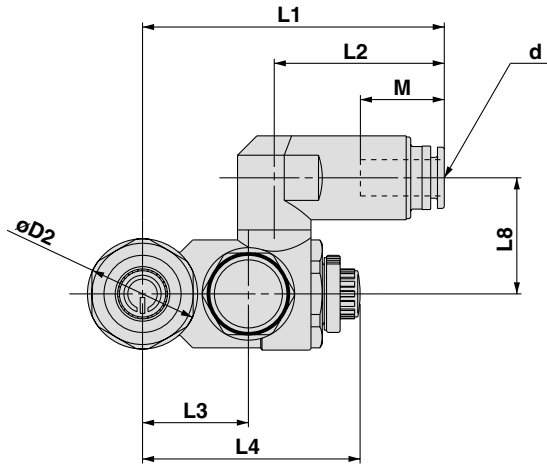

Fixed set pressure type

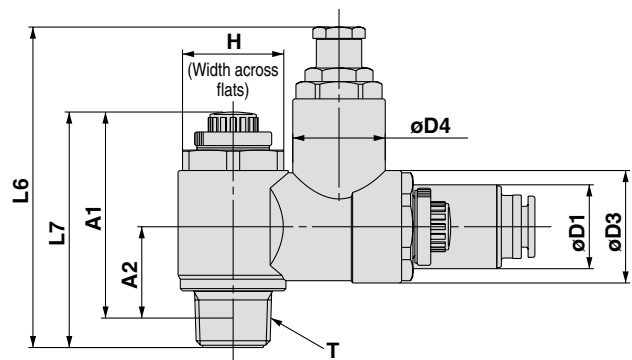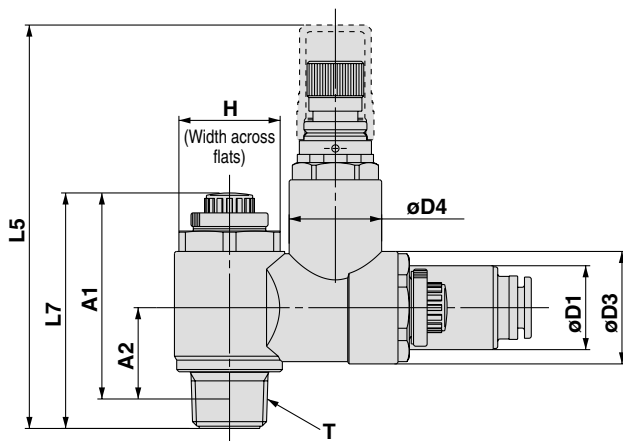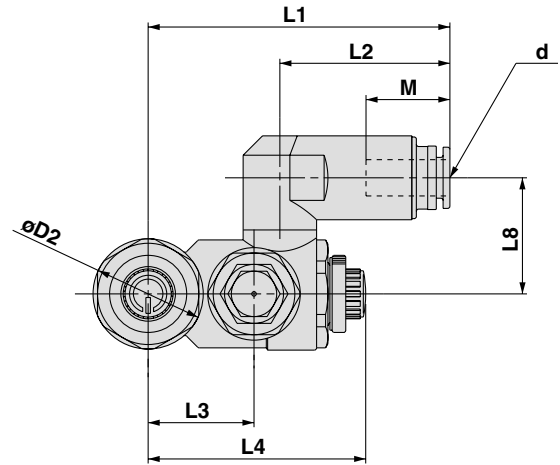

Model	Note 1) d	T	H	D1	D2	D3	D4	L1	L2	L3	L4		Note 2) L5	Note 3) L6	L7		L8	A1 Note 4)		Note 4) A2	M	Weight (g) Note 5)	
											MAX.	MIN.			MAX.	MIN.		MAX.	MIN.			*1	*2
ASQ430F-02-06S,-F20	6							61.6	34.9												17	136	114
ASQ430F-02-08S,-F20	8	R1/4	17	18.5	20	21.5	19.5	62.6	35.9	20.3	49.4	44.4	88.8	68.7	50.6	45.6	23	44.6	39.6	17.9	18.5	139	117
ASQ430F-02-10S,-F20	10							57.7	31												21	130	108
ASQ530F-02-06S,-F20	6							65.6	36.5												17	178	155
ASQ530F-02-08S,-F20	8							66.6	37.5												18.5	181	158
ASQ530F-02-10S,-F20	10	R1/4	21	18.5	24.3	24.8	20.4	61.7	32.6	23.4	53.5	48.5	92.2	72	55.8	50.8	25.6	49.8	44.8	19	21	172	149
ASQ530F-02-12S,-F20	12							63.5	34.4												22	174	151
ASQ530F-03-06S,-F20	6							65.6	36.5												17	188	165
ASQ530F-03-08S,-F20	8							66.6	37.5												18.5	191	168
ASQ530F-03-10S,-F20	10	R3/8	21	18.5	24.3	24.8	20.4	61.7	32.6	23.4	53.5	48.5	93.8	73.6	57.4	52.4	25.6	51	46	20.2	21	182	159
ASQ530F-03-12S,-F20	12							63.5	34.4												22	184	161
ASQ630F-03-10S,-F20	10							74.8	32.6												21	310	292
ASQ630F-03-12S,-F20	12	R3/8	25	18.5	29.7	30.7	30	76.6	34.4	30.8	74.3	66.8	107.9	86.9	67.6	60.1	28	61.2	53.7	20.8	22	312	294
ASQ630F-04-10S,-F20	10							74.8	32.6												21	330	312
ASQ630F-04-12S,-F20	12	R1/2	25	18.5	29.7	30.7	30	76.6	34.4	30.8	74.3	66.8	111.4	90.4	71.1	63.6	28	62.9	55.4	24.1	22	332	314

Note 1) "d" indicates the applicable tubing O.D..

Note 2) L5 is the dimension for the variable set pressure type.

Note 3) L6 is the dimension for the fixed set pressure type.

Note 4) A1 and A2 are reference dimensions after installation.

Note 5) *1 is the weight for the variable set pressure type and *2 is that for the fixed set pressure type.



Air Saving Valve Specific Product Precautions

Be sure to read before handling.

Selection

⚠ Warning

1. Confirm the specifications.

The products appearing in this catalog are designed for use only in compressed air (included vacuum pressure) systems.

Do not use outside the specified ranges of pressure, temperature, etc., as this may cause damage or malfunction. (Refer to specifications.)

Please consult with SMC if fluids other than compressed air (included vacuum pressure) are to be used.

Installation

⚠ Warning

1. Read the instruction manual carefully.

The instruction manual should be carefully read and fully understood before the product is installed and operated. Also, the manual should be kept where it can be easily referred to at any time.

2. Allow space for maintenance.

Allow the space necessary for maintenance and inspections.

3. Tighten screws with the proper tightening torque.

When mounting the product, tighten screws with the recommended torque.

Piping

⚠ Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

3. Wrapping of sealant tape

When screwing together pipes, fittings, etc., be certain that chips from the pipe threads and sealant material do not get inside the piping.

Further, when sealant tape is used, leave 1.5 to 2 thread radii exposed at the end of the threads.

Air Supply

⚠ Warning

1. Types of fluid

This product is designed for use with compressed air. Please contact SMC if a different type of fluid is to be used.

Please contact SMC regarding products for general fluids, to confirm which fluids can be used.

2. A large amount of condensate

Pressurized air containing a large amount of condensate may cause malfunction of the pneumatic equipment. An air dryer or water separator should be installed upstream from the filters.

Air Supply

⚠ Caution

3. Drain flushing management

If the air filter drains are not flushed regularly, the condensate will flow downstream from the drains, resulting in malfunction of the pneumatic equipment.

In cases where drain flushing will be difficult, use of filters with auto drain is recommended.

For detailed information on the quality of compressed air, refer to Best Pneumatics Vol. 14.

4. Types of air

Do not use compressed air containing chemicals, salt, corrosive gases, synthetic oil which includes organic solvents, etc., which may cause damage or faulty operation.

Operating Environment

⚠ Warning

1. Do not use valves where there is direct contact with, or in atmospheres of, corrosive gases, chemicals, salt water, water or steam.

2. Provide shade in locations which receive direct sunlight.

3. Do not operate in locations where vibration or impact occurs.

4. Do not operate in locations where the product is exposed to direct heat radiation from a heat source at a close distance.

Maintenance

⚠ Warning

1. Maintenance should be performed in accordance with the procedures in the instruction manual.

Incorrect handling can cause damage or malfunction of machinery and equipment, etc.

2. Maintenance work

Compressed air can be dangerous if handled improperly. Element replacement and other maintenance etc., should be performed by personnel having sufficient knowledge and experience pertaining to pneumatic equipment, while also adhering to the product specifications.

3. Drain flushing

Condensate should be flushed from the air filter and other drains on a regular basis.

4. Pre-maintenance checks

When the product is to be removed, be sure to shut off the supply pressure, release compressed air in the pipelines and confirm an atmospheric release condition before proceeding.

5. Post-maintenance checks

After mounting, repair or renovation, supply compressed air and perform suitable function and leak tests. If an audible leak is detected or equipment does not operate properly, stop operation and confirm that mounting is correct.

6. Disassembly and modification is prohibited.

Do not disassemble or modify the main unit.

AS

ASP

ASN

AQ

ASV

AK

ASS

ASR

ASF



Air Saving Valve Specific Product Precautions

Be sure to read before handling.

Selection

⚠ Warning

1. The product cannot be used as a stop valve, of which zero leakage is required.

The specifications of the product allow a certain degree of leakage.

2. Confirm whether PTFE can be used.

The sealing compound contains PTFE (tetrafluoroethylene resin) powder. Make sure that it will not cause any problem in operation.

3. Keep the set pressure range of the outlet pressure of the pressure valve within 85% that of the inlet pressure.

If the value exceeds 85%, the pressure may become unstable, affected by the fluctuation of the inlet pressure.

Installation

⚠ Warning

1. Confirm that the lock nut is not loose.

If the lock nut is loose, there may be dangerous changes in actuator speed.

2. The number of opening and closing rotations of the needle valve and adjustment screw should be adjusted within the range of the specifications.

Since it has a pull-out stop mechanism, it will not rotate past the limit. Confirm the number of rotations for the product being used, as excessive turning of the needle will cause damage.

3. To adjust the speed, start with the needle in the completely closed position, and then adjust by opening gradually.

When the needle valve is opening, the actuator may jerk suddenly creating a dangerous situation.

Moreover, the needle valve is closed by turning clockwise, and opened by turning counterclockwise. Therefore, the actuator speed is reduced by turning clockwise and increased by turning counterclockwise.

When the product is used for an actuator operating vertically, the actuator may lurch depending on the load. For the adjustment method, please refer to "Selection and Adjustment" on page 15-16-6 to 15-16-7.

4. For installation and removal, tighten the body B by applying an appropriate wrench to the two opposite sides of the hexagon.

Using other parts may destroy the valve. For alignment after installation, rotate body A manually.

5. Do not use universal type fittings at a position where they are constantly rotated.

The fittings may be damaged.

6. The valve cannot be used if there are fluctuations of the load.

The piston rod may jerk during operation.

7. In case a closed-center solenoid valve is used, switch to the center position only after pressure charge inside the cylinder at the stroke end is completed.

If the pressure charge is insufficient, the piston rod may jerk after restart.

Tightening Torque

⚠ Caution

1. The proper tightening torque for pipe fittings is as shown in the table. As a rule, they should be tightened 2 to 3 turns with a tool after first tightening by hand. Be careful not to cause damage by over-tightening.

Male thread	Proper tightening torque N·m	Width across flats mm	Nominal size of adjustable angle wrench mm
1/4	12 to 14	17	200
3/8	22 to 24	21	200
1/2	28 to 30	25	250

Handling of One-Touch Fittings

⚠ Caution

1. Installation and Removal of Tubing for One-Touch Fittings

1) Installation of tubing

- (1) Using tube cutters TK-1, 2 or 3, take a tube having no flaws on its periphery and cut it off at a right angle. Do not use pinchers, nippers or scissors, etc. The tubing might be cut diagonally or flattened, making installation impossible or causing problems such as disconnection and leakage. Allow extra length for the tubing.
- (2) Hold the tubing and push it in slowly, inserting it securely all the way into the fitting.
- (3) After inserting the tubing, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, problems such as leakage or disconnection of the tubing can occur.


2) Removal of tubing

- (1) Push in the release button sufficiently, pressing the collar evenly around its circumference.
- (2) Pull out the tubing while holding down the release button so that it does not pop out. If the release button is not pressed down sufficiently, there will be increased bite on the tubing and it will become more difficult to pull it out.
- (3) When the removed tubing is to be used again, first cut off the section of the tubing which has been chewed. Using the chewed portion of the tube as it is can cause problems such as leakage or difficulty in removing the tubing.

Operating

⚠ Caution

1. The valve cannot be used if the same pressure is required for both the working and return strokes. The pressure valve and flow valve are designed to save air by the difference in the operating pressure.
2. Install a flow valve on the working side which requires the cylinder output and a pressure valve on the return side. The cylinder may not operate if the valves are installed on the wrong sides.

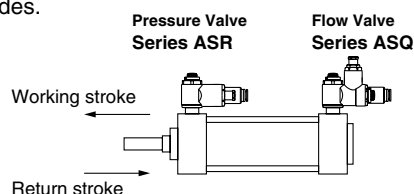

3. If a closed-center, exhaust-center, pressure-center or perfect solenoid valve is used and the solenoid valve is set at the center position, the cylinder may move to the position where the pressure balance and load balance are achieved.