Bernoulli Gripper

Ø20, Ø30, Ø40, Ø60, Ø80







(Existing model: 6.3 N → ZNC80: **65 N**)

10.3 times that of the existing model





ZNC Series



Scan here for

applications

Basic type

(Without vibration suppression cover/stoppers)

When a flat, hard, non-breathable workpiece such as glass is adsorbed, it will be gripped without direct contact.

As the gripper approaches the workpiece, the flow speed of the air flowing between the gripper and the workpiece increases, creating a vacuum and adsorbing the workpiece. In the case of a flat, hard, non-breathable workpiece such as glass, it will be in a non-contact state. The lifting force of the gripper and the weight of the workpiece is balanced around 0.2 to 0.5 mm.



 


With stoppers

The rubber stoppers prevent the workpiece from slipping.

By attaching stoppers, the gripping state changes from non-contact to contact. For flat and hard workpieces such as glass, stoppers are recommended to prevent slipping. When using a soft workpiece such as cloth or paper, it may come into contact with the gripper and generate a vibration noise. In this case, a vibration suppression cover is recommended.

- * Only the rubber parts of the stoppers can be replaced.
- * The stoppers reduce the lifting force.






With vibration suppression cover

Suppresses the vibration that occurs when a soft workpiece such as cloth or paper is adsorbed

The vibration suppression cover suppresses the vibration generated when a soft workpiece, such as cloth or paper, comes into contact with the gripper, and it reduces the generation of sound. Air flows at high speed in the gap between the vibration suppression cover and the workpiece, enabling stable suction transfer.

 - * With the vibration suppression cover, the gripping state changes from non-contact to contact.
- * The vibration suppression cover reduces the lifting force.






Application Examples

For the adsorption of printed circuit boards





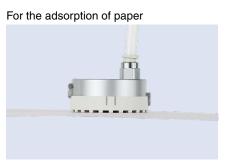







Construction and working principle

By supplying clean air, the clogging of foreign matter can be prevented.


Bernoulli gripper construction

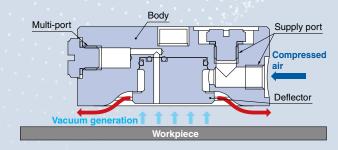


Piping port

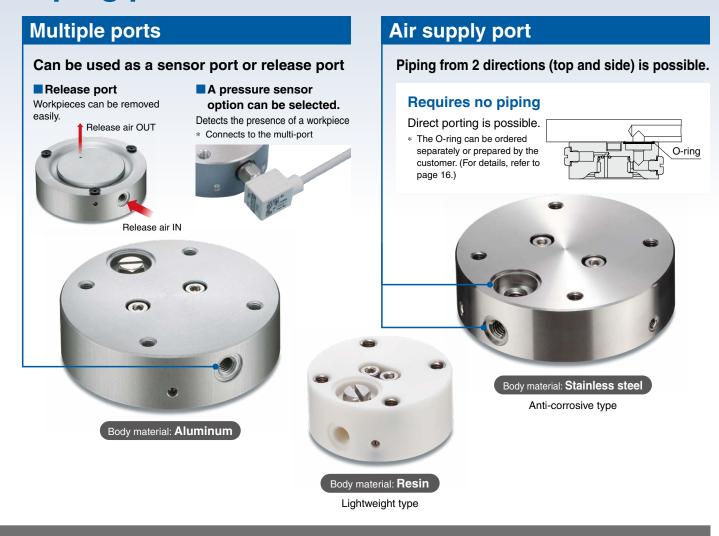



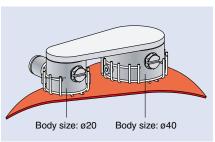

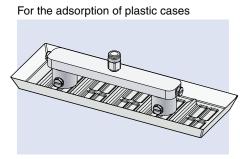

* The body mounting adapter should be provided by the customer.

Series Variations

	Size	Weight [g]	At				
Material			Mills at any are	With vibration suppression cover		Pressure sensor	
			With stoppers	Resin	Stainless steel		
	New 20	12		_	•	With or without	
	30	27		_	•		
Aluminum	40	48		•	•		
	60	110		_	•		
	80	193		_	•		
	New 20	7	NBR (Improved abrasion resistance) Silicone rubber (Heat/ozone resistant)	_	•		
	30	17		_	•		
Resin	40	30		•	_		
•	60	67		_	•		
	80	119		_	•		
•	New 20	34		_	•		
Chairless	30	77		_	•		
Stainless steel	40	139		_	•		
	60	323		_	•		
	80 568			_	•		

CONTENTS



Model Selectionp. 4
How to Order p. 5
Specificationsp. 6
Lifting Forcep. 7
Air Consumptionp. 7
Lifting Force-Distance from the Workpiece
Construction p. 9
Dimensions: Ø 20 p. 11
Dimensions: ø 30 , ø 40 , ø 60 p. 13
Dimensions: Ø 80 p. 14
Specific Product Precautionsp. 15



ZNC Series **Model Selection**

Selection Procedure

[Basic type]

Step 1 Calculate the lifting force.

$$W = M \times g \times t \times \frac{1}{n}$$

W: Required lifting force [N]

M: Workpiece mass [kg]

g: Gravitational acceleration [= 9.8 m/s²]

t : Safety factor (Recommended value: 2 or more)

n: Number of Bernoulli grippers [pcs.]

Selection example

Workpiece mass: M = 0.7 kg

Safety factor: $\mathbf{t} = 2$

Number of Bernoulli grippers: $\mathbf{n} = 2$ pcs.

Required lifting force: W = 0.7 x 9.8 x 2 x $\frac{1}{2}$ = 6.9 N


Basic type

Workpiece: Smooth and non-permeable

Operating pressure: 0.3 MPa

Step 2 Model selection

Lifting Force (ZNC40)

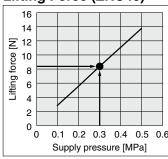

The lifting force in relation to the supply pressure for each size can be confirmed using

For the ZNC40, as the lifting force is 8.4 N when the supply pressure is 0.3 MPa, the lifting force is greater than the required lifting force. Therefore, the product can be used. If the lifting force is less than the required lifting force, considering rethinking the size, number of grippers to be used, or operating pressure.

The lifting force changes depending on the shape, size, surface unevenness, breathability, flexibility, etc., of the workpiece. Use the selection result as a reference value and perform verification and confirmation on the actual machine.

[With stoppers/vibration suppression cover]

Step 1 Calculate the lifting force. -

$$W = M \times g \times t \times \frac{1}{n}$$

W: Required lifting force [N]

M: Workpiece mass [kg]

g: Gravitational acceleration [= 9.8 m/s²]

t : Safety factor (Recommended value: 2 or more)

n: Number of Bernoulli grippers [pcs.]

Selection example

Workpiece mass: M = 0.25 kg

Safety factor: $\mathbf{t} = 2$

Number of Bernoulli grippers: $\mathbf{n} = 1$ pc.

Required lifting force: W = 0.25 x 9.8 x 2 x $\frac{1}{1}$ = 4.9 N


With stoppers

Workpiece: Smooth and non-permeable

Operating pressure: 0.4 MPa

Step 2 Model selection

Lifting Force-Distance from the Workpiece (ZNC40)

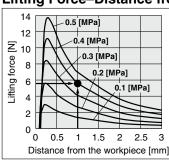

The lifting force in relation to the distance from the workpiece for each size can be confirmed using the graph.

In addition, for the type with stoppers, confirm the lifting force at 1 mm.

(For the type with a vibration suppression cover, confirm the lifting force at 1.5 mm.)

For the ZNC40, as the lifting force is 5.5 N when the supply pressure is 0.4 MPa, the lifting force is greater than the required lifting force. Therefore, the product can be used. If the lifting force is less than the required lifting force, considering rethinking the size, number of grippers to be used, or operating pressure.

 
The lifting force changes depending on the shape, size, surface unevenness, breathability, flexibility, etc., of the workpiece. Use the selection result as a reference value and perform verification and confirmation on the actual machine.



Bernoulli Gripper

ZNC Series

How to Order



Body size

20	ø20 mm
30	ø30 mm
40	ø40 mm
60	ø60 mm
80	ø80 mm

B o	dy	ma	teria

Nil	Aluminum	
Р	Resin	
S Stainless steel		

<u> </u>	Mounting	plate	(Size 20)

Nil	Without mounting plate					
Т	With mounting	Aluminum				
TS	plate	Stainless steel				



- * The mounting plate is shipped together with the product but does not come assembled. Single unit part nos. ⇒ p. 16
- st The piping methods for types with and without a mounting plate are shown in Table 2 below.

4 Attachment

Nil	Basic type (Without attachment)				
PN	With atomore	NBR (Black)			
PS	With stoppers	Silicone rubber (White)			
VP	With vibration	Resin			
vs	suppression cover*1	Stainless steel			



- *1 Refer to the Table 1. With Vibration Suppression Cover for the size and material.
- * Stoppers cannot be retrofitted.
- Vibration suppression cover can be retrofitted to the basic type.
- * The vibration suppression cover cannot be used with the type with stoppers.

5 Pressure sensor


Nil	None	
S	With pressure sensor Part no.: PSE541-M5-X2	

The pressure sensor is shipped together with the product but does not come assembled.

Table 1. With Vibration Suppression Cover


Table 1. With Vibration Suppression Cover							
Symbol	Material	Body size	Body material				
Symbol	ivialeriai	symbol	Aluminum	Resin	Stainless steel		
		20	_	_	_		
		30	_	_	_		
VP	Resin	40	•	•	_		
		60	_	_	_		
		80	_	_	_		
		20	•	•	•		
	Stainless steel	30	•	•	•		
VS		40	•	_	•		
		60	•	•	•		
		80	•	•	•		

Table 2. Size 20 Piping (Refer to page 16 for details on how to mount the product.)

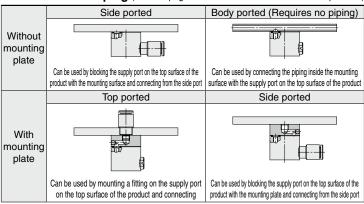


* An O-ring (5.7 x 3.7 x 1) and a plug are shipped together with the product as accessories.

 Attachments/Part Nos.



* Stopper size 1: With 3 stoppers
 Stopper size 2: With 3 stoppers and 3 spring pins
 For replacement instructions ⇒ Refer to page 20.

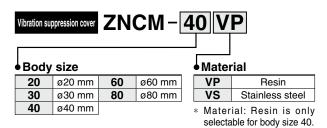

For stainless steel:
 Body sizes ø20mm and ø30 mm: With 2 mounting screws
 Body sizes ø40 mm, ø60 mm, and ø80 mm: With 3 mounting screws



Bernoulli Gripper **ZNC** Series







Specifications


	Model			ZNC30	ZNC40	ZNC60	ZNC80
Lifting force [N]*1, *3			5.2	10.7	13.8	28.3	65
Air consumpti	on [L/min]	(ANR)*2, *3	131	138	182	182	255
Туре					Bernoulli		
Fluid	,				Air		
Operating pres	ssure			0.	1 to 0.5 MF	Pa	
Proof pressure	е				0.75 MPa		
Ambient and	Body material	Aluminum	−5 to 80°C (0 to 50°C)				
operating		Resin	−5 to 40°C (0 to 40°C)				
temperatures*4		Stainless steel	−5 to 80°C (0 to 50°C)				
Grease			Grease-free				
		Aluminum	12	27	48	110	193
Weight [g]*5	Body material	Resin	7	17	30	67	119
		Stainless steel	34	77	139	323	568
Pressure sensor*6		PSE541-M5-X2 (Grease-free) Rated pressure range: 0 to –101 kPa			Pa		


- *1 Lifting force of the basic type at the max. supply pressure Values when a flat, non-breathable workpiece is adsorbed
- *2 Air consumption at the max. supply pressure
 *3 (For the ZNC20, 30, 40, and 60) The values are for when the connection is as follows: Fitting min. hole diameter: ø2.5, Tubing size: ø6 x ø4, Length: 500 mm
 (For the ZNC80) The values are for when the connection is as follows: Fitting min. hole diameter: ø4.5, Tubing size: ø6 x ø4, Length: 500 mm
- *4 No freezing or condensation. The values in () are for models with a pressure sensor.
- *5 **ZNC20**: The weight value is for the basic type without a mounting plate or plug. Add the mounting plate weight if needed. (Aluminum: 6.5 g, Stainless steel: 17.6 g) ZNC30 to 80: The weight value is for the basic type without a plug.
- *6 For pressure sensor details, refer to the PSE540 series in the Web Catalog and the Operation





ZNC Series


Lifting Force

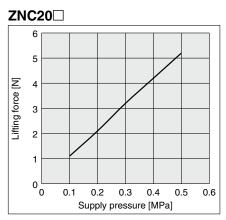

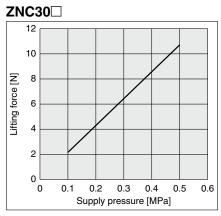


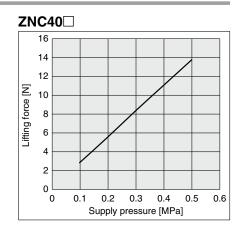


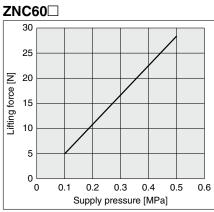


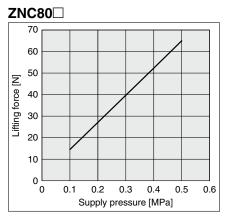



Air Consumption

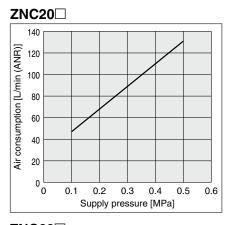

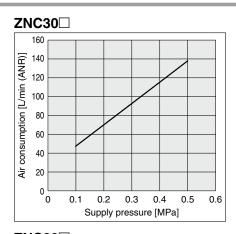


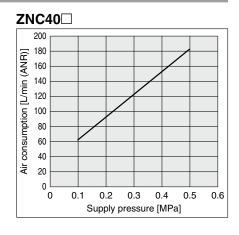


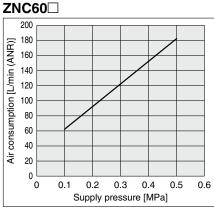


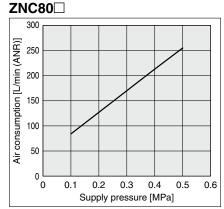



Lifting Force-Distance from the Workpiece

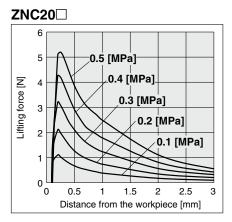

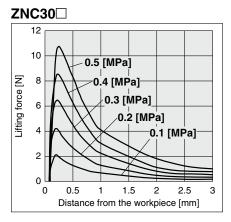

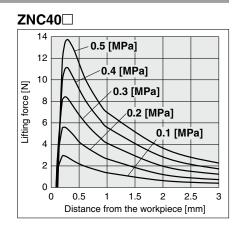

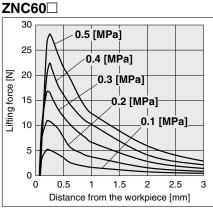

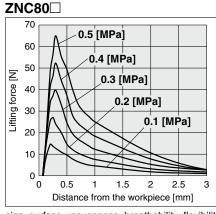


- * The lifting force changes depending on the shape, size, surface unevenness, breathability, flexibility, etc., of the workpiece. Use the values shown in the graphs above as a reference, and confirm using the actual machine.
- * For the lifting force when using stoppers or a vibration suppression cover, use the following values as a guide for the distance from the workpiece. With stoppers: 1 mm, With vibration suppression cover: 1.5 mm

ZNC Series


Construction

ø20


Basic type

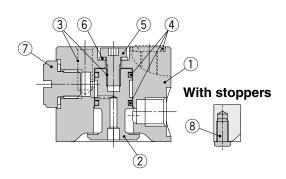


With mounting plate

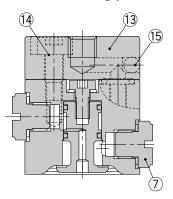

Basic type

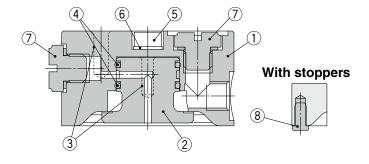


With vibration suppression cover: Resin

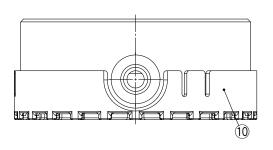


Ø40, Ø60 Ø20, Ø30, Ø40, Ø60, Ø80


Basic type

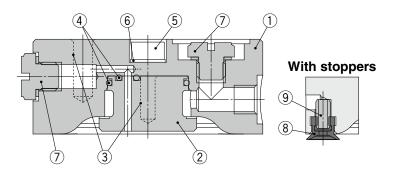

With vibration suppression cover: Stainless steel

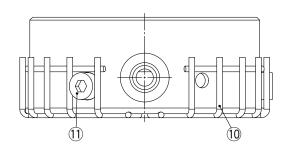

ø**80**

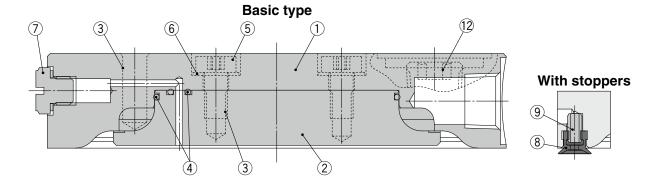

Component Parts

Con	nponent Parts				
No.	Description	Material (Surface treatment)	No	ote	
1	Body	Aluminum alloy (Anodized)	Body material	For aluminum	
'	Вошу	Synthetic resin	Body material	For resin	
		Stainless steel	Body material	For stainless steel	
2	Deflector	Aluminum alloy (Anodized)	Body material	For aluminum	
2	Dellector	Synthetic resin	Body material	For resin	
		Stainless steel	Body material	For stainless steel	
3	Helical insert	Stainless steel	Body material	For resin	
4	O-ring	FKM			
5	Hexagon socket head cap screw	Stainless steel			
6	Flat washer	Stainless steel			
7	Plug	Stainless steel/FKM			
8	Stonnor	NBR			
0	Stopper	Silicone rubber*1, *2	With stoppers		
9	Spring pin	Stainless steel		Refer to page 5 for	
10	Vibration suppression cover	Synthetic resin	With vibration	part numbers.	
10	Vibration suppression cover	Stainless steel	suppression cover		
11	Hexagon socket head cap screw	Stainless steel	suppression cover		
12	Hexagon socket head plug	Stainless steel			
13	Mounting plate	Aluminum alloy (Anodized)	Mounting plate material	For aluminum	
		Stainless steel	Mounting plate material	For stainless steel	
14	Hexagon socket head cap screw	Stainless steel			
15	Steel ball	Stainless steel			


^{*1} Compliant with the FDA's (U.S. Food and Drug Administration) 21CFR§177.2600 dissolution test




^{*2} Compliant with the standards for "Rubber apparatus (excluding baby drinking apparatus) and containers/packaging" (D3) (Partial revision: Japanese Ministry of Health, Labour, and Welfare Notification No. 595, 2012) in Section 3 "Apparatus and Containers/Packaging" of the Food Sanitation Act, Article 18 "Specifications and Standards for Food and Food Additives, etc." (Japanese Ministry of Health and Welfare Notification No. 370, 1959)

Dimensions: Ø20 (Without mounting plate)

Basic type

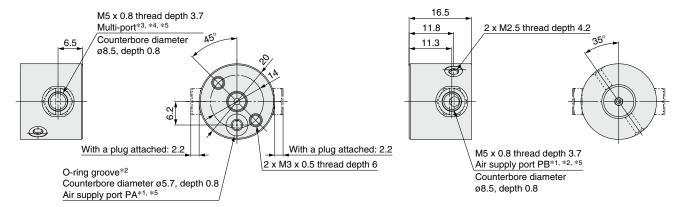


With stoppers

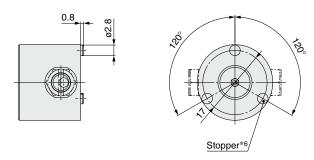

- *1 Supply air to either air supply port PA or PB.
- Plug the unused air supply port.

 *2 An O-ring (5.7 x 3.7 x 1) and a plug for the air supply port PB are included with the product. Be sure to attach the O-ring. For details on how to mount the product, refer to the "Specific Product Precautions."
- *3 Use the multi-port as a sensor mounting or release port.
- *4 Seal the multi-port with a plug when not in use.
- *5 The product is shipped with a plug in the multi-port. After determining which port to use, it is recommended that adhesive be applied to the threads of the air supply port and the multi-port.


With vibration suppression cover

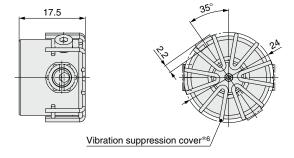


- *6 The vibration suppression cover cannot be used with the type with stoppers.
- * The pressure sensor is shipped together with the product but does not come assembled.
- * For pressure sensor details, refer to the PSE540 series in the Web Catalog and the Operation Manual.

Dimensions: Ø20 (With mounting plate)

Basic type

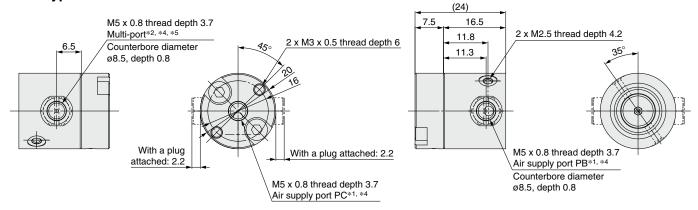


With stoppers

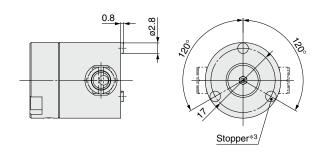

- *1 Be sure to change the mounting plate direction in accordance with whether air supply port PB or PC is used. Also, be sure to mount the product in accordance with the mounting method described in the "Specific Product Precautions."
- *2 Seal the multi-port with a plug when not in use.
- *3 The vibration suppression cover cannot be used with the type with stoppers.
- *4 The product is shipped with a plug in the multi-port. After determining which port to use, it is recommended that adhesive be applied to the threads of the air supply port and the multi-port.

With vibration suppression cover

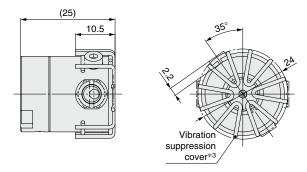


- *5 Use the multi-port as a sensor mounting or release port.
- * The mounting plate comes with 1 O-ring (5.7 x 3.7 x 1), 1 plug for air supply port PB, and 2 mounting screws.
 The mounting plate does not come assembled.
- * For pressure sensor details, refer to the PSE540 series in the Web
- Catalog and the Operation Manual.

 The proseure spread is shipped together with the product but does not
- * The pressure sensor is shipped together with the product but does not come assembled.


ZNC Series

Dimensions: Ø30, Ø40, Ø60


Basic type

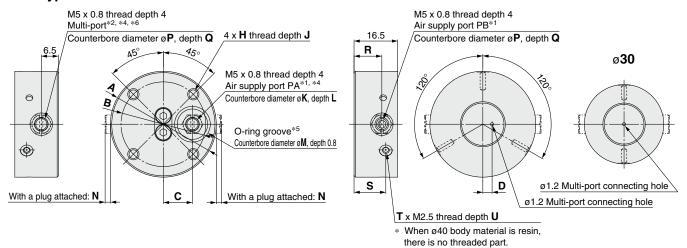

With stoppers

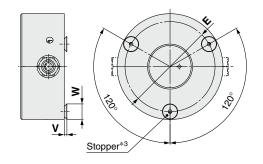

With vibration suppression cover

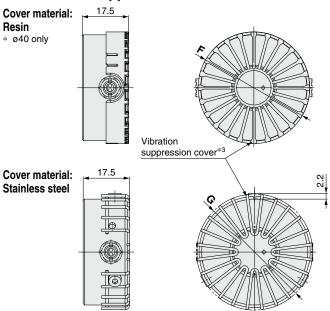

- *1 Supply air to either air supply port PA or PB. Seal the unused ports with plugs.
- *2 Seal the multi-port with a plug when not in use.

S

- *3 The vibration suppression cover cannot be used with the type with stoppers.
- *4 The product is shipped with plugs in the air supply port PA and multiport. After determining which port to use, it is recommended to apply adhesive to the threads of the two air supply ports and the multi-port.
- *5 The O-ring is not included. If needed, it can be ordered separately or prepared by the customer.
- *6 Use the multi-port as a sensor mounting or release port.
- * For pressure sensor details, refer to the PSE540 series in the **Web Catalog** and the Operation Manual.
- * The pressure sensor is shipped together with the product but does not come assembled.


323

Dimer	nsions																							[mm]
	Model)A/-:
	Outer body dia.	Body material	A	В	С	D	E	F	G	Н	J	K	L	М	N	P	Q	R	S	Т	U	V	W	Weight [g]*1
		Nil																						27
	30	Р	30	23	8.7	—	27	—	34	M3 x 0.5	6	8.5	3.3	10.5	2.2	8.5	8.0	11.3	11.8	2	4.2	8.0	2.8	17
		S																						77
ZNC		Nil																						48
	40	P	40	32	11	3.5	34	42.2	44															30
		S								M4 x 0.7	8	11.5	3.6	13.5	2	8.5	1.0	10.5	12	3	5	١,	5.8	139
		Nil								IVI4 X U.7	°	11.5	3.0	13.5	-	0.5	1.0	10.5	12	3	3	'	3.6	110
	60	Р	60	47	21	10	54	—	64															67


^{*1} The stopper, vibration suppression cover, and plug weights are not included.

Dimensions: Ø80


Basic type

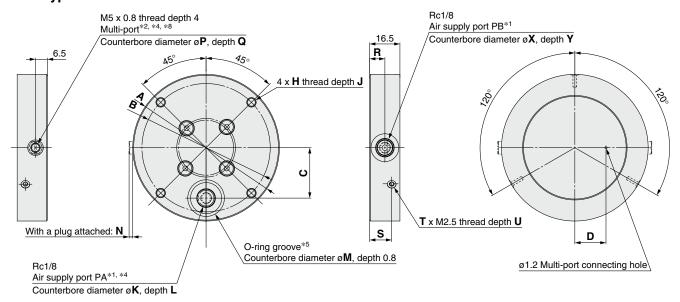

With stoppers

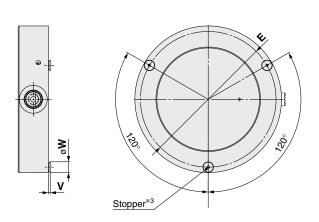

With vibration suppression cover

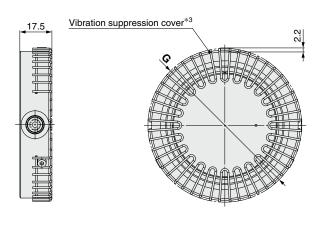

- *1 Supply air to either air supply port PA or PB. Seal the unused ports with plugs.
- *2 Seal the multi-port with a plug when not in use.
- *3 The vibration suppression cover cannot be used with the type with stoppers.
- *4 The product is shipped with plugs in the air supply port PA and multiport. After determining which port to use, it is recommended to apply adhesive to the threads of the two air supply ports and the multi-port.
- *5 The O-ring is not included. If needed, it can be ordered separately or prepared by the customer.
- *6 Use the multi-port as a sensor mounting or release port.
- * For pressure sensor details, refer to the PSE540 series in the Web Catalog and the Operation Manual.
- * The pressure sensor is shipped together with the product but does not come assembled.

L	Jimer	nsions																									[mm]
Ī		Model																									\A/-:
		Outer body dia.	Body material	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q	R	S	T	U	٧	W	X	Υ	Weight [g]*1
	ZNC		Nil																								193
		80	Р	80	70	27.5	17	74	—	84	M5 x 0.8	10	17	2.5	20	2	8.5	1.0	8.3	12	3	5	1	5.8	15.2	1.0	119
			S																								568

^{*1} The stopper, vibration suppression cover, and plug weights are not included.

 


 
Be sure to read this before handling the products.

Design / Selection

 In the Bernoulli gripper, air flows between the suction surface and the workpiece when the workpiece is adsorbed. The workpiece is then gripped without direct contact, making it easy to slide sideways. Consider an external guide, etc., for safety design.

The workpiece may fall due to the influence of external force or inertial force during workpiece transportation. This can cause injury or damage the equipment.





No restraining force in the horizontal direction

 
Restrain horizontal movement with a guide.

2. The product performance of the Bernoulli gripper varies greatly depending on the type of workpiece. Please make your selection carefully.

The lifting force changes depending on the shape, size, surface unevenness, breathability, flexibility, etc., of the workpiece.

3. Select the Bernoulli gripper with sufficient margin for acceleration/deceleration, vibration, shock, and wind pressure during workpiece transportation.

Ensure a safety factor for the allowable lifting force. The recommended value is 2 or more. If necessary, reduce external force and install a wind pressure prevention cover to design a safe application.





4. When adjusting the distance between the Bernoulli gripper and the workpiece, design your application taking the performance characteristics for the distance into consideration.

The lifting force changes depending on the distance from the workpiece.

- 5. When adsorbing food, take sufficient safety measures. Additionally, please contact us in advance.
- 6. The product performance described in the catalog is based on the condition that the workpiece is larger than the product suction surface, and the workpiece is smooth and non-breathable.

  If the workpiece is smaller than the product suction surface, the lifting force may be reduced or it may not be possible to lift. Please check with customer's equipment before use.





Mounting

 Be careful not to drop or hit the product to avoid scratches and dents.

Even slight deformation of the suction surface can decrease product performance.

2. When installing the product, tighten it with an appropriate tightening torque.

If excessive or insufficient tightening torque is applied, sealing failure or loose screws may result. Adhesive is recommended for screws.

Body Mounting

Model	Body material	Screw size	Max. screw-in depth [mm]	Tightening torque [N·m]
ZNC(20, 30)	Aluminum			0.63
ZNC(20, 30)P	Resin	M3 x 0.5	6	0.32
ZNC(20, 30)S	Stainless steel			0.63
ZNC(40, 60)	Aluminum			1.5
ZNC(40, 60)P	Resin	M4 x 0.7	8	0.76
ZNC(40, 60)S	Stainless steel			1.5
ZNC80	Aluminum			3
ZNC80P	Resin	M5 x 0.8	10	1.5
ZNC80S	Stainless steel			3

3. When installing the stainless steel vibration suppression cover, tighten it with the proper tightening torque.

If excessive or insufficient tightening torque is applied, loose screws may result. Adhesive is recommended for screws.

Vibration Suppression Cover Mounting (Stainless steel type only)

Model	Body material	Screw size	Max. screw-in depth [mm]	Tightening torque [N·m]
ZNC(20, 30)	Aluminum			0.36
ZNC(20, 30)P	Resin		4.2	0.18
ZNC(20, 30)S	Stainless steel	M2.5 x 0.45		0.36
ZNC(40, 60, 80)	Aluminum	IVIZ.5 X 0.45		0.36
ZNC(40, 60, 80)P	Resin		5	0.18
ZNC(40, 60, 80)S	Stainless steel			0.36

 When installing tube fitting (supply port), pressure sensor (multi-port), and plugs, tighten them with an appropriate tightening torque. Retighten all bolts regularly.

If excessive or insufficient tightening torque is applied, loose screws may result. Loose bolts may cause air leakage or falling of parts. Retighten them regularly and apply adhesive.

Supply Port

<u> </u>				
Model	Body material	Screw size	Max. screw-in depth [mm]	Tightening torque [N·m]
ZNC20	Aluminum			1 to 1.5
ZNC20P	Resin		3.7	0.5 to 1
ZNC20S	Stainless steel	M5 x 0.8		1 to 1.5
ZNC(30, 40, 60)	Aluminum	O.U X CIVI		1 to 1.5
ZNC(30, 40, 60)P	Resin		4	0.5 to 1
ZNC(30, 40, 60)S	Stainless steel			1 to 1.5
ZNC80	Aluminum			7
ZNC80P	Resin	R1/8	_	3
ZNC80S	Stainless steel			7



Be sure to read this before handling the products.

Mounting


 When mounting the product directly without piping, smooth the mounting surface (Recommended surface roughness: Rz 25 or less) and use an appropriate O-ring. (The O-ring can be ordered separately or prepared by the customer.)

Installation on a mounting surface with a rough surface, scratches or dents, or mounting an unsuitable O-ring may cause sealing failure.

O-rings

Model	Single unit part no.	Size
ZNC30□	ZNCM-30DR	10.5 x 8.5 x 1
ZNC(40, 60)□	ZNCM-40DR	13.5 x 11.5 x 1
ZNC80□	ZNCM-80DR	20 x 18 x 1

 * Sales unit: 10 pcs.



Mounting (Ø20)

<Without Mounting Plate>

When mounting the product, be sure to attach the O-ring included with the product. Also, the mounting surface should be smooth (Recommended surface roughness: Rz 25 or less).

When using the product without piping (body ported), seal the air supply port PB with the attached plug.


When piping from the side, cover the air supply port PA on the top of the product with the mounting surface.


Installation on a mounting surface with a rough surface, scratches or dents, or mounting an unsuitable O-ring may cause sealing failure.

Attached O-ring

Model	Single unit part no.	Size
ZNC20□	ZNCM-20DR	5.7 x 3.7 x 1

  * Sales unit: 10 pcs.






Assembly (Ø20)


The mounting plate is shipped together with the product but does not come assembled. Please follow the assembly instructions below. In addition, be sure to change the mounting plate direction in accordance with the piping method.

Mounting method

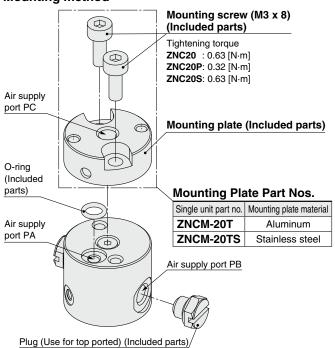


* The drawing above shows the top ported type.

Mounting direction

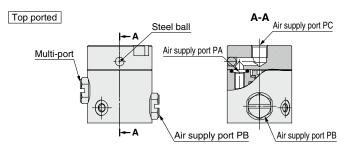

If the steel ball is visible the multi-port is on the left and the air supply port PB is on the right, the air supply port PA and the air supply port PB are interconnected.

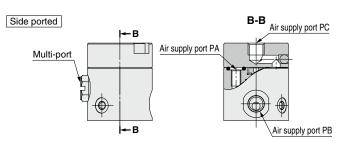

If the steel ball is not visible the multi-port is on the left and the air supply port PB is on the right, the air supply port PA is plugged.





Be sure to read this before handling the products.

Air Supply

1. Use compressed air and control the cleanliness.

Install an air filter, air dryer, or a mist separator. A system with a quality grade of No. C or higher in the air preparation equipment model selection guide of the **Web Catalog** is recommended.

Handling

- Depending on the usage conditions, the workpiece may come into contact with the main body at the moment of suction even when using the basic type. If the product with stoppers or with a vibration suppression cover is used, it will come into contact with the workpiece.
- 2. The NBR stoppers are not suitable for ozone environments, so select silicone rubber.

Deterioration is accelerated in ozone environments such as in clean rooms, around ionizers, or around motor equipment.

- 3. The vibration suppression cover cannot be used with the type with stoppers.
- 4. When a thin and soft workpiece is adsorbed, a high-frequency sound may be generated. This generation of sound is due to the vibration of the workpiece and is not a product abnormality.

 
Sound generation may be reduced by reducing the supply pressure or using the vibration suppression cover.

5. Depending on the type of workpiece and usage conditions, the pressure sensor may not be able to detect the workpiece or the sensor value may differ.

The vacuum pressure changes depending on the type of workpiece and the conditions of use. Be sure to conduct testing with the actual device and workpiece before operation.

6. When arranging the Bernoulli grippers, consider the position of the center of gravity of the workpiece to maintain balance.


If the mounting position of the product and the position of the center of gravity of the workpiece are misaligned, moment may be generated due to the weight of the workpiece, which may cause it to fall.



Handling

7. When installing the vibration suppression cover (synthetic resin), align the center position of the product name plate with the SMC logo on the vibration suppression cover.

 
If the mounting position is not correct, the vibration suppression cover may interfere with the fittings, etc., resulting in the deterioration of product performance and damage to the cover.



8. Stoppers cannot be retrofitted.

Since the body shape of the basic type and the type with stoppers are different, it is not possible to add stoppers to the basic type. If you order the type with stoppers and then remove the stoppers to use it as the basic type, the lifting force will be lower than the basic type.

However, the vibration suppression cover can be retrofitted to the basic type.

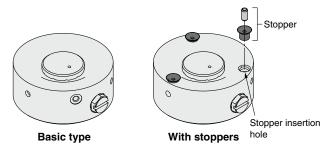

Example) For the **ZNC40** / **ZNC60** / **ZNC80**



Be sure to read this before handling the products.

Handling

9. Use fittings with the following specifications or use the recommended fittings on page 19.

If the fitting dimensions are not compatible with the product, it may interfere with the product body. Therefore, such fittings cannot be used. For example, if the external dimensions of the fitting are too large, the following types of interference may occur. (See the precautions for each type of piping below.)


And if the min. hole diameter of the air supply port fitting is too small, the product may fail to operate properly.

[Top ported] It may interfere with the product mounting bolt.


[Side ported] It may protrude from the product suction surface, interfering with the workpiece.


[Multi-port] It may protrude from the product mounting surface, interfering with the mounting portion.

ø20 (With mounting plate)

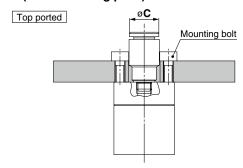


ø30, ø40

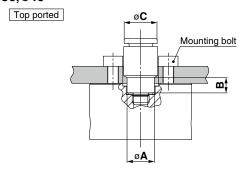

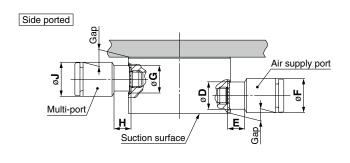

Extension fitting/M-5J usage example

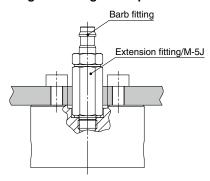

Specifications

	Įmm	<u> </u>
 -	-	

Орсоннос	epecinication:											
Made	ol.		Top ported			Side ported			Min. hole			
Model		Α	В	С	D	E	F	G	Н	J	diameter	
ZNC	20	_	_	10 or less		1 or more	10 or less		1 01 2010	10 or less		
ZNC	30	8.3 or less	3.6 or more	10 or less	8.3 or less	i di illore	10 or less	0.0 0 1000	1 or more	10 or less	2.5 or more	
ZNC(40	, 60)	11.3 or less	3.9 or more	11 or less		1.2 or more	11 or less	8.3 or less	1.2 or more	11		
ZNC	80	16.8 or less	2.7 or more	_	15 or less	1.2 of filore	16.2 or less		1.2 of filore	11 or less	4.5 or more	



Be sure to read this before handling the products.

Handling

Recommended Fitting Part Numbers List


				Тор р	orted		5	Side ported	d	Multi-port		
Series	Variations	Model	ZNC20T	ZNC30	ZNC (40, 60)	ZNC80	ZNC (20, 30)	ZNC (40, 60)	ZNC80	ZNC (20, 30)	ZNC (40, 60, 80)	
		KQ2H04-M5□	•	0	•	_	•	•	_	•	•	
	Mala assurantan	KQ2H06-M5□	<u> </u>	_	•	_	_	•	_	_	•	
	Male connector	KQ2H06-01□S	_	_	_	•	_	_	•	_	_	
0		KQ2H08-01□S	_	_	_	•	_	_	•	_	_	
One-touch fittings		KQ2S04-M5□	•	•	•	_	•	•	_	•	•	
	Hexagon socket head	KQ2S06-M5□	•	•	•	_	•	•	_	•	•	
	male connector	KQ2S06-01□S	_	_	_	•	_	_	•	_	_	
		KQ2S08-01□S	_	_	_	•	_	_	•	_	_	
	Mala assessatas	KQ2H06-U01□	_	_	_	•	_	_	•	_		
Metric size/	Male connector	KQ2H08-U01□	_	_	_	•	_	_	•	_	_	
Uni One-touch fittings/	Hexagon socket head	KQ2S06-U01□	_	_	_	•	_	_	•	_		
Gasket seal	male connector	KQ2S08-U01□		_	_	•	_	_	•	_		
NA . 1	Mala assessatas	KQ2H06-01□P	_	_	_	•	_	_	•	_	_	
Metric size/	Male connector	KQ2H08-01□P	_	_	_	•	_	_	•	_	_	
One-touch fittings/	Hexagon socket head	KQ2S06-01□P		_	_	•	_	_	•	_		
Face seal	male connector	KQ2S08-01□P	_	_	_	•	_	_	•	_	_	
	Male connector	KQB2H04-M5	_	_	•	_	_	•	_	_	•	
		KQB2H06-01S		_	_	•	_	_	•	_		
Matal On a tarrala fittinana		KQB2H08-01S	_	_	_	•	_	_	•	_	_	
Metal One-touch fittings		KQB2S04-M5	•	0	•	_	•	•	_	•	•	
	Hexagon socket head	KQB2S06-01S	_	_	_	•	_	_	•	_	_	
	male connector	KQB2S08-01S	_	_	_	•	_	_	•	_	_	
	Barb fitting for nylon tubing	M-5AN-6	•	0	•	_	•	•	_	•	•	
Miniature fittings	Barb fitting for soft tubing	M-5AU-6	•	0	•	_	•	•	_	•	•	
_	Hose nipple	M-5H-6	•	0	0	_	_	_	_	_	_	
		KQ2H04-M5G1	•	0	•	_	•	•	_	•	•	
		KQ2H06-M5G1	_	_	•	_	_	_	_	_	_	
	Male connector	KQ2H06-01GS1		_	_	•	_	_	•	_		
Stainless steel		KQ2H08-01GS	_	_	_	•	_	_	•	_	_	
One-touch fittings		KQ2S04-M5G1	•	•	•	_	•	•	_	•	•	
_	Hexagon socket head	KQ2S06-M5G1	•	•	•	_	_	_	_	_	_	
	male connector	KQ2S06-01GS1	_	_	_	•	_	_	•	_	_	
		KQ2S08-01GS	_	_	_	•	_	_	•	_	_	
		KQG2H04-M5	_	_	•	_	_	•	_	_	•	
	Male connector	KQG2H06-01S	_	_	_	•	_	_	•	_	_	
One-touch fittings/		KQG2H08-01S	_	_	_	•	_	_	•	_	_	
Stainless steel 316	Harrage and the last	KQG2S04-M5	•	0	•	_	•	•	_	•	•	
	Hexagon socket head	KQG2S06-01S			_	•	_	_	•	_		
	male connector	KQG2S08-01S	_	_	_	•	_	_	•	_	_	
Miniature fittings/	Barb fitting for soft tubing	MS-5AU-6	•	0	•	_	•	•	_	•	•	
Stainless steel 316	Hose nipple	MS-5H-6	i	Ŏ	0	_	_		_			

^{* ●:} Applicable, ○: Extension fitting/M-5J required separately

10. When multiple Bernoulli grippers are to be operated simultaneously, adjust the individual piping pressure of each gripper to the set pressure.

When the pressure is set just before a piping branch, the piping pressure in each pipe will decline, resulting in the product failing to operate properly.

 The catalog values are for when the connection between the pressure gauge and the Bernoulli gripper is as follows: Fitting min. hole diameter: ø2.5 (ø20, ø30, ø40, ø60), Fitting min. hole diameter: ø4.5 (ø80), Tubing size: ø6 x ø4, Length: 500 mm





^{* □:} A (Brass), N (Brass + Electroless nickel plating)



Be sure to read this before handling the products.

Maintenance

1. Do not disassemble or modify the body of the product.

If the disassembled and/or modified, the functions and performance may not be achieved and the product will not be warrantied.

2. In periodical inspections, check the following items and replace the parts if necessary.

 
- a) Scratches, gouges, abrasion, corrosion
- b) Air leakage (Retighten the fitting and plugs.)
- c) Twisting, crushing, and turning of connected tubes
- d) Hardening, deterioration, and softening of connected tubes
- e) Cracks, wear, and deformation of the stopper

3. Replacement of the stopper

If the stopper is not mounted correctly, the product performance may deteriorate and the stopper may be damaged.

ZNC20□/ZNC30□





After removing the old stopper, insert the new stopper into the body.

*1 Apply alcohol for easier insertion.

 
2



Push the stopper in until it reaches the position shown in the diagram.

ZNC40□/ZNC60□/ZNC80□

1



Use a precision screwdriver to push the spring pin out of the side hole in the body and remove the spring pin and stopper.

2



 
Insert the spring pin to a new stopper.

 
3



Insert the new stopper with a spring pin to the body.*1

*1 Apply alcohol for easier insertion.







多SMC

⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution: Caution indicates a hazard with a low level of risk which, If not avoided, could result in minor or moderate injury.

★ Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, ⚠ Danger: Danger indicates a nazaru wiun a nigin level on the first avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power - General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.

- 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
- 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
- 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

⚠ Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or
- replacement parts. Please consult your nearest sales branch. 2. For any failure or damage reported within the warranty period which is clearly our
- responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - 2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

⚠ Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Revision History

- Edition B * Body sizes have been added.
 - * The number of pages has been increased from 12 to 24.

во

↑ Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation

Akihabara UDX 15F.

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362

https://www.smcworld.com

© 2023 SMC Corporation All Rights Reserved

Bernoulli Gripper

Ø20

The ZNC20-X1 Bernoulli gripper is to be discontinued as of February 2023. Consider selecting a ZNC series (body size Ø20) Bernoulli gripper as a substitute. Click here for details.

A type with a mounting plate has been added. For the adsorption transfer of thin cloths, films, printed circuit boards, etc.









With stopper (Suction surface)/ Without mounting plate



With vibration suppression cover (Suction surface)/
Without mounting plate


■ Lifting Force and Air Consumption

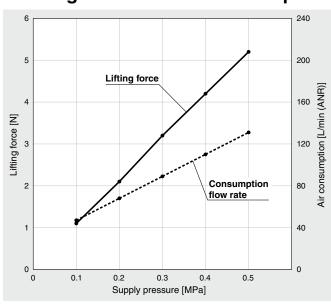

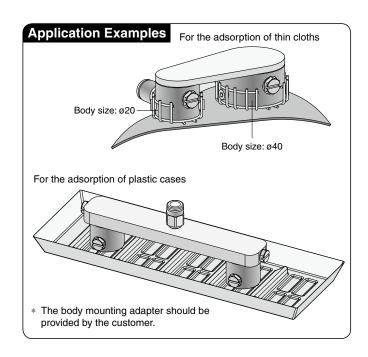

How to Order

 The ZNC20-X1 Bernoulli gripper is to be discontinued as of February 2023. Consider selecting a ZNC series (body size ø20) Bernoulli gripper as a substitute. Click here for details.



U B	oay size
20	ø20 mm

Body material

Nil	Aluminum
Р	Resin
S	Stainless steel

3 Mounting plate

Nil	Without mounting plate		
Т	With mounting plate	Aluminum	
TS	With mounting plate	Stainless steel	

- The mounting plate is shipped together with the product but does not come assembled.
- * The piping methods for types with and without a mounting plate are shown in Table 1.

5 Pressure sensor

Nil	None
S	With pressure sensor Part no.: PSE541-M5-X2

The pressure sensor is shipped together with the product but does not come assembled.

4 Attachment

Nil	Basic type (Without attachment)		
PN	With stopper	NBR (Black)	
PS	vviiii stoppei	Silicone rubber (White)	
VS	With vibration suppression cover	r Stainless steel	

* The stopper and vibration suppression cover cannot be used in combination.

Table (1) Piping

Table (1) Piping			
	Side ported	Body ported (Requires no piping)	
Without mounting plate			
	Can be used by blocking the supply port on the top surface of the product with the mounting surface and connecting from the side port	Can be used by connecting the piping inside the mounting surface with the supply port on the top surface of the product	
	Top ported	Side ported	
With mounting plate			
	Can be used by mounting a fitting on the supply port on the top surface of the product and connecting	Can be used by blocking the supply port on the top surface of the product with the mounting plate and connecting from the side port	

Specifications


Model			ZNC20	
Lifting force [N]*			5.2	
Air consumption	[L/min(ANI	R)]*2, *3	131	
Туре			Bernoulli	
Fluid			Air	
Operating pressu	ure		0.1 to 0.5 MPa	
Proof pressure			0.75 MPa	
Ambient and operating temperatures*4	Body material	Aluminum	−5 to 80°C (0 to 50°C)	
		Resin	−5 to 40°C (0 to 40°C)	
		Stainless steel	−5 to 80°C (0 to 50°C)	
Grease			Grease-free	
	Body material	Aluminum	12	
Weight [g]*5		Resin	7	
		Stainless steel	34	
Pressure sensor*6			PSE541-M5-X2 (Grease-free)	
			Rated pressure range: 0 to -101 kPa	

- *1 Lifting force of the basic type at the max. supply pressure Value when a flat, non-breathable workpiece is adsorbed
- *2 Air consumption at the max. supply pressure
- *3 The values are for when the connection is as follows: Fitting min. hole diameter: ø2.5, Tubing size: ø6 x ø4, Length: 500 mm
- *4 No freezing or condensation. The values in () are for models with a pressure sensor.
- *5 The weight value is for the basic type without a mounting plate or plug. Add the mounting plate weight if needed. (Aluminum: 6.5 g, Stainless steel: 17.6 g)
- *6 For pressure sensor details, refer to the PSE540 series in the Web Catalog and the Operation Manual.




ZNC20-X1


Air Consumption

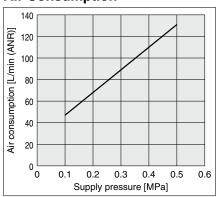

Lifting Force

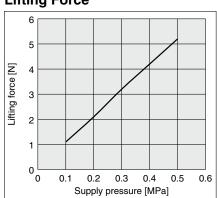


Lifting Force-Distance from the Workpiece

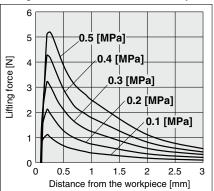


- * The lifting force changes depending on the shape, size, surface unevenness, breathability, flexibility, etc., of the workpiece. Use the values shown in the graphs above as a reference, and confirm using the actual machine.
- * For the lifting force when using a stopper or vibration suppression cover, use the following values as a guide for the distance from the workpiece. With stopper: 1 mm, With vibration suppression cover: 1.5 mm


Dimensions


Basic type/Without mounting plate

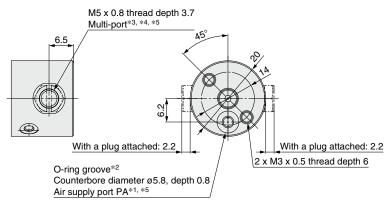

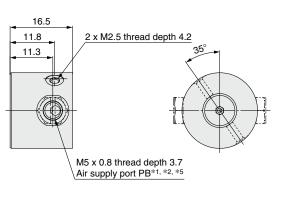


With stopper (Without mounting plate)

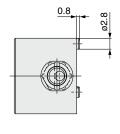

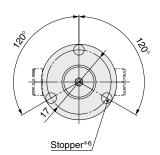

- *1 Supply air to either air supply port PA or PB. Plug the unused air supply port.
- *2 An O-ring (5.8 x 3.8 x 1) and a plug for the air supply port PB are included with the product. Be sure to attach the O-ring. For details on how to mount the product, refer to the "Specific Product Precautions."
- *3 Use the multi-port as a sensor mounting or release port.
- *4 Seal the multi-port with a plug when not in use.
- *5 The product is shipped with a plug in the multi-port. After determining which port to use, it is recommended that adhesive be applied to the threads of the air supply port and the multi-port.

With vibration suppression cover (Without mounting plate)

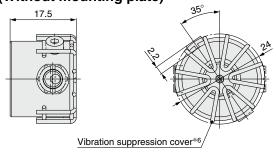


- *6 The stopper and vibration suppression cover cannot be used in combination.
- * The pressure sensor is shipped together with the product but does not come assembled.
- * For pressure sensor details, refer to the PSE540 series in the **Web Catalog** and the Operation Manual.




Dimensions

Basic type/With mounting plate

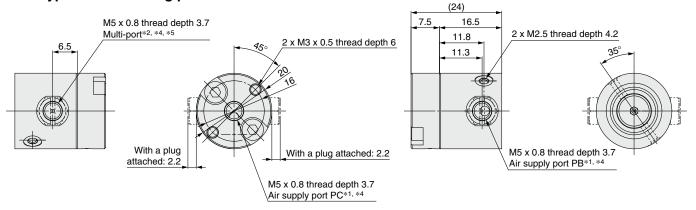


With stopper (With mounting plate)

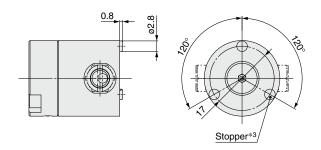

- *1 Be sure to change the mounting plate direction in accordance with whether air supply port PB or PC is used. Also, be sure to mount the product in accordance with the mounting method described in the "Specific Product Precautions."
- *2 Seal the multi-port with a plug when not in use.
- *3 The stopper and cover cannot be used together.
- *4 The product is shipped with a plug in the multi-port. After determining which port to use, it is recommended that adhesive be applied to the threads of the air supply port and the multi-port.

With vibration suppression cover (With mounting plate)

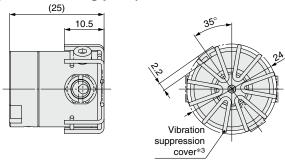

- *5 Use the multi-port as a sensor mounting or release port.
- * The mounting plate comes with 1 O-ring (5.8 x 3.8 x 1), 1 plug for air supply port PB, and 2 mounting screws.
 - The mounting plate does not come assembled.
- For pressure sensor details, refer to the PSE540 series in the Web Catalog and the Operation Manual.
- * The pressure sensor is shipped together with the product but does not come assembled.



ZNC20-X1Specific Product Precautions 1

Be sure to read this before handling the products.

Mounting

<Without Mounting Plate>


When mounting the product, be sure to attach the O-ring included with the product. Also, the mounting surface should be smooth (Recommended surface roughness: Rz 25 or less).

When using the product without piping (body ported), seal the side port with the attached plug.

When piping from the side, cover the supply port on the top of the product with the mounting surface.

Installation on a mounting surface with a rough surface, scratches or dents, or mounting an unsuitable O-ring may cause sealing failure.


Attached O-ring

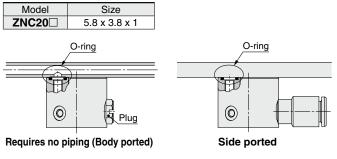

Assembly

The mounting plate is shipped together with the product but does not come assembled. Please follow the assembly instructions below. In addition, be sure to change the mounting plate direction in accordance with the piping method.


Mounting method

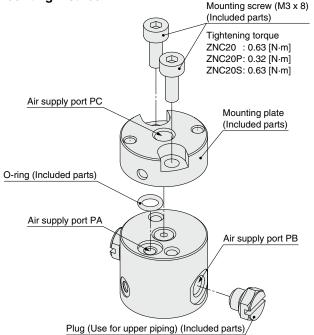


^{*} The drawing above shows the top ported type.

Assembly

Mounting direction

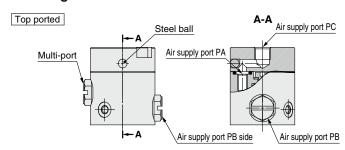

If the steel ball is visible the multi-port is on the left and the air supply port PB is on the right, the air supply port PA and the air supply port PB are interconnected.

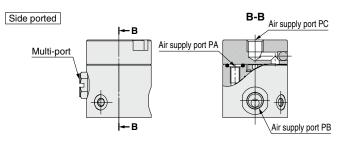

If the steel ball is not visible the multi-port is on the left and the air supply port PB is on the right, the air supply port PA is plugged.







ZNC20-X1Specific Product Precautions 2

Be sure to read this before handling the products.

Handling

Use fittings with the following specifications or recommended part numbers.

[Top ported]

If the fitting external dimensions are too large, it may interfere with the product mounting bolt.

[Side ported]


If the fitting dimensions are not compatible with the product, it may interfere with the product body. Therefore, such fittings cannot be used. If the fitting external dimensions are too large, it may protrude from the product mounting surface, interfering with the mounting portion, or it may protrude from the product suction surface, interfering with the workpiece.


Regardless of the piping direction, if the fitting min. hole diameter is too small, the product may fail to operate properly.

Specifications

[mm]

Model	Top ported	Side ported			Min. hole
Model	Α	В	С	D	dia
ZNC20	10 or less	8.3 or less	1 or more	10 or less	2.5 or more

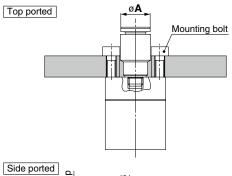

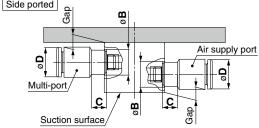

Recommended Part Numbers List

Series	Variations	Model		Side ported
00/163		IVIOUEI	ZNC20T	ZNC20
One-touch	Male connector	KQ2H04-M5□	•	•
fittings	Hexagon socket	KQ2S04-M5□	•	•
iiturigs	head male connector	KQ2S06-M5□	•	•
Metal One-touch fittings	Hexagon socket head male connector	KQB2S04-M5	•	•
Mininkoon	Barb fitting for nylon tubing	M-5AN-6	•	•
Miniature fittings	Barb fitting for soft tubing	M-5AU-6	•	•
	Hose nipple	M-5H-6	•	×
Stainless steel	Male connector	KQ2H04-M5G1	•	•
One-touch fittings	Hexagon socket	KQ2S04-M5G1	•	•
Metal parts: Stainless steel 303	head male connector	KQ2S06-M5G1	•	×
Stainless steel 317 One-touch fittings	Hexagon socket head male connector	KQG2S04-M5	•	•
Miniature fittings/ Stainless steel 316	Barb fitting for soft tubing	MS-5AU-6	•	•
Stairings Steel 310	Hose nipple	MS-5H-6	•	×

●: Applicable, ×: Not applicable



