Miniature Fittings Stainless Steel 316 MS Series



Applicable Tubes: Ø3.2, Ø4, Ø6 Connection Thread: M5, R 1/8

For use in corrosive environments Stainless steel 316

Compact piping space

Tube has a large retaining force. Hose nipple assures easy installation and removal.

Line up various types


Possible for special tubing in the same direction. Accepts many types of plastic tubing

Hose nipple and hose elbow

Accepts nylon, soft nylon, and polyurethane tubing.





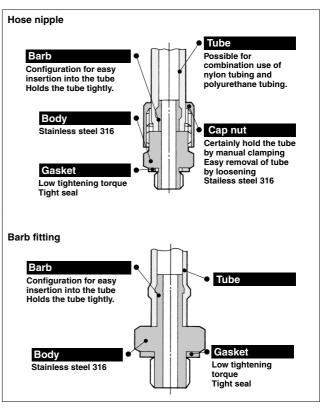

Specifications

Applicable tubing material	Nylon	Soft n	Soft nylon (1)		Super PFA (2)	FEP (3)	Modified PTFE (4)
Applicable tubing O.D./I.D.	ø4/ø2.5 ø6/ø4	ø3.18/ø2.18	ø4/ø2.5 ø6/ø4	ø3.18/ø2 ø4/ø2.5 ø6/ø4	ø6/ø4	ø4/ø2.5 ø6/ø4	ø4/ø2.5 ø6/ø4
Fluid		Air/Water (5					
Maximum operating pressure (at 20°C)	1.5 MPa	1 M	1Pa	0.8 MPa	1 MPa	1.5 MPa	1.4 MPa
Ambient and fluid temperature		−5 to	60°C, Wa	ter: 0 to 40°	C (No freez	ring)	
Connection size		M5, R1/8				M5	
Thread		B0205 (Me 203 (Taper				B0205, Cla etric fine the	

Note 1) Soft nylon tubing is not compatible with water.

Note 2), Note 3), Note 4) Applicable only for hose nipple type.

Note 5) Barb fitting, barb elbow and barb tee are not compatible with water.

Principal Parts Material

	Body	Stainless steel 316
Material	Gasket	PVC, Nylon 66, GF30%



Miniature Fittings **MS** Series

Model

Model	Description	Applicat	ion	Note
MS-5AU-3	Barb fitting for soft tube	For soft nylor	tube	ø3.18/ø2.18 x M5
WS-SAU-S			ane tube	ø3.18/ø2 x M5
MS-5AU-4		For soft nylor		ø4/ø2.5 x M5
MS-5AU-6	P.338	polyurethane	tube	ø6/ø4 x M5
MS-5ALHU-3	Barb elbow for soft tube	For soft nylon tube	ud axis	ø3.18/ø2.18 x M5
WS-SALHU-S		For polyurethane tube	d the stu	ø3.18/ø2 x M5
MS-5ALHU-4		For soft nylon and	3ody rotates at 360 $^\circ$ around the stud axis	ø4/ø2.5 x M5
MS-5ALHU-6	P.338	polyurethane tube	Body rotates	ø6/ø4 x M5
MS-5H-4	Hose nipple			ø4/ø2.5 x M5
WIS-511-4	The state of the s	For nylon, so	ft nylon,	54/52.0 X WIO
MS-5H-6	S-5H-6		tube	ø6/ø4 x M5
	Hose elbow			
MS-5HLH-4		For nylon, s nylon, and polyurethar		ø4/ø2.5 x M5
MS-5HLH-6	5HLH-6		s at d the	ø6/ø4 x M5

Model	Description	Application	Note
MS-5UL	Universal elbow P.338	Body rotates at 30 around the stud axis	
MS-5UT	Universal tee	Body rotates at 30 around the stud axis	
MS-5B	P.339	For reducing Rc 1, female to M5 female	
MS-5P	P.339	Use to plug unus M5 port.	ed
MS-5J	Extention fitting P.339	Solid piece move fitting up from wo piece	
MS-5N	Nipple P.339	Fitting to workpied and fitting to fitting connection	
MS-5UN	Universal nipple	Body rotates at 36 around the stud as	
MS-5ATHU-3	Barb tee for soft tube	For soft six nylon tube	ø3.18/ø2.18 x M5
MS-SATHU-3		polyurethane tube	ø3.18/ø2 x M5
MS-5ATHU-4		polyurethane tube For soft nylon and polyurethane tube gentlement tube polyurethane tube polyurethane tube	ø4/ø2.5 x M5
MS-5ATHU-6	100		ø6/ø4 x M5

KQ2 KQB2 KM KF M H/DL L/LL KC KK KK130 DM KDM KB KR KA KQG2 KG

> MS KKA

KFG2

KP LQ

MQR


T IDK

MS Series

Barb Fitting for Soft Tube: MS-5AU-3/4/6




Model	С	ø D	L	Effective area (mm²)	Weight (g)
MS-5AU-3	4.5	1.6	11.5	1.7	1.4
MS-5AU-4	5	1.8	12	2.1	1.5
MS-5AU-6	7	2.5	14	4.0	1.7

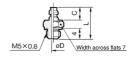

Barb Elbow for Soft Nylon: MS-5ALHU-3/4/6




Model	Α	С	ø D	L	(mm²)	(g)
MS-5ALHU-3	8	4.5	1.6	11.8	1.1	3
MS-5ALHU-4	8.8	5	1.8	12.6	1.4	3.1
MS-5ALHU-6	10.8	7	2.5	14.6	2.4	3.7

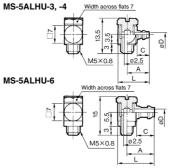

Hose Nipple: MS-5H-4/6




Model	В	ø D	L	E	øF	Effective area (mm²)	Weight (g)
MS-5H-4	7	1.8	15.5	7	6.5	2.1	2.5
MS-5H-6	8	2.5	16.5	8	8.5	4.0	3.7

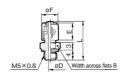

Hose Elbow: MS-5HLH-4/6





1410	odel	^	⊔В	C	ø D	Е	ø F	L	М	N	Effective area (mm²)	(g)
MS-51	HLH-4	12	7	8.5	1.8	7	6.5	15.8	15	5.5	1.4	4.2
MS-51	HLH-6	13.5	8	9.5	2.5	8	8.5	17.8	16	6	2.5	6.2

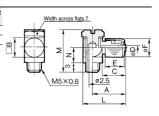

Universal Elbow: MS-5UL



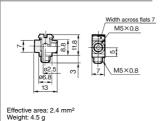


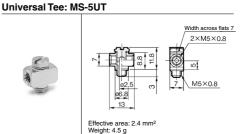

338

Miniature Fittings MS Series

Bushing: MS-5B

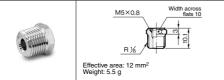


Extension Fitting: MS-5J




Barb Tee for Soft Tube: MS-5ATHU-3/4/6

Model	A 1	A2	С	øD	Effective area (mm²)	Weight (g)
MS-5ATHU-3	8	8.3	4.5	1.6	1.1	3.4
MS-5ATHU-4	8.8	8.8	5	1.8	1.4	3.6
MS-5ATHU-6	10.8	10.8	7	2.5	24	4.2

MS-5ATHU-3, -4

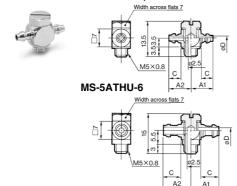

Universal Nipple: MS-5UN

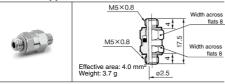

Plug: MS-5P



Nipple: MS-5N



KQ2

KQB2

KS KX

KF

M H/DL L/LL

KC

KK

KK130

DM KDM

KB

KR KA

KQG2

KG KFG2

MS

KKA KP

LQ

MQR

IDK

MS Series

Made to Order Specifications



Please contact SMC for detailed dimensions, specifications and lead times.

1 Gasket Material Modification

Symbol	Specifications				
	Gasket material	: Stainless steel 304, NBR			
X83	Applicable thread	Gasket part no.			
	M5	M-5G2			
	Gasket material: Stainless steel 316, Special FKM				
X112	Applicable thread	Gasket part no.			
	M5	M-5G3			

Suffix "-X83" to the end of part number

Example) MS-5AU-4-X83

Spare Parts

Description	Part no.	Applicable thread	Material	Applicable model
	M-5G1		PVC	
	M-5G2		Stainless steel 304, NBR	_
	M-5G3		Stainless steel 316, Special FKM	_
Gasket	M-5GH	M5	Nylon 66, GF30%	MS-5ALHU-6 MS-5HLH-4 MS-5HLH-6 MS-5ATHU-6
Con put	MS-5-4-P01	_	Stainless steel 316	MS-5H-4 MS-5HL-4 MS-5HLH-4
Cap nut	MS-5-6-P01	_	Stainless steel 316	MS-5H-6 MS-5HL-6 MS-5HLH-6

⚠Precautions

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 13 to 17 for Fittings and

Tubing Precautions.

Tightening of M5 Thread

⚠ Caution

 Tighten by hand, and give it an additional rotation with a wrench.

Please check the number of tightening revolutions using the table below. If tightened excessively, thread portion may be damaged and gasket may be deformed. This will cause air leakage. On the contrary, if tightened insufficiently, thread may loosen causing air leakage.

Thread	Model	Number of tightening rotations
	MS-5AU-□	
	MS-5H-□	
	MS-5P	Approx. 1/6 to 1/4 rotation Note)
	MS-5J	Approx. 1/6 to 1/4 rotation (1885)
	MS-5N	
	MS-5UN	
M5	MS-5ALHU-6	
	MS-5HLH-□	
	MS-5ATHU-6	
	MS-5ALHU-3, 4	Approx. 1/2 rotation Note)
	MS-5UL	
	MS-5UT	
	MS-5ATHU-3, 4	

Note) As a guideline, the tightening torque should be 1 to 1.5 N·m.

Use of Tube with Hose Nipple

- Cut the tube perpendicularly to the tube axis to a little longer length than required (use tube cutter "TK-1", "TK-2" or "TK-3").
- 2. Pass the tube through the cap nut.
- Push the tube until it comes to the end of the barb portion, or it may cause air leakage or hose releasing.
- 4. Tighten the cap nut firmly by hand on the fitting.

Use of Tube with Barb Fitting

- 1. Cut the tube perpendicularly to the tube axis to a little longer length than required (use tube cutter "TK-1", "TK-2" or "TK-3").
- Push the tube until it comes to the end of the barb portion, or it may cause air leakage or release hose.

