
Rodless Cylinder for Vacuum Series CYV



Air cylinder for transfer in vacuum environments (1.3 x 10⁻⁴ Pa)

Simplifies and reduces the size of equipment

Since the cylinder can be installed inside a vacuum chamber, it contributes to simplifying and reducing the size of a transfer system.

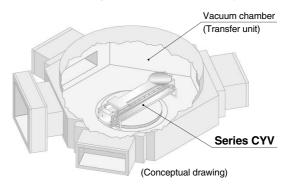



 $\mathsf{MX}\square$

MTS

 $MY \square$

CY□

MG□

CX□

D-

-X

20-

Data

Air cylinder for transfer in vacuum environments (1.3 x 10⁻⁴ Pa)


Rodless Cylinder for Vacuum

Series CYV

ø15, ø32

Low particulate generation

Average particle generation (particles > 0.1 µ) is 0.1 particles/cycle. (Atmospheric conditions)

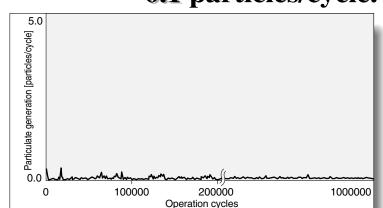

Note 1) This data indicates deterioration with age of the average number of particles per operation under the following test conditions <Test conditions>

- Cylinder: CYV32-100 Workpiece weight: 5 kg
- Average speed: 100 mm/s
- Measurement environment: Operation in the atmosphere after baking at 150°C for 48 hours.

Note 2) This data is considered typical but not guaranteed

Note 3) A particulate generation test has been conducted in a vacuum environment of 10⁻⁵ Pa



Stainless steel

linear quide &

low particulate generation vacuum grease

Particulate generation from the linear guide unit has been reduced with the use of a stainless steel linear guide and low particulate generating vacuum



Reduced initial) particulate generation


Cleaned, assembled. inspected and first-stage packaged in a clean environment

(

0

Carefully designed for low particulate generation, low leakage, and low outgassing. Low leakage

Leakage: 1.3 x 10⁻⁷ Pa·m³/sec or less

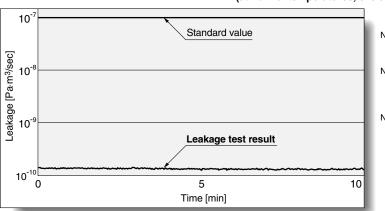

Note 1) The data indicates the leakage measured in a vacuum environment

Note 2) The leakage test result shown is based on a test conducted for 10 minutes after the cylinder was pressurized with helium at 0.1 MPa

Note 3) This data is considered typical but

not guaranteed.



coupled rodless cylinder with no

0

0

air leakage from


moving parts.


Static O-ring seals are used for all the seals between vacuum and atmosphere.

Note 1) The chart above shows the leakage test results based on a test conducted using this cylinder construction.

Note 2) To allow fine stroke adjustments, O-ring seals are installed to separate vacuum and atmosphere. Please consult with SMC if the sealing method needs to be altered

(

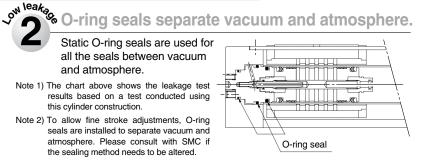

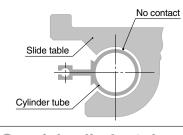

Non-contact construction

There is no particulate generation due

to friction, since the construction does

not allow contact between the cylinder

tube's exterior surface and the slide

table's internal surface.

Special cylinder tube

Long stroke (Max. 700 mm)


A special cylinder tube using extruded aluminum material is employed. No deflection or contact occurs even for long strokes, since the cylinder is rigidly attached to the base and the slide table is independently supported by a linear guide.



Low particulate generation at the stroke ends

0

Particulate generation has been reduced at the stroke ends by reducing impact using a sine cushion and by stopping the stroke using an internal stopper.

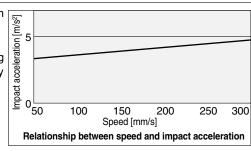

Reduced outgassing



Reduction of outgassing e due to surface treatment

All the external parts (made of aluminum alloy) such as the body and slide table are electroless nickel plated.

Furthermore, external magnets are coated with titanium nitride.

Note 1) Please consult with SMC if other specifications for surface treatmen are required.




Fine adjustments at the end of the stroke

0

0

Fine adjustments between -2 to 0 mm can be made on one side (-4 to 0 mm for both sides).

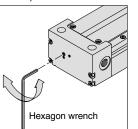

Series CYV

Model Selection 1


Caution on Design (1)

The allowable load mass moment differs depending on the workpiece mounting method, cylinder mounting orientation and piston speed. To determine whether or not the cylinder can be operated, do not allow the sum (ΣΩn) of the load factors (Ωn) for each mass and moment to exceed "1".



Load Mass


Max. load mass (kg)



Moment

Allowable moment

(Static moment/Dynamic moment)

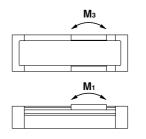



M ₂	
	Mode
	CYV1
	CYV3


		((N·m)
Model	M ₁	M ₂	Мз
CYV15	0.3	0.6	0.3
CYV32	3	4	3

Static Moment

Moment generated by the workpiece weight even when the cylinder is stopped

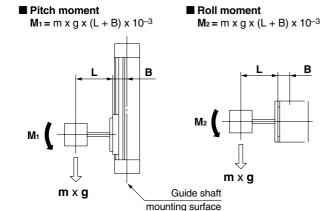



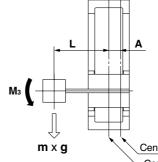

		(mm)
Model	Α	В
CYV15	16.5	25.5
CYV32	27.0	48.0

M₁, ₂, ₃: Moment [N·m] Load mass [kg] m: Distance to load center of gravity [mm]

Distance to guide shaft [mm] A. B Gravitational acceleration [9.8 m/s²] g:

(mm)

В

Α

Central axis of guide Central axis of cylinder

Dynamic Moment Moment generated by the load equivalent to impact at the stroke end

We = $5 \times 10^{-3} \times m \times g \times U$


We: Load equivalent to impact [N] m: Load mass [kg]

- U: Max. speed [mm/s]
- g: Gravitational acceleration [9.8 m/s³]

■ Pitch moment

 $Me_1 = 1/3 \cdot We(L + B) \cdot 10^{-3}$ *


* Average load coefficient

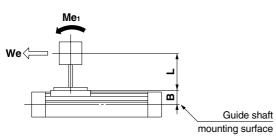

■ Yaw moment

 $Me_3 = 1/3 \cdot We(L + A) \cdot 10^{-3}$ * * Average load coefficient

Model CYV15

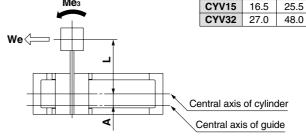

 $MX\square$

MTS

 $MY \square$

CY□

MG□

CX

D-

-X

20-

Data

Series CYV

Model Selection 2

Selection Calculation-

The selection calculation finds the load factors (α n) of the items below, where the total (α n) does not exceed "1".

 $\Sigma \Omega \Omega = \Omega \Omega + \Omega \Omega + \Omega \Omega \Omega \leq 1$

Item	Load factor $lpha$ n	Note
1. Max. load mass	$\alpha_1 = m/m \text{ max}$	Review m . m max is the maximum load mass.
2. Static moment	C 2 = M/M max	Review M1, M2, M3. M max is the allowable moment.
3. Dynamic moment	C(3 = Me/Me max	Review Me1, Me3. Me max is the allowable moment.

Calculation Example


Operating Conditions


Cylinder: CYV32

Mounting: Horizontal wall mounting Maximum speed: U = 300 [mm/s]

Load mass: m = 1 [kg] (excluding mass of the arm section)

L1 = 50 [mm]L2 = 50 [mm]

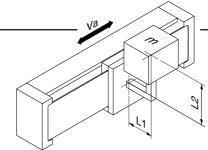

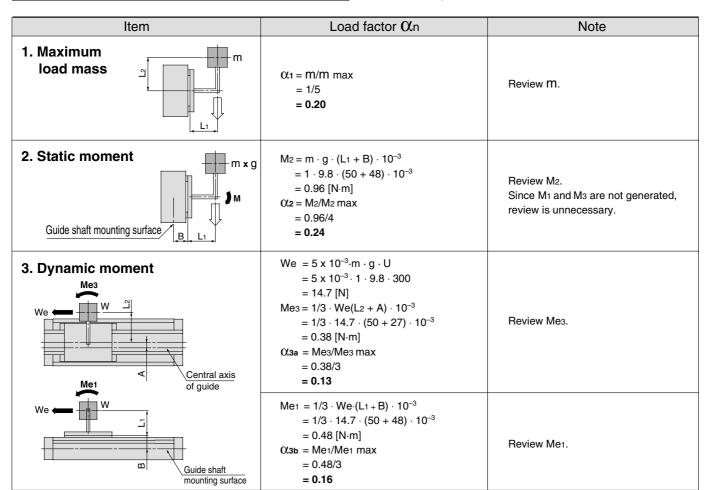

 $\Sigma C(n) = C(1) + C(2) + (C(3)a + C(3)b)$ = 0.20 + 0.24 + (0.13 + 0.16) = 0.73


The result $\Sigma \Omega n = 0.73 \le 1$ allows operation.

Series CYV Model Selection 3

Caution on Design (2)


Table Deflection Note)

Table deflection due to pitch moment load




 $M1 = F \times L$

Table deflection due to roll moment load




 $M_2 = F \times L$

Table deflection due to yaw moment load




Note) Deflection: Displacement of point A when force acts on point F
Point A: Indicates a measurement point


CYV15 (M₁)

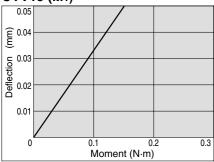


CYV15 (M₂)

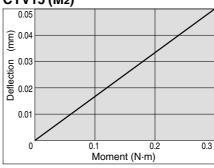


CYV15 (M₃)

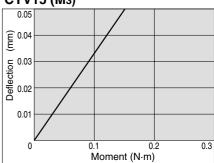


CYV32 (M₁)

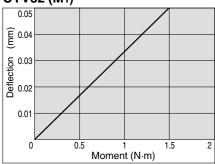

CYV32 (M₂)

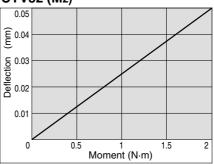

CYV32 (M₃)

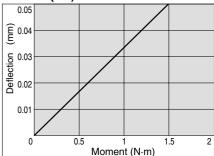

Vertical Operation

When using in vertical operation, prevention of workpiece dropping due to breaking of the magnetic coupling should be considered. The allowable load mass and maximum operating pressure should be as shown in the table below.

Model	Allowable load mass mv (kg)	Maximum operating pressure Pv (MPa)
CYV15	1	0.3
CYV32	5	0.3

Intermediate Stop

The cushion effect (smooth start-up, soft stop) is applied only before the stroke end in the stroke ranges indicated in the table below.

The cushion effect (smooth start-up, soft stop) is not available an intermediate stop or return from an intermediate stop using an external stopper, etc.

When using an intermediate stop with the above information taken into account, implement measures to prevent particulate generation and set the operating pressure to no more than 0.3 MPa.

Cushion Stroke

Model	Stroke (mm)
CYV15	25
CYV32	30

 $MX\square$

MTS

 $MY \square$

CY□

MG□

CX□

D-

-X


20-

Data

Rodless Cylinder for Vacuum Series CYV ø15, ø32

How to Order



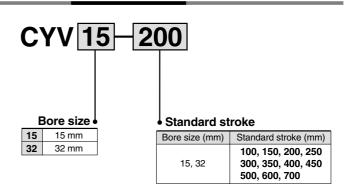

Specifications

D : ()	45		
Bore size (mm)	15	32	
Operating environment pressure	Atmosphere to 1.	3 x 10 ⁻⁴ Pa (ABS)	
Operating atmosphere	Air/Inc	ert gas	
Fluid	Air/Inc	ert gas	
Action	Double	e acting	
Proof pressure	0.5	МРа	
Operating pressure range	0.05 to 0.3 MPa		
Leakage	1.3 x 10 ⁻⁷ Pa·m³/sec or less (at normal temperatures, excluding gas permeation)		
Maximum baking temperature	150°C		
Ambient and fluid temperature	-10 to	o 60°C	
Piston speed	50 to 30	00 mm/s	
Stroke adjustment	-2 to 0 mm on each side (-4 to 0 mm total)		
Cushion	Sine cushion (Air cushion)		
Port size	5/16-24 UNF	7/16-20 UNF	
Lubrication	Vacuum grease for linear guide unit and inside the cylinder tube		

Weight

											(kg)
Model	Standard stroke (mm)										
Model	100	150	200	250	300	350	400	450	500	600	700
CYV15	1.2	1.4	1.6	1.7	1.9	2.0	2.2	2.4	2.5	2.8	3.2
CYV32	4.2	4.6	5.0	5.5	5.9	6.3	6.7	7.1	7.5	8.3	9.1

Magnetic Holding Force

Bore size (mm)	Magnetic holding force (N)
15	59
32	268


Theoretical Output

				(N)
	Piston area	Opera	iting pre (MPa)	ssure
(mm)	n) (mm²)	0.1	0.2	0.3
15	176	18	35	53
32	804	80	161	241



Series CYV

Construction

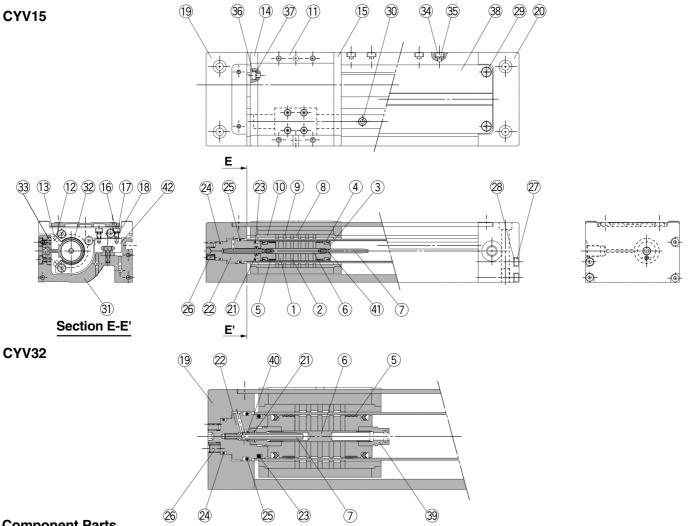

Component Parts

No.	Description	Material	Note
1	Magnet A	Rare earth magnet	Aluminum chromated
2	Piston side yoke	Rolled steel plate	Zinc chromated
3	Piston	Brass/ Aluminum alloy	Electroless nickel plated/Chromated
4	Piston seal	Fluoro rubber	
(5)	Wear ring	Special bearing	
6	Shaft	Stainless steel	
7	Cushion ring	Stainless steel/Brass	-/Electroless nickel plated
8	Magnet B	Rare earth magnet	Titanium nitride coating
9	External slider side yoke	Rolled steel	Electroless nickel plated
10	Hold spacer	Aluminum alloy	Electroless nickel plated
11)	Slide table	Aluminum alloy	Electroless nickel plated
12	Insertion guide plate	Stainless steel	
13	Round head Phillips screw	Stainless steel	
14)	Side plate A	Aluminum alloy	Electroless nickel plated
15	Side plate B	Aluminum alloy	Electroless nickel plated
16	Hexagon socket head cap screw	Stainless steel	
17)	Spring washer	Stainless steel	
18	Flat washer	Stainless steel	
19	Plate A	Aluminum alloy	Electroless nickel plated
20	Plate B	Aluminum alloy	Electroless nickel plated
21)	Cushion seal	Fluoro rubber	


No.	Description	Material	Note
22	Inner cover	Aluminum alloy	Electroless nickel plated
23	Cylinder tube gasket	Fluoro rubber	
24)	O-ring	Fluoro rubber	
25	O-ring	Fluoro rubber	
26	Hexagon socket head set screw	Stainless steel	
27)	Hexagon socket head cap screw	Stainless steel	
28	Flat washer	Stainless steel	
29	Round head Phillips screw	Stainless steel	
30	Hexagon socket head cap screw	Stainless steel	
31)	Base	Aluminum alloy	Electroless nickel plated
32	Cylinder tube	Aluminum alloy	Electroless nickel plated
33	Tube attaching bracket	Aluminum alloy	Electroless nickel plated
34)	Hexagon socket head cap screw	Stainless steel	
35)	Flat washer	Stainless steel	
36	Hexagon socket head cap screw	Stainless steel	
37)	Flat washer	Stainless steel	
38	Top cover	Aluminum alloy	Electroless nickel plated
39	Cushion seal holder	Aluminum alloy	Chromated
40	O-ring	Fluoro rubber	
41)	O-ring	Fluoro rubber	
42	Linear guide	Stainless steel	

Note) In the material and note columns of the Component Parts list above, the first description is for CYV15 and the second description is for CYV32.



Rodless Cylinder for Vacuum Series CYV

Dimensions

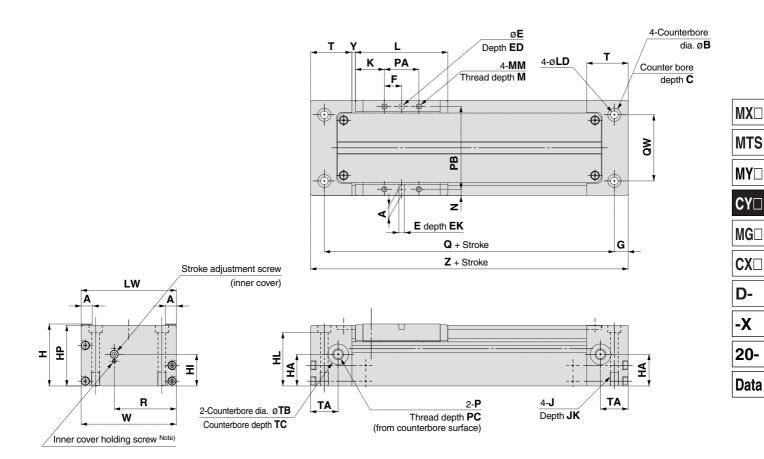

																				(mm)
Model	Α	В	С	E		ED	EK	F	G	Н	HA	HI	HL	HP	,	J	JK	K	L	LD
CYV15	8	10.5	6.4	4 _{H9}	+0.030 0	9.5	4	12.5	10	45	23	23	37.6	44	M6	x 1	10	21	67	5.6
CYV32	12	16	10.2	6 _{H9}	+0.030 0	13	6	25	9	75	39	39	63.3	73.5	M10	x 1.5	12	20	90	9.2
Model	LW	MM		М	N	ı	•	PA	PB	PC	Q	QW	R	Т	TA	TB	TC	W	Υ	Z
CYV15	69	M4 >	∢0.7	6	4.5	5/16-2	4 UNF	25	60	10	112	48	45	30	20	15	0.5	69	2.5	132
CYV32	115	M6	x 1	8	7.5	7/16-2	0 UNF	50	100	12	147	83	79.5	34	22.5	22	0.5	115	3.5	165

Note) Refer to "Cushion Effect (Sine Cushion) and Stroke Adjustment" under Specific Product Precautions on page 8-18-11.

Series CYV Specific Product Precautions 1 Be sure to read before handing.

Handling

⚠ Caution

- Open the inner package of the double packaged clean series product inside a clean room or other clean environment.
- 2. Do not install a cylinder with bare hands. Outgassing characteristics can be degraded.
- Perform parts replacement and disassembly work inside the chamber after exhausting compressed air in the piping to the outside of the clean room.

Mounting

⚠Caution

 Take care to avoid striking the cylinder tube with other objects or handling it in a way that could cause deformation.

The cylinder tube and slider units have a non-contact construction. For this reason, even a slight deformation or slippage of position can cause malfunction and loss of durability, as well as a danger of degrading particulate generation characteristics.

- Do not scratch or gouge the linear guide by striking it with other objects.
- 3. Since the slide table is supported by precision bearings, do not apply strong impacts or excessive moment when mounting workpieces.
- 4. The cylinder can be operated by directly applying a load within the allowable range. However, careful alignment is necessary when connecting to a load with an external guide mechanism.

Since displacement of the alignment increases as the stroke becomes longer, consider a connection method that can absorb the displacement and does not cause interference at any point within the stroke. Also, operate with due consideration of measures against particulate generation.

5. Be sure to operate the cylinder with the plates on both sides secured.

Avoid applications in which the slide table or only one plate is secured.

Do not use until you verify that the equipment can be operated properly.

After mounting or repair, connect the air supply and electric power, and then confirm proper mounting by performing appropriate function and leakage tests.

7. Instruction manual

Mount and operate the product after thoroughly reading the manual and understanding its contents. Also, store it where it can be referred at any time.

Operation

⚠Caution

1. The maximum operating pressure for the vacuum rodless cylinder is 0.3 MPa.

If the maximum operating pressure of 0.3 MPa for the vacuum rodless cylinder is exceeded, the magnetic coupling can be broken, causing a danger of malfunction or degradation of particulate generation characteristics, etc.

Operation

△Caution

When used for vertical operation, take precautions against possible dropping due to separation of the magnetic coupling.

When used for vertical operation, use caution as there is a possibility of dropping due to separation of the magnetic coupling if a load (pressure) greater than the allowable value is applied.

3. Do not operate with the magnetic coupling out of position.

If the magnetic coupling is out of position, push the external slider (or the piston slider by using air pressure) back to the proper position at the stroke end. (When pushing the external slider, do not push it with bare hands.)

4. Do not apply lubricant, as this is a non-lube product.

The interior of the cylinder is lubricated at the factory, and lubrication with turbine oil, etc., will not satisfy the product's specifications.

5. Never reapply lubricant.

Never reapply lubricant, as this may cause a degradation of particulate generation or operation characteristics.

6. Use the cylinder in inert gas environments.

Corrosive gases may cause corrosion of a cylinder and loss of durability.

7. Be sure to use the cylinder in pressure environments from atmosphere to 1.3 x 10⁻⁴ Pa (ABS).

If used in pressure environments below these conditions, grease applied to the guide unit will evaporate excessively and may cause environmental contamination and loss of durability.

8. Be sure to set the baking temperature to 150°C or less.

If a higher temperature is used, the grease will evaporate excessively and may cause environmental contamination and loss of durability.

Positioning of a cylinder should be performed using an optical sensor from outside the chamber.


A positioning sensor cannot be mounted on the cylinder.

Fitting

⚠ Caution

1. A fitting with an O-ring is used for a high vacuum rodless cylinder.

Use a fitting that conforms to the dimensions below, and install it so that there is no air leakage.



2. Air blow and clean fittings and piping materials completely with clean air to remove oil and impurities, etc., before piping.



\triangle

Series CYV

Specific Product Precautions 2

Be sure to read before handing.

Speed Adjustment

⚠ Caution

- 1. A speed controller for clean room use is recommended for speed adjustment.
- 2. Install the speed controller outside the chamber.
- In case of vertical mounting, a system with a regulated supply circuit installed on the down side is recommended. (This is effective against delays at the start of upward movement and for conservation of air.)

Cushion Effect (Sine Cushion) and Stroke Adjustment

⚠ Caution

1. A sine cushion (smooth start-up, soft stop) function is included in the standard specifications.

Due to the nature of a sine cushion, adjustment of the cushion effect is not possible. There is no cushion needle adjustment as in the case of conventional cushion mechanisms.

2. The stroke adjustment is a mechanism to adapt the slide table's stroke end position to a mechanical stopper on other equipment, etc.


(Adjustment range: Total of both sides -4 to 0 mm)

To ensure safety, perform adjustment after shutting off the drive air, releasing the residual pressure and implementing drop prevention measures, etc.

- 1) Loosen the inner cover holding screw with a hexagon wrench, etc.
- 2) To match the position with a mechanical stopper on other equipment, etc., rotate the stroke adjustment screw (inner cover) to the left or right with a hexagon wrench to move the inner cover back and forth.
- 3) The maximum adjustment on one side is -2 to 0 mm. A total adjustment of approximately -4 to 0 mm is possible using both sides.
- 4) After completing the stroke adjustment, tighten the inner cover holding screw with a hexagon wrench, etc.

Inner Cover Holding Screw Tightening Torques [N·m]

Model	Screw size	Tightening torque				
CYV15	M3 x 0.5	0.3				
CYV32	M6 x 1	2.45				

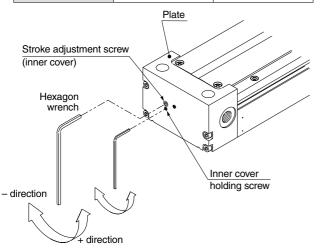

Maintenance

⚠ Caution

 Never disassemble the cylinder tube or linear guide, etc.

If disassembled, the slide table may touch the outside surface of the cylinder tube resulting in a degradation of particulate generation characteristics.


- 2. Please consult with SMC when replacing seals and bearings (wear rings).
- 3. For repair of a cylinder inadvertently exposed to a corrosive gas, please consult with SMC after clarifying the name of the corrosive gas.

Particulate Generation Characteristics

⚠ Caution

1. In order to maintain the particulate generation grade, use operation of 1 million cycles or travel distance of about 200 km as a guide. (Table (1) below)

If operation is continued beyond the recommended values, lubrication failure of the linear guide and a degradation of particulate generation characteristics may occur.

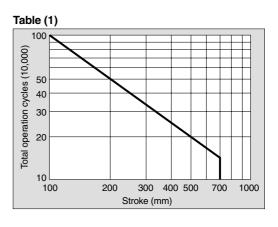

MX□

MTS

MY

CY

MG□

CX□

D-

-X

20-

20-

Data