
5 Port Solenoid Valve



Power consumption is reduced by power saving circuit.

Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 40 ms at 24 VDC.) Refer to electrical power waveform as shown below.

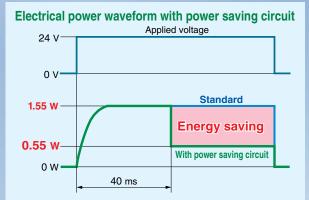

Built-in full-wave rectifier (AC)

- Noise is considerably reduced by changing it to DC mode with a full-wave rectifier.
- **Reduced apparent power** Conventional: 5.6 vA \rightarrow **1.55** vA


Built-in strainer in the pilot valve

Unexpected troubles due to foreign matter can be prevented. Note) Be sure to mount an air filter on the inlet side.

Strainer

Π

Rubber material: HNBR Ozone-resistant specification The pilot valve poppet is made of FKM






Series VF1000/3000/5000



Model Selection by Operating Conditions ① Single Unit

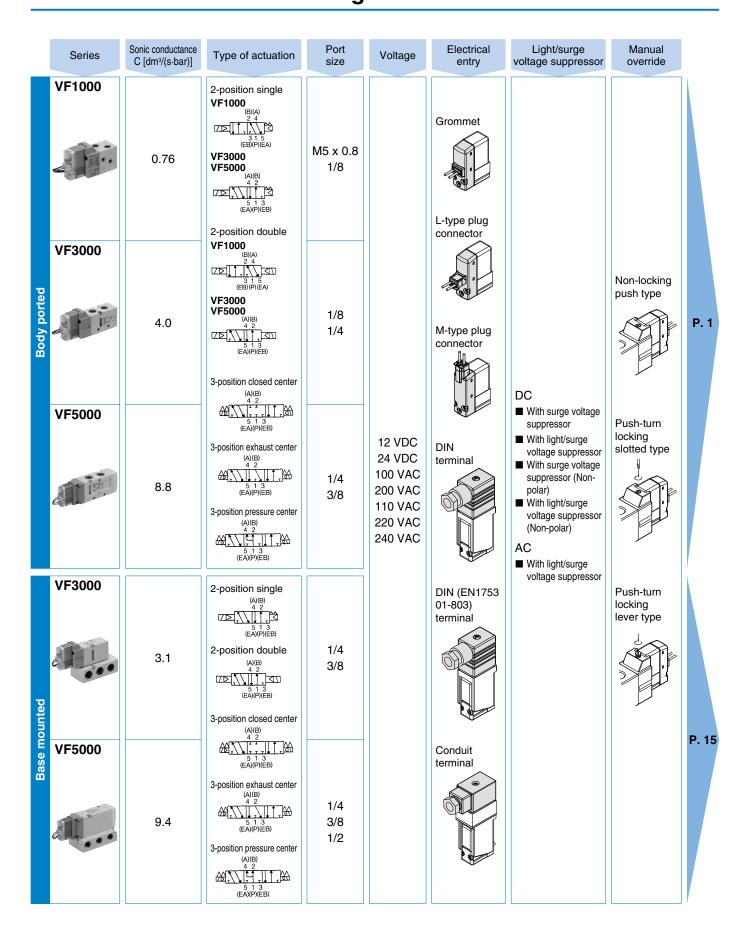



Model Selection by Operating Conditions 2

Manifold

	Series	EXH port type		Manifold base model	Applicable valve	Applicable stations
	VF1000	Common EXH	VV5F1-30	4(A), 2(B) port M5, 1/8 <u>1(P) port</u> 1/8 <u>5/3(R) port</u> 1/8	VF1□30	2 to 20
		Individual EXH	VV5F1-31	<u>4(A), 2(B) port</u> M5, 1/8 <u>5(EA), 3(EB) port</u> <u>1(P) port</u> <u>1/8</u>	VF1□33	stations
Body ported	VF3000	Common EXH	VV5F3-30	4(A), 2(B) port 1/8, 1/4 5(R), 3(R) port 1/4 1/4 1/4	VF3⊟30 VF3⊟33	2 to 20 stations P. 27
	VF5000	Common EXH	VV5F5-20	4(A), 2(B) port 5(R), 3(R) port 3/8 1(P) port 3/8	VF5□20	2 to 10 stations
		Common EXH	VV5F5-21	4(A), 2(B) port 5(R), 3(R) port 1/2 1/2 1/2	VF5□23	2 to 15 stations
ounted	VF3000	Common EXH	VV5F3-40	5(R), 3(R) port 1/4 1/4 1(P) port 1/4 4(A), 2(B) port 1/4	VF3⊡40 VF3⊡43	2 to 20 stations
Base mounted	VF5000	Common EXH	VV5F5-40	5(R), 3(R) port 3/8 1(P) port 3/8 4(A), 2(B) port 1/4	VF5□44	2 to 10 stations

Cylinder Speed Chart 1

This chart is provided as guidelines only. For performance under various conditions, use SMC's Model Selection Program before making a judgement.

								В	ore siz	ze						
Series	Average speed (mm/s)	Load factor 50%			Pre Loa	Series CM2 Pressure 0.5 MPa Load factor 50% Stroke 300 mm			Series MB, CA2 Pressure 0.5 MPa Load factor 50% Stroke 500 mm				Series CS1 Pressure 0.5 MPa Load factor 50% Stroke 1000 mm			
		ø6	ø10	ø16	ø20	ø25	ø32	ø40	ø40	ø50	ø63	ø80	ø100	ø125	ø140	ø160
	1000															
	800													Perpend	licular,	~~ -
VF1120-01	600					\square								ipward		H
VF1120-01	400												╷╷╷╺	lorizon	tal actu	ation
	200				-	+ -	- -	┝┏┥┝								
	0															
	1000															
	800															
VE0100.00	600															
VF3130-02	400							┝═╛┝	┝┥│┝							
	200		┝┏┫┝			- -	- -	┝┥╽┝	╞┥┃┝			╶┓╴┠				
	0															
	1000															
	800									\square						
VE5100.00	600				\vdash \sqcap		\vdash		╞┲┫╞	┝═┥┝						
VF5120-03	400				╞┲┫╞			┝═╛┝	╞┥║┝		╞┲┫╞	$- \Box$			\star	\star
	200		┢┲═╟╴					╞┥║┝	+				┼╼┌╴			
	0															

* With \bigstar : when using steel piping

Base Mounted

									В	ore siz	e							
Series	Average speed (mm/s)	Load factor 50%			Series CM2 Pressure 0.5 MPa Load factor 50% Stroke 300 mm			Series MB, CA2 Pressure 0.5 MPa Load factor 50% Stroke 500 mm				Series CS1 Pressure 0.5 MPa Load factor 50% Stroke 1000 mm						
		ø6	ø10	ø16	ø20	ø25	ø32	ø40	ø40	ø50	ø63	ø80	ø100	ø125	ø140	ø160	ø180	ø200
VF3140-03	1000 800 600 400 200 0													*	<u> </u>	Perpendupward Horizon	actuati	on –
VF5144-04	1000 800 600 400 200 0														*	*	*	*

* With \bigstar : when using steel piping

Body Ported

Cylinder Speed Chart (2)

Conditions

This chart is provided as guidelines only. For performance under various conditions, use SMC's Model Selection Program before making a judgement.

Body Ported

E	Body ported	Series CJ2	Series CM2	Series MB, CA2	Series CS1
	Tube bore x Length	T0604 x 1 m	Т0806	Sx1m	
VF1120-01	Speed controller	AS3001F-06	AS300	—	
	Silencer		AN101-01		
	Tube bore x Length	T0604 x 1 m	T1075	—	
VF3130-02	Speed controller	AS3001F-06	AS400	—	
	Silencer		AN110-01		—
	Tube bore x Length	T0604 x 1 m	T1075 x 1 m	T1209) x 1 m
VF5120-03	Speed controller	AS3001F-06	AS4001F-10	AS400)1F-12
	Silencer		AN202-02		

Body Ported [when using SGP (Steel Piping)]

E	Body ported	Series CS1
	Tube bore x Length	SGP10A x 1 m
VF5120-03	Speed controller	AS420-03
	Silencer	AN200-02

Base Mounted

Ba	ase mounted	Series CJ2	Series CM2	Series MB, CA2	Series CS1
	Tube bore x Length	T0604 x 1 m	T1075 x 1 m	T1209 x 1 m	—
VF3140-03	Speed controller	AS3001F-06	AS4001F-10	AS4001F-12	—
	Silencer			—	
	Tube bore x Length	T0604 x 1 m	T1075 x 1 m	T1209	x1m
VF5144-04	Speed controller	AS3001F-06	AS4001F-10	AS400)1F-12
	Silencer		AN20	00-02	

Base Mounted [when using SGP (Steel Piping)]


Ba	ase mounted	Series CS1
	Tube bore x Length	SGP10A x 1 m
VF3140-03	Speed controller	AS420-03
	Silencer	AN300-03
	Tube bore x Length	SGP15A x 1 m
VF5144-04	Speed controller	AS420-04
	Silencer	AN400-04

Pilot Operated 5 Port Solenoid Valve Series VF1000/3000/5000 Single Unit

Body Ported

How to Order Valve

Note) Only DIN and conduit terminal types are available with AC mode Refer to the electrical entry for details.

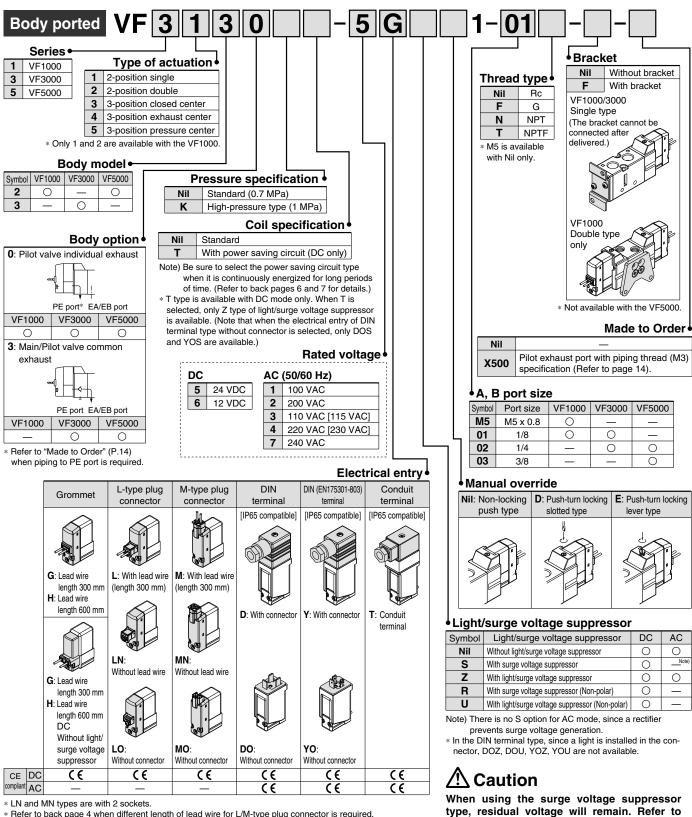

* LN and MN types are with 2 sockets.

* Refer to back page 4 when different length of lead wire for L/M-type plug connector is required. * Refer to back page 5 for details on the DIN (EN175301-803) terminal.

Note) When using with IP65, select the main/pilot valve common exhaust type. (Except VF1000)

back page 7 for details.



Made to Order

(Refer to page 14 for details.) Pilot exhaust port with piping

thread (M3) specification

Specifications

	N	lodel	VF1000	VF3000	VF5000					
Fluid			Air							
Operating	Standard	2-position single/3-position								
pressure	Stanuaru	2-position double	0.1 to 0.7							
range	High- pressure	2-position single/3-position	ion 0.15 to 1.0							
(MPa)	type	2-position double		0.1 to 1.0						
Ambient a	nd fluid t	emperature (°C)	-10	0 to 50 (No freezi	ng)					
Max. opera	ating	2-position single/double	10	5						
frequency	(Hz)	3-position	- 3 3							
Manual ov	erride		Push-	n-locking push ty turn locking slotte -turn locking leve	d type					
Pilot exhau	ust type		Individual exhaust, Mai	n/Pilot valve common ex	haust (Except VF1000)					
Lubrication	n			Not required						
Mounting of	orientatio	on		Unrestricted						
Impact/Vib	ration re	sistance (m/s²) Note)	300/50							
Enclosure			Dustproof (IP65* for D, Y, T)							
Note) Impact re	esistance:	No malfunction occurred when	it is tested in the axia	al direction and at the	right angles to the					

main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period) Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at

both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

* Based on IEC60529. When using with IP65, select the main/pilot valve common exhaust type.

Solenoid Specifications

				1			
			Grommet (G), (H)	DIN terminal (D)			
			L-type plug connector (L)	DIN (EN175301-803) terminal (Y)			
Electrical ent	ry		M-type plug connector (M)	Conduit terminal (T)			
			G, H, L, M	D, Y, T			
Coil rated		DC	24	, 12			
voltage (V)		AC (50/60 Hz)	100, 110, 2	00, 220, 240			
Allowable vo	Itage	fluctuation	±10%* of ra	ated voltage			
Power con-	DC	Standard	1.5 (With light: 1.55)	1.5 (With light: 1.75)			
sumption (W)		With power saving circuit	0.55 (With light only)	0.75 (With light only)			
		100 V					
A		110 V [115 V]					
Apparent power (VA)*	AC	200 V	1.55 (With light: 1.65)	1.55 (With light: 1.7)			
220 V [230 V]							
		240 V					
Surge voltag	e suj	opressor	Diode (Non-polar type: Varistor)				
Indicator ligh	nt		LED (Neon bulb is used for AC mode of D, Y, T.)				

* It is in common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.

* Allowable voltage fluctuation is -15% to +5% of the rated voltage for 115 VAC or 230 VAC.

* Since voltage drops due to the internal circuit in S, Z, T types (with power saving circuit), the allowable voltage fluctuation should be within the following range. 24 VDC: -7% to +10% 12 VDC: -4% to +10%

Response Time

Made to Order

X500

			Duranauma			Response time ma	s (at 0.5 MPa)	
Series	Type of	actuation	Pressure specification	Operating pressure range (MPa)	Without light/surge	With light/surge v	oltage suppressor	AC
			specification	range (IMPa)	voltage suppressor	S, Z type	R, U type	AC
		Single	Standard	0.15 to 0.7	20	45	23	45
VF1000	2-position	Double	Stanuaru	0.1 to 0.7	12	12	12	12
VETOOD	2-position	Single	High-pressure	0.15 to 1.0	23	48	26	48
		Double	type	0.1 to 1.0	15	15	15	15
	2 position	Single		0.15 to 0.7	20	45	23	45
	2-position	Double	Standard	0.1 to 0.7	12	12	12	12
VF3000	3-position			0.15 to 0.7	30	55	33	55
VF3000	2-position	Single		0.15 to 1.0	23	48	26	48
	2-position	Double	High-pressure type	0.1 to 1.0	15	15	15	15
	З-ро	osition	type	0.15 to 1.0	33	58	36	58
	2-position	Single		0.15 to 0.7	30	55	33	55
	2-position	Double	Standard	0.1 to 0.7	15	15	15	15
VF5000	З-ро	osition		0.15 to 0.7	50	75 53		75
VI-3000	2 position	Single		0.15 to 1.0	33	58	36	58
	2-position	Double	High-pressure	0.1 to 1.0	18	18	18	18
	3-position		type	0.15 to 1.0	53	78	56	78


Note) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage)


Flow-rate Characteristics/Mass

			Port	size		Flow-	rate chara	acteristics	Note 1)		Maca	g) Note 2)
Valve model	- T	pe of actuation	1.1.0	5.0	$1 \rightarrow$	4/2 (P \rightarrow	A/B)	$4/2 \rightarrow 5$	′3 (A/B →	EA/EB)	Mass (g) Note 2)
valve model	''	pe of actuation	1, 4, 2 (P, A, B)	5, 3 (EA, EB)	C [dm ³ / (s/bar)]	b	Cv	C [dm ³ / (s/bar)]	b	Cv	Grommet	DIN terminal
	2-	Single	M5 x 0.8		0.49	0.40	0.13	0.52	0.35	0.13	140	176
VF1□20-M5	position	Double		x U.o	0.49	0.40	0.13	0.52	0.35	0.13	200	272
	2-	Single	1/8	M5 x 0.8	0.76	0.22	0.17	0.53	0.28	0.13	136	172
VF1□20-01	position	osition Double		NIS X 0.0	0.76	0.22	0.17	0.53	0.28	0.13	196	268
	2-	Single			3.0	0.38	0.78	2.8	0.30	0.67	182	218
	position	Double			3.0	0.38	0.78	2.8	0.30	0.67	243	315
		Closed center			2.4	0.31	0.64	1.8	0.37	0.46	260	332
VF3⊡30-01	3- position	Exhaust center	1	/8	2.6	0.37	0.70	3.0 [2.5]	0.32 [0.28]	0.76 [0.62]	260	332
	P	Pressure center			3.0 [1.4]	0.42 [0.44]	0.83 [0.39]	2.4	0.27	0.59	260	332
	2-	Single			4.0	0.36	1.0	3.1	0.32	0.75	178	214
	position	Double			4.0	0.36	1.0	3.1	0.32	0.75	239	311
		Closed center			2.4	0.45	0.68	1.9	0.37	0.47	256	328
VF3⊡30-02	3- position	Exhaust center	1/4	1/8	3.0	0.42	0.82	3.1 [2.7]	0.36 [0.29]	0.79 [0.66]	256	328
	poonton	Pressure center			5.5 [1.4]	0.37 [0.50]	1.4 [0.40]	2.6	0.32	0.64	256	328
	2-	Single			7.1	0.46	1.9	7.7	0.51	2.2	313	349
	position	Double			7.1	0.46	1.9	7.7	0.51	2.2	368	440
		Closed center			6.7	0.46	1.8	6.6	0.41	1.8	406	478
VF5⊡20-02	3- position	Exhaust center	1	/4	7.1	0.42	1.9	8.0 [7.4]	0.45 [0.47]	2.2 [2.1]	406	478
	poolaon	Pressure center			6.8 [2.7]	0.51 [0.50]	2.0 [0.78]	5.7	0.37	1.4	406	478
	2-	Single			8.8	0.44	2.4	10.0	0.49	2.9	299	335
	position	Double			8.8	0.44	2.4	10.0	0.49	2.9	354	426
		Closed center]		7.5	0.43	2.0	7.5	0.38	1.9	391	463
VF5⊡20-03	3- position	Exhaust center] 3	/8	8.3	0.40	2.2	10.0 [8.7]	0.48 [0.46]	3.0 [2.4]	391	463
	2001011	Pressure center			9.2 [3.0]	0.50 [0.49]	2.6 [0.85]	6.1	0.35	1.6	391	463


Note 1) []: Normal position Note 2) Values without bracket

Construction/Body Ported

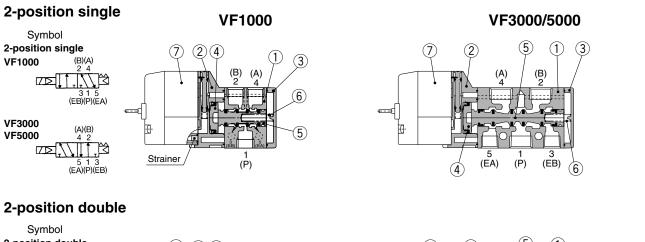

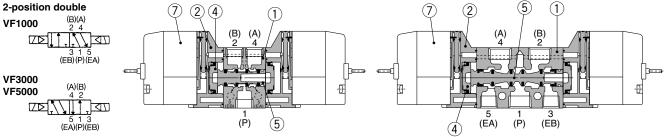

3-position closed center/exhaust center/pressure center



(EĂ)(P)(EB) 3-position pressure center



Component Parts

	1		
No.	Description	Material	Note
1	Body	Aluminum die-casted	White
2	Adapter plate	Resin	Gray
3	End plate	Aluminum die-casted (VF5000: Resin)	White
4	Piston	Resin	
5	Spool valve	Aluminum, HNBR	
6	Spring	Stainless steel	


Replacement Parts

No.	Description	Part no.	Note
7	Pilot valve assembly	Refer to "How to Order Pilot Valve Assembly" on page 5.	Built-in strainer

Bracket Assembly Part No.

Description	Part no.			
Bracket (for VF1000/3000 single) Note)	VF3000-64-1A (With 2 mounting screws)			
Bracket (for VF1000 double)	DXT144-8-1A (With 2 mounting screws)			

Note) The bracket cannot be mounted after delivered.

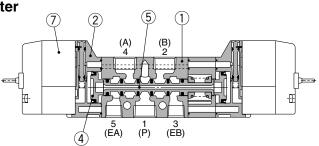


(Drawing shows a closed center type.)

How to Order Pilot Valve Assembly

A Caution

When only the pilot valve assembly is replaced, it is not possible to change from V211 (Grommet or L/M-type) to V212 (DIN or Conduit type), or vice versa.

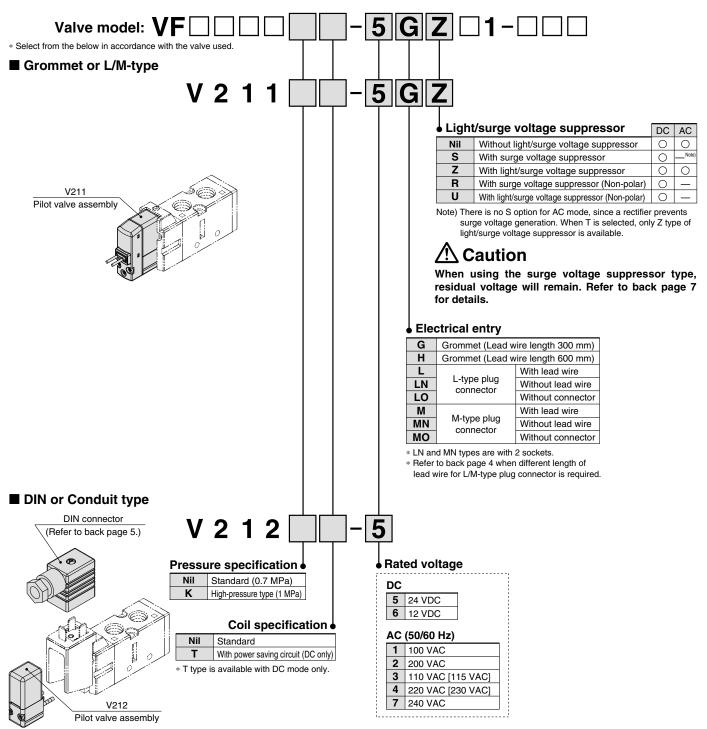


A Caution

For V212 (DIN or Conduit type), the coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.


\land Caution

Tightening torque of the pilot valve assembly mounting screw M2.5: 0.32 N·m 5



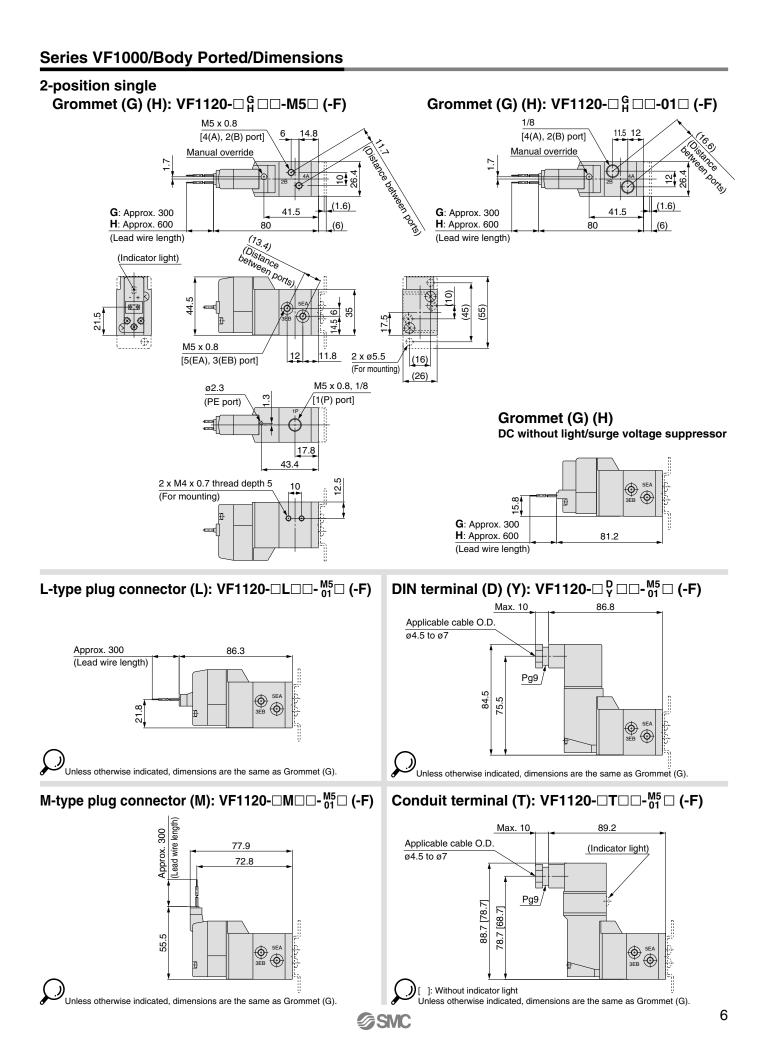

Series VF1000/Body Ported/Dimensions

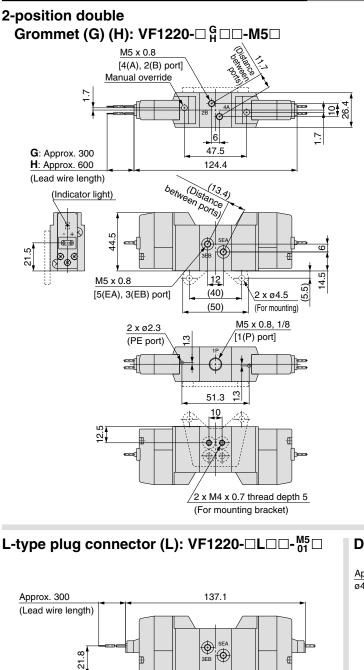

슋

Э зев

 \odot

SMC


Unless otherwise indicated, dimensions are the same as Grommet (G).

M-type plug connector (M): VF1220- M - - ^{M5} - ^{M5} - ^{M5} - ^{120.3}


Unless otherwise indicated, dimensions are the same as Grommet (G).


55.5

Grommet (G) (H): VF1220-□ H □ □-01□

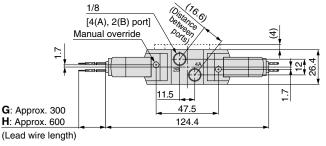


Grommet (G) (H) DC without light/surge voltage suppressor

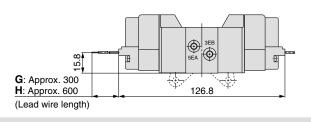

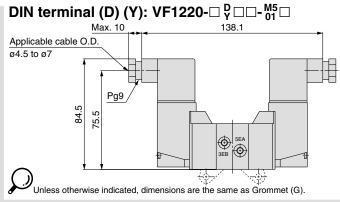


Conduit terminal (T): VF1220- T - - M5 Applicable cable O.D. 04.5 to 07 (Indicator light) Pg9 Pg9 (Indicator light) (Ind


Series VF3000/Body Ported/Dimensions

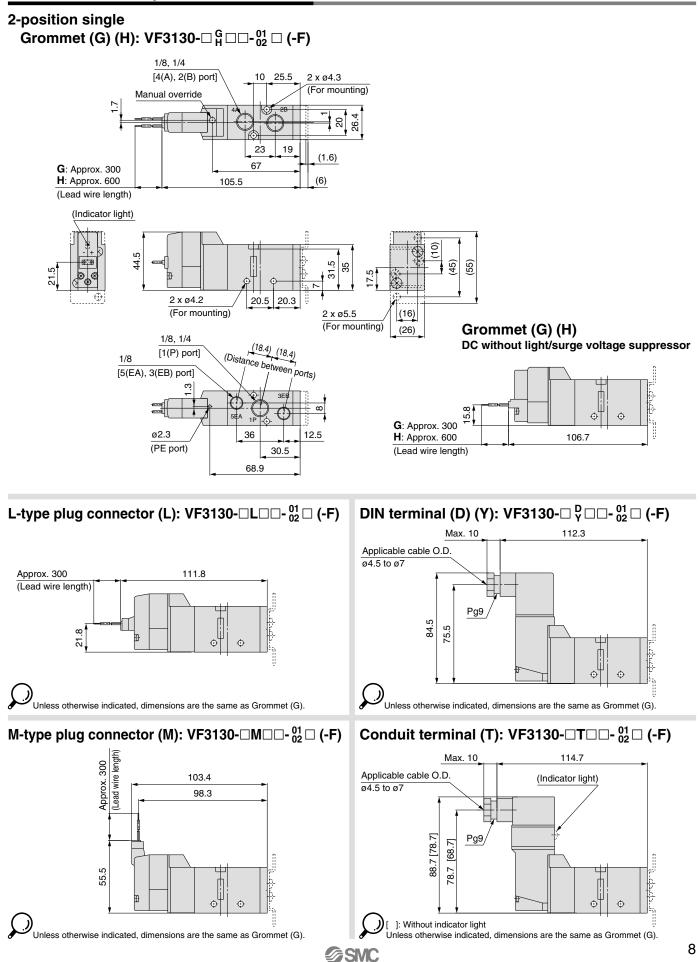


Series VF3000/Body Ported/Dimensions


2-position double




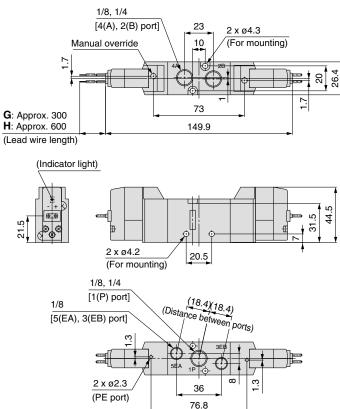

Grommet (G) (H) DC without light/surge voltage suppressor







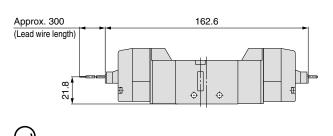


Unless otherwise indicated, dimensions are the same as Grommet (G).

M-type plug connector (M): VF3230- \square M \square - $^{01}_{02}$ \square

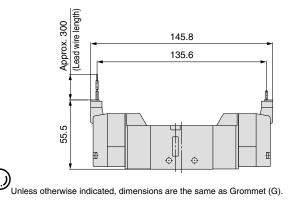


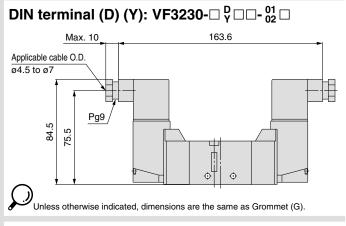


Conduit terminal (T): VF3230-

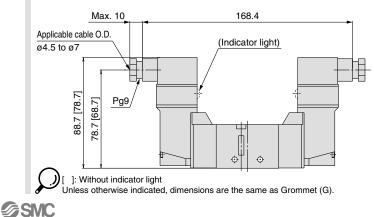


Series VF3000/Body Ported/Dimensions

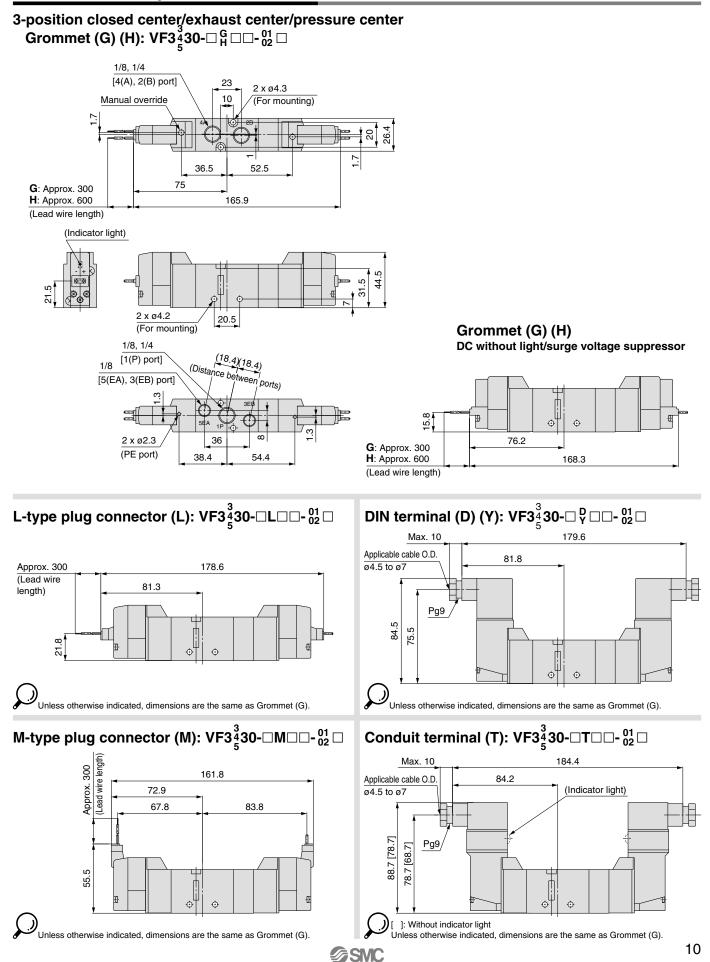


Series VF5000/Body Ported/Dimensions

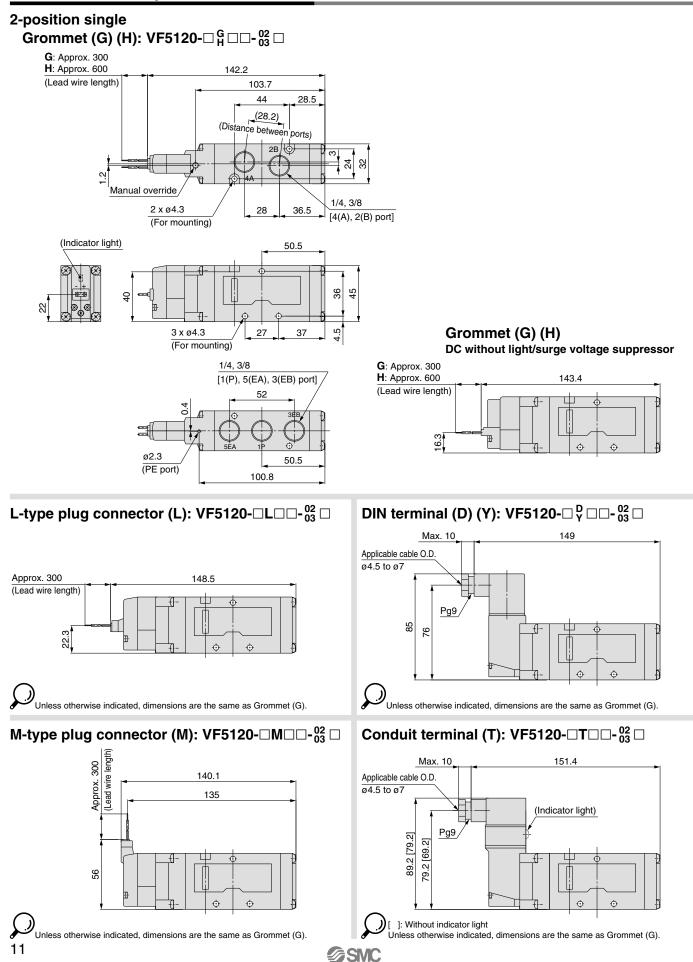

Series VF5000/Body Ported/Dimensions

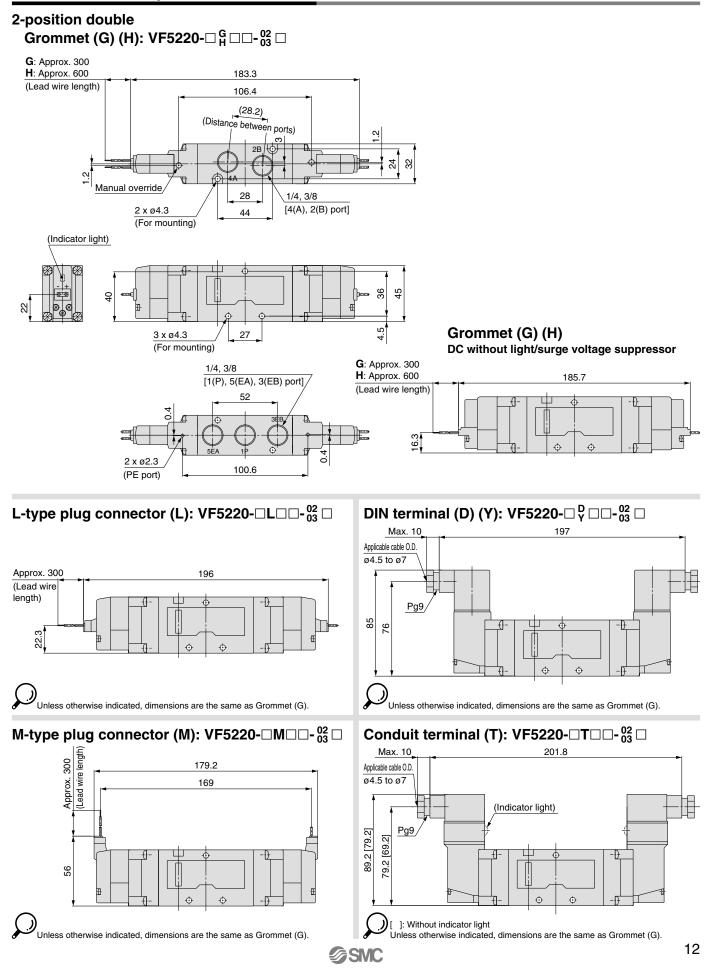

Series VF5000/Body Ported/Dimensions

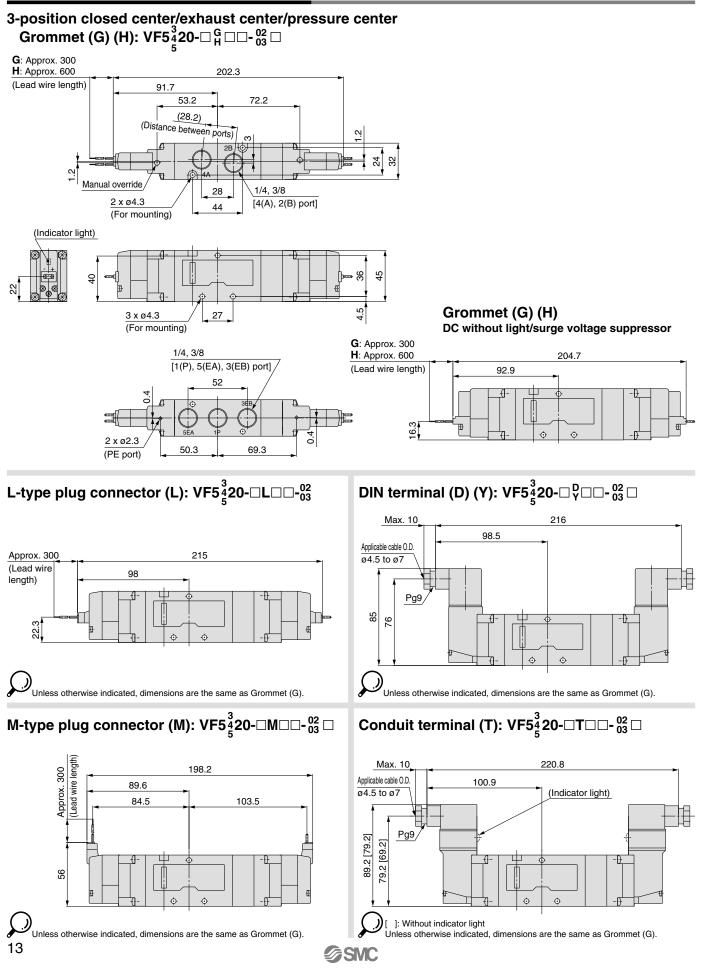

Series VF1000/3000/5000 Made to Order




Please contact SMC for detailed dimensions, specifications, and lead times.

1 Body Ported Pilot Exhaust Port with Piping Thread (M3) Specification

0

In this specification, piping to the pilot exhaust port (PE port) is available when the valve is used in an environment where the exhaust from the pilot valve is not allowable, or intrusion of ambient dust should be prevented.

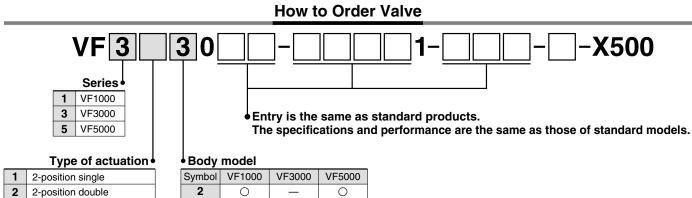

3-position closed center


3-position exhaust center

3-position pressure center


3

4

5

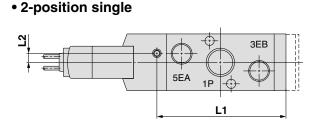


• 2-position double




3


• 3-position closed center/exhaust center/pressure center



Series	L1	L2	L3	L4	L5
VF1000	34.5	4.2	33.4	—	_
VF3000	60	4.2	59	29.5	45.5
VF5000	95	3.45	89	44.5	63.5

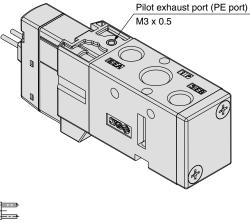

SMC

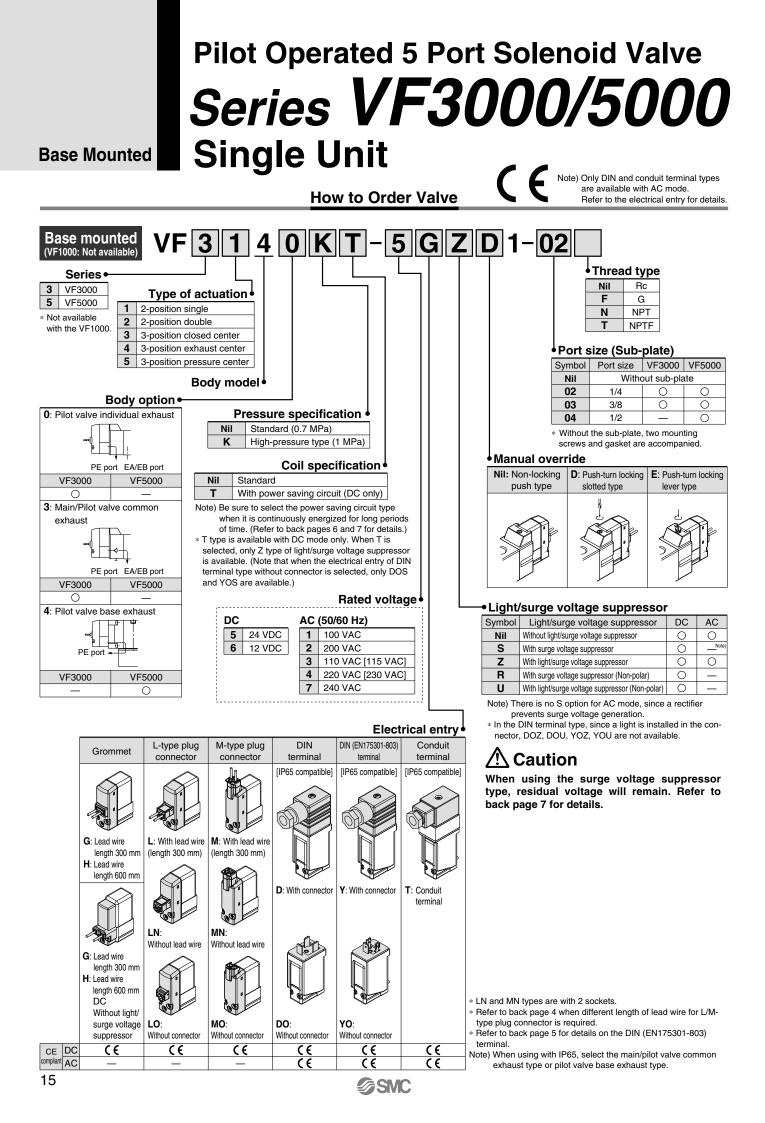

Pilot Operated 5 Port Solenoid Valve Base Mounted/Single Unit Series VF3000/5000

Series VF3000



Response Time

Specifications

	Ν	lodel	VF3000	VF5000				
Fluid			Air					
Operating	Standard	2-position single/3-position	0.15 to 0.7					
pressure	2-position double	0.1 to 0.7						
range	High- pressure	2-position single/3-position	0.15 to 1.0					
(MPa)	type	2-position double	0.1 to	o 1.0				
Ambient and fluid temperature (°C)			–10 to 50 (N	lo freezing)				
Max. opera	iting	2-position single/double	10	5				
frequency (Hz)		3-position	3	3				
			Non-locking push type					
Manual ove	erride		Push-turn locking slotted type					
			Push-turn locking lever type					
Pilot exhau	ist turns		Individual exhaust, Main/	Pilot valve				
Photexnat	ist type		Pilot valve common exhaust	base exhaust				
Lubrication	n		Not re	quired				
Mounting of	orientatio	n	Unrestricted					
Impact/Vibration resistance (m/s ²) Note)			300/50					
Enclosure			Dustproof (IP65* for D, Y, T)					
Note) Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each								

condition. (Values at the initial period) Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

* Based on IEC60529. When using with IP65, select the main/pilot valve common exhaust type or pilot valve base exhaust type.

Solenoid Specifications

			Grommet (G), (H)	DIN terminal (D)	
Electrical entry			L-type plug connector (L)	DIN (EN175301-803) terminal (Y)	
			M-type plug connector (M)	Conduit terminal (T)	
			G, H, L, M	D, Y, T	
Coil rated		DC	24	, 12	
voltage (V) AC (50/60 Hz)			100, 110, 2	00, 220, 240	
Allowable voltage fluctuation			$\pm 10\%^*$ of rated voltage		
Power con-		Standard	1.5 (With light: 1.55)	1.5 (With light: 1.75)	
sumption (W)	DC	With power saving circuit	0.55 (With light only)	0.75 (With light only)	
		100 V			
A		110 V [115 V]			
Apparent power (VA)*	AC	200 V	1.55 (With light: 1.65)	1.55 (With light: 1.7)	
power (VA)		220 V [230 V]			
		240 V			
Surge voltage suppressor			Diode (Non-polar type: Varistor)		
Indicator light			LED (Neon bulb is used for AC mode of D, Y, T.)		

* It is in common between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.

* Allowable voltage fluctuation is -15% to +5% of the rated voltage for 115 VAC or 230 VAC.

* Since voltage drops due to the internal circuit in S, Z, T types (with power saving circuit), the allowable voltage fluctuation should be within the following range.

78

24 VDC: -7% to +10%

12 VDC: -4% to +10%

Response time ms (at 0.5 MPa) Pressure Operating pressure Series Type of actuation Without light/surge With light/surge voltage suppressor specification range (MPa) voltage suppressor S, Z type R, U type 0.15 to 0.7 45 Single 20 23 Standard Double 0.1 to 0.7 12 12 12 **VF1000** 2-position Single High-pressure 0.15 to 1.0 23 48 26 type 0.1 to 1.0 15 15 15 Double Single 0.15 to 0.7 20 45 23 2-position Double Standard 0.1 to 0.7 12 12 12 3-position 0.15 to 0.7 30 55 33 **VF3000** 0.15 to 1.0 23 48 26 Single 2-position High-pressure Double 0.1 to 1.0 15 15 15 type 3-position 0.15 to 1.0 33 58 36 Single 0.15 to 0.7 30 55 33 2-position Standard 15 Double 0.1 to 0.7 15 15 0.15 to 0.7 50 75 53 3-position VF5000 33 58 36 Single 0.15 to 1.0 2-position High-pressure Double 0.1 to 1.0 18 18 18 type

Note) Based on dynamic performance test, JIS B 8375-1981. (Coil temperature: 20°C, at rated voltage)

3-position

53

0.15 to 1.0

AC

45

12

48

15

45

12

55

48

15

58

55

15

75

58

18

78

56


Series VF3000/5000

Flow-rate Characteristics/Mass

				Flow-rate characteristics Note 1)							
	-	<i>.</i>		$1 \rightarrow$	4/2 (P →	A/B)	$4/2 \rightarrow 5/3 (A/B \rightarrow EA/EB)$			Mass (g) Note 2)	
Valve model	Type of actuation		Port size	C [dm ³ / (s/bar)]	b	Cv	C [dm ³ / (s/bar)]	b	Cv	Grommet	DIN terminal
	2-	Single		2.8	0.14	0.64	2.5	0.18	0.57	344 (192)	380 (228)
	position	Double		2.8	0.14	0.64	2.5	0.18	0.57	405 (252)	477 (324)
		Closed center		2.1	0.22	0.49	1.6	0.26	0.41	422 (270)	494 (342)
VF3⊡40-02	3- position	Exhaust center	1/4	2.3	0.21	0.53	2.8 [2.1]	0.23 [0.26]	0.66 [0.50]	422 (270)	494 (342)
	poonion	Pressure center		2.9 [1.1]	0.16 [0.45]	0.67 [0.32]	2.1	0.23	0.49	422 (270)	494 (342)
	2-	Single		3.1	0.24	0.76	2.6	0.23	0.62	327 (192)	363 (228)
	position	Double		3.1	0.24	0.76	2.6	0.23	0.62	388 (252)	460 (324)
		Closed center		2.2	0.33	0.57	1.6	0.34	0.40	405 (270)	477 (342)
VF3□40-03	3- position	Exhaust center	3/8	2.6	0.27	0.61	2.8 [2.3]	0.30 [0.28]	0.68 [0.55]	405 (270)	477 (342)
		Pressure center		3.4 [1.3]	0.29 [0.48]	0.80 [0.38]	2.2	0.31	0.52	405 (270)	477 (342)
	2 Single position Double Closed center 3- position Exhaust center	Single	_	7.3	0.49	2.1	7.3	0.50	2.0	486 (297)	522 (333)
		Double		7.3	0.49	2.1	7.3	0.50	2.0	541 (352)	613 (424)
			6.6	0.35	1.7	6.3	0.31	1.6	578 (390)	650 (462)	
VF5□44-02		Exhaust center	1/4	7.4	0.33	1.9	8.1 [7.4]	0.35 [0.34]	2.1 [1.9]	578 (390)	650 (462)
		Pressure center		8.0 [2.9]	0.35 [0.48]	2.1 [0.85]	5.6	0.31	1.5	578 (390)	650 (462)
	2-	Single		8.4	0.34	2.2	8.9	0.29	2.3	473 (297)	509 (333)
	position	Double		8.4	0.34	2.2	8.9	0.29	2.3	529 (352)	601 (424)
		Closed center]	7.3	0.34	2.0	7.1	0.28	1.8	566 (390)	638 (462)
VF5□44-03	3- position	Exhaust center	3/8	8.1	0.27	2.0	14.0 [8.3]	0.26 [0.31]	3.4 [2.2]	566 (390)	638 (462)
	position	Pressure center		8.1 [2.5]	0.33 [0.48]	2.0 [0.74]	5.7	0.31	1.4	566 (390)	638 (462)
	2-	Single		9.4	0.43	2.7	12.0	0.32	3.0	545 (297)	581 (333)
	position	Double	1	9.4	0.43	2.7	12.0	0.32	3.0	600 (352)	672 (424)
		Closed center		7.1	0.41	2.1	7.4	0.32	2.0	638 (390)	710 (462)
VF5□44-04	3- position	Exhaust center	1/2	8.6	0.39	2.4	13.0 [8.9]	0.21 [0.40]	3.1 [2.5]	638 (390)	710 (462)
		Pressure center		11.0 [2.6]	0.18 [0.47]	2.6 [0.78]	6.1	0.35	1.6	638 (390)	710 (462)

Note 1) []: Normal position Note 2) Values without bracket

Construction/Base Mounted

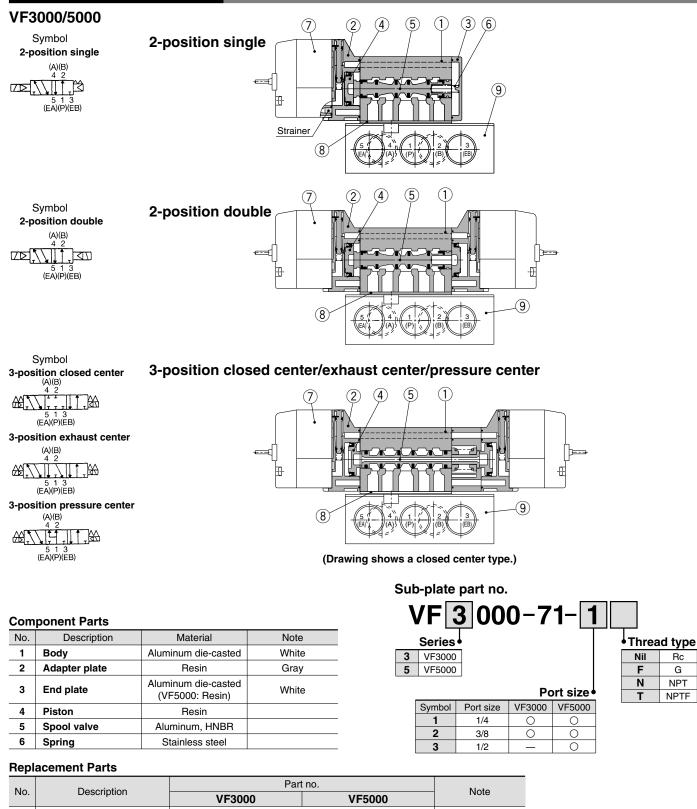

No	Description	i ui	Niete	
No.	Description	VF3000	VF5000	Note
7	Pilot valve assembly	Refer to "How to Order Pilot"	Valve Assembly" on page 19.	Built-in strainer
8	Gasket	DXT155-25-8 DXT156-9-8		HNBR
9	Sub-plate	1/8: VF3000-71-1□ 1/4: VF3000-71-2□	1/4: VF5000-71-1□ 3/8: VF5000-71-2□ 1/2: VF5000-71-3□	Aluminum die-casted
_	Round head combination screw (1 pc.)	DXT031-44-1 (With M4 x 39.5 SW)	_	For valve mounting
_	Hexagon socket head cap screw (1 pc.)	_	AXT620-32-1 (With M4 x 48 SW)	For valve mounting

SMC




M4: 1.4 N⋅m

Series **VF3000/5000**

How to Order Pilot Valve Assembly

A Caution

When only the pilot valve assembly is replaced, it is not possible to change from V211 (Grommet or L/M-type) to V212 (DIN or Conduit type), or vice versa.

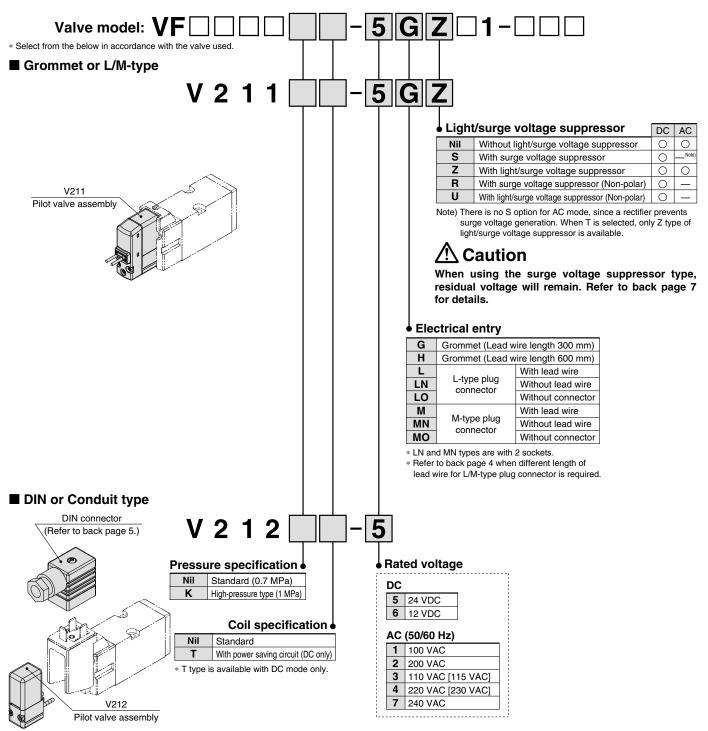

A Caution

For V212 (DIN or Conduit type), the coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.


\land Caution

Tightening torque of the pilot valve assembly mounting screw M2.5: 0.32 N·m 19



Pilot Operated 5 Port Solenoid Valve Base Mounted/Single Unit Series VF3000/5000

Series VF3000/Base Mounted/Dimensions

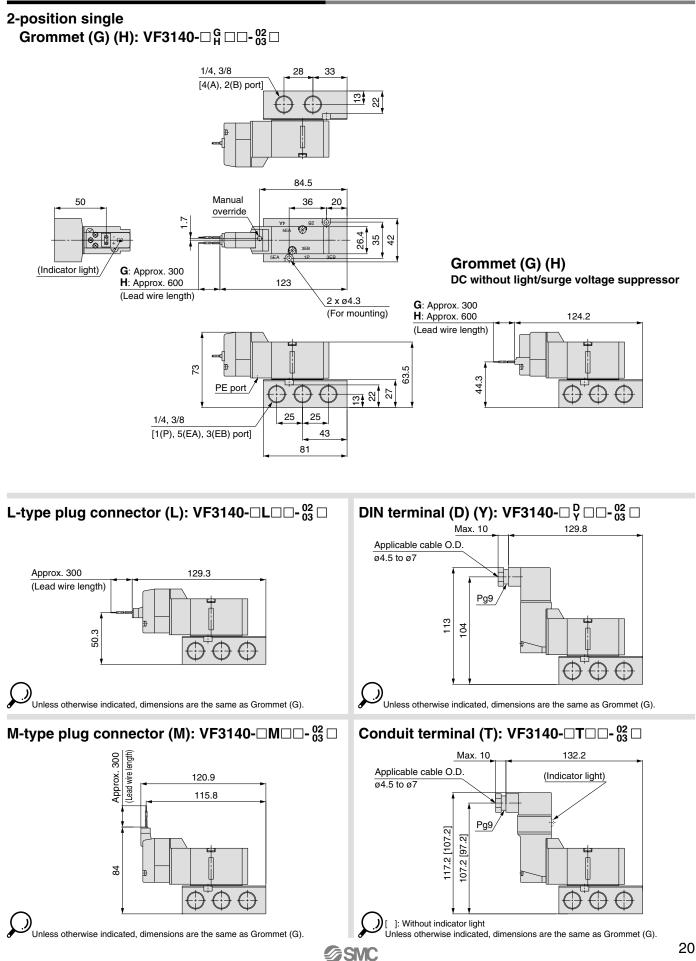


Series **VF3000/5000**


Series VF3000/Base Mounted/Dimensions

2-position double

Grommet (G) (H): VF3240-□^G_H □□-⁰²₀₃□

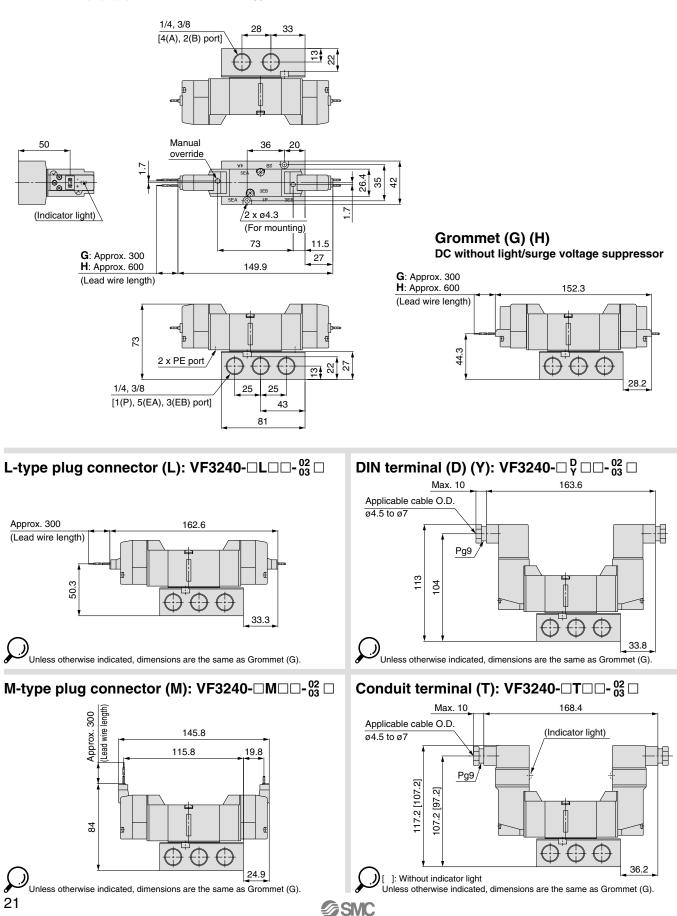


Series VF3000/Base Mounted/Dimensions

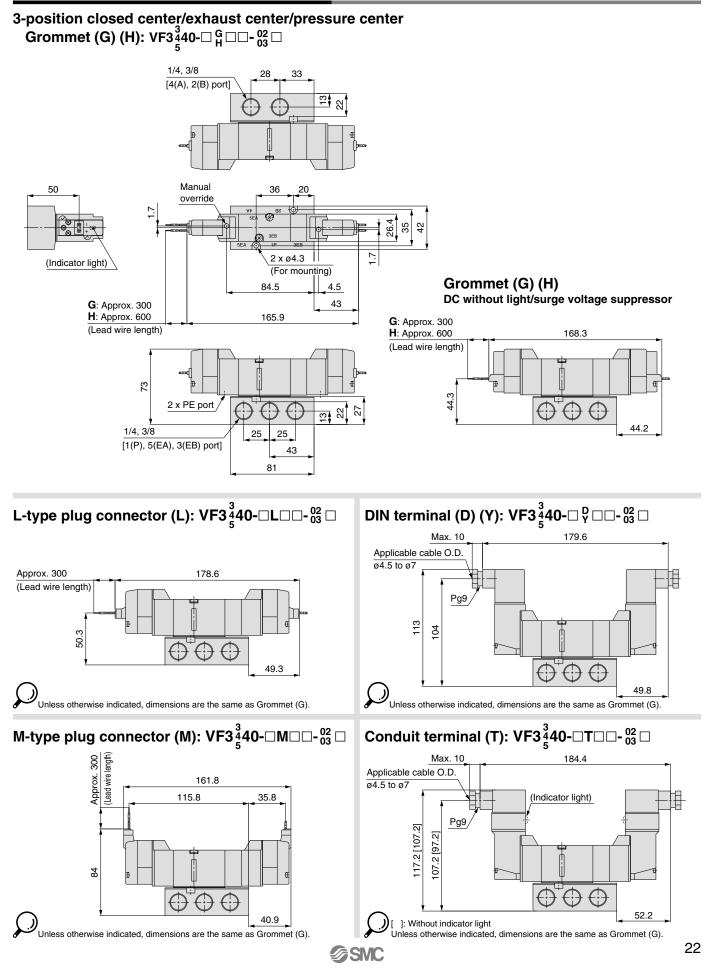


Series **VF3000/5000**

Series VF5000/Base Mounted/Dimensions

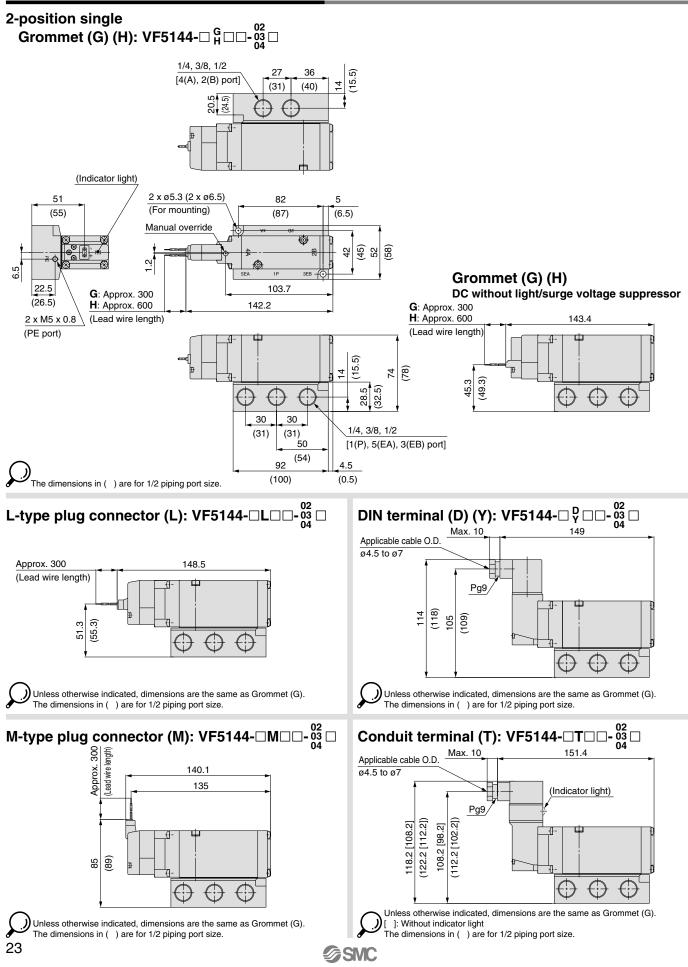


Series VF5000/Base Mounted/Dimensions

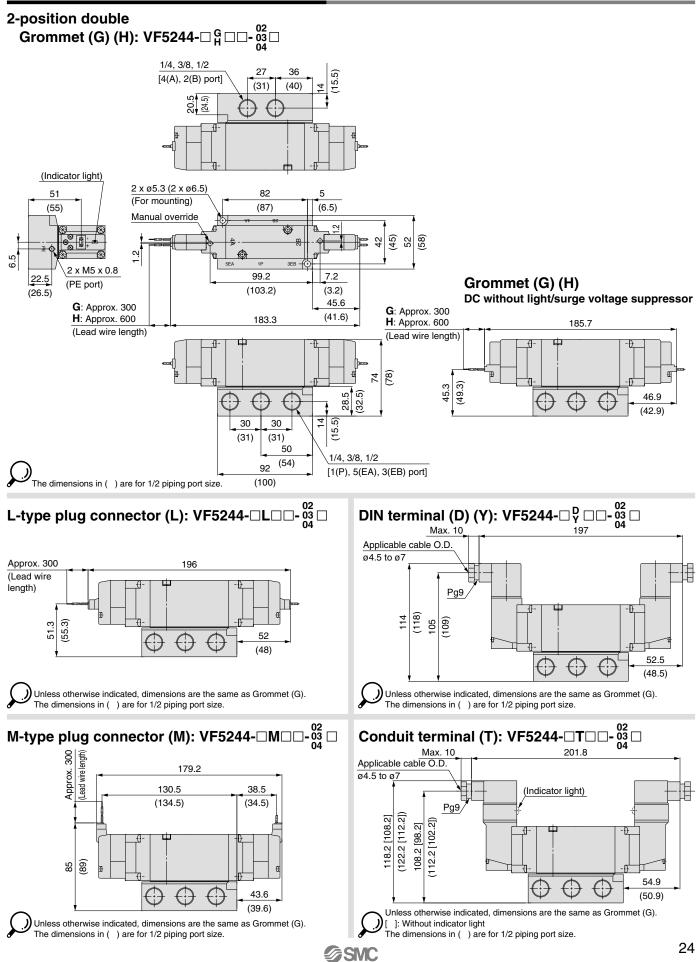


Series **VF3000/5000**

Series VF5000/Base Mounted/Dimensions

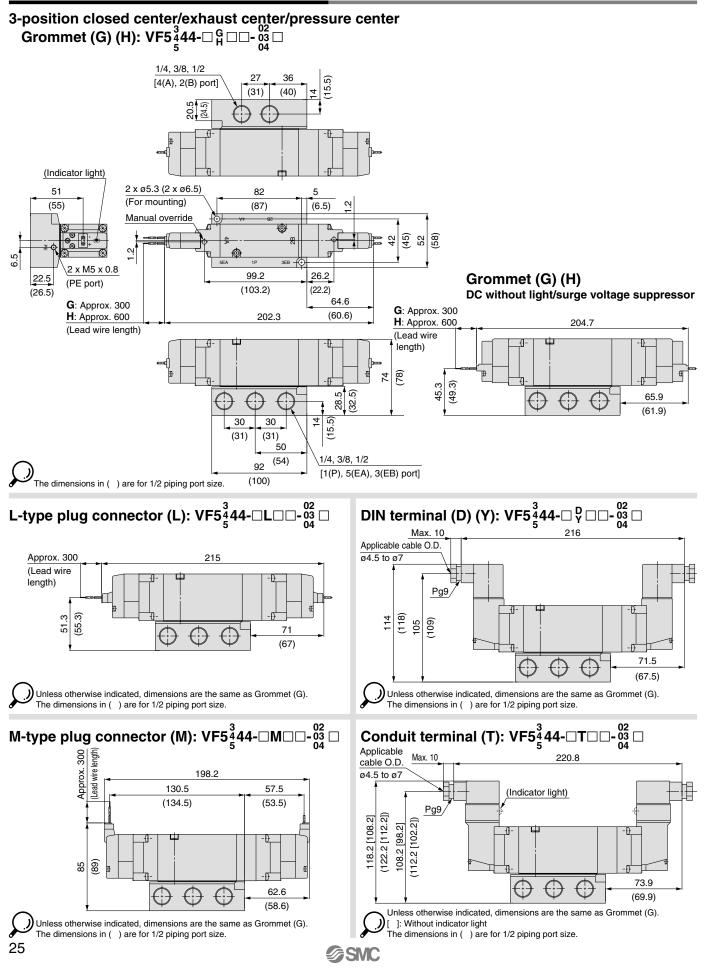

Pilot Operated 5 Port Solenoid Valve Series VF1000/3000/5000 Manifold

Body Ported

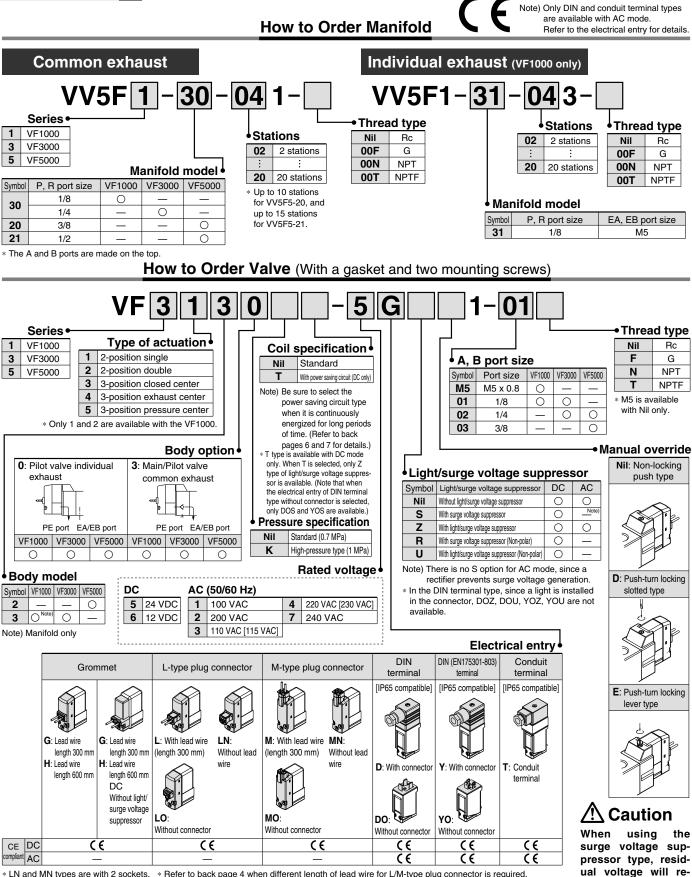

* LN and MN types are with 2 sockets. * Refer to back page 4 when different length of lead wire for L/M-type plug connector is required. * Refer to back page 5 for details on the DIN (EN175301-803) terminal.

Note) When using with IP65, select the main/pilot valve common exhaust type.

SMC

main. Refer to back


page 7 for details.

Manifold Specifications

Series		000	VF3000	VE	000
Manifold base model	VV5F1-30 <u>4(A), 2(B) port</u> <u>1/8</u> <u>1(P) port</u> <u>1/8</u> <u>5/3(R) port</u> <u>1/8</u> <u>5(EA), 3(EB) port</u> <u>1/8</u> <u>1(P) port</u> <u>1/8</u> <u>5(EA), 3(EB) port</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1/8</u> <u>1</u>		VF3000 VV5F3-30 4(A), 2(B) port 1/8, 1/4 1/4 5(R), 3(R) port 1/4	4(A), 2(B) port 1/4, 3/8 VV5F5-20 4(A), 2(B) port 1/4, 3/8	VV5F5-21 1(P) port 1/2 5(R), 3(R) port 1/2 (P) port 3/8
EXH port type	Common EXH	Individual EXH	Common EXH	Common EXH	Common EXH
Applicable valve model	VF1□ VF1□		VF3□30 VF3□33	VF5 VF5	
Applicable stations	2 to 20	stations	2 to 20 stations	2 to 10 stations	2 to 15 stations
Manifold base Mass: W [g] Stations: n	W = 29n + 21	W = 51n + 35	W = 64 + 63n	W = 97n + 80	W = 139n + 550

Note) Supply pressure to 1(P) ports and exhaust pressure from R ports on both sides for 10 stations or more (5 stations or more for the VF5000).

How to Order Manifold Assembly

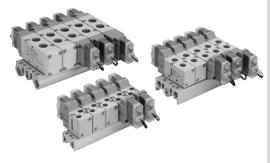


Example (VV5F3-30) Double solenoid (24 VDC) Closed center (24 VDC) VF3230-5GZ1-02 (1 set) VF3330-5GZ1-02 (1 set) Single solenoid (24 VDC) VF3130-5GZ1-02 (3 sets) Manifold base (5 stations) VV5F3-30-051 Dside VV5F3-30-051 1 set (Type 30, 5-station manifold base part no.) * VF3130-5GZ1-02 3 sets (Single solenoid part no.) * VF3230-5GZ1-02 1 set (Double solenoid part no.) * VF3330-5GZ1-02 1 set (Closed center part no.) The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc. • The valve arrangement is numbered as the 1st station from D side. • Indicate the valves to be attached below the manifold base part number, in order starting from station 1

Indicate the valves to be attached below the manifold base part number, in order starting from station 1
as shown in the drawing. If the arrangement becomes complicated, then indicate on the manifold
specification sheet.




Manifold Options



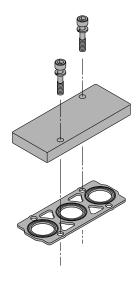


Series	Blanking plate assembly part no.
VF1000	DXT144-13-3A
VF3000	DXT031-38-5A
VF5000	VF5000-70-1A

Individual EXH spacer assembly

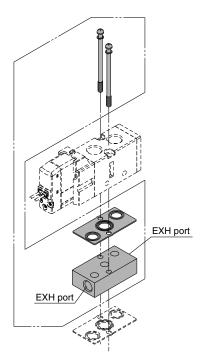

VF3000-75-1A

•Serie	s		(Threa	d type
Symbol	Series	Port size		Nil	Rc
3	VF3000	1/8		F	G
5	VF5000	1/4		Ν	NPT
				Т	NPTF

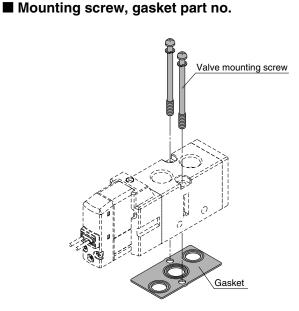

Series	Valve mounting screw (1 pc.)	Gasket
VF1000	Round head combination screw DXT031-44-1	DXT144-12-2
VF3000	(With M4 x 39.5 SW)	DXT155-25-7
VF5000	Hexagon socket head cap screw AXT620-32-1 (With M4 x 48 SW)	DXT156-9-6




Tightening Torque of Mounting Screw

M2: 0.16 N·m M3: 0.8 N·m M4: 1.4 N·m

▲Warning


When mounting a valve or spacer on the manifold base or sub-plate, etc., the mounting orientation is already decided. If mounted in a wrong direction, the equipment to be connected may result in malfunction. Refer to external dimensions in mounting.

Series VF1000/Dimensions

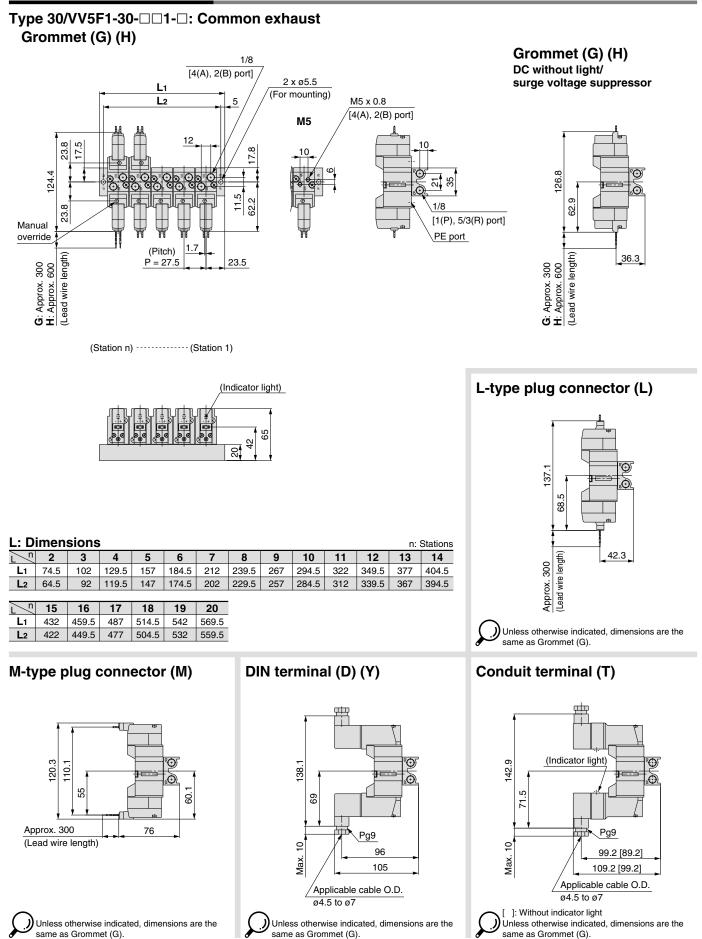


SMC


Series VF1000/Dimensions

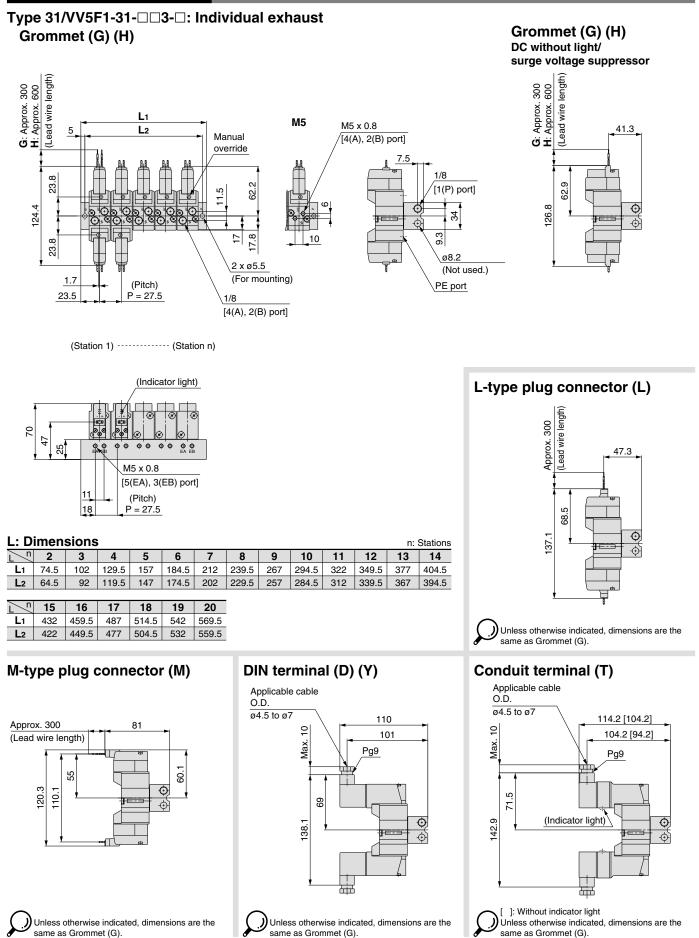


SMC


Series VF3000/Dimensions

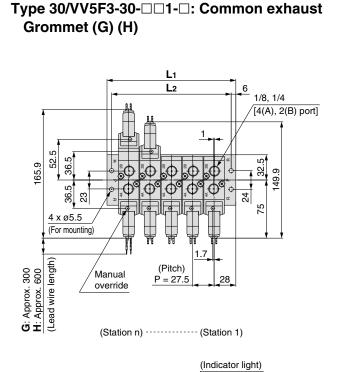

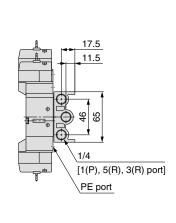


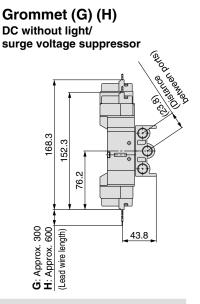

L-type plug connector (L)

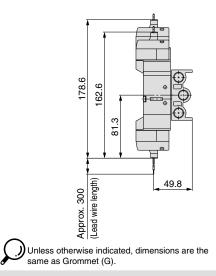

Conduit terminal (T)

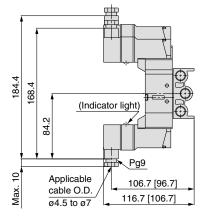

[]: Without indicator light Unless otherwise indicated, dimensions are the same as Grommet (G).


L: Dimensions n: Stations													
L n	2	3	4	5	6	7	8	9	10	11	12	13	14
L1	83.5	111	138.5	166	193.5	221	248.5	276	303.5	331	358.5	386	413.5
L2	71.5	99	126.5	154	181.5	209	236.5	264	291.5	319	346.5	374	401.5

49.5 72.1

2


			20
L1 441 468.5 496	523.5	551	578.5
L2 429 456.5 484	511.5	539	566.5

M-type plug connector (M)

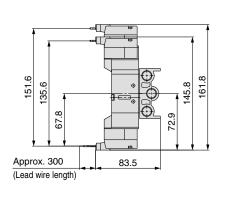

Unless otherwise indicated, dimensions are the same as Grommet (G).


DIN terminal (D) (Y)

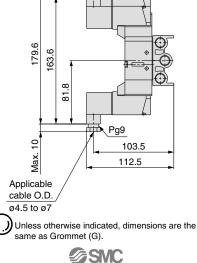



Series VF1000/3000/5000

Series VF3000/Dimensions

Type 30/VV5F3-30-DD1-D: When the individual EXH spacer (VF3000-75-1A) is mounted. Grommet (G) (H)

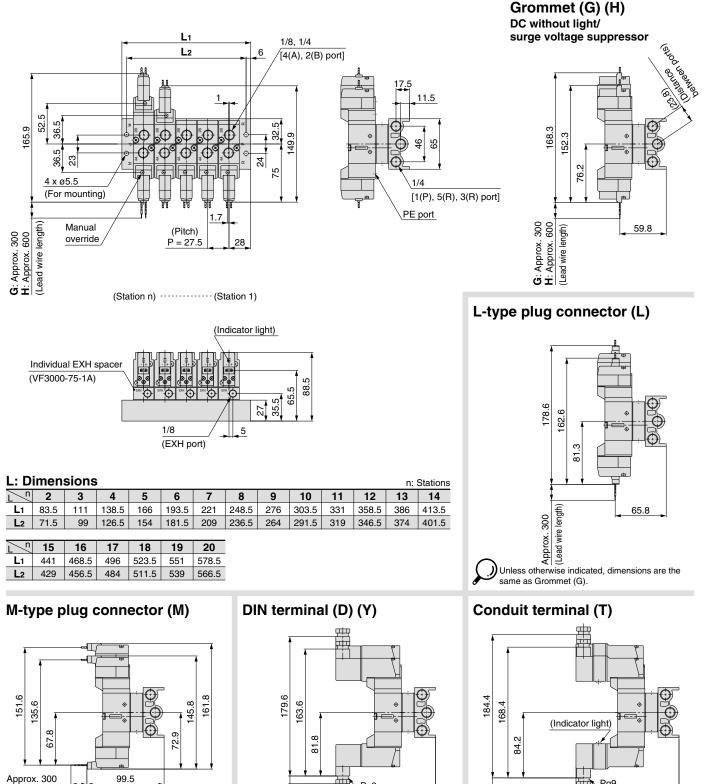





шb Pg9

119.5

₽

Unless otherwise indicated, dimensions are the same as Grommet (G).

SMC

]: Without indicator light Unless otherwise indicated, dimensions are the same as Grommet (G).

9

Max.

Applicable

cable O.D.


ø4.5 to ø7

Pg9

122.7 [112.7]

132.7 [122.7]


Series VF5000/Dimensions

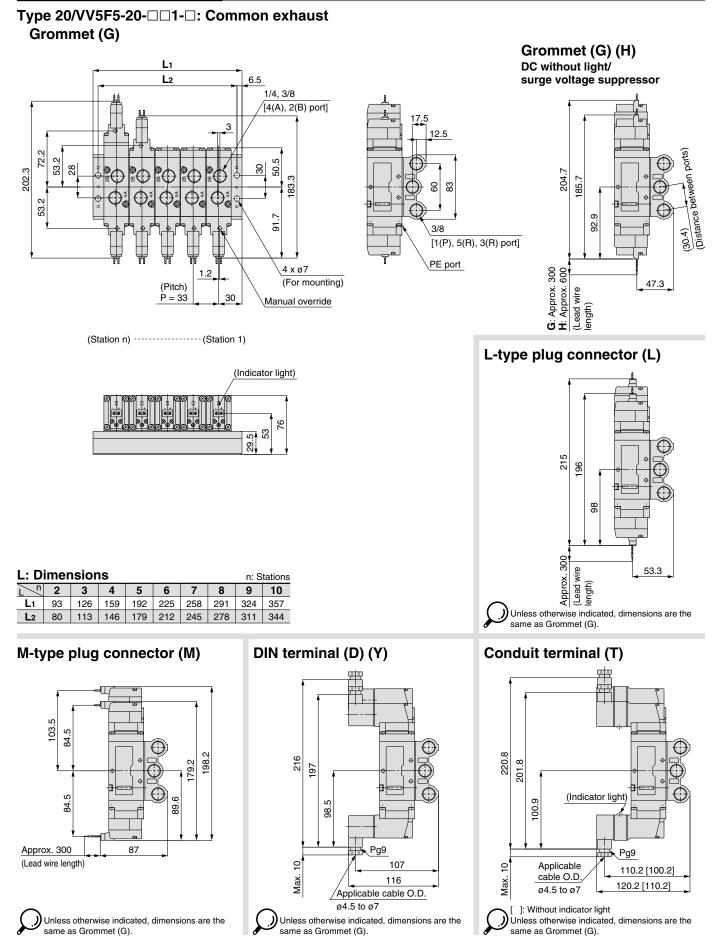


SMC


Series VF1000/3000/5000

Series VF5000/Dimensions



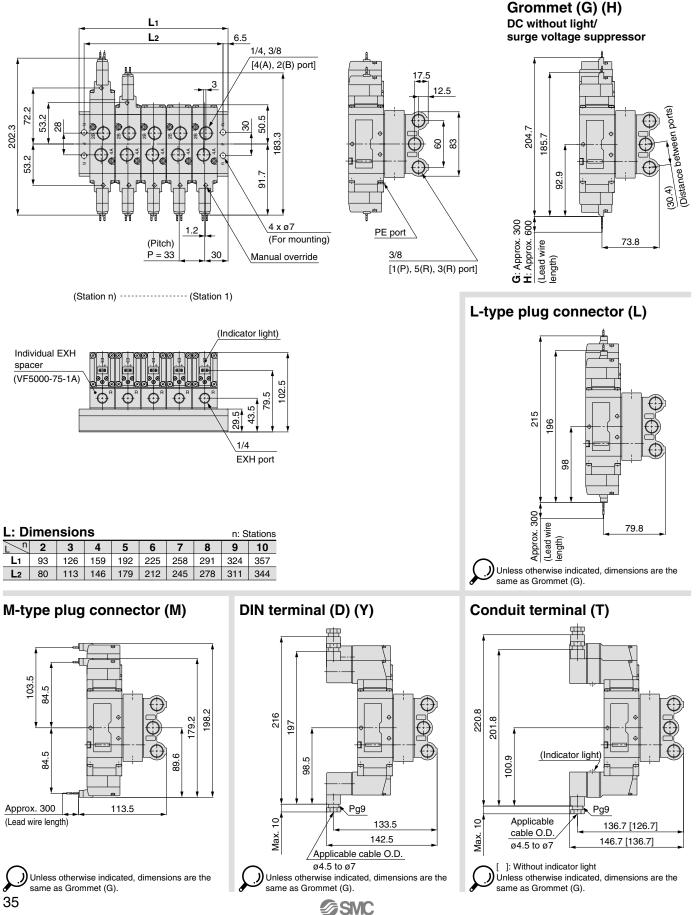


Series VF5000/Dimensions

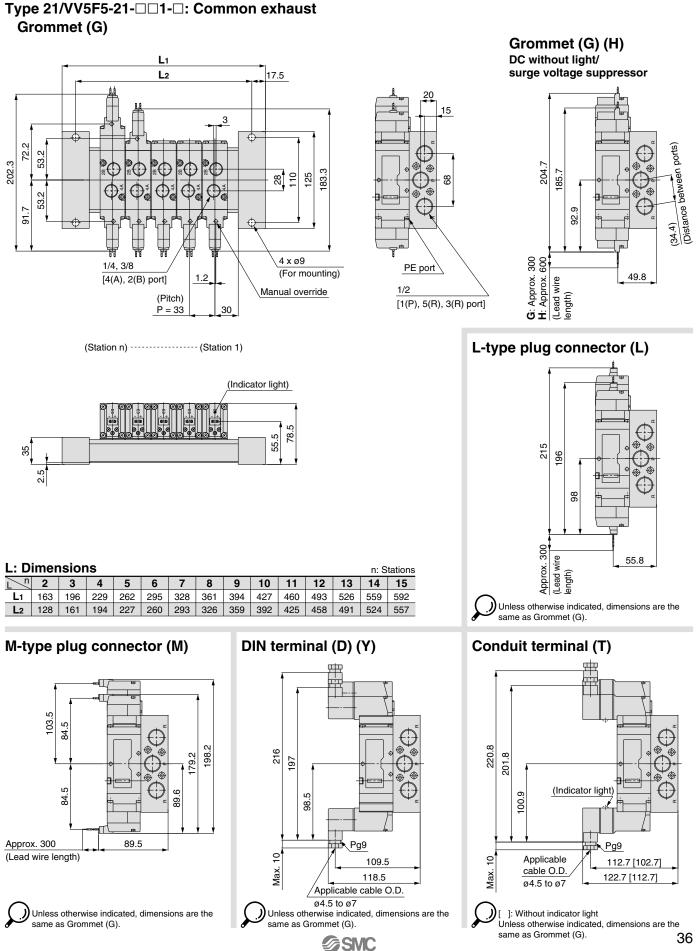


36

Series VF1000/3000/5000


Series VF5000/Dimensions



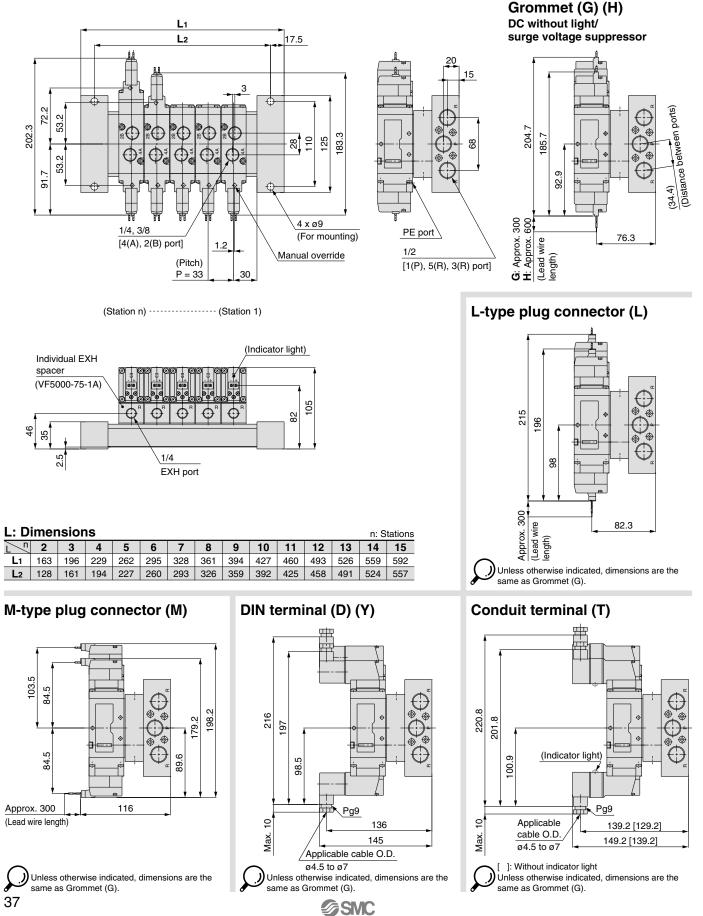

Pilot Operated 5 Port Solenoid Valve Series VF3000/5000 Manifold

Base Mounted

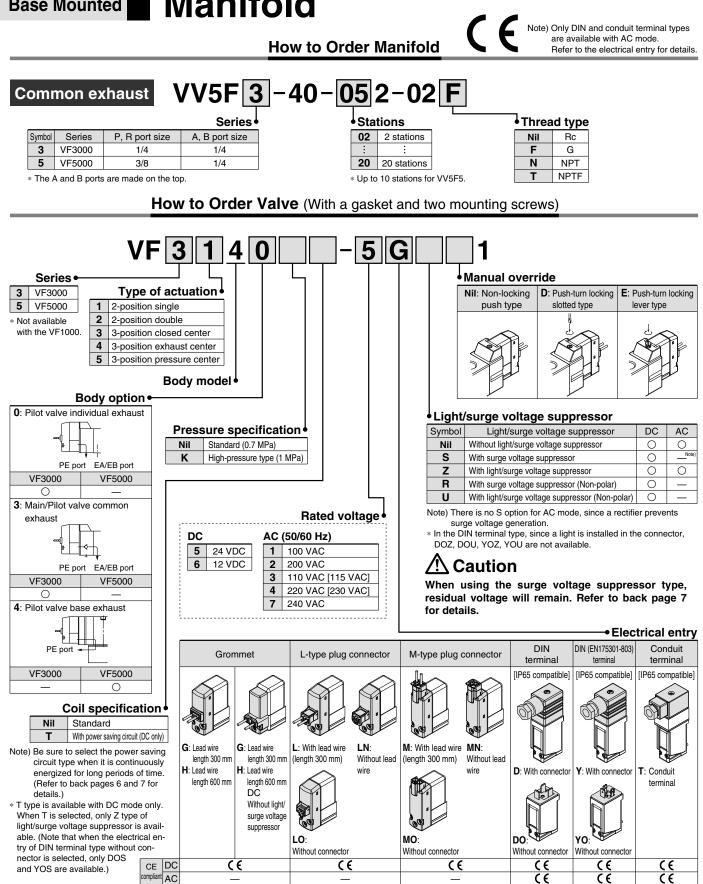

* LN and MN types are with 2 sockets. * Refer to back page 4 when different length of lead wire for L/M-type plug connector is required. * Refer to back page 5 for details on the DIN (EN175301-803) terminal.

Note) When using with IP65, select the main/pilot valve common exhaust or pilot valve base exhaust type.


Pilot Operated 5 Port Solenoid Valve Base Mounted/Manifold Series VF3000/5000

Manifold Specifications


Series	Manifold base model	EXH port type	Applicable valve model	Applicable stations	Manifold base Mass: W [g] Stations: n
VF3000	VV5F3-40 5(R), 3(R) port 1/4 1/4 4(A), 2(B) port 1/4	Common EXH	VF3□40 VF3□43	2 to 20 stations	W= 110n + 116
VF5000	VV5F5-40 5(R), 3(R) port 3/8 1(P) port 3/8 4(A), 2(B) port 1/4	Common EXH	VF5⊡44	2 to 10 stations	W= 161n + 128

Note) Supply pressure to 1(P) ports and exhaust pressure from R ports on both sides for 10 stations or more (5 stations or more for the VF5000).

How to Order Manifold Assembly

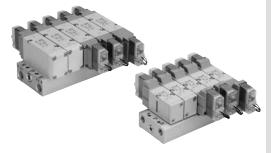

Example (VV5F3-40)

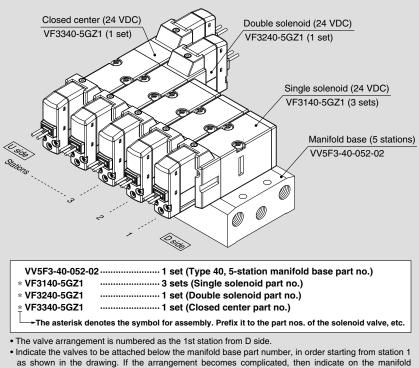


SMC

specification sheet.


Series VF3000/5000

Manifold Options

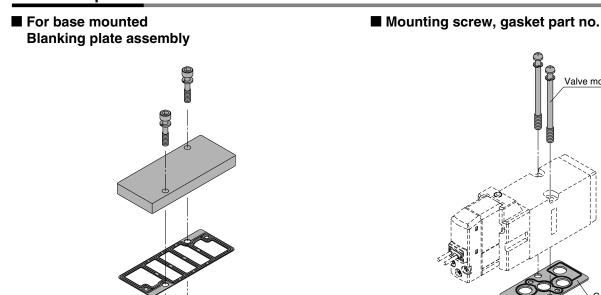


Series	Blanking plate assembly part no.
VF3000	DXT031-38-5A
VF5000	VF5000-70-2A

■ Individual EXH spacer assembly

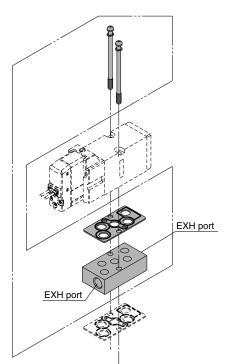

VF3000-75-2A

•Serie	S		Threa	d type
Symbol	Series	Port size	Nil	Rc
3	VF3000	1/8	F	G
5	VF5000	1/4	Ν	NPT
			т	NPTF

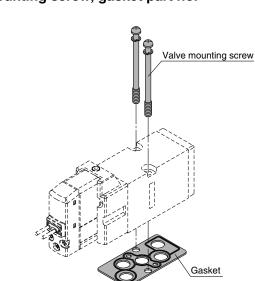

Series	Valve mounting screw (1 pc.)	Gasket
VF3000	Round head combination screw DXT031-44-1 (With M4 x 39.5 SW)	DXT031-31-11
VF5000	Hexagon socket head cap screw AXT620-32-1 (With M4 x 48 SW)	DXT156-9-8

\land Caution


Tightening Torque of Mounting Screw

M2: 0.16 N·m M3: 0.8 N·m M4: 1.4 N·m

A Warning

When mounting a valve or spacer on the manifold base or sub-plate, etc., the mounting orientation is already decided. If mounted in a wrong direction, the equipment to be connected may result in malfunction. Refer to external dimensions in mounting.

Series VF3000/Dimensions

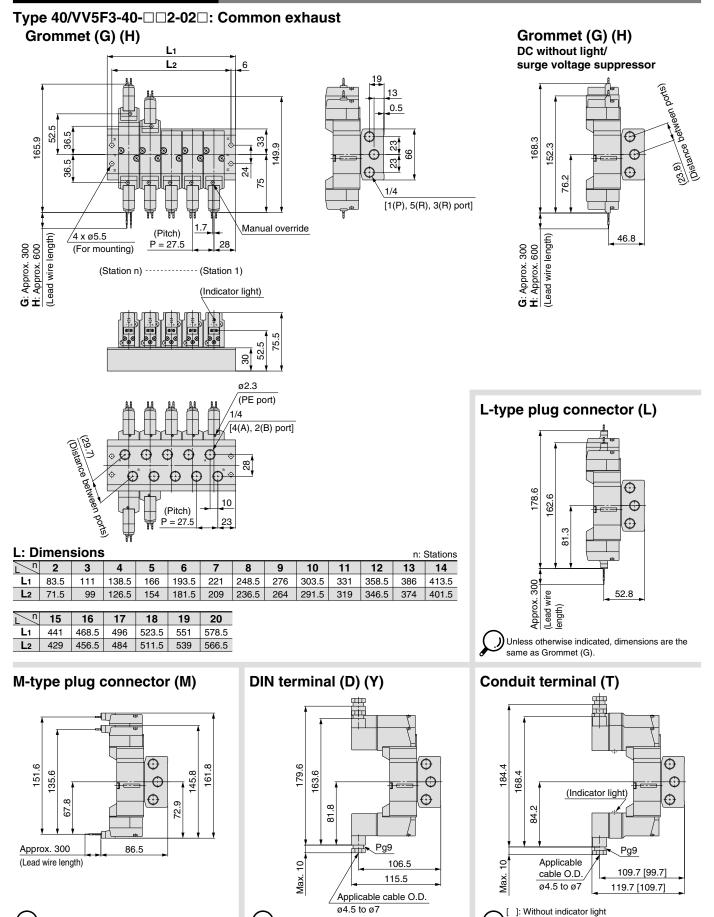

Unless otherwise indicated, dimensions are the same as Grommet (G).




Unless otherwise indicated, dimensions are the

Unless otherwise indicated, dimensions are the


same as Grommet (G).

Series **VF3000/5000**

Series VF3000/Dimensions

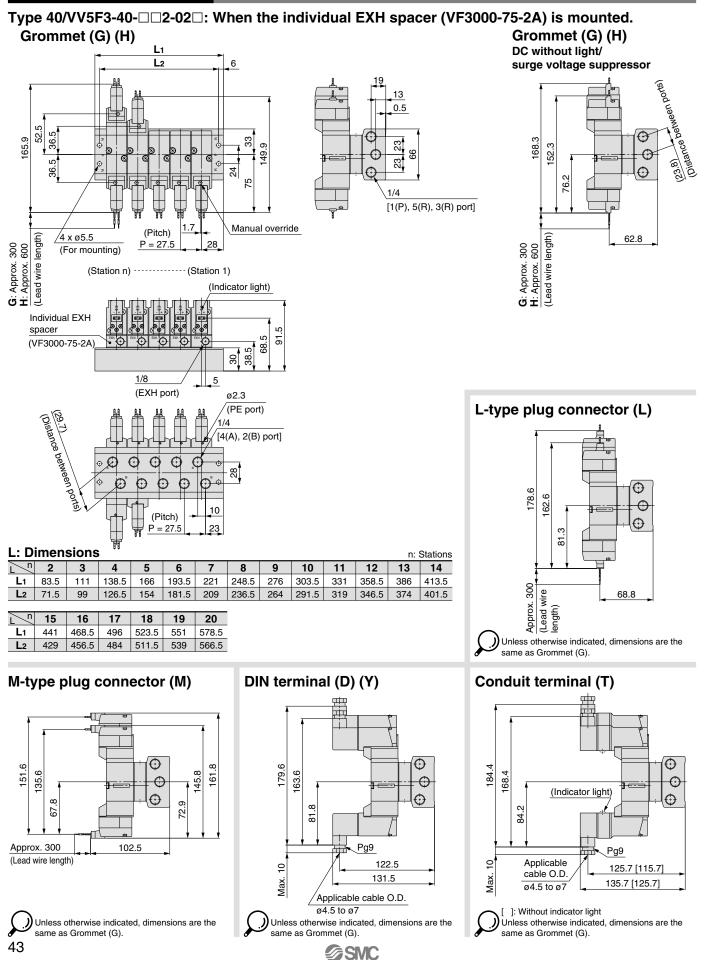


Series VF5000/Dimensions

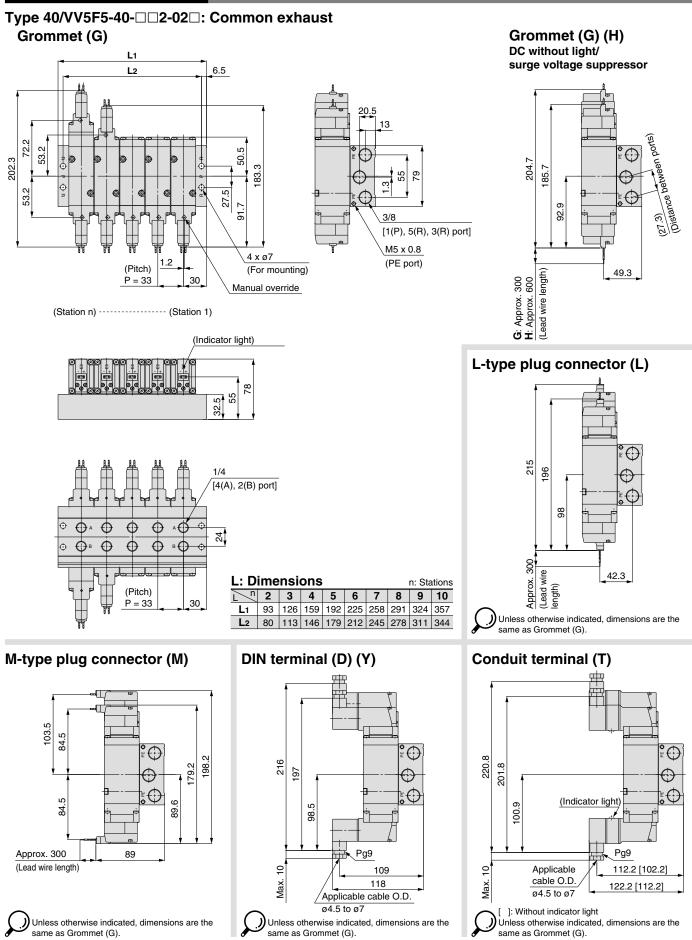

SMC

Series **VF3000/5000**

Series VF5000/Dimensions

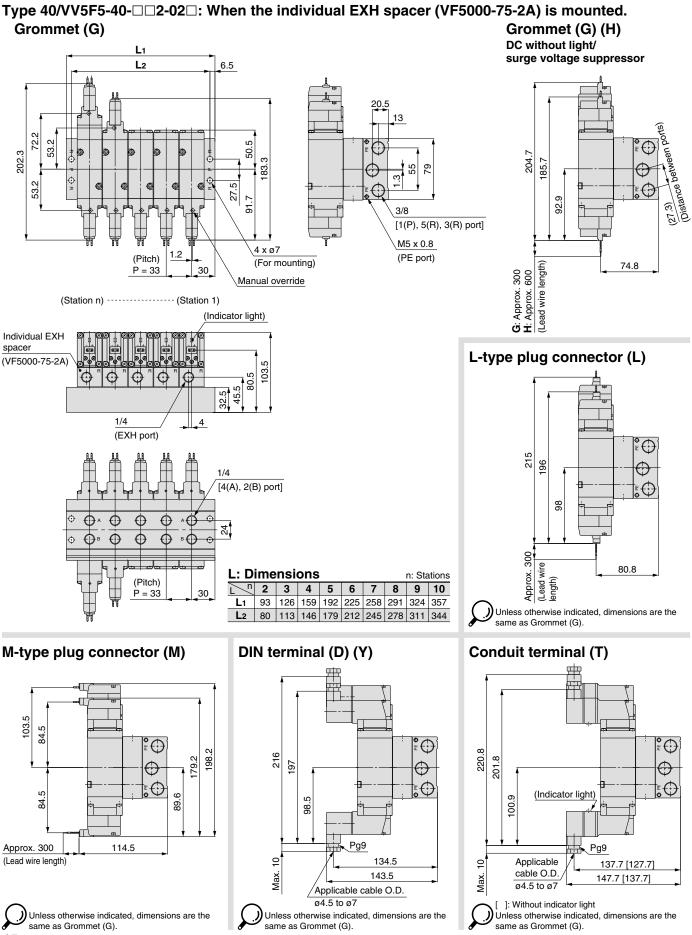

SMC

45

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC), Japan Industrial Standards (JIS)^{*1} and other safety regulations^{*2}).

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1992: Manipulating industrial robots - Safety.

JIS B 8370: General rules for pneumatic equipment.

- JIS B 8361: General rules for hydraulic equipment.
- JIS B 9960-1: Safety of machinery Electrical equipment of machines. (Part 1: General requirements)
- JIS B 8433-1993: Manipulating industrial robots Safety.

etc.

*2) Labor Safety and Sanitation Law, etc.

<u>∕</u> Danger

Caution: Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

н

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

- 2. Only personnel with appropriate training should operate machinery and equipment. The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.
- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.

3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

SMC

Safety Instructions

ACaution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered. $^{*3)}$

Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.

- For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - *3) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

When the product is exported, strictly follow the laws required by the Ministry of Economy, Trade and Industry (Foreign Exchange and Foreign Trade Control Law).



Be sure to read before handling.


Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

Manual Override

MWarning


Without an electric signal for the solenoid valve the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

Non-locking push type

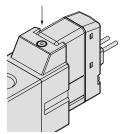

Push down on the manual override with a small screwdriver until it stops. Release the screwdriver and the manual override will return.


Push-turn locking slotted type

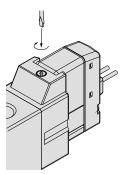

Locked condition

Push down on the manual override with a small flat head screwdriver until it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to release it.

Push-turn locking lever type

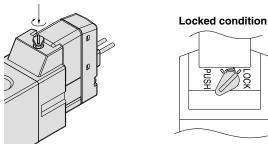

After pushing down, turn in the direction of the arrow. If it is not turned, it can be operated the same way as the non-locking push type.

ACaution

When locking the manual override with the push-turn locking type (D or E type), be sure to push it down before turning.

Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage, etc.

Do not apply excessive torque when turning the locking type manual override. (0.1 $N{\cdot}m)$

Back page 3


SMC

How to Use L/M-Type Plug Connector

▲Caution


1. Attaching and detaching connectors

- To attach a connector, hold the lever and connector unit between your fingers and insert straight onto the pins of the solenoid valve so that the lever's pawl is pushed into the groove and locks.
- To detach a connector, remove the pawl from the groove by pushing the lever downward with your thumb, and pull the connector straight out.

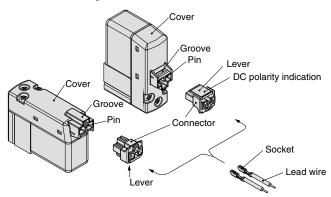

2. Crimping lead wires and sockets

Not necessary if ordering the lead wire pre-connected model. Strip 3.2 to 3.7 mm at the end of the lead wires, insert the ends of the core wires evenly into the sockets, and then crimp with a crimping tool. When this is done, take care that the coverings of the lead wires do not enter the core wire crimping area. (Please contact SMC for details on the crimping tool.)

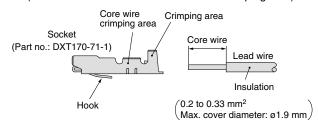


3. Attaching and detaching sockets with lead wire • Attaching

Insert the sockets into the square holes of the connector (+, - indication), and continue to push the sockets all the way in until they lock by hooking into the seats in the connector. (When they are pushed in, their hooks open and they are locked automatically.) Then, confirm that they are locked by pulling lightly on the lead wires.

Detaching

To detach a socket from a connector, pull out the lead wire while pressing the socket's hook with a stick having a thin tip (approx. 1 mm). If the socket will be used again, first spread the hook outward.






Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

Plug Connector Lead Wire Length

ACaution

Plug connector lead wires have a standard length of 300 mm, however, the following lengths are also available.

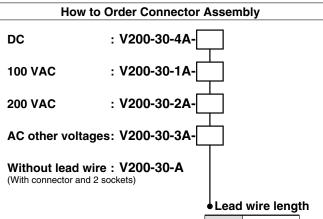

• Lead wire lengt							
Nil	300 mm						
6	600 mm						
10	1000 mm						
15	1500 mm						
20	2000 mm						
25	2500 mm						
30	3000 mm						
50	5000 mm						

How to Order

Include the connector assembly part number together with the part number for the plug connector's solenoid valve without connector.

(Example) 2000 mm lead wire length

DC	AC
VF3130-5LO1-02	VF3130-1LO1-02
V200-30-4A-20	V200-30-1A-20

How to Use DIN Terminal

The DIN terminal type with an IP65 (enclosure) is protected against dust and water, however, it must not be used in water.

▲Caution

Connection

- 1) Loosen the set screw and pull the connector out of the solenoid valve terminal block.
- 2) After removing the set screw, insert a flat head screwdriver, etc. into the notch on the bottom of the terminal block and pry it open, separating the terminal block and the housing.
- Loosen the terminal screws on the terminal block, insert the core of the lead wire into the terminal, and attach securely with the terminal screws.

In addition, when using the DC mode type with a surge voltage suppressor (polar: S and Z types), connect wires corresponding to the polarity (+ or –) that is printed on the terminal block.

4) Tighten the ground nut to secure the wire. In the case of connecting wires, select cabtire cords carefully because if those out of the specified range (Ø4.5 to Ø7) are used, it will not be able to satisfy IP65 (enclosure). Tighten the ground nut and set screw within the specified range of torque.

Changing the entry direction

After separating terminal block and housing, the cord entry direction can be changed by attaching the housing in the opposite direction.

 \ast Make sure not to damage elements, etc., with the lead wires of the cord.

Precautions

Plug in and pull out the connector vertically without tilting to one side.


Applicable cable

Cable O.D.: ø4.5 to ø7

(Reference) 0.5 mm² to 1.5 mm², 2-core or 3-core, equivalent to JIS C 3306

Applicable crimped terminal

O terminal: R1.25-4M that is specified in JIS C 2805 Y terminal: 1.25-3L, which is released by JST Mfg. Co., Ltd. Stick terminal: Size 1.5 or shorter

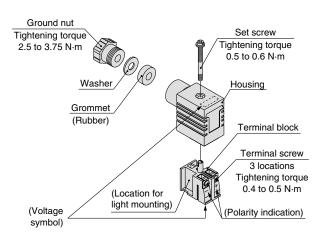


Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.


DIN (EN175301-803) Terminal

Y type DIN terminal corresponds to the DIN connector with terminal pitch 10 mm, which complies with EN175301-803B. Since the terminal pitch is different from the D type DIN connector, these two types are not interchangeable.

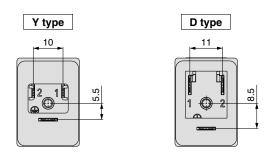


How to Order DIN Connector

ACaution

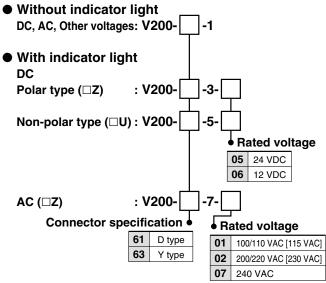


Circuit diagram with light/surge voltage suppressor



DC (□U) circuit diagram



LED: Light emitting diode D: Protective diode R: Resistor



AC (□Z) circuit diagram



NL: Neon bulb, R: Resistor Back page 5

How to Use Conduit Terminal

▲Caution

Connection

- 1) Loosen the set screw and remove the terminal block cover from the terminal block.
- 2) Loosen the terminal screws on the terminal block, insert the core of the lead wire or crimped terminal
 - into the terminal, and attach securely with the terminal screws.


In addition, when using the DC mode type with a surge voltage suppressor (polar: S and Z types), connect wires to terminal 1 and 2 corresponding to the polarity (+ or -) as shown on the right figure.



3) Secure the cord by fastening the ground nut.

In the case of connecting wires, select cabtire cords carefully because if those out of the specified range (Ø4.5 to Ø7) are used, it will not be able to satisfy IP65 (enclosure).

Tighten the ground nut and set screw within the specified range of torgue.

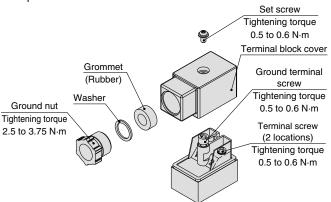

Applicable cable

Cable O.D.: ø4.5 to ø7

(Reference) 0.5 $\rm mm^2$ to 1.5 $\rm mm^2,$ 2-core or 3-core, equivalent to JIS C 3306

Applicable crimped terminal

O terminal: Equivalent to R1.25-3 that is specified in JIS C 2805 Y terminal: Equivalent to 1.25-3, which is released by JST Mfg. Co., Ltd.

* Use O terminal when a ground terminal is used.




Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

Leakage Voltage

≜Caution

Especially when a resistor and a switching element are used in parallel or C-R device (surge voltage suppressor) is used for the protection of the switching device, note that leakage voltage will be increased by passing leakage voltage through the resistor and C-R device. Therefore, suppressor residual leakage voltage should be as follows.



DC coil

3% or less of the rated voltage

AC coil

8% or less of the rated voltage

Continuous Duty

ACaution


- If a valve is energized continuously for long periods of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energized continuously for long periods of time, or the total energizing time per day becomes longer than the non-energizing time, use a valve with power saving circuit.
- When the valve is mounted onto a control panel, take measures against radiation in order to keep the valve temperature within the specified range.


Light/Surge Voltage Suppressor

▲Caution

<DC> ■ Polar type


With surge voltage suppressor (\Box S)






DIN or Conduit terminal
 With light/surge voltage suppressor (□Z)

Polarity protection diode




Non-polar type


With surge voltage suppressor $(\Box R)$



Grommet or L/M-type plug connector
 With light/surge voltage suppressor (□U)



DIN or Conduit terminal
 With light/surge voltage suppressor (□U)



- Please connect correctly the lead wires to + (positive) and (negative) indications on the connector. (For non-polar type, the lead wires can be connected to either one.)
- When the valve with polarity protection diode is used, the voltage will drop by approx. 1 V. Therefore, pay attention to the allowable voltage fluctuation (For details, refer to the solenoid specification of each type of valve).
- Solenoids, whose lead wires have been pre-wired: + (positive) side red and – (negative) side black.





Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

Light/Surge Voltage Suppressor


≜Caution

With power saving circuit


Power consumption is decreased by approx. 1/3 by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 40 ms at 24 VDC.)

Refer to the electrical power waveform as shown below.

<Electrical power waveform of energy saving type>

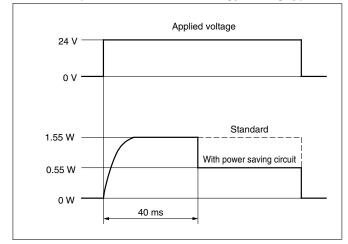


• Since the voltage will drop by approx. 0.5 V due to the transistor, pay attention to the allowable voltage fluctuation. (For details, refer to the solenoid specifications of each type of valve.)

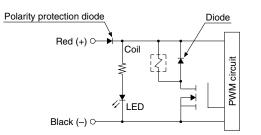


<AC>

There is no S option, since a rectifier prevents surge voltage generation.

● Grommet or L/M-type plug connector With light/surge voltage suppressor (□Z)



 DIN or Conduit terminal With light/surge voltage suppressor (□Z)



Light/Surge Voltage Suppressor

▲Caution

Residual voltage of the surge voltage suppressor

Note) if a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the table below and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the specifications on page 2 and 16.

Residual Voltage

	D	40	
Surge voltage suppressor	24 V	12 V	AC
S, Z	Appro	Approx. 1 V	
R, U	Approx. 47 V	Approx. 32 V	—

Countermeasure for Surge Voltage Intrusion

≜Caution

With non-polar type solenoid valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and the solenoid valve in a deenergized state may switch over (see Figure 1).

When installing a breaker circuit for the loading power supply, consider using a solenoid valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).



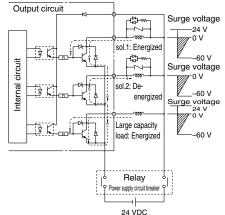


Figure 1. Surge intrusion circuit example (NPN outlet example) (24 VDC)

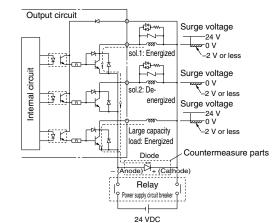



多SMC

Back page 7



Be sure to read before handling. Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for 3/4/5 Port Solenoid Valves Precautions.

One-touch Fittings Precautions

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogs.

Fittings whose compliance with the VF series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

Applicable Fittings: Series KQ2H, KQ2S


Series	Madal	Diping part	Port size			Applie	cable tubing	O.D.					
Series	Model	Piping port	Port size	ø3.2	ø4	ø6	ø8	ø10	ø12	ø16			
	VF1□20-□□-M5	4(A), 2(B)	M5										
		5(EA), 3(EB)	M5										
	VF1□20-□□-01	4(A), 2(B)	1/8										
		5(EA), 3(EB)	M5										
VF1000	VF1□3□-□□-M5	4(A), 2(B)	M5										
	VF1□3□-□□-01	4(A), 2(B)	1/8										
	Type 30 manifold base	1(P), 5/3(R)	1/8										
	Turne 01 menifold been	1(P)	1/8										
	Type 31 manifold base	5(EA), 3(EB)	M5										

Corioo	Model	Diping part	Port size	03.2 04 06 08 010 012						
	woder	Piping port	Port size	ø3.2	ø4	ø6	ø8	ø10	ø12	ø16
	VF3□3□-□□-01	4(A), 2(B)	1/8							
	VF3L3L-LL-UI	1(P), 5(EA), 3(EB)	1/8							
	VF3□3□-□□-02	4(A), 2(B)	1/4							
	VF3LJL-LL-UZ	1(P), 5(EA), 3(EB)	P: 1/4, EA, EB: 1/8							
	VF3□4□-□□-02	4(A), 2(B)	1/4							
VF3000	VF3U4U-UU-UZ	1(P), 5(EA), 3(EB)	1/4							
	VF3□4□-□□-03	4(A), 2(B)	3/8							
	VF3U4U-UU-U3	1(P), 5(EA), 3(EB)	3/8							
	Type 30 manifold base	1(P), 5(R), 3(R)	1/4							
	Tune 40 menifold been	4(A), 2(B)	1/4							
	Type 40 manifold base	1(P), 5(R), 3(R)	1/4							

Cariaa	Model	Dining next	Port size			Appli	cable tubing	g O.D.		
Series	woder	Piping port Port size	Port size	ø3.2	ø4	ø6	ø8	ø10	ø12	ø16
	VF5□2□-□□-02	4(A), 2(B)	1/4					1		
		1(P), 5(EA), 3(EB)	1/4					1		
		4(A), 2(B)	3/8					1		
	VF5□2□-□□-03	1(P), 5(EA), 3(EB)	3/8					1		
	VF5□44-□□-02	4(A), 2(B)	1/4					1		
		1(P), 5(EA), 3(EB)	1/4					1		
VF5000	VF5□44-□□-03	4(A), 2(B)	3/8					1		
VF5000	VF3⊡44-⊡⊡-03	1(P), 5(EA), 3(EB)	3/8					1		
		4(A), 2(B)	1/2							
	VF5□44-□□-04	1(P), 5(EA), 3(EB)	1/2							
	Type 20 manifold base	1(P), 5(R), 3(R)	3/8							
	Type 21 manifold base	1(P), 5(R), 3(R)	1/2							
	Tune 40 menifold been	4(A), 2(B)	1/4		I	1	I	1		
	Type 40 manifold base	1(P), 5(R), 3(R)	3/8				1	I		



SMC'S GLOBAL MANUFACTURING, DISTRIBUTION AND SERVICE NETWORK

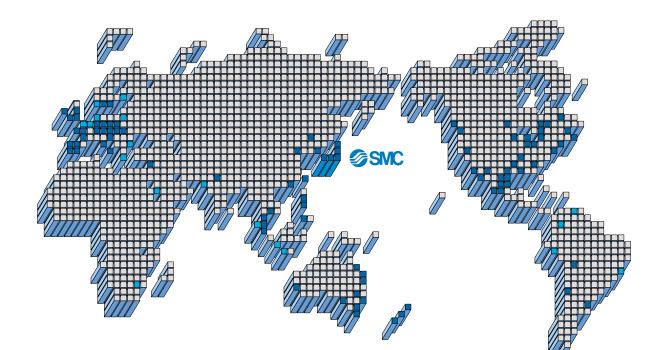

EUROPE

AUSTRIA SMC Pneumatik GmbH (Austria) BELGIUM

SMC Pneumatics N.V./S.A. BULGARIA SMC Industrial Automation Bulgaria Eood

CROATIA SMC Industrijska Automatika d.o.o.

CZECH REPUBLIC SMC Industrial Automation CZ s.r.o.

DENMARK SMC Pneumatik A/S ESTONIA

SMC Pneumatics Estonia OÜ FINLAND

SMC Pneumatics Finland Oy FRANCE

SMC Pneumatique SA

SMC Pneumatik GmbH GREECE

SMC Hellas E.P.E. HUNGARY

SMC Hungary Ipari Automatizálási Kft. IRELAND SMC Pneumatics (Ireland) Ltd. ITALY SMC Italia S.p.A.

LATVIA SMC Pnuematics Latvia SIA LITHUANIA UAB "SMC Pneumatics"

NETHERLANDS

SMC Pneumatics B.V. NORWAY SMC Pneumatics Norway AS POLAND SMC Industrial Automation Polska Sp.z.o.o. ROMANIA

SMC Romania S.r.l. **RUSSIA** SMC Pneumatik LLC

SLOVAKIA SMC Priemyselná Automatizácia Spol s.r.o. SLOVENIA SMC Industrijska Avtomatika d.o.o. SPAIN/PORTUGAL

SMC España S.A. **SWEDEN** SMC Pneumatics Sweden AB **SWITZERLAND** SMC Pneumatik AG

U.K. SMC Pneumatics (U.K.) Ltd.

ASIA

CHINA SMC (China) Co., Ltd. HONG KONG SMC Pneumatics (Hong Kong) Ltd. INDIA SMC Pneumatics (India) Pvt. Ltd. MALAYSIA SMC Pneumatics (S.E.A.) Sdn. Bhd. PHILIPPINES Shoketsu SMC Corporation SINGAPORE SMC Pneumatics (S.E.A.) Pte. Ltd. SOUTH KOREA SMC Pneumatics Korea Co., Ltd. TAIWAN SMC Pneumatics (Taiwan) Co., Ltd. THAILAND SMC (Thailand) Ltd.

NORTH AMERICA -

CANADA SMC Pneumatics (Canada) Ltd. MEXICO SMC Corporation (Mexico), S.A. de C.V. U.S.A. SMC Corporation of America

SOUTH AMERICA -

ARGENTINA SMC Argentina S.A. BOLIVIA SMC Pneumatics Bolivia S.r.I. BRAZIL SMC Pneumáticos do Brasil Ltda CHILE SMC Pneumatics (Chile) S.A. VENEZUELA SMC Neumatica Venezuela S.A.

OCEANIA

AUSTRALIA SMC Pneumatics (Australia) Pty. Ltd. NEW ZEALAND SMC Pneumatics (N.Z.) Ltd.

A Safety Instructions Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

SMC Corporation

Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362 URL http://www.smcworld.com © 2009 SMC Corporation All Rights Reserved

Specifications are subject to change without prior notice and any obligation on the part of the manufacturer. D-DN 1st printing NP printing NP 16400DN Printed in Japan. This catalog is printed on recycled paper with concern for the global environment.