
# Electro-Pneumatic Regulator/ Electronic Vacuum Regulator C 든 분석

# For the stepless control of air pressure in proportion to electrical signals



CAT.ES60-15G ©

#### Electro-Pneumatic Regulator/Electronic Vacuum Regulator ITV Series

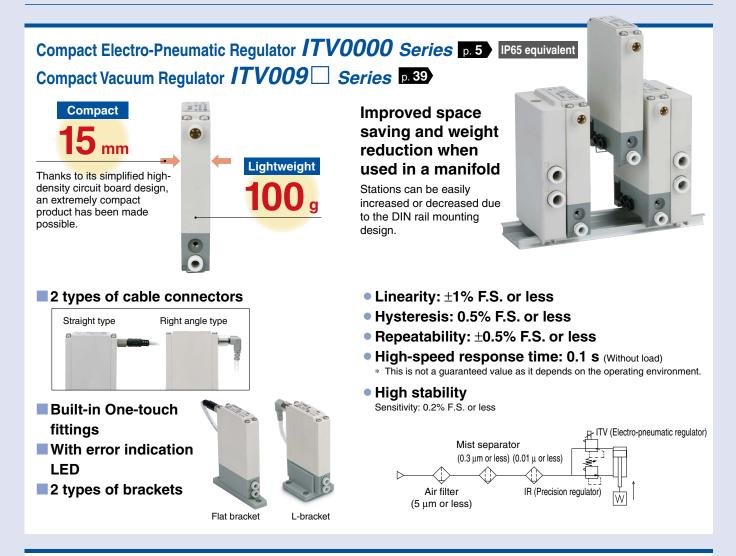

Electro-Pneumatic Regulator *ITV1000/2000/3000 Series* p. 13 IP65 Electronic Vacuum Regulator *ITV209* Series **D**.46










- Sensitivity: 0.2% F.S. or less
- Linearity: ±1% F.S. or less
- Hysteresis: 0.5% F.S. or less
- Cable connections in 2 directions

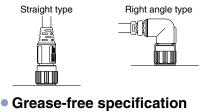


(ITV1000 series)




ITV2090



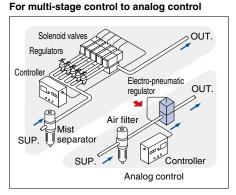


**SMC** 

For electrostatic coating control

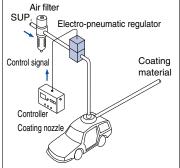

## IO-Link Compatible Devices: Electro-Pneumatic Regulator ITV100/200/3000-IL p. 13 Electronic Vacuum Regulator ITV2090-IL p. 46

IO-Link communication enables users to check device information and monitor device status in addition to performing pressure control.

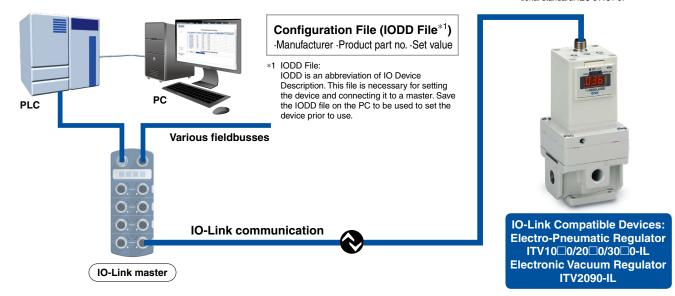

## The IO-Link master and device can be connected with one cable.

Only a single cable combining the communication wire and the power supply wire is required.

#### **Uses 4-wire unshielded cables**

#### Special communication cables are not necessary.

A conventional 4-wire unshielded cable can be used for the input and output of sensors, switches, etc.

(Recommended specifications: Conductor resistance 3  $\Omega$ , Wire-to-wire capacitance 3 nF or less, 20 m or less)

## Implement diagnostic bits in the process data.

The diagnostic bit in the cyclic process data makes it easy to find problems with the equipment.

It is possible to find problems with the equipment in real time using the cyclic (periodic) data and to monitor such problems in detail with the noncyclic (aperiodic) data.

#### Process Data

Value



- $\cdot$  Output pressure is within the set pressure  $\pm 10\%$
- · Notification of energizing time
- Residual pressure error
- Target value over range
   Pressure under range (LLL)
- Pressure over range (HHH)
- Power supply voltage drop
- Excessive power supply voltage
- Warning occurred
- · Internal communication error

Process	rocess Data															
<pd_in: 4="" b<="" td=""><td colspan="9"><pre>PD_IN: 4 bytes&gt;</pre></td></pd_in:>	<pre>PD_IN: 4 bytes&gt;</pre>															
Byte				(	)								1			
Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Value		Output pressure value (16 bits)														
Byte	2					3										
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Value	Abnormal V			W	Varning Notification S				SSC1							
<pd_out: 2="" bytes=""></pd_out:>																
Byte	0					1										
Bit	15	14	13	12	4.4	10	9	8	7	6	5	4	3	2	-	0

Set pressure value (16 bits)

#### Application

#### For the manufacturing of various products

**IO**-l ink

IO-Link is an open communication interface technology between the sensor/actuator and the I/O terminal that is an interna-

tional standard: IEC 61131-9.

The set pressure analog value can be changed to control the indentation pressure applied to each workpiece. This allows for a variety of products to be manufactured on the same line.

## **Series Variations**

For the stepless control of air pressure in proportion to electrical signals

	Series	Model	Set pressure range	Input signal	Port size	Page
	ITV0000 Series	ITV001□	0.001 to 0.1 MPa	Current type: 4 to 20 mADC (Sink type)		
	Contraction of the second s	ITV003□	0.001 to 0.5 MPa	Current type: 0 to 20 mADC (Sink type) Voltage type: 0 to 5 VDC	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	5
	ß	ITV005□	0.001 to 0.9 MPa	Voltage type: 0 to 3 VDC		
ors	ITV1000 Series	ITV101	0.005 to 0.1 MPa			
Electro-Pneumatic Regulators		ITV103□	0.005 to 0.5 MPa	Current type: 4 to 20 mADC	1/8, 1/4	13
atic R	· · · · · · · · · ·	ITV105	0.005 to 0.9 MPa	(Sink type) Current type: 0 to 20 mADC (Sink type)		
neum	ITV2000 Series	ITV201□	0.005 to 0.1 MPa	Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC		
ctro-P		ITV203□	0.005 to 0.5 MPa	Preset input (4 points/16 points) 10-bit digital input	1/4, 3/8	13
Ele	ان النا ال	ITV205□	0.005 to 0.9 MPa	CC-Link compatible DeviceNet® compatible		
	ITV3000 Series	ITV301	0.005 to 0.1 MPa	PROFIBUS DP compatible IO-Link compatible RS-232C communication		
		ITV303□	0.005 to 0.5 MPa	HS-232C communication	1/4, 3/8, 1/2	13
		ITV305□	0.005 to 0.9 MPa			
Regulators	ITV009 Series	ITV009□	–1 to –100 kPa	Current type: 4 to 20 mADC (Sink type) Current type: 0 to 20 mADC (Sink type) Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	39
Electronic Vacuum Regu	ITV209 Series	ITV209□	–1.3 to –80 kPa	Current type: 4 to 20 mADC (Sink type) Current type: 0 to 20 mADC (Sink type) Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC Preset input (4 points/16 points) 10-bit digital input CC-Link compatible DeviceNet® compatible PROFIBUS DP compatible IO-Link compatible RS-232C communication	1/4	46





#### **Electro-Pneumatic Regulators**

ITV0000 Series
How to Order
Specifications p. 6
Accessories (Option) p. 6
Working Principlep. 7
Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 8
Dimensionsp. 10

#### ITV1000/2000/3000 Series

How to Order
Standard Specifications p. 14
Communication Specificationsp. 14
Modular Products and Accessory Combinationsp. 15
Accessories (Option)/Part Nosp. 15
Working Principle
Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics, Relief Characteristics p. 17
Construction
Dimensions
Made to Orderp. 34

#### **Electronic Vacuum Regulators**

#### ITV009 Series


How to Order	p. 39
Specifications	
Accessories (Option)	p. 40
Working Principle	
Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Cha	
Dimensions ·····	p. 43

#### ITV2090/2091 Series

How to Order
Standard Specifications p. 47
Communication Specificationsp. 47
Working Principle ······p. 48
Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 48
Dimensions p. 49
Accessories (Option) p. 52
Specific Product Precautions

## **Compact Electro-Pneumatic Regulator** ITV0000 Series

#### How to Order

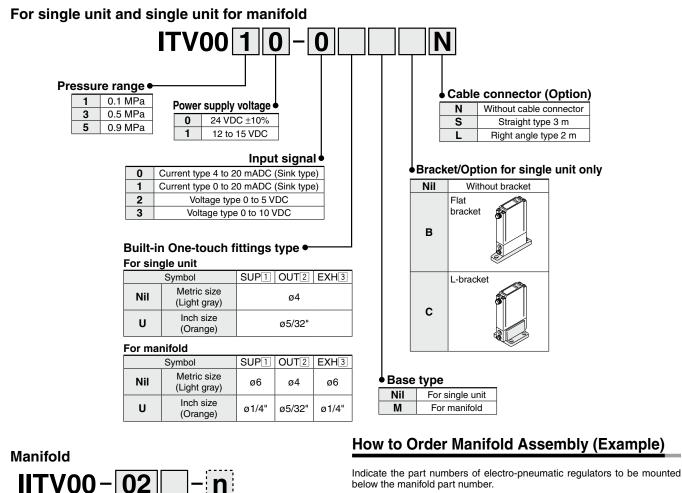

Example)

*∕∂*SMC


Due to the common supply/exhaust feature, note that different pressure range combinations are not available.


#### IITV00-03.....1 set (Manifold part no.)

#### \*ITV0030-3MS......2 sets (Electro-pneumatic regulator part no. (Stations 1, 2)) \*ITV0030-3ML.....1 set (Electro-pneumatic regulator part no. (Station 3))

Indicate part numbers in order starting from the first station on the D side.

- Caution) Combination with having different pressure ranges is not available due to common supply/exhaust features.
- The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the electro-pneumatic regulator.

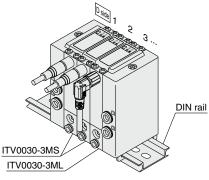

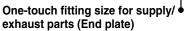

Nil	ø6 (Light gray)					
U	ø1/4" (Orange)					

Stations •

02 2 stations

03 3 stations

10 10 stations

\* A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

Option

two digits.

If a DIN rail longer than

the specified stations is

required, specify the

applicable stations in

Example) IITV00-05-07

(Max. 10 stations)

## Compact Electro-Pneumatic Regulator *ITV0000 Series*

#### Specifications



Mode							
Min. supply press			et pressure + 0.1 MI				
Max. supply press		0.2 MPa		MPa			
Set pressure range	9	0.001 to 0.1 MPa	0.001 to 0.5 MPa	0.001 to 0.9 MPa			
	Voltage	24 V	/DC ±10%, 12 to 15	VDC			
Power supply	Current		voltage 24 VDC type				
	consumption	Power supply voltage 12 to 15 VDC type: 0.18 A or					
Input signal	Voltage type	0	to 5 VDC, 0 to 10 VI	C			
input signal	Current type	4 to 20 m/	ADC, 0 to 20 mADC	(Sink type)			
Input impedance	Voltage type		Approx. 10 k $\Omega$				
input impedance	Current type	Approx. 250 Ω					
Output signal*2	Analog output	1 to 5 VDC (Output impedance: Approx. 1 k $\Omega$ )					
Output signal	Analog output	Output accuracy: ±6% F.S. or less					
Linearity		±1% F.S. or less					
Hysteresis		0.5% F.S. or less					
Repeatability		±0.5% F.S. or less					
Sensitivity		0.2% F.S. or less					
Temperature chara	acteristics	±0.12% F.S./°C or less					
Operating temperation	ature range	0 to 50°C (No condensation)					
Enclosure		Equivalent to IP65*3					
Connection type		Bu	uilt-in One-touch fittir	ngs			
		Metric size	1, 2,	3:ø4			
Connection size	For single unit	Inch size	1, 2, 3	B: ø5/32"			
Connection size	Manifald	Metric size	1, 3: ø	6, 2: ø4			
	Manifold	Inch size	1, 3: ø1/4	", 2: ø5/32"			
Weight*1		100 g	g or less (Without op	tions)			
*1 Indicatos the woir	nht of a single un	it	- · · ·				

\*1 Indicates the weight of a single unit

For IITV00-n

- Total weight (g) ≤ Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail
- \*2 When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 k $\Omega$ , the analog output monitor accuracy of ±6% F.S. or less may not be available. The product with an accuracy of within  $\pm 6\%$  is supplied upon your request.
  - Output pressure remains unaffected.
- \*3 When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole before use. (For details, refer to "Specific Product Precautions 1" on page 53.)
- \* When there is a downstream flow consumption, pressure may become unstable depending on
- biping conditions. When the input signal is at 0%, the exhaust solenoid valve is controlled to reduce the outlet When the input signal is at 0%, the exhaust solenoid valve is controlled to reduce the outlet pressure to zero. For this reason, a noise may be generated. This noise is normal and does not indicate a fault.

#### Accessories (Option)

#### Bracket


Flat bracket assembly (including 2 mounting screws) P39800022



#### L-bracket assembly (including 2 mounting screws) P39800023



Tightening torque when assembling is 0.3 N·m.

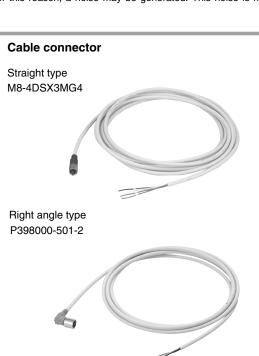

regulators Electro-Pheumatic ITV1000/2000/3000 **TV009** 

ITV0000


6

**SMC** 


## ITV0000 Series

#### **Working Principle**

When the input signal rises, the air supply solenoid valve (1) turns ON. Due to this, part of the supply pressure passes through the air supply solenoid valve (1) and changes to output pressure. This output pressure feeds back to the control circuit (4) via the pressure sensor (3). Here, pressure corrections continue until output pressure becomes proportional to the input signal, enabling output pressure that is proportional to the input signal.

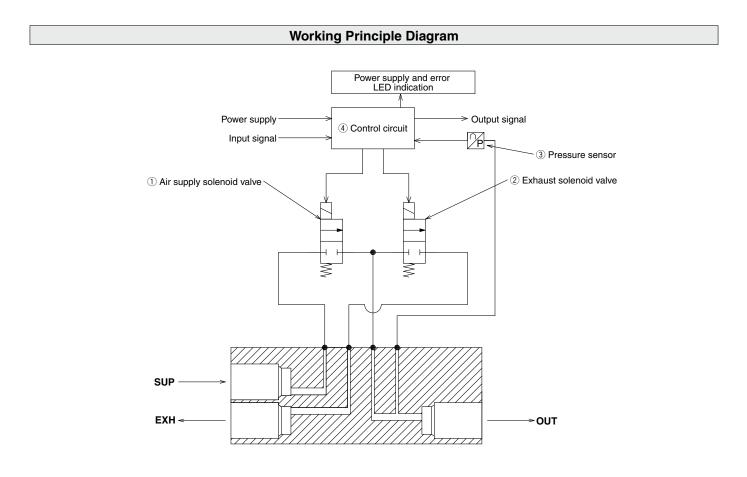


#### **Block Diagram**

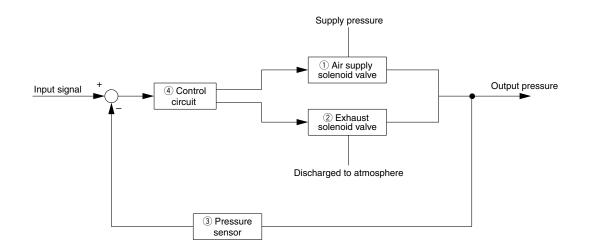




## Compact Electro-Pneumatic Regulator *ITV0000 Series*

#### ITV001 Series

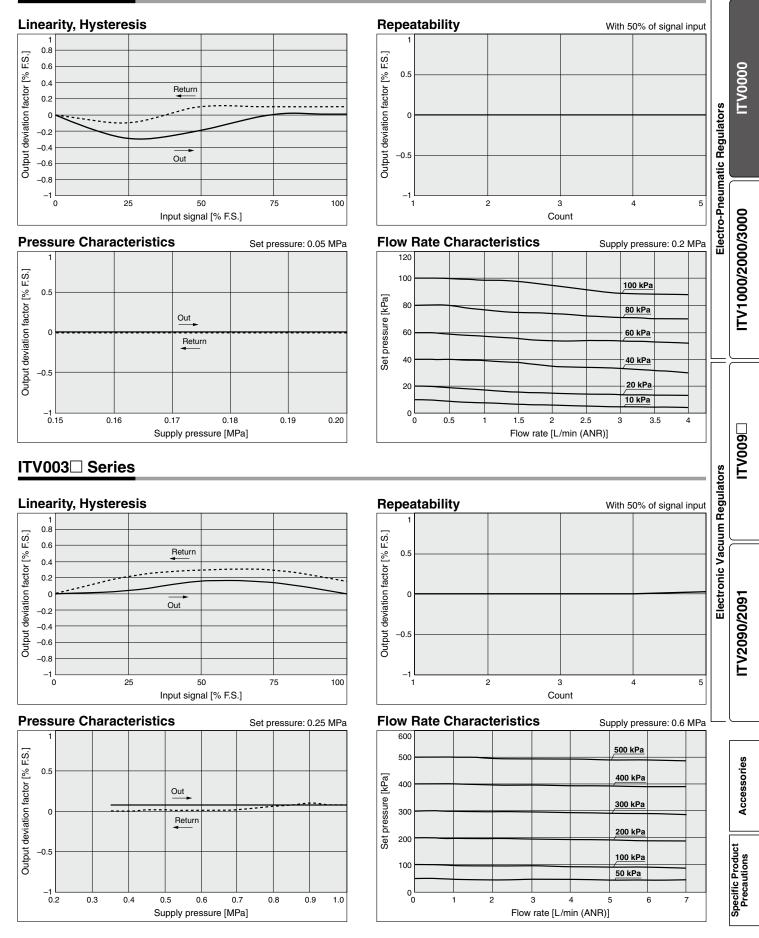


## ITV0000 Series

#### ITV005 Series

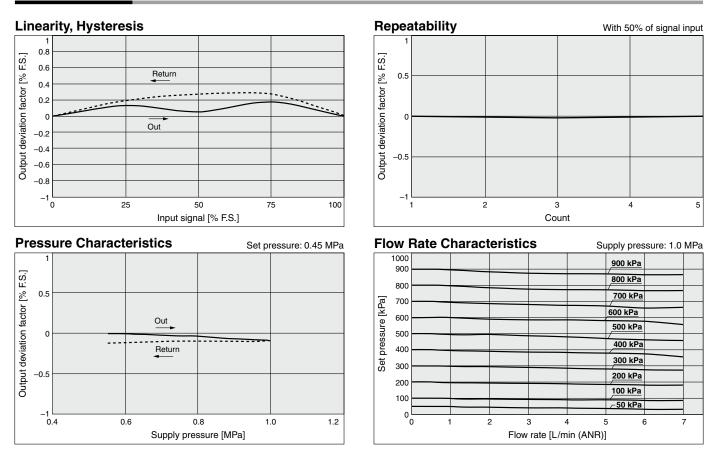

## Compact Electro-Pneumatic Regulator *ITV0000 Series*

#### Dimensions

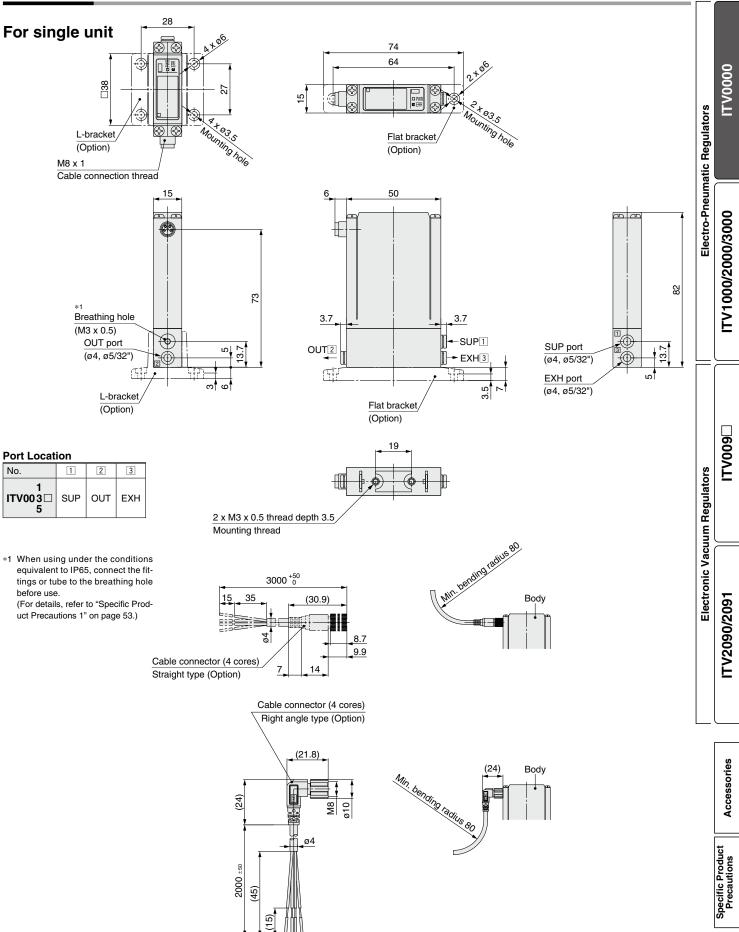


**SMC** 

## ITV0000 Series

#### Dimensions

#### Single unit for manifold

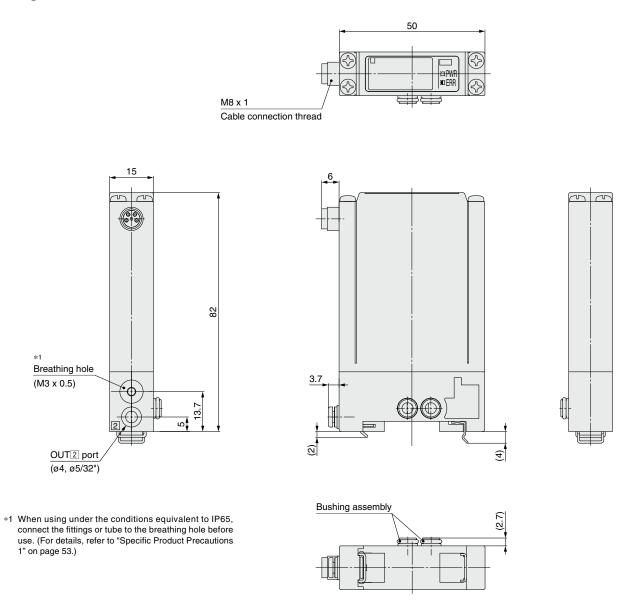


 $\ast~$  For dimensions of the cable connector, refer to single unit on page 10.

## Compact Electro-Pneumatic Regulator *ITV0000 Series*

#### **Dimensions**

#### Manifold

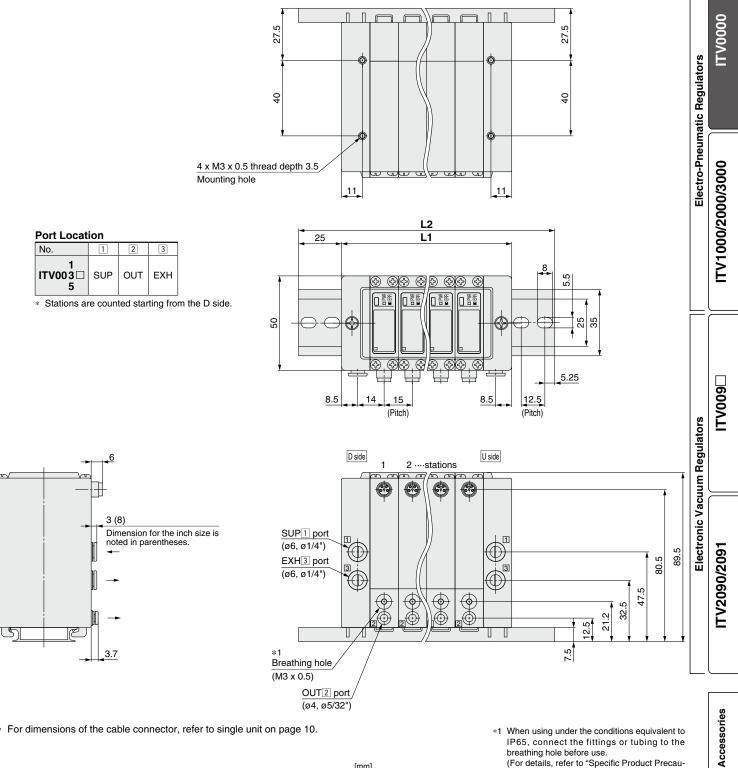


\* For dimensions of the cable connector, refer to single unit on page 10.

									[mm]
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail [g]	20	22	27	29	31	34	36	41	43

\*1 When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole before use. (For details, refer to "Specific Product Precautions 1" on page 53.)

## Electro-Pneumatic Regulator ITV1000/2000/3000 Series

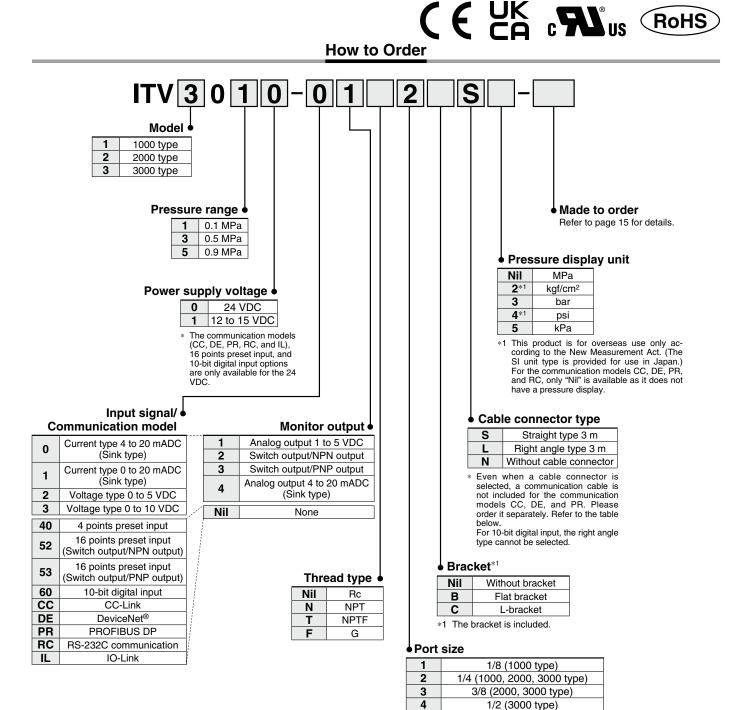

The simple specials system can be used to change the input and output ranges.

- \* The input and output values are limited to the following ranges.
- Input signal: Current type 0 to 20 mA

Voltage type 0 to 10 VDC · Output pressure: 0.005 to 0.9 MPa/5-900kPa Please contact your local sales representative for more details. For communication cables, use the parts listed below

#### (Refer to the M8/M12 connector in the Web Catalog for details.)

or order a product certified for the respective protocol (with M12 connector) separately.

Application	Communication cable part no.	Note
CC-Link compatibility	PCA-1567720 (Socket type)	A dedicated Bus adapter is included
CC-Link compatibility	PCA-1567717 (Plug type)	with the product.
DeviceNet®	PCA-1557633 (Socket type)	A T-branch connector is not included
compatibility	PCA-1557646 (Plug type)	with the product.
PROFIBUS DP	PCA-1557688 (Socket type)	A T-branch connector is not included
compatibility	PCA-1557691 (Plug type)	with the product.




## Electro-Pneumatic Regulator ITV1000/2000/3000 Series







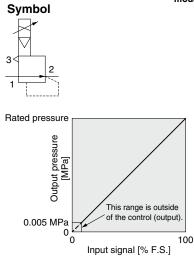

		Standard	Specific	ations				
	-			ITV101□*7	ITV103□*7	ITV105□*7		
	1000	Mod	<u>م</u>	ITV201	ITV203	ITV205		
		woo			ITV303	ITV205		
	0310	Min. europhy nr						
		Min. supply pr			Set pressure + 0.1 MPa			9
A GAC NPP	CO REAL CON CO	Max. supply p		0.2 MPa	1.0 I			TV0000
0.25		Set pressure r		0.005 to 0.1 MPa	0.005 to 0.5 MPa	0.005 to 0.9 MPa		Q
CE TO	1	- ·	Voltage		VDC ±10%, 12 to 15 VE		S	2
	0 0	Power supply	Current consumption	Power supply Power supply ve	voltage 24 VDC type: 0. oltage 12 to 15 VDC type	12 A or less*° e: 0.18 A or less	Regulators	<u>-</u>
			Current type*2	4 to 20 n	nADC, 0 to 20 mADC (S	ink type)	'n	
		*8	Voltage type		0 to 5 VDC, 0 to 10 VDC	;	eg	
ITV1000	ITV2000	Input signal	Preset input	4 points (Negative	common), 16 points (No	common polarity)	<b>–</b>	
	1172000		Digital input		10 bits (Parallel)		Electro-Pneumatic	
IIII III			Current type		250 Ω or less <sup>*6</sup>		na l	
			Voltage type		Approx. 6.5 kΩ		1 J	
In		Input impedance		Power supply	voltage 24 VDC type: A	pprox 4.7 kO	ne l	
			Preset input		voltage 12 VDC type: A		1 <u></u>	18
O SWC MP3			Digital input	I Owel supply		pp10X. 2.0 Ks2	L L	8
.036	Constant of the second		Digital input		Approx. 4.7 kΩ		Se la	R R
	*, REGULATOR 0.94C	* <sup>3</sup> Output signal (Monitor	Analog output	4 to 20 mADC (Sin	(Output impedance: Ap k type) (Output impedan put accuracy ±6% F.S. or	nce: 250 $\Omega$ or less)	Ē	ITV1000/2000/3000
		output)	Switch		collector output: Max. 30			0
1			output		en collector output: Max			8
A		Linearity	· · ·	· ·	±1% F.S. or less			Ē
	12.00	Hysteresis			0.5% F.S. or less			2
		Repeatability			±0.5% F.S. or less			
-		Sensitivity			0.2% F.S. or less			
ITV3000	Serial-communications	Temperature ch	aracteristics		±0.12% F.S./°C or less			l
	model	Output pressure			±2% F.S. ±1 digit or less		F	$\equiv$
/mbol	modol	display*4	Min. unit	MPa: 0.001 kg	$f/cm^2$ : 0.01, bar: 0.01, ps	ai: 0 1 *5 kPa: 1		
		Ambient and fluid			to 50°C (No condensatio			
$\bowtie$		Enclosure	remperatures	0	IP65			
$\square$		Liiciosule	ITV10	٨٣٣	prox. 250 g (Without option	222)		
		Weight <sup>*8, *9</sup>			prox. 350 g (Without option			
2		weight			prox. 350 g (Without optic			6
					•			<u></u>
ted pressure [Wba]		for each pressu *2 2-wire type 4 to *3 Select either an Further, when When measuri put monitor acc is supplied upo *4 Adjustment of	ure display, refe > 20 mADC is no halog output or s switch output is ng ITV analog of curacy of within n your request. numerical value	r to page 58. to available. Power supply v switch output. selected, select either NPN utput from 1 to 5 VDC, if th ±6% (full span) may not be Output pressure remains ur s such as the zero/span ac	ne load impedance is less the available. The product with	VDC) is required. an 100 k $\Omega$ , the analog out- the accuracy of within ±6% be is set based on the min.	uum Regulators	<b>□600/TI</b>
This range	aracteristics chart	<ul> <li>*5 The min. unit f</li> <li>*6 Value for the st put impedance</li> <li>*7 The ITV1000 s</li> <li>*8 Refer to the tat</li> <li>*9 Add 50 g for di</li> <li>* The above char may fluctuate.</li> <li>* When using und refer to "Specific</li> </ul>	or 0.9 MPa (130 ate with no over varies depending eries is a grease ole below for con gital input type, acteristics are c ler IP65 conditio Product Precau	psi) types is 1 psi. current circuit included. If a g on the input current. This is e-free specification (parts in mmunication specifications. 70 g for 16 points preset ing onfined to the static state. ' ns, connect the fitting or tub utions 4" on page 56.)	n allowance is provided for a s $350 \ \Omega$ or less for an input c contact with fluid).	n over current circuit, the in- urrent of 20 mADC.	Electronic Vacuum	ITV2090/2091
			· · · , · · <b>·</b> ,	· = <i>j</i>				∣╘

#### Communication Specifications (CC, DE, PR, RC, IL)


Model ITVD0-CC		ITV⊡0⊡0-DE	ITV⊡0⊡0-PR	ITV⊡0⊡0-RC	ITV□0□0-IL	
Protocol		CC-Link	DeviceNet <sup>®</sup>	PROFIBUS DP	RS-232C	IO-Link (Class A)
Version*1		Ver. 1.10	Volume 1 (Edition 3.8), Volume 3 (Edition 1.5)	DP-V0	—	Ver. 1.1
Communication 156 k/625 k speed 2.5 M/5 M/10 Mbps		125 k/250 k/500 kbps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 Mbps	9.6 kbps	230.4 kbps (COM3)	
Configuration file*2		—	EDS	GSD	—	IODD
I/O occupa (input/out		4 words/4 words, 32 bits/32 bits (per station, remote device station)	16 bits/16 bits	16 bits/16 bits	_	4 bytes/2 bytes
Communication	n data resolution	12 bits (4096 resolution)	12 bits (4096 resolution)	12 bits (4096 resolution)	10 bits (1024 resolution)	12 bits (4096 resolution)
Fail safe		HOLD*3/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD	HOLD/CLEAR
Electric in	sulation*4	Insulation	Insulation	Insulation	Non-insulation	Non-insulation
Terminatin	ng resistor	Built into the product (Switch setting)	Not built into the product	Built into the product (Switch setting)		—
	nsumption	0.16 A or less	0.14 A or less	0.16 A or less	0.12 A or less	0.12 A or less
	ITV1000	330	320	350	320	320
	ITV2000	430	420	450	420	420
	ITV3000	730	720	750	720	720


1 Please note that versions are subject to change.
\*2 Configuration files can be downloaded from the operation manual page on the SMC website.
\*3 The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.
\*4 The insulation between the electrical signal of the communication system and ITV power supply



Accessories

Specific Product Precautions

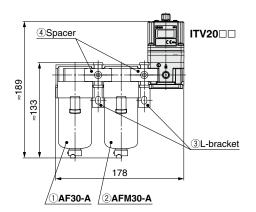

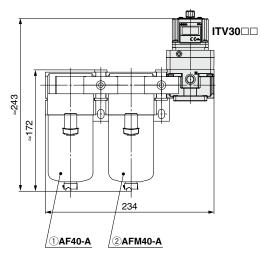

Made to Order

#### Made to Order (Refer to pages 34 to 38 for details.)

Symbol	Specifications	
X102	Reverse type	
X224	High-pressure type (SUP 1.2 MPa, OUT 1.0 MPa)	
X25	Set pressure range: 1 to 100 kPa (Excludes the ITV3000 series)	
X256	Analog output, Current type (Source type)	
X88	High-speed response time type (Excludes the ITV3000 series)	
X26	For manifold mounting (Excludes the ITV3000 series)	
X410	Linearity: ±0.5% F.S. or less	
X420	With alarm output	
* Manifolds	<ul> <li>Manifolds are compatible with 2 to 8 stations.</li> </ul>	

Manifolds are compatible with 2 to 8 stations.
 Please contact SMC for 9 stations or more.

Products without symbols are also compatible.

Please contact SMC separately.

Compliant with CE/UKCA marking

Model	Bracket tightening torque
ITV1000	0.76 ±0.05 N⋅m
ITV2000/3000	1.5 ±0.05 N⋅m

#### **Modular Products and Accessory Combinations**

	Applicable model		
Applicable products and accessories	ITV20	ITV30□□	
① Air filter	AF30-A	AF40-A	
② Mist separator	AFM30-A	AFM40-A	
③ L-bracket	B310L-A	B410L-A	
④ Spacer	Y30-A	Y40-A	
5 Spacer with L-bracket (3 + 4)	Y30L-A	Y40L-A	
6 Spacer with T-bracket	—	Y40T-A	

\* For ITV10 , use a modular adapter (Refer to the Web Catalog for details).

#### Accessories (Option)/Part Nos.

#### [Bracket]

Applicable model	Description	Part no.	Weight
ITV10	Elet breaket accomply (including mounting acrows)	P398010-600	
ITV2000, 3000	Flat bracket assembly (including mounting screws)	P398020-600	90
ITV10	L-bracket assembly (including mounting screws)	P398010-601	90
ITV2000, 3000	L-bracket assembly (including mounting screws) -	P398020-601	

#### [Cable connector]

Applicable model	Description		Part no.	Weight
Current type Voltage type	Cable connector (4 cores)	Straight type 3 m	P398020-500-3	
4 points preset input IO-Link		Right angle type 3 m	P398020-501-3	180
	Power cable (4 cores)	Straight type 3 m	P398020-500-3	180
10 mainte avecat innut	Power cable (4 cores)	Right angle type 3 m	P398020-501-3	]
16 points preset input	Signal cable (5 cores)	Straight type 3 m	P398020-502-3	
		Right angle type 3 m	P398020-503-3	
10-bit digital input	Cable connector (13 cores)	Straight type 3 m	INI-398-0-59	310
CC-Link PROFIBUS DP	Power cable (4 cores)	Straight type 3 m	P398020-500-3	
DeviceNet <sup>®</sup>	Power cable (4 cores)	Right angle type 3 m	P398020-501-3	
	Power cable (4 cores)	Straight type 3 m	P398020-500-3	180
RS-232C		Right angle type 3 m	P398020-501-3	
n3-2320	Communication cable	Straight type 3 m	P398020-502-3	
	(5 cores)	Right angle type 3 m	P398020-503-3	


For the 10-bit digital type, there is no right angle type cable connector.

\* Even when "with cable connector" is selected, the communication cable is not included in the communication model (CC, DE, and PR). Please order it separately.


#### [Bus adapter]

Applicable model	Description	Part no.	Weight
CC-Link	Bus adapter (Included with the product)	EX9-ACY00-MJ	35

#### Dimensions

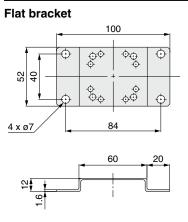

SMC

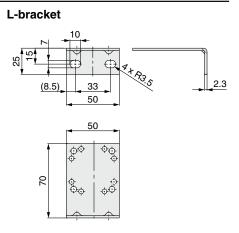


## Electro-Pneumatic Regulator ITV1000/2000/3000 Series

#### Working Principle

When the input signal rises, the air supply solenoid valve (1) turns ON, and the exhaust solenoid valve (2) turns OFF. Therefore, supply pressure passes through the air supply solenoid valve (1) and is applied to the pilot chamber (3). The pressure in the pilot chamber ③ increases and operates on the upper surface of the diaphragm ④.

As a result, the air supply value (5) linked to the diaphragm (4) opens, and a portion of the supply pressure becomes output pressure.


This output pressure feeds back to the control circuit (8) via the pressure sensor (7). Here, a correct operation functions until the output pressure is proportional to the input signal, making it possible to always obtain output pressure proportional to the input signal.

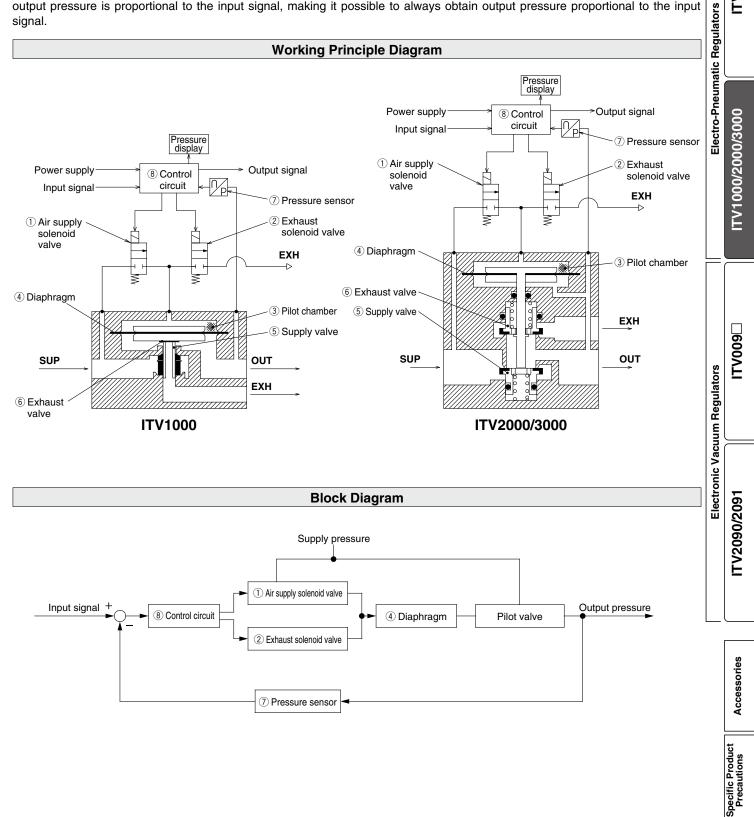

**SMC** 

**TV0000** 

#### ITV101 Series

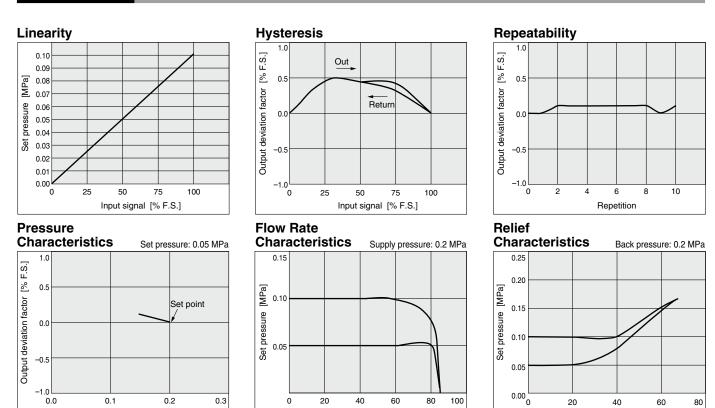

#### ITV201 Series


0.1

0.2

Supply pressure [MPa]

0.3

-1.0 0.0

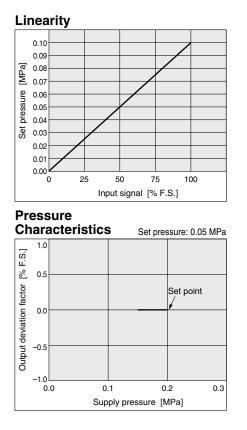

#### **Hysteresis**

0


20


40

Flow rate [L/min (ANR)]


60

80 100

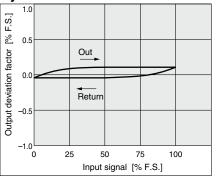

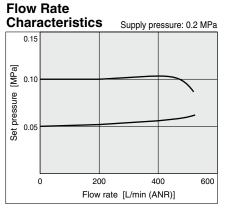

#### Repeatability

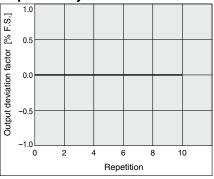

40


Flow rate [L/min (ANR)]

20

80


60

#### Relief

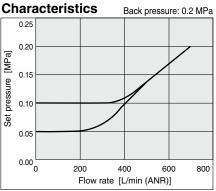


## Electro-Pneumatic Regulator ITV1000/2000/3000 Series


#### ITV301 Series

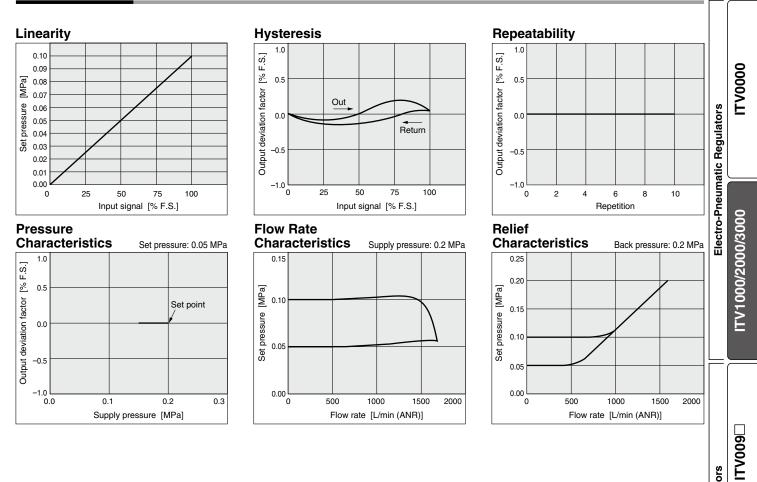





#### ITV103 Series

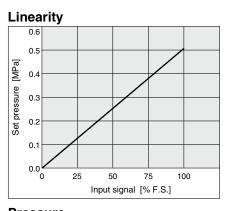

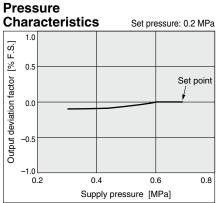


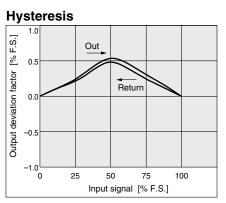




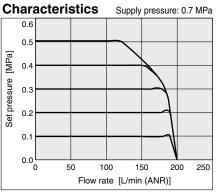


#### Repeatability

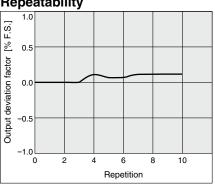


#### Relief

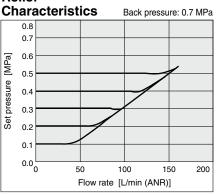


#### ITV203 Series

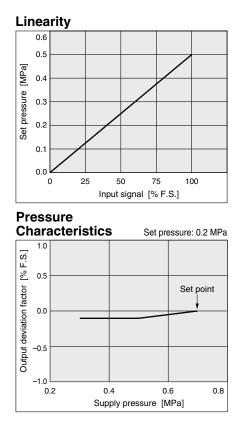


#### **Hysteresis**

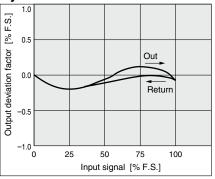

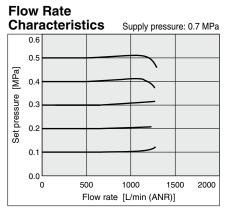


SMC

#### Repeatability

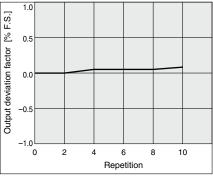


#### Relief

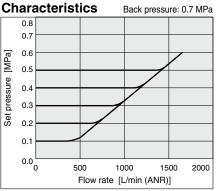



#### ITV303 Series

Supply pressure [MPa]

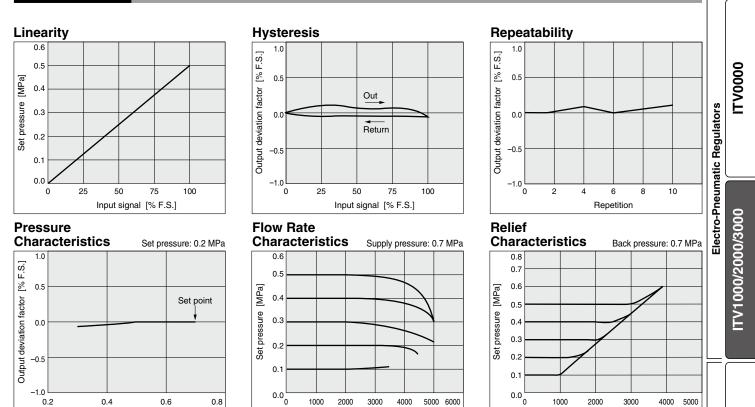


Flow rate [L/min (ANR)]


**SMC** 


Electronic Vacuum Regulators ITV2090/2091 ITV009□

Flow rate [L/min (ANR)]


#### ITV105 Series

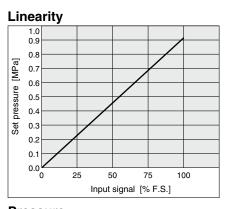

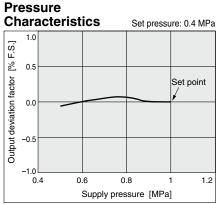


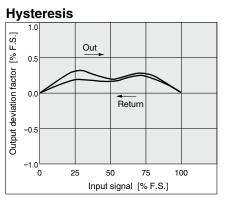


#### Flow Rate

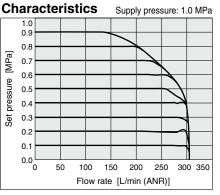


#### Repeatability

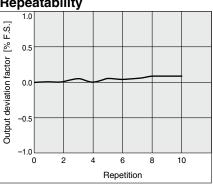


#### Relief

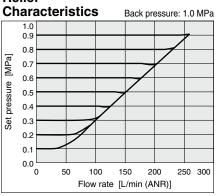


#### ITV205 Series

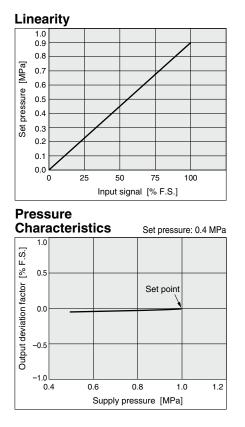


#### Hysteresis

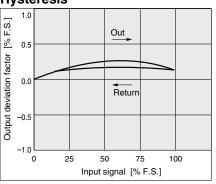


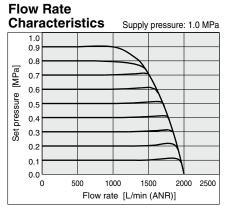


#### Repeatability

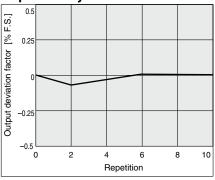

#### Relief

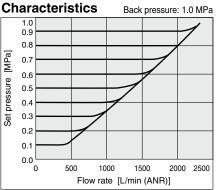

#### ITV305 Series

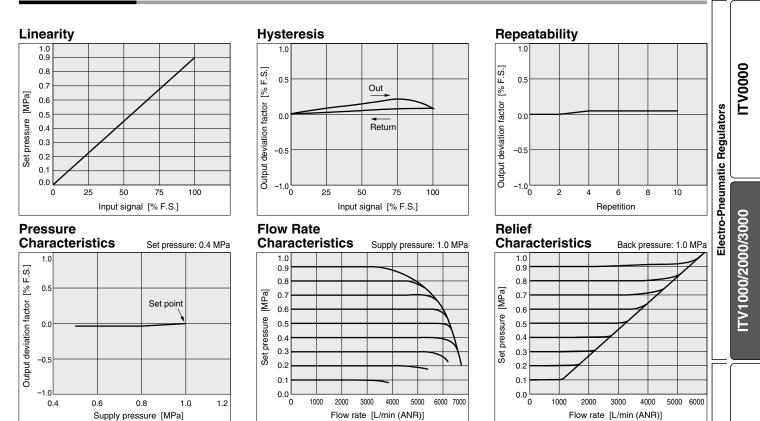


**SMC** 



#### Construction

#### ITV1000

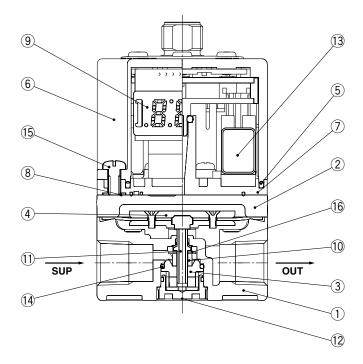


#### **Main Component Parts**

No.	Description	Material
1	Body	Aluminum alloy
2	Cover	Aluminum alloy
3	Valve guide	Resin
		Aluminum alloy
4	Diaphragm assembly	HNBR
		Steel
5	Seal	NBR
6	Bowl assembly	Resin
0		Silicone rubber
7	Sub-plate	Resin
8	Seal	NBR
9	Control circuit assembly	—
10	Bumper	NBR
11	Valve	Stainless steel
	valve	HNBR
12	Guide retainer	Aluminum alloy
13	Solenoid valve	_
14	O-ring	HNBR
15	Cross recessed round head screw	Steel
16	Flat washer	Stainless steel

\* Parts in contact with fluid are indicated with a mark  $\blacklozenge$ .

#### ITV2000

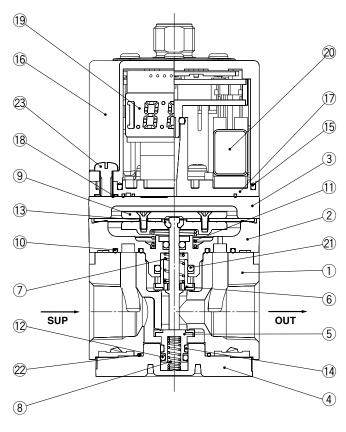

#### Main Component Parts


	No.	Description	Material
♦	1	Body	Aluminum alloy
•	2	Intermediate body	Aluminum alloy
•.	3	Cover	Aluminum alloy
٠	4	Valve guide	Aluminum alloy
۲	5	Valve (Supply valve)	HNBR/Brass
۲	6	Valve (Exhaust valve)	HNBR/Brass
•	7	Valve spring	Stainless steel
۲	8	Valve spring	Stainless steel
•.			Stainless steel
	-	<b>_</b>	Aluminum alloy
٠	9	Diaphragm assembly	HNBR
			Steel
٠	10	Seal	NBR
•	11	Bias spring	Stainless steel
•	12	O-ring	NBR
•	13	Cotter	Stainless steel
۲	14	Wear ring	Resin
	15	Seal	NBR
	10	6 Bowl assembly	Resin
	16		Silicone rubber
	17	Sub-plate	Resin
	18	Seal	NBR
	19	Control circuit assembly	
	20	Solenoid valve	
٠	21	O-ring	NBR
	22	O-ring	NBR
	23	Cross recessed round head screw	Steel

\* Parts in contact with fluid are indicated with a mark .

**SMC** 

## Electro-Pneumatic Regulator ITV1000/2000/3000 Series

#### Construction

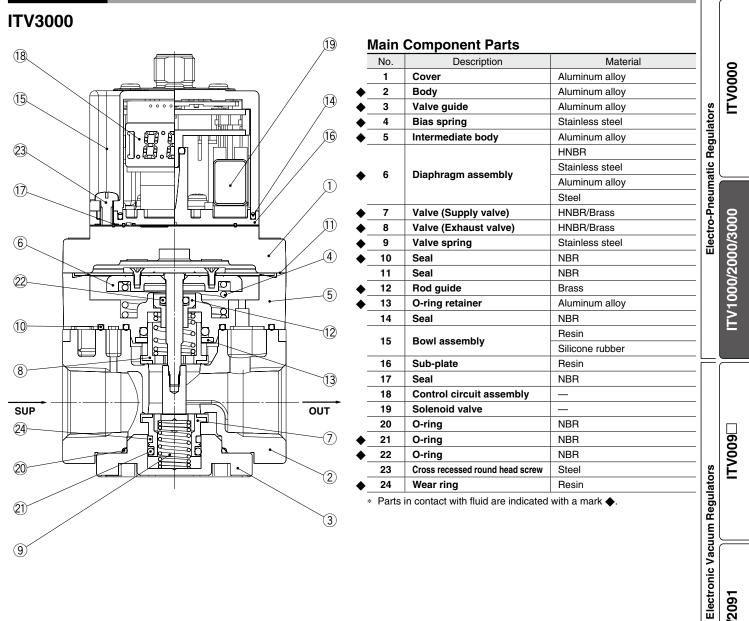

Accessories


Specific Product Precautions

ITV2090/2091

#### Dimensions


#### 


Flat bracket

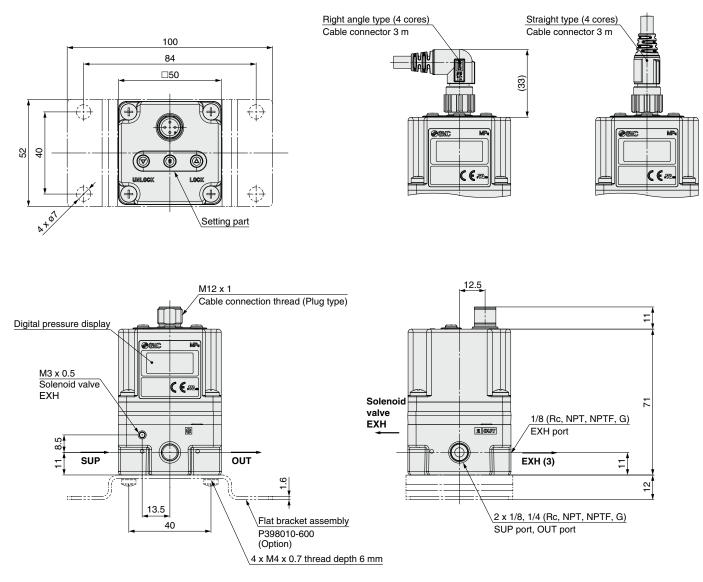

\* Do not attempt to rotate, as the cable connector does not turn.

#### L-bracket

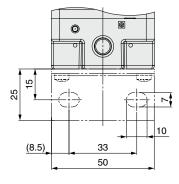

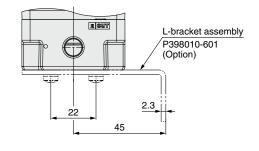

10-bit digital input

(ø14.3)


Digital pressure

display


**SMC** 

#### Dimensions (16 points preset input, 10-bit digital input, CC-Link, DeviceNet®)

#### 16 points preset input

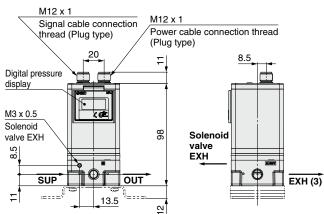

#### CC-Link: ITV1000-CC

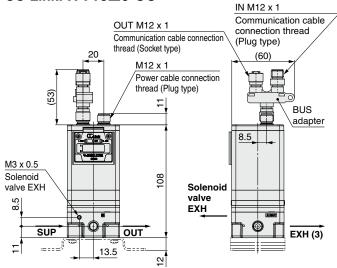


\* Dimensions not shown are the same as on page 25.

#### M3 x 0.5 COL Solenoid valve EXH 86

RP13A-12RB-13PA (71) made by HIROSE ELECTRIC CO., LTD.

#### 8.5 EXH SUP OUT ÷ 13.5 2

#### DeviceNet®: ITV10□0-DE

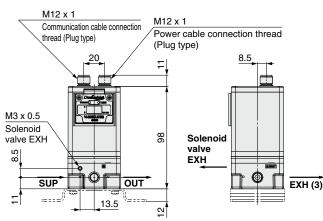

(ø14.3)

Solenoid

valve

n

ÆÐ

EXH (3)

\* Dimensions not shown are the same as on page 25.

# ITV2090/2091 Accessories


ITV0000

ITV1000/2000/3000


**Electronic Vacuum Regulators** 

**Electro-Pneumatic Regulators** 

#### Dimensions (PROFIBUS DP, RS-232C, IO-Link)

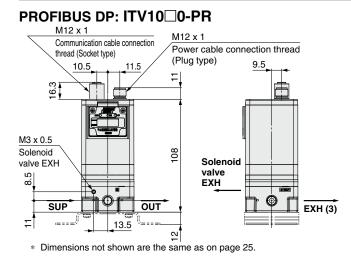


#### RS-232C: ITV100-RC

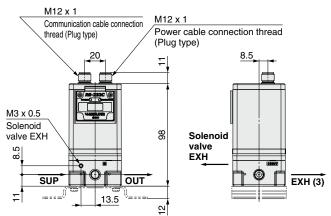


\* Dimensions not shown are the same as on page 25.


#### IO-Link: ITV1000-IL

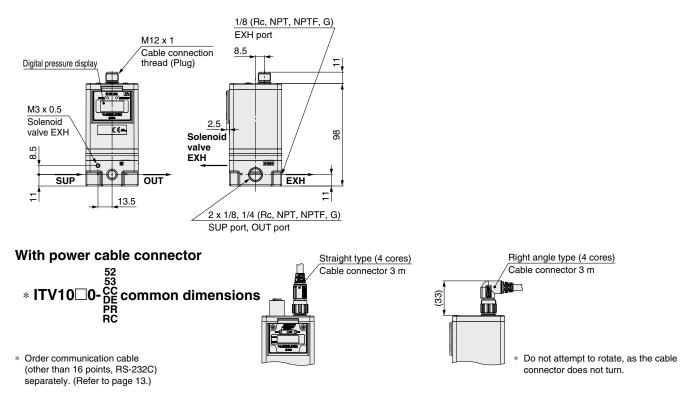


## Electro-Pneumatic Regulator ITV1000/2000/3000 Series

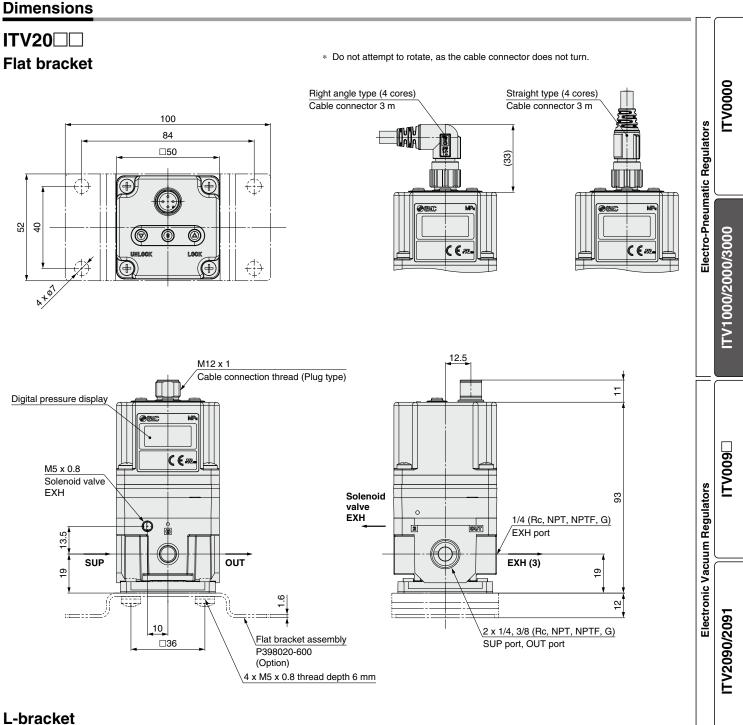

#### L-bracket

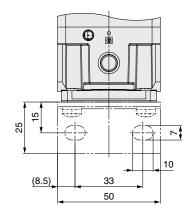


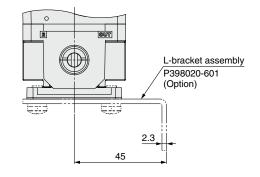


Accessories


Specific Product Precautions

#### Dimensions (16 points preset input, 10-bit digital input, CC-Link, DeviceNet®)

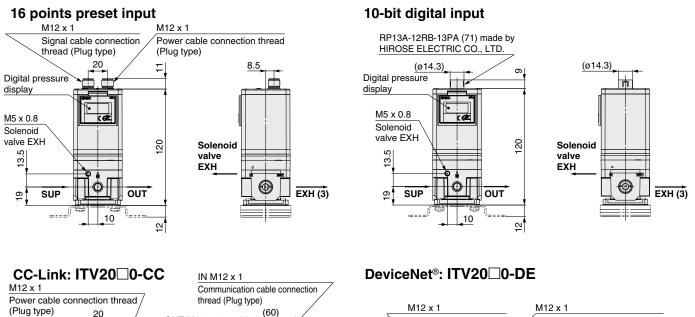


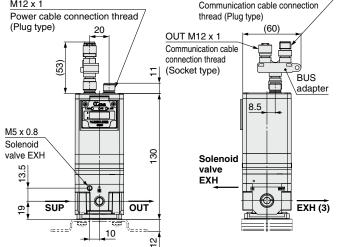

\* Dimensions not shown are the same as on page 28.

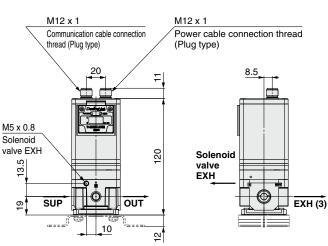

<sup>\*</sup> Dimensions not shown are the same as on page 28.

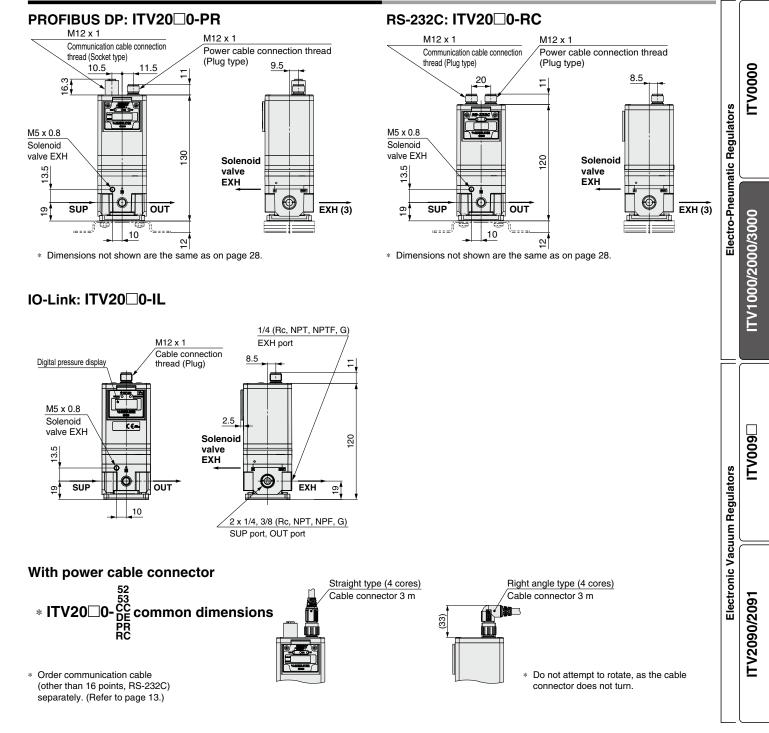


#### Dimensions (PROFIBUS DP, RS-232C, IO-Link)





Accessories

#### Dimensions

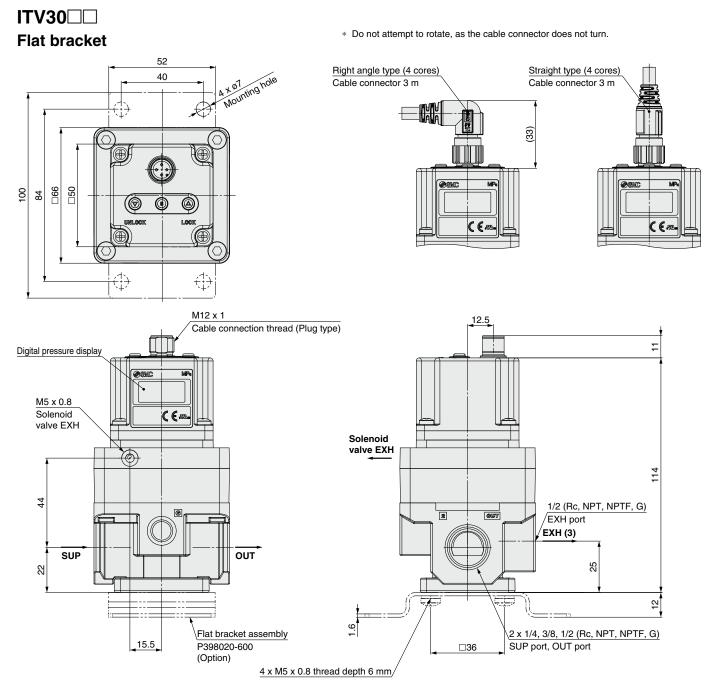


#### L-bracket

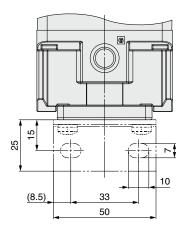

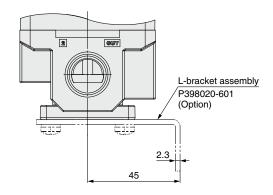

#### Dimensions (16 points preset input, 10-bit digital input, CC-Link, DeviceNet®)

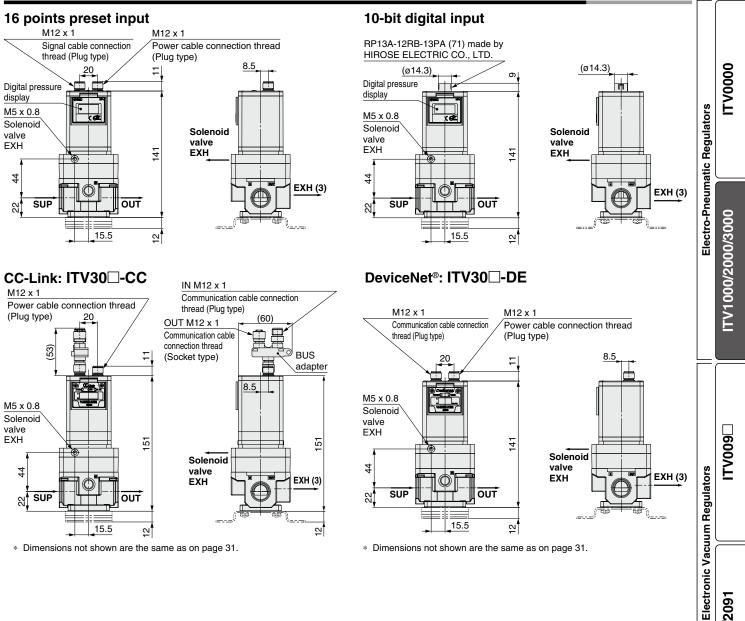


\* Dimensions not shown are the same as on page 31.

\* Dimensions not shown are the same as on page 31.


Accessories

ITV2090/2091

#### Dimensions (PROFIBUS DP, RS-232C, IO-Link)

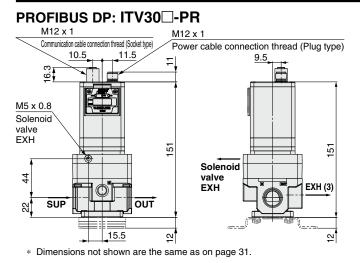


#### RS-232C: ITV30□-RC

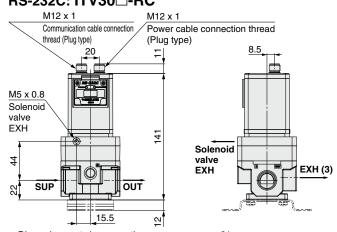


 $\ast$  Dimensions not shown are the same as on page 31.


#### IO-Link: ITV30 0-IL

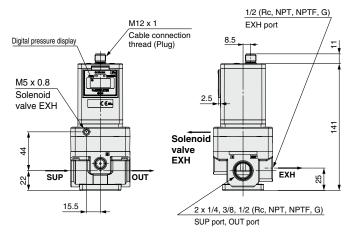

#### With power cable connector

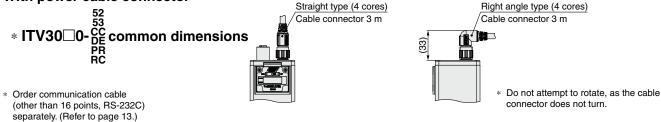


## ITV1000/2000/3000 Series Made to Order

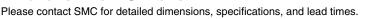



#### 1 Reverse Type

In accordance with the input signal, the inverse proportional pressure is output.

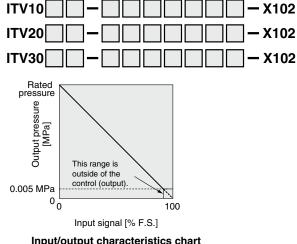

### 2 High-Pressure Type (SUP 1.2 MPa, OUT 1.0 MPa)

ITV105 — X224
ITV205 — X224
ITV305 — X224

\* For the preset input type, the digital input type, and communication models, contact SMC for availability.

Input/output characteristics chart

- \* The  $\Box$  in the part numbers indicate the model nos. of the standard products.
- Excludes the preset input type and the digital input type
- For communication models, contact SMC for availability.


<b>3</b> Set Pressure Range: 1 to 100 kPa
ITV101 — X25
ITV201 — X25

\* For the preset input type, the digital input type, and communication models, contact SMC for availability.

4 Analog Output, Current Type (Source Type)
Monitor output is analog output from 4 to 20 mADC (source type).
ITV10 0 - 4

	1200
ITV20 0 - 4	<b>(</b> 256
ITV30 0 - 4	<b>K256</b>

#### Monitor output wiring diagram

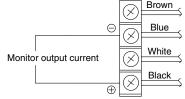


#### 5 With Gauge Port

It is possible to check the outlet pressure when the product is in a de-energized state.


ITV10 — — — — X400
ITV20 — — — — X400
ITV30 - X400

Model	G port (Rc, NPT, NPTF, G)
ITV1000 type	1/8
ITV2000 type	1/8
ITV3000 type	1/4

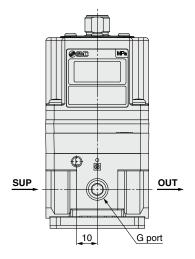

**多SMC** 

TV10 0 - 4 0 - X256
TV20 0 - 4 0 - X256
TV30 0 - 4 0 - X256

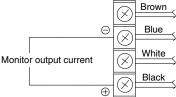

ITV0000

**Electro-Pneumatic Regulators** 

#### 5 High-Speed Response Time Type

Pressure response with no load is approx. 0.1 s.

\* This is not a guaranteed value as it depends on the operating environment.

- \* When the input signal is at 0%, the exhaust solenoid valve is controlled to reduce the outlet pressure to zero. For this reason, a noise may be generated. This noise is normal and does not indicate a fault.
- \* When operating for the first time, be sure that the power supply voltage and supply pressure are appropriate in relation to the operating environment and conditions.
- For this product, by conducting the procedure described below (steps A to D), the parameters compatible with the power supply voltage and supply pressure in use can be obtained.


If the desired output pressure values cannot be reached due to fluctuations in the operating conditions, etc., perform this operation.

- A) Change the power supply voltage in use by ±0.4 VDC or more.
- B) After inputting the supply pressure used on the inlet side of the ITV, adjust the input signal as described below.
  - $(0\% \rightarrow 100\% \rightarrow 0\%)$  (Change it gradually, waiting 10 s or more between each adjustment.)
  - \*\* Please contact SMC if difficulty inputting signals occurs.
- C) Change the power supply voltage according to the operating conditions/requirements, and repeat step B.

D) Input the power supply voltage and a 0% signal, and retain for 6 minutes or more. (Supply pressure is not required.)

When re-obtaining the parameters, we recommend operating with the air sealed in the piping in order to reliably reach the set pressure. In addition, if step A above cannot be carried out, it is possible to conduct an "Initialize" operation as described in the operation manual in order to reset the parameters of the product to those set at the time of shipment. When conducting an "Initialize" operation, the min. set pressure (F\_1) and the max. set pressure (F\_2) will be reset.

There is no gain or sensitivity adjustment function.

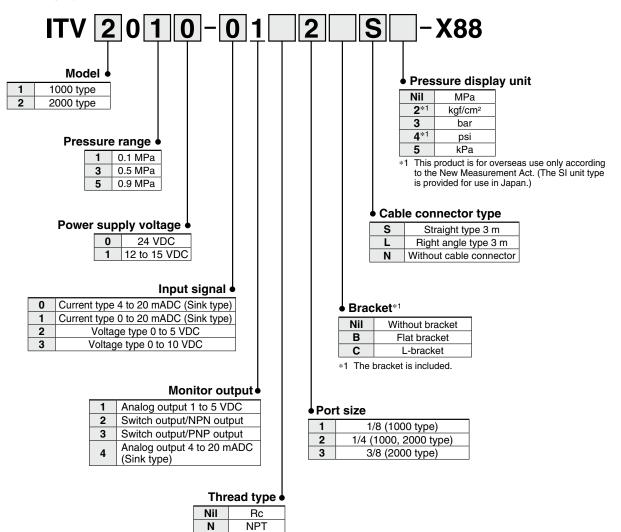

NPTF

G


T F

# Made to Order ITV1000/2000/3000 Series

### 6 Manifold Specifications (Excludes the ITV3000 series)

#### 2 through 8-station manifold


#### How to Order Manifolds

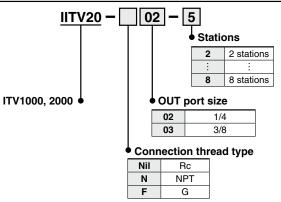


#### How to Order for Manifold Mounting

ITV 1 0 1 X26	
ITV 20 - X26	

- The  $\Box$  in the part numbers indicate the model nos. of the standard products.
- For communication models, contact SMC for availability.
- The thread type is Rc only.
- For the ITV1000 series, the port size is 1/8 only.
- For the ITV2000 series, the port size is 1/4 only. The bracket accessory cannot be selected.
- Not applicable to the ITV3000 series

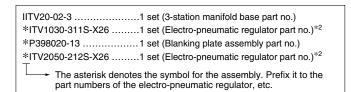

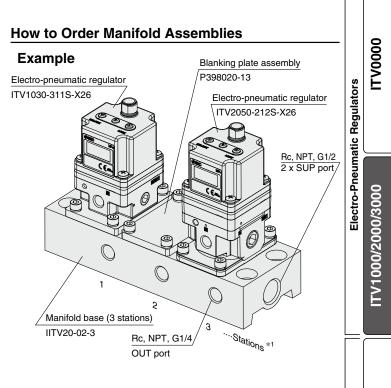

\* Refer to the table below for possible mixed combination.

Model	ITV101	ITV103	ITV105	ITV201	ITV203	ITV205	
ITV101		—	—		—	—	
ITV103	_			—			s
ITV105	_			—			ğ
ITV201		—	—		_	—	lla
ITV203	_			—			egr
ITV205	TV205 — • • • • •						
*1 Electro-pneumatic regulators are counted starting from station 1 on the left side with the OUT ports in the front.							Vacuum


- The port size for mounted electro-pneumatic regulators is Rc1/8 (ITV1000), \*2 Rc1/4 (ITV2000) only.
- When there is a large number of stations, use piping with the largest possible inside diameter for the supply side, such as steel piping.
- The use of the straight type cable connector is recommended. To mount right angle type, be certain to check that no possible interference occurs.
- When mounting a blanking plate and the regulator with a different pressure set, please inform SMC of the order of a manifold station beside a purchase order.

Electronic

# ITV1000/2000/3000 Series

### 7 Linearity: ±0.5% F.S. or Less

Application examples: Polishing equipment and peripheral equipment for wafers, LCD glasses, color filters, etc.

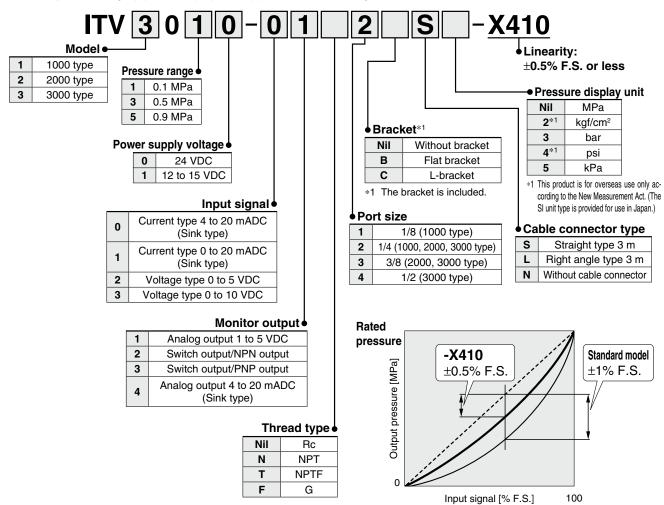

The graph shown above is a typical example. (This graph shows that the output pressure curve is in a negative range when compared to the ideal line.)

### Specifications

Fluid		Air		
Min. supply pres	sure	Set pressure + 0.1 MPa		
Max. supply pres	sure	1.0 MPa (Pressure range 0.1 MPa type: 0.2 MPa)		
(Supply side)		1.5 MPa (Pressure range 0.1 MPa type: 0.3 MPa)		
Proof pressure	(Output side)	1 MPa (Pressure range 0.1 MPa type: 0.2 MPa)		
Set pressure ran	ge	1: 0.005 to 0.1 MPa, 3: 0.005 to 0.5 MPa, 5: 0.005 to 0.9 MPa		
Power supply vo	Itage	0: 24 VDC ±10%, 1: 12 to 15 VDC		
0		0.12 A or less (24 VDC ±10% type)		
Current consumption		0.18 A or less (12 to 15 VDC type)		
Input signal		0: 4 to 20 mA, 1: 0 to 20 mA, 2: 0 to 5 VDC, 3: 0 to 10 VDC		
Input impedance		Voltage type: Approx. 6.5 k $\Omega$ , Current type: 250 $\Omega$ or less		
Output signal		Analog output: 1 to 5 VDC/4 to 20 mADC, Switch output (NPN/PNP)		
Linearity		±0.5% F.S. or less		
Hysteresis		0.5% F.S. or less		
Repeatability		±0.5% F.S. or less		
Sensitivity		0.2% F.S. or less		
Temperature cha	racteristics	±0.12% F.S./°C or less		
	Accuracy	±2% F.S. ±1 digit or less		
Output pressure display	Min. unit	MPa: 0.001, kgf/cm²: 0.01, bar: 0.01, psi: 0.1, kPa: 1		
Ambient and fluid	temperatures	0 to 50°C (No condensation)		
Enclosure		IP65		
Weight		ITV10 :: Approx. 250 g, ITV20 :: Approx. 350 g, ITV30 :: Approx. 645 g (Without brackets)		


The above characteristics (specifications) are confined to the static state. When air is consumed on the output side, the pressure may fluctuate.



# Made to Order ITV1000/2000/3000 Series



Alarm is output if the set pressure is not reached or maintained for 5 seconds or more. Application examples: Pressure management for thrust control, etc.

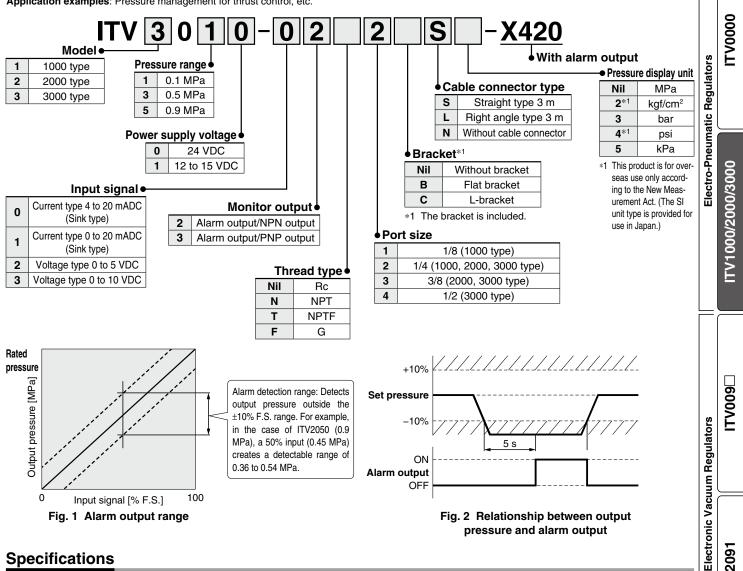


Specificatio	ons		i	Electro	ITV2090/2091
Fluid		Air			60
Min. supply pres	sure	Set pressure + 0.1 MPa			2
Max. supply pres	ssure	1.0 MPa (Pressure range 0.1 MPa type: 0.2 MPa)			F
(Supply side) 1.5 MPa (Pressure range 0.1 MPa type: 0.3 MPa)				-	
Proof pressure	Proof pressure (Output side) 1 MPa (Pressure range 0.1 MPa type: 0.2 MPa)				
Set pressure range         1: 0.005 to 0.1 MPa, 3: 0.005 to 0.5 MPa, 5: 0.005 to 0.9 MPa		1: 0.005 to 0.1 MPa, 3: 0.005 to 0.5 MPa, 5: 0.005 to 0.9 MPa			
Power supply vo	Power supply voltage         0: 24 VDC ±10%, 1: 12 to 15 VDC			_L	
0	ution.	0.12 A or less (24 VDC ±10% type)			
Current consumption		0.18 A or less (12 to 15 VDC type)		Γ	
Input signal		0: 4 to 20 mA, 1: 0 to 20 mA, 2: 0 to 5 VDC, 3: 0 to 10 VDC			ŝ
Input impedance		Voltage type: Approx. 6.5 k $\Omega$ , Current type: 250 $\Omega$ or less			ccessories
Output signal		Alarm output (NPN/PNP)			SS
Linearity		±1.0% F.S. or less			ő
Hysteresis		0.5% F.S. or less			Ac
		±0.5% F.S. or less			
Sensitivity		0.2% F.S. or less		Ē	
Temperature characteristics ±0.12% F.S./°C or less				nci	
Temperature characteristics           Output pressure display         Accuracy           Min. unit         Min. unit		±2% F.S. ±1 digit or less			0 Ö Ö
Output pressure display		MPa: 0.001, kgf/cm²: 0.01, bar: 0.01, psi: 0.1, kPa: 1		ģ	ĩ
Ambient and fluid temperatures 0 to 50°C (No condensation)				Specific Product Precautions	
Enclosure					ğŤ
Weight	-	ITV10□□: Approx. 250 g, ITV20□□: Approx. 350 g, ITV30□□: Approx. 645 g (Without brackets)		Ċ	n

The above characteristics (specifications) are confined to the static state. When air is consumed on the output side, the pressure may fluctuate.

# Compact Vacuum Regulator ITV009 Series ( E LK RoHS

How to Order

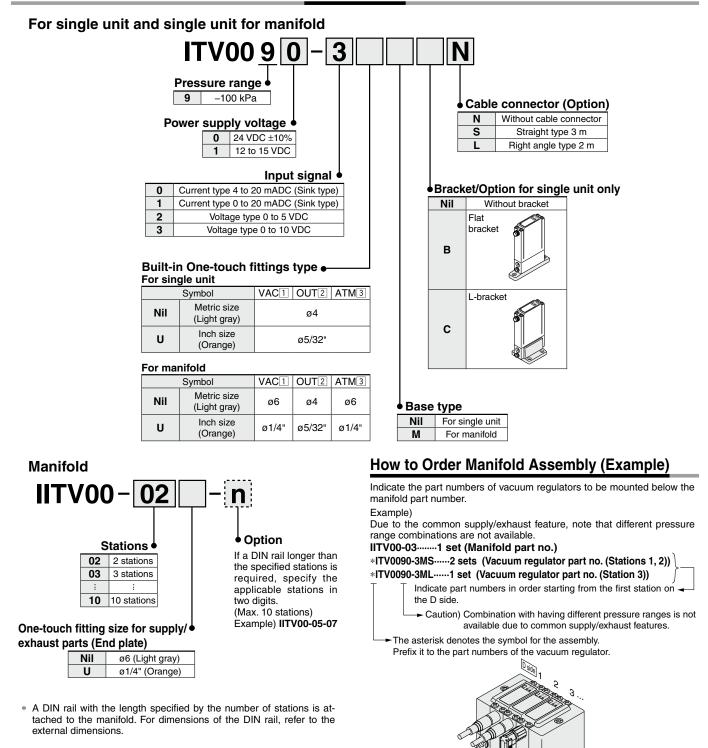

**多SMC** 

DIN rail

ITV0090-3MS

Compact Vacuum Regulator *ITV009 Series* 

### **Specifications**



Model			ITV009□		
Min. supply pressure			Set pressure – 1 kPa		
Max. supply pressure			–101 kPa	]	
Set pressure range	9		–1 to –100 kPa		ğ
	Voltage		24 VDC ±10%, 12 to 15 VDC		TV0000
Power supply	Current consumption		oply voltage 24 VDC type: 0.12 A or less y voltage 12 to 15 VDC type: 0.18 A or less	Regulators	E
In must signal	Voltage type		0 to 5 VDC, 0 to 10 VDC	ll en	
Input signal	Current type	4 to 2	0 mADC, 0 to 20 mADC (Sink type)	ျှိရှိ	
Innut imnedence	Voltage type		Approx. 10 kΩ		
Input impedance	Current type		Approx. 250 Ω	nat	$\geq$
Output signal*2	Analog output	1 to 5 VDC (Output impedance: Approx. 1 kΩ Output accuracy: ±6% F.S. or less		Electro-Pneumatic	0
Linearity		±1% F.S. or less			TV1000/2000/3000
Hysteresis		0.5% F.S. or less			33
Repeatability		±0.5% F.S. or less			l
Sensitivity		0.2% F.S. or less			20
Temperature chara	acteristics	±0.12% F.S./°C or less			Ö
Operating tempera	ture range	0 to 50°C (No condensation)		]	Õ
Enclosure		IP65 equivalent*3			Ξ
Connection type			Built-in One-touch fittings		
	For single	Metric size	1, 2, 3: ø4		
Connection size		Inch size	1, 2, 3: ø5/32"		
Connection Size	Manifold	Metric size	1, 3: ø6, 2: ø4		
	Marinolu	Inch size	1, 3: ø1/4", 2: ø5/32"		
Weight*1	100 g or less (Without options)				
*1 Indicates the weight of a single unit					

Indicates the weight of a single unit \*1

**SMC** 

- For IITV00-n
- Total weight (g)  $\leq$  Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail
- \*2 When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 k $\Omega$ , the analog output monitor accuracy of  $\pm 6\%$  F.S. or less may not be available. The product with an accuracy of within  $\pm 6\%$  is supplied upon your request. Output pressure remains unaffected.
- \*3 When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole before use. (For details, refer to "Specific Product Precautions 1" on page 53.) When there is a downstream flow consumption, pressure may become unstable depending on
- piping conditions.
- When the power is turned on, a noise may be generated. This noise is normal and does not indicate a fault.

### **Accessories (Option)**

#### Bracket


Flat bracket assembly (including 2 mounting screws) P39800022



L-bracket assembly (including 2 mounting screws) P39800023



Tightening torque when assembling is 0.3 N·m.

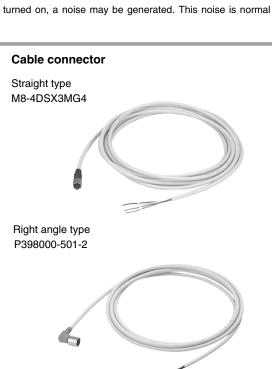


**□**0001 **Electronic Vacuum Regulators** 




### **Working Principle**

When the input signal rises, the vacuum pressure solenoid valve ① turns ON. Due to this, part of the vacuum pressure (VAC.) passes through the vacuum pressure solenoid valve ① and changes to a vacuum pressure. This vacuum pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, the vacuum pressure solenoid valve and the atmospheric pressure solenoid valve work alternately to make continuous pressure corrections until vacuum pressure becomes proportional to the input signal, thus, supplying vacuum pressure that is consistently proportional to the input signal.

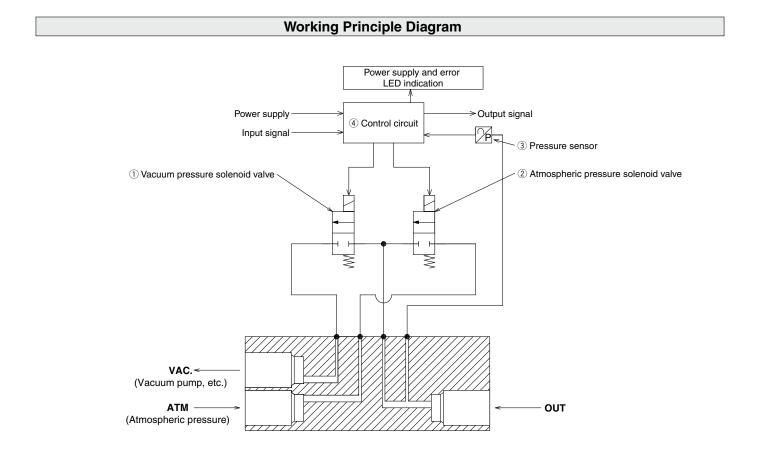


#### **Block Diagram**

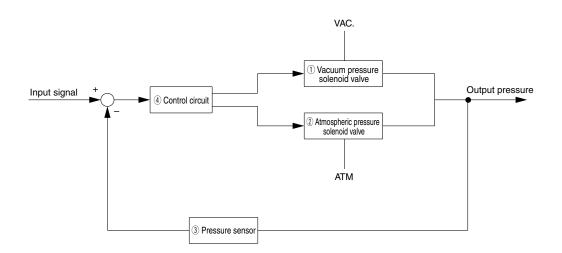

Compact Vacuum Regulator *ITV009 Series* 

### ITV009 Series

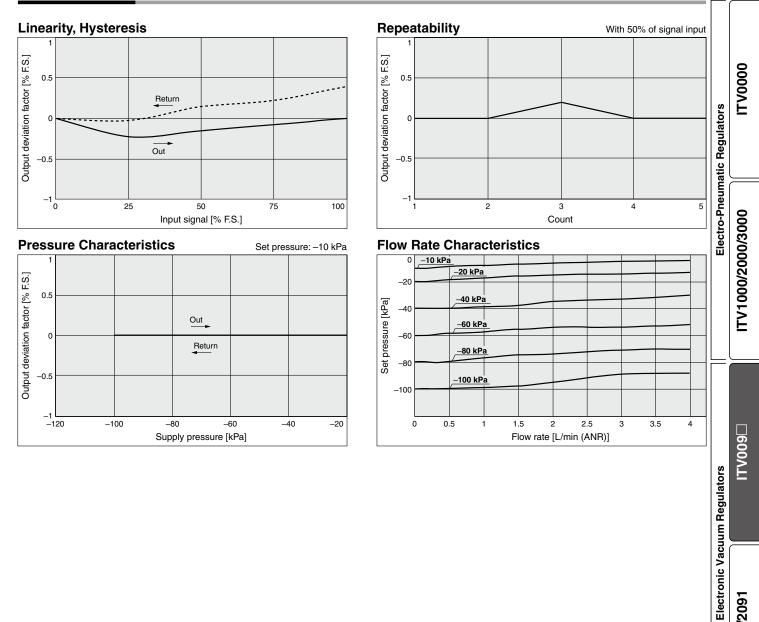


ITV2090/2091

Accessories

Specific Product Precautions


# ITV009 Series

### Dimensions

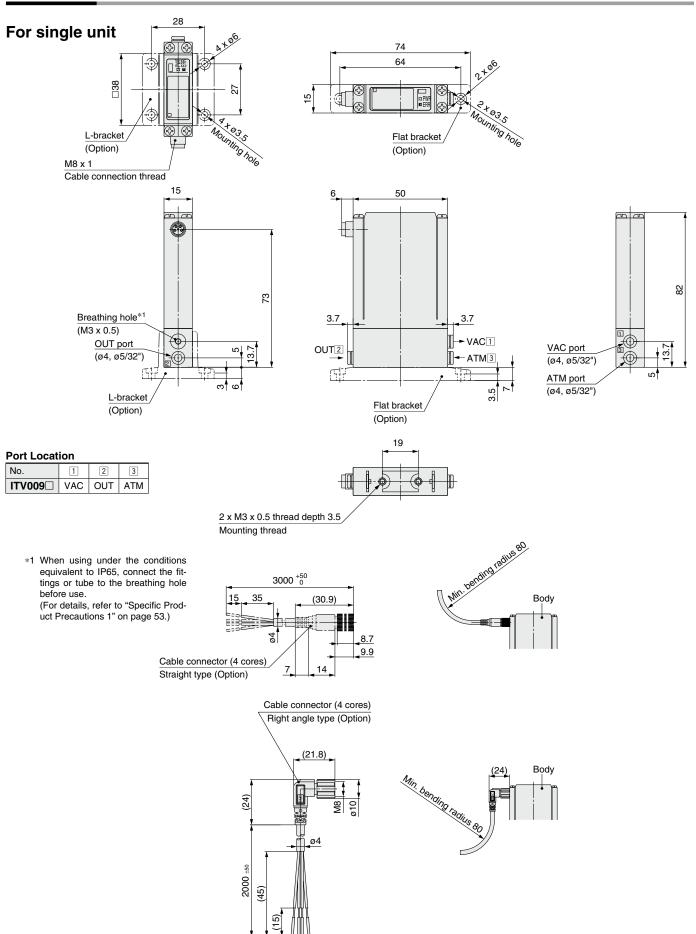

Compact Vacuum Regulator *ITV009 Series* 

#### **Dimensions**

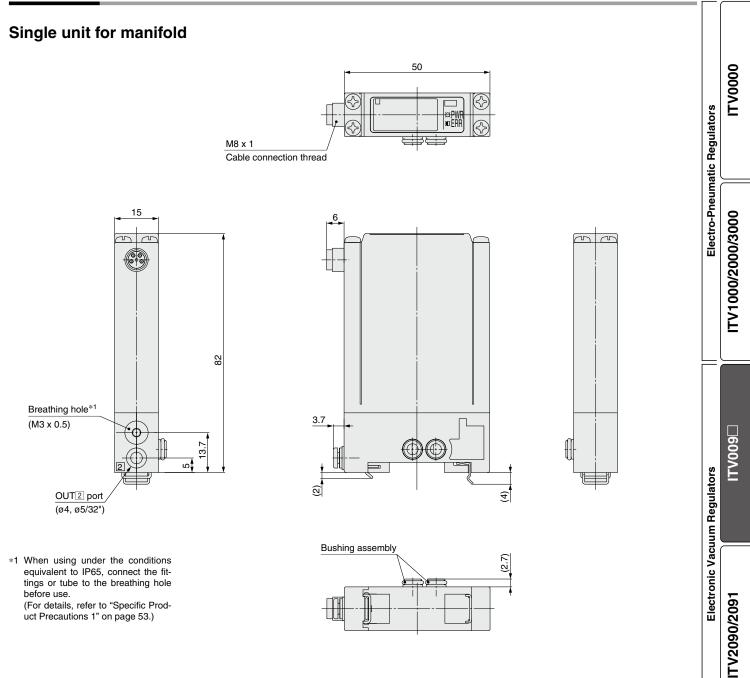

\* For dimensions of the cable connector, refer to single unit on page 43.


Accessories

Specific Product Precautions

# ITV009 Series

#### Dimensions

### Manifold

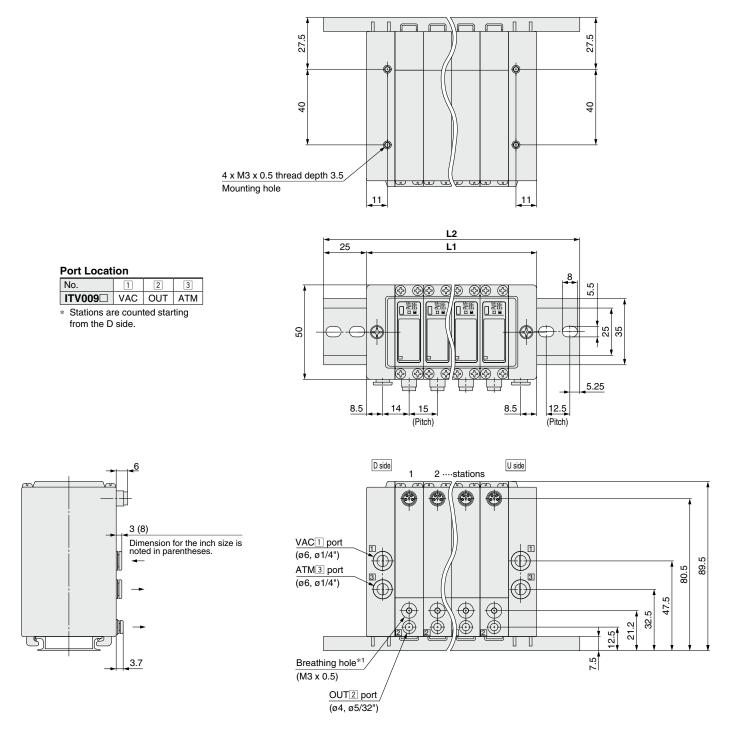

\* For dimensions of the cable connector, refer to single unit on page 43.

									[mm]
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail [g]	20	22	27	29	31	34	36	41	43

\*1 When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole before use. (For details, refer to "Specific Prod-

uct Precautions 1" on page 53.)

# Electronic Vacuum Regulator ITV2090/2091 Series


How to Order ITV 209 0 - 0 **S** 5 2 1 Pressure range Pressure display unit 9 –1.3 to –80 kPa 5 kPa For the communication models CC, DE, PR, and RC, only "Nil" is available as it does not have a Power supply voltage 0 24 VDC pressure display. 12 to 15 VDC 1 \* The communication models (CC, DE, PR, RC, • Cable connector type and IL), 16 points preset input, and 10-bit digital S Straight type 3 m input options are only available for the 24 VDC. L Right angle type 3 m Ν Without cable connector Even when a cable connector is selected, a communication cable is not included for the communication models CC, DE, and Input signal/ **Communication model** Monitor output PR. Please order it separately. Refer to the table below. Current type 4 to 20 mADC Analog output 1 to 5 VDC 1 For 10-bit digital input, the right angle type cannot be selected. 0 (Sink type) Switch output/NPN output 2 3 Switch output/PNP output Current type 0 to 20 mADC 1 (Sink type) Analog output 4 to 20 mADC Bracket\*1 4 (Sink type) 2 Voltage type 0 to 5 VDC Nil Without bracket Voltage type 0 to 10 VDC 3 Nil None Flat bracket В 40 4 points preset input С L-bracket 16 points preset input \*1 The bracket is included 52 (Switch output/NPN output) 16 points preset input 53 (Switch output/PNP output) Port size 60 10-bit digital input **2** 1/4 CC CC-Link DE DeviceNet<sup>®</sup> PR PROFIBUS DP Thread type RS-232C communication RC Nil Rc IO-I ink IL Ν NPT Т NPTF F G

For communication cables, use the parts listed below

(Refer to the M8/M12 connector in the Web Catalog for details.)

or order the product certified for the respective protocol (with M12 connector) separately.					
Application	Communication cable part no.	Note			
CC-Link compatibility	PCA-1567720 (Socket type)	A dedicated Bus adapter is included			
CC-LINK COMPANDING	PCA-1567717 (Plug type)	with the product.			
DeviceNet®	PCA-1557633 (Socket type)	A T-branch connector is not included			
compatibility	PCA-1557646 (Plug type)	with the product.			
PROFIBUS DP	PCA-1557688 (Socket type)	A T-branch connector is not included			
compatibility	PCA-1557691 (Plug type)	with the product.			

**SMC** 

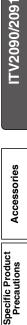

**TV0000** 

ITV1000/2000/3000

**Electronic Vacuum Regulators** 

Electro-Pneumatic Regulators


# ITV209 Series

For the stepless control of vacuum pressure in proportion to electrical signals





#### **Piping/Wiring Diagram**

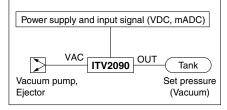

### Standard Specifications

Мо	del	ITV2090	ITV2091		
Min. supply vacu	um pressure <sup>*1</sup>	Set pressure – 13.3 kPa			
Max. supply vacu	um pressure	-101 kPa			
Set pressure rang	je	-1.3 to -80 kPa			
	Voltage	24 VDC ±10%	12 to 15 VDC		
Power supply	Current consumption	Power supply voltage 24 N Power supply voltage 12 to			
	Current type <sup>*2</sup>	4 to 20 mADC, 0 to 2			
	Voltage type	0 to 5 VDC,	· · · · · ·		
Input signal*6	Preset input	4 points (Negative common), 1			
	Digital input	10 bits (	1 1 1		
	Current type	250 Ω α	,		
	Voltage type	Approx.	6.5 kΩ		
Input impedance	Preset input	Power supply voltage 24 VDC type: Approx. 4.7 kg Power supply voltage 12 VDC type: Approx. 2.0 kg			
	Digital input	Approx. 4.7 kΩ			
Output signal (Monitor output)	Analog output	1 to 5 VDC (Output impedance: Approx. 1 kΩ) 4 to 20 mADC (Sink type) (Output impedance: 250 Ω or less) Output accuracy $\pm 6\%$ F.S. or less			
	Switch output	NPN open collector output: Max. 30 V, 80 mA PNP open collector output: Max. 80 mA			
Linearity		±1% F.S	. or less		
Hysteresis		0.5% F.S	6. or less		
Repeatability		±0.5% F.	S. or less		
Sensitivity		0.2% F.S			
Temperature characteristics		±0.12% F.S	./°C or less		
Output pressure Accuracy		±2% F.S. ±1 digit or less			
display	Unit	kPa <sup>*5</sup> Min. display: 1			
Ambient and fluid	temperatures	0 to 50°C (No condensation)			
Enclosure		IP65			
Weight <sup>*6, *7</sup>		390	) g		

\*1 The min. supply vacuum pressure should be 13.3 kPa less than the max. vacuum pressure setting value.

\*2 4 to 20 mADC is not possible with the 2-wire type. Power supply voltage (24 VDC or 12 to 15 VDC) is required.

- \*3 Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input power supply. This is 350  $\Omega$  or less for an input current of 20 mADC. When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 k $\Omega$ , the
  - analog output monitor accuracy of within ±6% (full span) may not be available. The product with the accuracy of within ±6% is supplied upon your request. Output pressure remains unaffected.
- \*4 Either analog output or switch output must be selected. Furthermore, when switch output is selected, either NPN output or PNP output must also be selected. Use caution that the preset input type is not equipped with an output signal function.
- \*5 Please contact SMC regarding indication with other units of pressure.
- \*6 Refer to the table below for communication specifications.
- 7 Add 50 g for digital input type, 70 g for 16 points present input type respectively. The product characteristics are confined to the static state. \*7
- \*
- Pressure may fluctuate when air is consumed at the output side.

### Communication Specifications (CC, DE, PR, RC, IL)

Model		ITV 00-DE	ITV 00-PR	ITV 00-RC	
Protocol	CC-Link	DeviceNet®	PROFIBUS DP	RS-232C	IO-Link (Class A)
Version*1	Ver. 1.10	Volume 1 (Edition 3.8), Volume 3 (Edition 1.5)	DP-V0	—	Ver. 1.1
Communication speed	156 k/625 k 2.5 M/5 M/10 Mbps	125 k/250 k/500 kbps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 Mbps	9.6 kbps	230.4 kbps (COM3)
Configuration file*2	—	EDS	GSD	—	IODD
I/O occupation area (input/output data)	4 words/4 words, 32 bits/32 bits (per station, remote device station)	16 bits/16 bits	16 bits/16 bits	_	4 bytes/2 bytes
Communication data resolution	12 bits (4096 resolution)	12 bits (4096 resolution)	12 bits (4096 resolution)	10 bits (1024 resolution)	12 bits (4096 resolution)
Fail safe	HOLD* <sup>3</sup> /CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD	HOLD/CLEAR
Electric insulation*4	Insulation	Insulation	Insulation	Non-insulation	Non-insulation
Terminating resistor	Built into the product (Switch setting)	Not built into the product	Built into the product (Switch setting)	—	—
Current consumption	0.16 A or less	0.14 A or less	0.16 A or less	0.12 A or less	0.12 A or less
Weight ITV2090	470	460	490	460	460


\*1 Please note that versions are subject to change.
 \*2 Configuration files can be downloaded from the operation manual page on the SMC website


3 The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.
 \*4 The insulation between the electrical signal of the communication system and ITV power supply




Electronic Vacuum Regulator ITV209 Series

### Working Principle

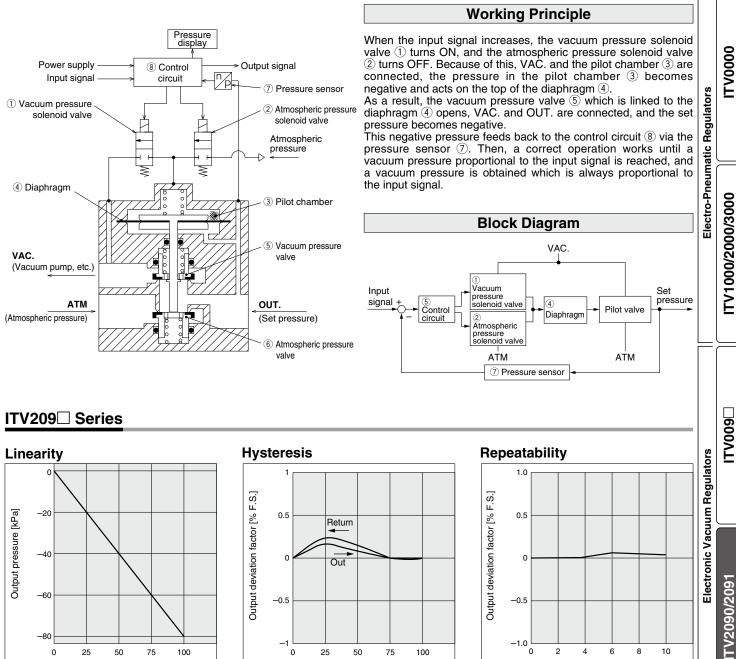


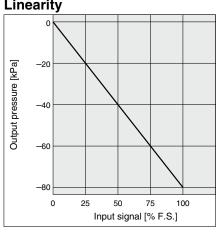


Pressure Characteristics Set pressure: -20 kPa 1.0 Output deviation factor [% F.S.] Set point 0.5 -0.5 -1.0-100 -60 -20 -80 -40 VAC. side pressure (Supply pressure) [kPa]

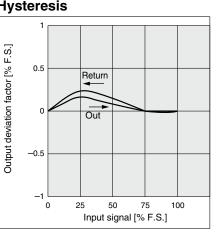

Flow Rate Supply vacuum pressure: -100 kPa Characteristics

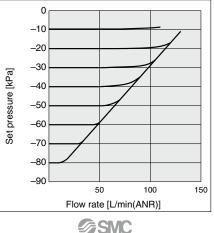

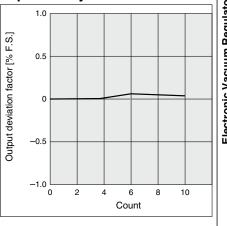

#### Flow rate characteristics measurement conditions

- Exhaust flow rate of the vacuum pump used for measurement: 500 L/min (ANR)
- Inlet vacuum pressure: -100 kPa
- (When outlet flow rate is 0 L/min (ANR)) Max. flow rate: 132 L/min (ANR)
- (With inlet vacuum pressure at -39 kPa)

Accessories


# ITV209 Series


### Dimensions

### ITV209


### Flat bracket


\* Do not attempt to rotate the cable connector, as it does not turn.

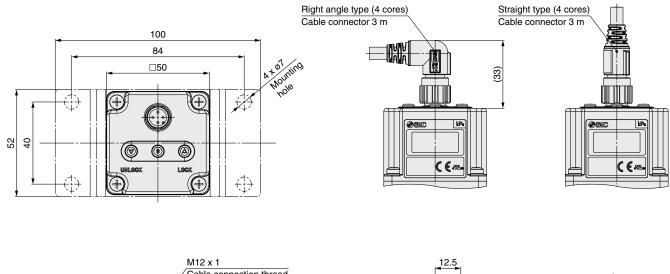

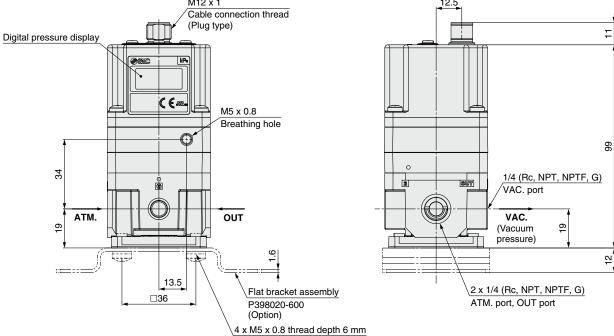

### L-bracket

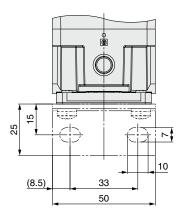

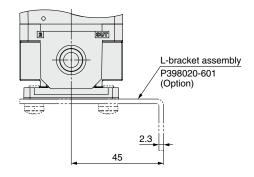


26

12

OUT

\* Dimensions not shown are the same as on page 49.

### Dimensions (16 points preset input, 10-bit digital input, CC-Link, DeviceNet®)

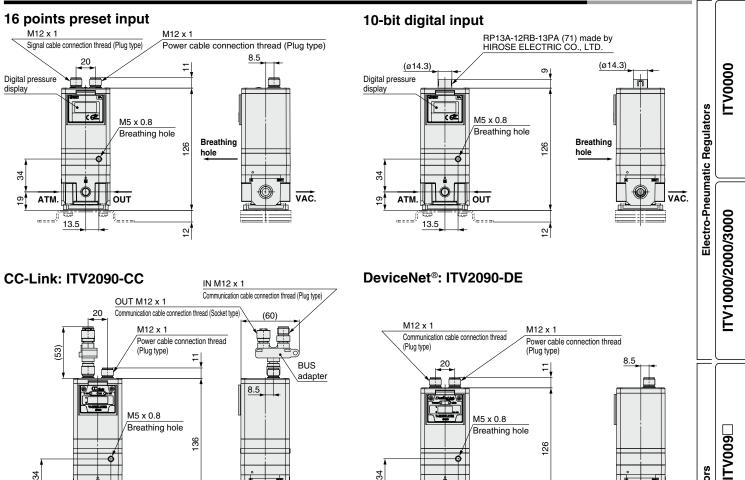


34

თ ATM.

......

13.5

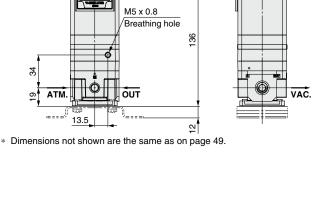

8

თ



**Electronic Vacuum Regulators** 

ITV2090/2091


Accessories

Specific Product Precautions


VAC.

# ITV209 Series

### Dimensions (PROFIBUS DP, RS-232C, IO-Link)

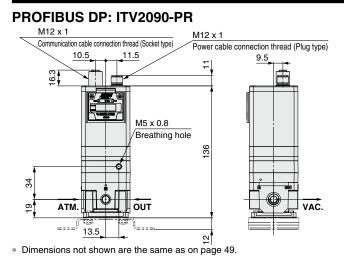


#### RS-232C: ITV2090-RC

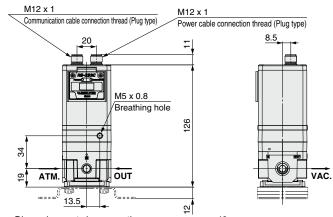


 $\ast\,$  Dimensions not shown are the same as on page 49.


#### IO-Link: ITV2090-IL

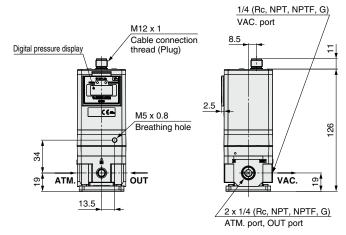

#### With power cable connector



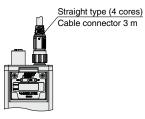

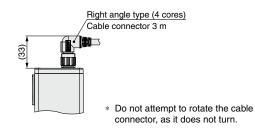

\* Order communication cable (other than 16 points, RS-232C) separately. (Refer to page 46.)

# ITV1000/2000/3000/209 Series **Accessories (Option)**

### Accessories (Option)/Part Nos.

#### [Bracket]

Description	Part no.	Weight
Flat bracket assembly (including mounting screws)	P398020-600	90
L-bracket assembly (including mounting screws)	P398020-601	90

#### [Cable connector]

Applicable model	Descri	otion	Part no.	Weight
Current type Voltage type		Straight type 3 m	P398020-500-3	
4 points preset input IO-Link	Cable connector (4 cores)	Right angle type 3 m	P398020-501-3	100
	Dever eshie (4 eeree)	Straight type 3 m	P398020-500-3	180
16 nainta propot input	Power cable (4 cores)	Right angle type 3 m	P398020-501-3	
16 points preset input	Signal cable (5 cores)	Straight type 3 m	P398020-502-3	
		Right angle type 3 m	P398020-503-3	
10-bit digital input	Cable connector (13 cores)	Straight type 3 m	INI-398-0-59	310
CC-Link PROFIBUS DP	Power cable (4 cores)	Straight type 3 m	P398020-500-3	
DeviceNet <sup>®</sup>	Fower cable (4 cores)	Right angle type 3 m	P398020-501-3	
RS-232C	<b>D</b>	Straight type 3 m	P398020-500-3	180
	Power cable (4 cores)	Right angle type 3 m	P398020-501-3	
	Communication cable	Straight type 3 m	P398020-502-3	
	(5 cores)	Right angle type 3 m	P398020-503-3	

 For the 10-bit digital type, there is no right angle type cable connector.
 Even when "with cable connector" is selected, the communication cable is not included in the communication model (CC, DE, and PR). Please order it separately.

#### [Cable connector specifications] P398020-500-3, P398020-501-3

Conductor	Nominal cross section	4 x AWG21		
Conductor	Outside diameter	Approx. 0.9 mm		
Insulator Outside diameter		Approx. 1.7 mm		
Sheath Material		PVC		
Finished outs	ø6 mm			
Min. bending	60 mm			

#### P398020-502-3, P398020-503-3

Conductor	Nominal cross section	5 x AWG21		
Conductor	Outside diameter	Approx. 0.9 mm		
Insulator	Outside diameter	Approx. 1.7 mm		
Sheath	Material	PVC		
Finished outside diameter		ø6 mm		
Min. bending	radius	60 mm		

INI-398-0-59


Conductor	Nominal cross section	16 x AWG24	Seg
Conductor	Outside diameter	iameter Approx. 1.21 mm al PVC	Ē
Insulator	Outside diameter	Approx. 1.21 mm	nn
Sheath	Material	PVC	/ac
Finished out	side diameter	ø8 mm	<u>i</u>
Min. bending	radius	60 mm	l o
			Electronic Vacuum Regu
			Ē


#### [Bus adapter]


[= ao adaptor]			
Applicable model	Description	Part no.	Weight
CC-Link	Bus adapter (Included with the product)	EX9-ACY00-MJ	35

### Dimensions

#### Flat bracket

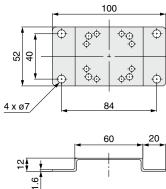

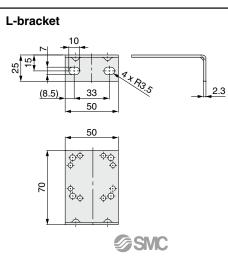

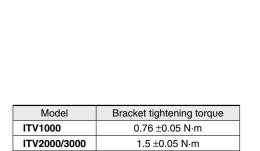

ITV0000 **Electro-Pneumatic Regulators** ITV1000/2000/3000

**TV009** 

llators

TV2090/209

52 ®

Accessories



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For F.R.L. units precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

### ITV0000/009 Series Precautions

Air Supply

# \land Warning

- 1. Please consult with SMC when using the product in applications other than compressed air.
- 2. Do not use compressed air that contains chemicals, synthetic oils that include organic solvents, salt, corrosive gases, etc., as doing so may result in a malfunction.

# A Caution

- 1. Install an air filter near this product on the supply side. Select an air filter with a filtration size of 5  $\mu$ m or smaller.
- 2. Compressed air that contains a large amount of drainage can result in the malfunction of this product and other pneumatic equipment. Therefore, take appropriate measures to ensure air quality, such as by providing an aftercooler, air dryer, or water separator.
- 3. If excessive carbon dust is generated by the compressor, it may adhere to the inside of this product and cause it to malfunction.


Refer to the "SMC Air Preparation System" for further details on compressed air quality.

#### Wiring


# A Caution

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can result in damage.

Further, use DC power with sufficient capacity and a low ripple.

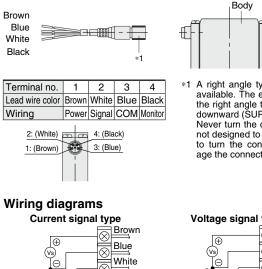

*1	A right angle type cable is also available. The entry direction for the right angle type connector is downward (SUP port side).
	Never turn the connector as it is not designed to turn. Using force to turn the connector will dam- age the connector coupling.

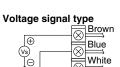


Vs: Power supply	24 VDC ±10%
	12 to 15 VDC
A : Input signals	4 to 20 mADC
	0 to 20 mADC


Black

12 to 15 VDC Vin: Input signals 0 to 5 VDC 0 to 10 VDC

Black

Monitor output wiring diagram

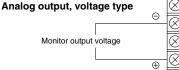

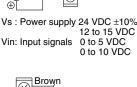

Blue,

White

Black

Handling

# 🗥 Caution

- 1. Do not use a lubricator on the supply side of this product, as doing so may result in a malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side. However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- 3. If the power to this product is cut off due to a power failure, etc., when it is in a controlled state, the output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- 4. If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated. Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- 5. This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as failure to do so may result in a malfunction.
- 6. The optional cable connector is a 4-wire type. When the monitor output (analog output) is not being used, keep it from touching the other wires as doing so may result in a malfunction.
- 7. Please note that the right angle cable does not rotate and is limited to only one entry direction.
- 8. Take the following steps to avoid malfunction due to noise. 1) Remove power supply noise during operation by installing a line filter, etc., in the AC power line.
  - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors, power lines, etc.
  - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 9. The product characteristics are confined to the static state. When air is consumed on the output side, and especially used in the system with large leakage, pressure cannot approach the set pressure and the service life is drastically shortened with a humming noise of the solenoid valve.
- 10. For details on the handling of this product, refer to the operation manual which is included with the product.
- 11. In locations where the body is exposed to water, 0 dust, etc., there is a possibility that moisture or dust could enter the body through the breathing hole. Mount a fitting and tube (M-3AU-3 fitting Breathing hole the breathing hole and run the tube to a lo-M3 x 0.5 cation not exposed to moisture, dust, etc.



**∂SMC** 



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For F.R.L. units precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

### ITV0000/009 Series Precautions

#### Handling

# **A** Caution

12. If this product will be used in a sealed environment, such as inside an inspection box, a ventilation fan should be installed to ensure adequate ventilation as this product can generate heat in some operating conditions.

When the power is turned on, a noise may be generated as a means of checking the operating condition of the solenoid valve. This noise is normal and does not indicate a fault.

13. Each product needs to be powered by one power supply unit.

The wiring of this product has the same common between the GND for power and the signals; there is a possibility that a wrong current occurs and prevents a proper operation if one power supply unit controls multiple electro-pneumatic regulators.

- 14. This product does not have a shut-off valve function. If air pressure is supplied without electric power being applied, output pressure may increase to the pressure equivalent of the supply pressure. Operate the system to shut off the supply pressure when not operating the product.
- 15. For this product, by conducting the procedure described below (steps A to D), the parameters compatible with the power supply voltage and supply pressure in use can be obtained.

If the desired output pressure values cannot be reached due to fluctuations in the operating conditions, etc., perform this operation.

- A) Change the power supply voltage in use by  $\pm 0.4$  VDC or more.
- B) After inputting the supply pressure used on the inlet side of the ITV, adjust the input signal as described below.

 $(0\% \to 100\% \to 0\%)$  (Change it gradually, waiting 10 s or more between each adjustment.)

- \* Please contact SMC if difficulty inputting signals occurs.
- C) Change the power supply voltage according to the operating conditions/requirements, and repeat step B.
- D) Input the power supply voltage and a 0% signal, and retain for 6 minutes or more. (Supply pressure is not required.)

While conducting the procedure stated above, noise may be generated by the solenoid valve. However, this does not affect the obtainment of the parameters. In addition, be sure to conduct the procedure with the air sealed in the piping. Return of Product

# **A**Warning

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.

Regulators

Electro-Pneumatic

**Electronic Vacuum Regulators** 



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For F.R.L. units precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

### ITV1000/2000/3000/209 Series Precautions

#### Piping


# \land Warning

Torque


1. When screwing piping into a component, tighten within the recommended tightening torque range while holding the female thread side.

If the tightening torque is insufficient, looseness or sealing failure may occur. On the other hand, excess tightening torgue can result in damage to the threads. Furthermore, tightening without holding the female thread side can result in damage due to the excess force that is applied directly to the piping bracket.

Recommended tightening torque range: N							
Connection thread	1/8	1/4	3/8	1/2			

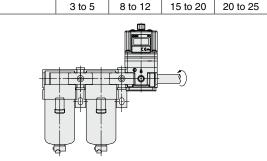

2. Avoid excessive torsional moment and bending moment other than those caused by the equipment's own weight, as failure to do so may result in damage.

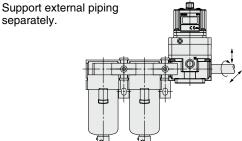

3. Piping materials which lack flexibility, such as steel tube piping, are prone to being affected by excess moment loads and vibrations from the piping side. Use flexible tubing in between to avoid such effects.

# A Caution

separately.


#### 1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil, and other debris from inside the pipe.

If chips, sealing material, or other debris enter into this product, the solenoid valve may buzz or the outlet pressure may not be output properly.

#### 2. Winding of sealant tape

When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not enter the piping. Also, if sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

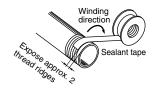

**Operating Environment** 

# \land Warning

- 1. Do not use in atmospheres containing corrosive gases, chemicals, sea water, or where there is direct contact with any of these.
- 2. Please contact SMC regarding use at power stations or in instrumentation applications.

# /↑\ Caution

- 1. When used in locations where the body of the product is exposed to water, water vapor, dust, etc., there is a possibility that moisture or dust could enter the body through the EXH (solenoid) ports, thereby causing problems.
- 2. To prevent this, simply install tubing to each port, using the fittings, and extend the tubing so that the other end is in a location where no water splash, etc., occurs. Make sure not to bend or block the I.D. of the tubing as this will have a detrimental effect on the pressure control.
- 3. Do not use in places subject to heavy vibration and/ or impact.
- 4. The product should not be exposed to prolonged sunlight. Use a protective cover if this is unavoidable.
- 5. Remove any sources of excessive heat.
- 6. In locations where there is contact with water, oil, weld spatter, etc., take suitable protective measures.

Air Supply

# \land Warning

- 1. Please contact SMC when using the product in an application using a fluid other than compressed air.
- 2. Do not use compressed air that contains chemicals. synthetic oils that include organic solvents, salt, corrosive gases, etc., as doing so may result in a malfunction.

# A Caution

- 1. Install an air filter near this product on the supply side. Select an air filter with a filtration size of 5  $\mu$ m or smaller.
- 2. Compressed air that contains a large amount of drainage can cause the malfunction of this product and other pneumatic equipment. Therefore, take appropriate measures to ensure air quality, such as providing an aftercooler, air dryer, or water separator.
- 3. If excessive carbon dust is generated by the compressor, it may adhere to the inside of this product and cause it to malfunction.

Refer to the "SMC Air Preparation System" for further details on compressed air quality.

55



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For F.R.L. units precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

### ITV1000/2000/3000/209 Series Precautions

#### Handling

# A Caution

- 1. Do not use a lubricator on the supply side of this product, as doing so may result in a malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side. However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- 3. If the power to this product is cut off due to a power failure, etc., when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- 4. If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated. Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- 5. The setting side pressure cannot be completely released from this product in the range below 0.005 MPa (or -1.3 kPa for vacuum models). In cases where the pressure needs to be reduced completely to 0 MPa, install a 3-port valve, etc., on the setting side to discharge the residual pressure.
- 6. This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as failure to do so may result in a malfunction.
- 7. The optional cable connector is a 4-wire type. When the monitor output (analog output or switch output) is not being used, keep it from touching the other wires as doing so may result in a malfunction.
- 8. When connecting the cable to this product, turn the lock ring of the cable. If a portion other than the lock ring of the cable is turned, it may damage the connector on the body. Turn the lock ring by hand without using a tool.
- 9. The right angle cable does not rotate and is limited to only one entry direction. If the right angle cable is rotated forcibly, the cable may be broken or damaged, or may damage the connector on the body.
- 10. Take the following steps to avoid malfunction due to noise.
  - 1) Remove power supply noise during operation by installing a line filter, etc., in the AC power line.
  - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors, power lines, etc.
  - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 11. Due to the large volume of the output side, a loud exhaust noise will be produced when being used for the purpose of a relief function. Therefore, install a silencer (SMC AN20 or AN40 series) on the exhaust port (EXH port). The port sizes are Rc1/8, Rc1/4, and Rc1/2.
- 12. Specifications on pages 14 and 47 are in case of static environment. Pressure may fluctuate when air is consumed at the output side.

Handling

## A Caution

- 13. For details on the handling of this product, refer to the operation manual which is included with the product.
- 14. This product does not have a shut-off valve function. If air pressure is supplied without electric power being applied, output pressure may increase to the pressure equivalent of the supply pressure. Operate the system to shut off the supply pressure when not operating the product.
- 15. The solenoid valves built into this product are consumables. Perform periodic maintenance in environments where the solenoid valves are operated at a high frequency. The parts can be replaced with a solenoid valve assembly. Please contact SMC for the part number.
- 16. In locations where the body is exposed to water, dust, etc., there is a possibility that moisture or dust could enter the body through the solenoid valve EXH port. Mount a fitting and tube onto the solenoid valve EXH port and run the tube to a location not exposed to moisture, dust, etc.

#### **Design and Selection**

# 🗥 Caution

ing ratings

SMC


1. Use the following UL approved products for DC power supply combinations.

- (1) Limited voltage current circuit in accordance with UL 508 A circuit in which power is supplied by the secondary coil of a
  - transformer that meets the following conditions • Max. voltage (with no load): 30 Vrms (42.4 V peak) or less
  - Max. current: (1) 8 A or less (including when short circuited)

(2) limited by circuit protector (such as fuse) with the follow-

	<u> </u>
No load voltage (V peak)	Max. current rating [A]
0 to 20 [V]	5.0
Over 20 and 30 or less [V]	100
Over 20 and 30 or less [v]	Peak voltage

- (2) A circuit (class 2 circuit) with max. 30 Vrms (42.4 V peak) or less, and a power supply consisting of a class 2 power supply unit con-firming to UL1310, or a class 2 transformer confirming to UL1585
- 2. Operate these products only within the specified voltage. Using voltages beyond the specified levels could result in faults or malfunctions.
- 3. Use 0 V as the baseline for the power supplied to the unit for output, control, and input.

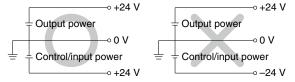

- 4. Each product needs to be powered by one power supply unit. The wiring of this product has the same common between the GND for power and the signals; there is a possibility that a wrong current occurs and prevents a proper operation if one power supply unit controls multiple electro-pneumatic regulators.
- 5. Please contact SMC for the usage when the downstream side is released to atmosphere.

This product is a pressure controller. The downstream side being released to atmosphere makes the inlet valve full open, allowing a large amount of atmosphere flow into the body. Please contact SMC for the appropriate usage when you use the product under such condition since the product may not meet the specification or the life of the product may be shortened.

**TV0000** 

Regulators

Electro-Pneumatic

ITV1000/2000/3000

TV009

TV2090/209

**Electronic Vacuum Regulators** 




Be sure to read this before handling the products. Refer to the back cover for safety instructions. For F.R.L. units precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

### ITV1000/2000/3000/209 Series Precautions

#### Wiring

# A Caution

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can result in damage. Further, use DC power with sufficient capacity and a low ripple.

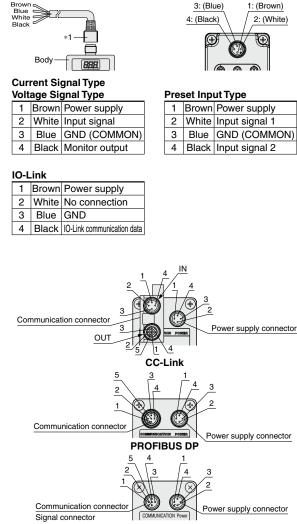

DeviceNet®, RS-232C, 16 points preset

IN/OUT communication connector Signal connector CC-Link DeviceNet® PROFIBUS DP RS-232C Pin no. 16 points preset No connection No connection Input signal 1 [Brown] SLD [-] DRAIN [-] 1 RxD/TxD-N [Green] TxD [White] Input signal 2 [White] 2 DB [White] V+ [Red] V- [Black] No connection RxD [Blue] Input signal 3 [Blue] 3 DG [Yellow] DA [Blue] CAN\_H [White] RxD/TxD-P [Red] GND [Black] Input signal 4 [Black] 4 No connection CAN\_L [Blue] No connection No connection Common [Gray] 5

		Power supply connector							
Pin no.	CC-Link DeviceNet® PROFIBUS DP RS-232C		RS-232C	16 points preset					
1 [Brown]	Vcc	Vcc	Vcc	Vcc	Vcc				
2 [White]	FG	Cannot connect	FG	No connection	No connection				
3 [Blue]	GND	GND	GND	GND	GND				
4 [Black]	No connection	Cannot connect	No connection	FG	Monitor output				

\*1 The cable is also available in a right angle type. (Communication cable: straight type only) A right angle type connector is attached facing left (toward the SUP port). On communication models, the connector faces backward (toward the EXH port). Do not attempt to rotate, as the connector does not turn.

The indicated wire colors are when a cable connector made by SMC is used.

Perform the wiring so that no electric potential difference occurs between GND of the power supply and GND of the communication section. If any electric potential difference occurs, this may cause the internal parts to burn out.

Knock-down connectors \* Order separately.

Brown

Blue

White 

Application	CC- compa		DeviceNet <sup>®</sup> compatibility			PROFIBUS DP compatibility		
Part no.	Plug PCA- 1075526	Socket PCA- 1075527	Plug PCA- 1075528	Socket PCA- 1075529	Terminal plug PCA- 1557675	Plug PCA- 1075530	Socket PCA- 1075531	Terminal plug PCA- 1557727

#### Wiring diagrams

Œ

(Vs.

Â

Vs

Vs:

Current signal type


Voltage signal type

•	-	••
		Brown
Ð		Blue
(Vs)		White
		$\neg \otimes \vDash$
(Vin)		Black
⊕ĭ		

Vs : Power supply 24 VDC 12 to 15 VDC

A : Input signal 4 to 20 mADC 0 to 20 mADC

4 points preset input type Brown

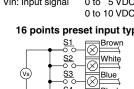

Ð		Ĭ	Blue	
	<u><u>S1</u></u>		Vhitę	
Э '	<u>S2</u>		Black	
		<u>_</u>	$\longrightarrow$	
Pow	er supply	24 \	/DC	
		121	io 15	VDC

Vs : Power supply 24 VDC (No polarity) (Negative common)

One of the preset pressures P1 through P4 is selected by the ON/OFF combination of S1 and S2.

		-							
S1	OFF	ON	OFF	ON	OFF		ON	OFF	ON
S2	OFF	OFF	ON	ON	OFF	]	OFF	ON	ON
S3	OFF	OFF	OFF	OFF	ON		ON	ON	ON
S4	OFF	OFF	OFF	OFF	OFF	]	ON	ON	ON
Preset pressure	P01	P02	P03	P04	P05		P14	P15	P16

\* For safety reasons, it is recommended that one of the preset pressures be set to 0 MPa.

*	* Preset pressures are set based on the min									
	MPa	kgf/cm <sup>2</sup>	bar	psi	kPa					
	0.001	0.01	0.01	0.1	1					

Trademark DeviceNet® is a registered trademark of ODVA, Inc.

· Note that this is 1 psi for 130 psi types. SMC

w r	$ \longrightarrow $
Θ	White
<u>S</u>	Black

Vs : Power supply	24 VDC
	12 to 15 VDC
Vin: Input signal	0 to 5 VDC

#### 16 points preset input type

unit for output display.

	s	3	$\otimes \otimes \otimes \otimes$	White Blue Black Gray



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For F.R.L. units precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

### ITV1000/2000/3000/209 Series Precautions

#### **CE/UKCA Marking**

#### 10-bit digital input type


TO-DIL UIGILAI IIIPUL L	ype
Wire color	Signal name
Pink-Black 2	Power supply (24 VDC)
Green-Black 2	Power supply (GND)
Blue	Signal common (No polarity)
Blue-Black 2	MSB 10 bit
Gray-Black 1	9 bit
Orange-Black 1	8 bit
Green-Black 1	7 bit
Pink-Black 1	6 bit
Blue-Black 1	5 bit
Gray	4 bit
Orange	3 bit
Green	2 bit
Pink	LSB 1 bit

\* The wire color is shown for when an option cable is used.

#### Monitor output wiring diagrams

Analog output: Voltage type Analog output: Current type

Wiring

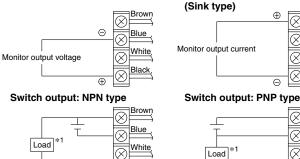



Brown Blue

White

Black

\*1 When 80 mADC or more is applied, detecting device for overcurrent starts activating and then emits an error signal. (Error number "5")

#### Set Pressure Range

The set pressure range, by unit of standard measured pressure, is shown in the table below.

<b>A</b> ·		
Set pressure range,	by unit of standard m	easured pressure

Black

Unit	Set pressure range									
Unit	ITV	/0	1	ITV	/0	3□	ITV	/0	)5🗆	ITV209□
MPa	0.005	5 to	0.1	0.005	5 to	0.5	0.005	5 to	0.9	
kgf/cm <sup>2</sup>	0.05	to	1	0.05	to	5	0.05	to	9	
bar	0.05	to	1	0.05	to	5	0.05	to	9	_
psi	0.7	to	15	0.7	to	70	0.7	to	130	_
kPa	5	to	100	5	to	500	5	to	900	-1.3 to -80

			3	
• ITV0000 Serie	es			
Model		e core essity	Recommended power supply cable	ators
ITV0000-□□	Unneo	cessary	M8-4DSX3MG4 (Straight type) P398000-501-2 (Right angle type)	c Regu
<ul> <li>Recommended If any other leng</li> <li>ITV1000/200</li> </ul>	oth is desired	, please co	igth is 3 m. (P398000-501-2 is 2 m.) ontact SMC.	Pneumati
Model	Ferrite core necessity		Recommended power supply cable	ectro-

	necessity		power supply cable	. X
ITV00-00		_	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	Elec
ITV52		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	
ITV□□-53□		Signal	P398020-502-3 (Straight type) P398020-503-3 (Right angle type)	
ITV 🗆 -60 🗆		—	INI-398-0-59 (Straight type)	
*1, *2		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	=
		Communication	PCA-1567720 (Socket type) PCA-1567717 (Plug type)	
*1, *3	Unnecessary	Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	
ITVDE		Communication	PCA-1557633 (Socket type) PCA-1557646 (Plug type)	
*1, *3		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	tors
		Communication	PCA-1557688 (Socket type) PCA-1557691 (Plug type)	egula
		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	ectronic Vacuum Regulators
		Communication	P398020-502-3 (Straight type) P398020-503-3 (Right angle type)	Vacu
ITV IL		_	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	tronic

connector is not included. Refer to the catalog [M8/M12 Connector] CAT. ES100-73 for the details of the communication cable.

\*2 For CC-Link compatible products, a dedicated Bus adapter is included with the product. \*3 For DeviceNet<sup>®</sup> compatible products, and PROFIBUS DP compatible products, a T-branch connector is not included with the product.

Recommended power supply cable length is 3 m. If any other length is desired, please contact SMC.

### **Return of Product**

# **A**Warning

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item. Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.

ш

**TV0000** 

TV1000/2000/3000

TV009



Be sure to read this before handling the products. Refer to the back cover for safety instructions. For F.R.L. units precautions, refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website.

### ITV009 /209 Series Precautions

#### Handling

# **A**Caution

- 1. Connect the vacuum pump to the port, which is labeled "VAC."
- 2. Pressure adjustment changes from "atmospheric pressure to vacuum pressure" when the input signal is increased, and from "vacuum pressure to atmospheric pressure" when the input signal is decreased.
- 3. When adjusting the vacuum pressure, be careful not to block the atmospheric pressure inlet port labeled "ATM."
- 4. Since this product is designed exclusively for use with negative pressure, be careful not to apply positive pressure in error.
- 5. In cases where the vacuum pump being used has a relatively small capacity, or the piping has a small inside diameter, etc., large variations in the set pressure (the range of pressure variation when changing from no flow to flow state) may appear. In this situation, the vacuum pump or the piping should be changed. In cases where it is not practical to change the vacuum pump, install a capacity tank (volume depending on the operating conditions) on the VAC side.
- 6. The vacuum pressure response time after a change in the input signal is influenced by the internal volume on the setting side (including piping). Since the capacity of the vacuum pump also influences the response time, give careful consideration to these points before operation.
- 7. If the electric power is shut off when in a control state, the pressure on the setting side will go into a holding condition. However, this setting side pressure will be held only temporarily and is not guaranteed. In addition, when atmospheric pressure is desired, shut off the power after reducing the set pressure, and then introduce atmospheric pressure by using a vacuum release valve, etc.
- 8. If the power for this product is cut off by a power failure, etc., when it is in a controlled state, the setting side pressure will be held temporarily. Further, if operated without sealing the setting side so that atmospheric air is sucked in, handle with care as air will continue to be sucked in.
- 9. If the VAC side pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and may cause a humming noise. Since this may shorten the life of the product, be sure to shut off the power when the VAC side pressure is shut off.
- 10. The setting side pressure cannot be completely released from this product in the range below -1.3 kPa. In cases where the pressure needs to be reduced completely to 0 kPa, install a 3-port valve, etc., on the setting side to discharge the residual pressure.
- 11. This product is adjusted for each specification at the factory before shipment. Avoid careless disassembly or removal of parts, as this can result in failure.

Handling

# A Caution

- 12. The optional cable connector is a 4-wire type. When the monitor output (analog output, switch output) is not being used, keep it from touching the other wires, as doing so may result in a malfunction.
- 13. Use caution that the right angle cable does not rotate and is limited to only one entry direction.
- 14. Take the following steps to avoid malfunction due to noise.
  - 1) Remove power supply noise during operation by installing a line filter, etc., in the AC power line.
  - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors, power lines, etc.
  - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 15. Refer to the operation manual included with the product for details on its handling.

#### **Return of Product**

# **Warning**

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.

#### **Revision History** Edition D \* The ITV1000 series has been added. \* Number of pages has been increased from 16 to 20. ΗХ Edition E \* The ITV0000 and 009 series have been added. \* The ITV209 series has been added. $\ast$ Fieldbus-compatible specifications CC-Link, DeviceNet^M, and PROFIBUS DP have been added. \* An RS-232C serial communication specification has been added. \* CE [option] and UL have been added. \* Number of pages has been increased from 20 to 52. NS Edition F \* The dimensions of the ITV1000/2000/3000/209 series have been changed. \* The enclosure for the ITV209 series has been changed to conform to IP65. ΟZ Edition G \* IO-Link compatible products have been added. \* An analog output, current type (source type) has been added to the made-to-order products. \* Cable connector specifications have been added to the accessories. \* Number of pages has been increased from 52 to 64. ZU

### ▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)<sup>\*1</sup>, and other safety regulations.

- Caution: indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

**Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

### **A**Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
  - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

# 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

- \*1) ISO 4414: Pneumatic fluid power General rules relating to systems.
  - ISO 4413: Hydraulic fluid power General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
  - ISO 10218-1: Manipulating industrial robots Safety. etc.

### 

 The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand

and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

### Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

#### Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - \*2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### **Compliance Requirements**

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

### 

### SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.