


# Step Motor Controller

## 5 types of communication protocols

 **IO-Link**     **EtherCAT**     **PROFINET**    **DeviceNet**    **EtherNet/IP**

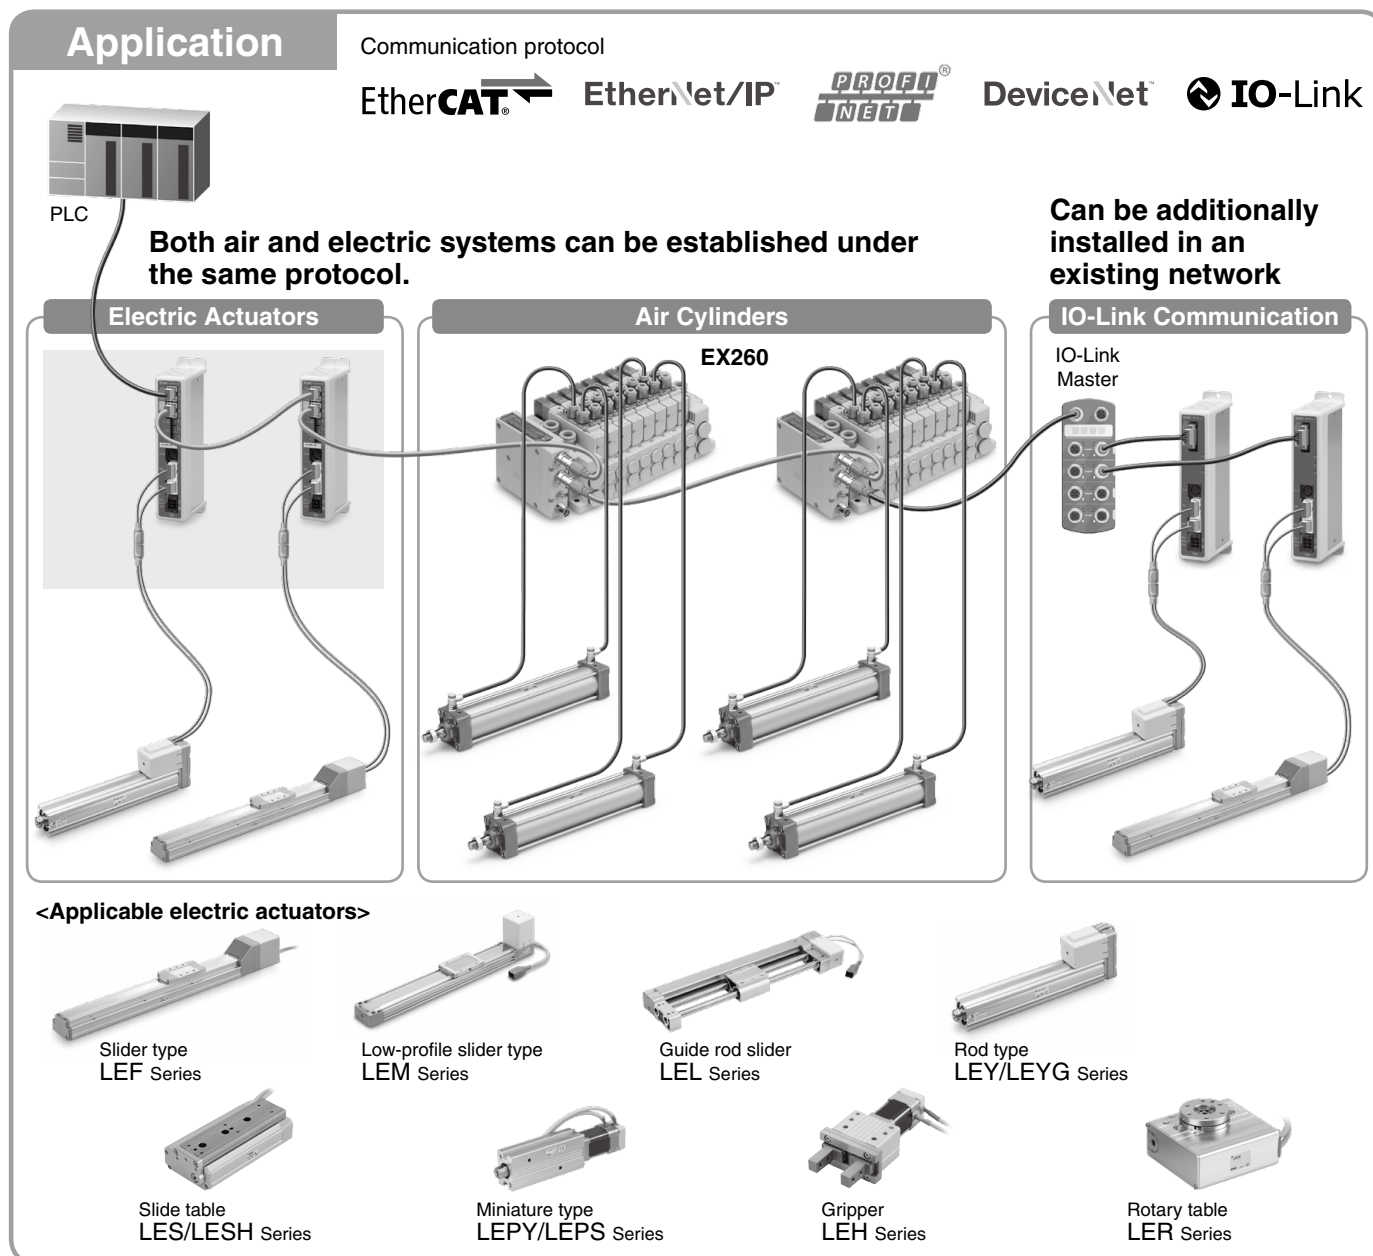

# JXCE1/91/P1/D1/L1 Series



## Two types of operation command

**Step no. defined operation:** Operate using the preset step data in the controller.

**Numerical data defined operation:** The actuator operates using values such as position and speed from the PLC.

## Numerical monitoring available


Numerical information, such as the current speed, current position, and alarm codes, can be monitored on the PLC.

## Transition wiring of communication cables

Two communication ports are provided.


\* For the DeviceNet™ type, transition wiring is possible using a branch connector.

\* 1 to 1 in the case of IO-Link

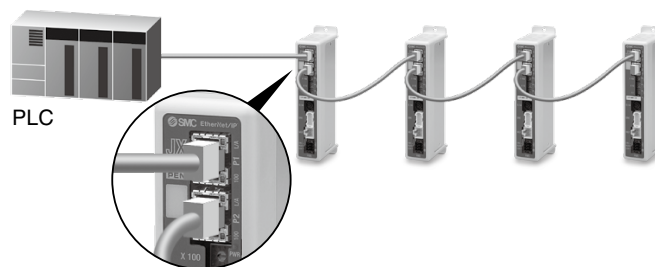


## IO-Link communication can be performed.

The data storage function eliminates the need for troublesome resetting of step data and parameters when changing over the controller.

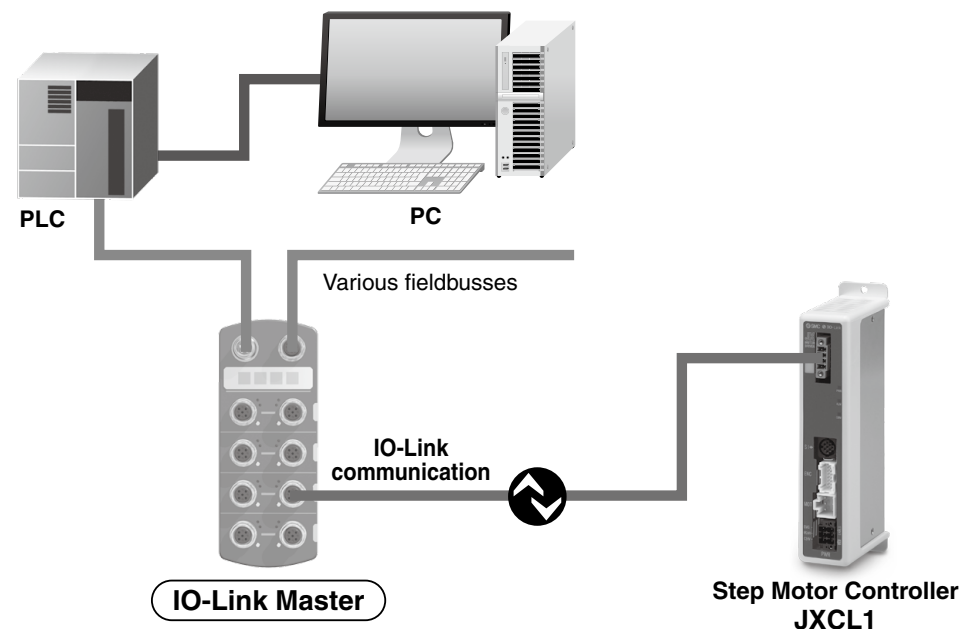

## IO-Link

IO-Link is an open communication interface technology between the sensor/actuator and the I/O terminal that is an international standard, IEC61131-9.

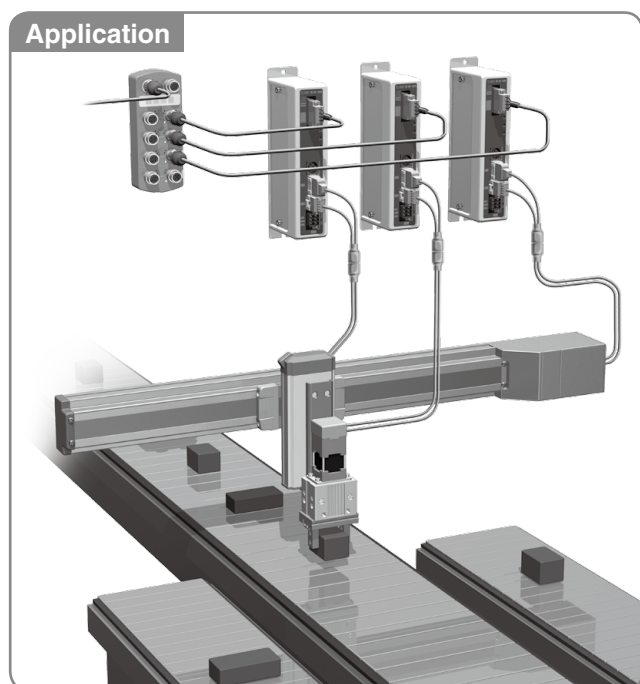

### ● Step data and parameters can be set from the master side.

Step data and parameters can be set or changed by means of IO-Link communication.


### ● Data storage function

When the controller is changed, the parameters and step data for the actuator are automatically set.\*<sup>1</sup>

### ● 4-wire unshielded cables can be used.




\*<sup>1</sup> The "basic parameter" and the "return to origin parameter" are automatically set as the actuator parameters, and the 3 items of data consisting of No. 0 to 2 are automatically set as the step data.
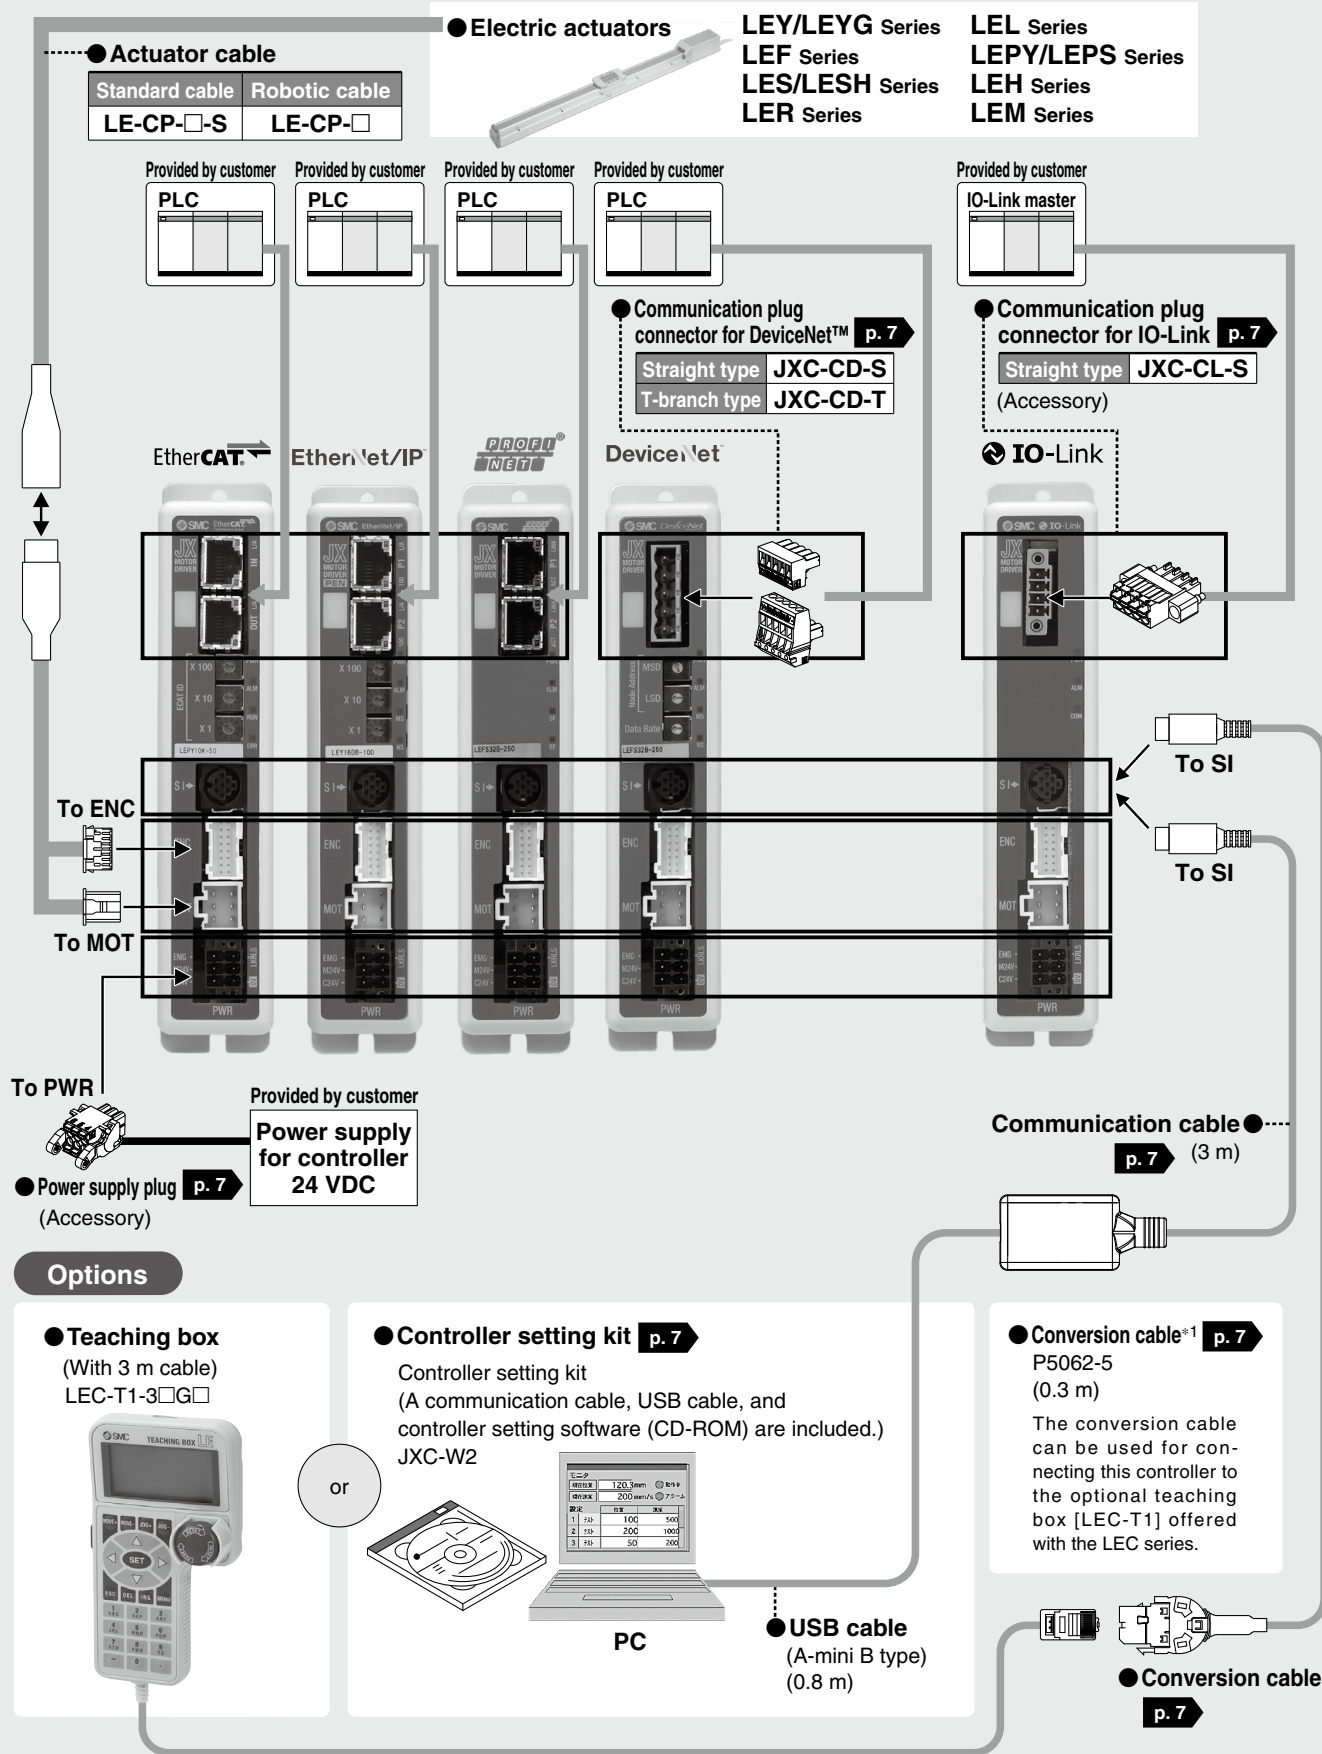
## System Construction



\*1 A conversion cable is also required for connecting the controller to the LEC-W2. (A conversion cable is not required for the JXC-W2.)

# Step Motor Controller

JXCE1/91/P1/D1/L1 Series   

## How to Order



### Actuator + Controller

**LEFS16B-100 - R1 CD17T**

#### Actuator type

Refer to "How to Order" in the actuator catalog.  
For compatible actuators, refer to the table below. Example: LEFS16B-100B-R1C917

Compatible actuators		Refer to the Web Catalog.
Electric Actuator/Rod	LEY Series	
Electric Actuator/Guide Rod	LEYG Series	
Electric Actuator/Slider	LEF Series	
Electric Slide Table	LES/LESH Series	
Electric Rotary Table	LER Series	
Electric Actuator/Guide Rod Slider	LLEL Series	
Electric Actuator/Miniature	LEPY/LEPS Series	
Electric Gripper	LEH Series	
Electric Actuator/Low-Profile Slider	LEM Series	

\* Only the step motor type is applicable.

#### Controller

Nil	Without controller
C□1□□	With controller

**CD17T**

#### Communication protocol

E	EtherCAT®
9	EtherNet/IP™
P	PROFINET
D	DeviceNet™
L	IO-Link

#### Mounting

7	Screw mounting
8*1	DIN rail

\*1 The DIN rail is not included. It must be ordered separately. (Refer to page 7.)

For single axis

#### Actuator cable type/length

Nil	Without cable
S1	Standard cable 1.5 m
S3	Standard cable 3 m
S5	Standard cable 5 m
R1	Robotic cable 1.5 m
R3	Robotic cable 3 m
R5	Robotic cable 5 m
R8	Robotic cable 8 m*1
RA	Robotic cable 10 m*1
RB	Robotic cable 15 m*1
RC	Robotic cable 20 m*1

\*1 Produced upon receipt of order (Robotic cable only)

\* The standard cable should only be used on fixed parts. For use on moving parts, select the robotic cable.

#### Caution

##### [CE-compliant products]

EMC compliance was tested by combining the electric actuator LE series and the JXCE1/91/P1/D1/L1 series.

The EMC depends on the configuration of the customer's control panel and the relationship with other electrical equipment and wiring. Therefore, compliance with the EMC directive cannot be certified for SMC components incorporated into the customer's equipment under actual operating conditions. As a result, it is necessary for the customer to verify compliance with the EMC directive for the machinery and equipment as a whole.

#### Option

Nil	Without option
S	With straight type DeviceNet™ communication plug for JXCD1
T	With T-branch type DeviceNet™ communication plug for JXCD1

\* Select "Nil" for anything other than JXCD1.

When selecting an electric actuator, refer to the model selection chart of each actuator. Also, for the "Speed-Work Load" graph of the actuator, refer to the LECPMJ section on the model selection page of the electric actuators **Web Catalog**.

### Controller

**JXC D 1 7 T - LEFS16B-100**

#### Precautions for blank controllers (JXC□1□□-BC)

A blank controller is a controller to which the customer can write the data of the actuator it is to be combined and used with. Use the dedicated software (JXC-BCW) for data writing.

- Please download the dedicated software (JXC-BCW) via our website.
- Order the controller setting kit (LEC-W2) separately to use this software.

SMC website  
<http://www.smcworld.com>

#### Communication protocol

E	EtherCAT®
9	EtherNet/IP™
P	PROFINET
D	DeviceNet™
L	IO-Link

For single axis

#### Mounting

7	Screw mounting
8*1	DIN rail

\*1 The DIN rail is not included. It must be ordered separately. (Refer to page 7.)

#### Actuator part number

Without cable specifications and actuator options  
Example: Enter "LEFS16B-100" for the LEFS16B-100B-S1□□.

BC Blank controller\*1

\*1 Requires dedicated software (JXC-BCW)

#### Option

Nil	Without option
S	With straight type DeviceNet™ communication plug for JXCD1
T	With T-branch type DeviceNet™ communication plug for JXCD1

\* Select "Nil" for anything other than JXCD1.

When selecting an electric actuator, refer to the model selection chart of each actuator. Also, for the "Speed-Work Load" graph of the actuator, refer to the LECPMJ section on the model selection page of the electric actuators **Web Catalog**.

## Specifications

Model		JXCE1	JXC91	JXCP1	JXCD1	JXCL1
<b>Network</b>		EtherCAT®	EtherNet/IP™	PROFINET	DeviceNet™	IO-Link
<b>Compatible motor</b>		Step motor (Servo/24 VDC)				
<b>Power supply</b>		Power voltage: 24 VDC ±10%				
<b>Current consumption (Controller)</b>		200 mA or less	130 mA or less	200 mA or less	100 mA or less	100 mA or less
<b>Compatible encoder</b>		Incremental A/B phase (800 pulse/rotation)				
Communication specifications	<b>Applicable system</b>	EtherCAT®*2	EtherNet/IP™*2	PROFINET*2	DeviceNet™	IO-Link
	<b>Protocol</b>	EtherCAT®*2	EtherNet/IP™*2	PROFINET*2	DeviceNet™	IO-Link
	<b>Version*1</b>	Conformance Test Record V.1.2.6	Volume 1 (Edition 3.14) Volume 2 (Edition 1.15)	Specification Version 2.32	Volume 1 (Edition 3.14) Volume 3 (Edition 1.13)	Version 1.1 Port Class A
	<b>Communication speed</b>	100 Mbps*2	10/100 Mbps*2 (Automatic negotiation)	100 Mbps*2	125/250/500 kbps	230.4 kbps (COM3)
	<b>Configuration file*3</b>	ESI file	EDS file	GSDML file	EDS file	IODD file
	<b>I/O occupation area</b>	Input 20 bytes Output 36 bytes	Input 36 bytes Output 36 bytes	Input 36 bytes Output 36 bytes	Input 4, 10, 20 bytes Output 4, 12, 20, 36 bytes	Input 14 bytes Output 22 bytes
<b>Terminating resistor</b>		Not included				
<b>Memory</b>		EEPROM				
<b>LED indicator</b>		PWR, RUN, ALM, ERR	PWR, ALM, MS, NS	PWR, ALM, SF, BF	PWR, ALM, MS, NS	PWR, ALM, COM
<b>Cable length [m]</b>		Actuator cable: 20 or less				
<b>Cooling system</b>		Natural air cooling				
<b>Operating temperature range [°C]</b>		0 to 40 (No freezing)				
<b>Operating humidity range [%RH]</b>		90 or less (No condensation)				
<b>Insulation resistance [MΩ]</b>		Between all external terminals and the case 50 (500 VDC)				
<b>Weight [g]</b>		220 (Screw mounting) 240 (DIN rail mounting)	210 (Screw mounting) 230 (DIN rail mounting)	220 (Screw mounting) 240 (DIN rail mounting)	210 (Screw mounting) 230 (DIN rail mounting)	190 (Screw mounting) 210 (DIN rail mounting)

\*1 Please note that versions are subject to change.

\*2 Use a shielded communication cable with CAT5 or higher for the PROFINET, EtherNet/IP™, and EtherCAT®.

\*3 The files can be downloaded from the SMC website: <http://www.smcworld.com>

### ■ Trademark

EtherNet/IP™ is a trademark of ODVA.

DeviceNet™ is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

## Example of Operation Command

In addition to the step data input of 64 points maximum in each communication protocol, the changing of each parameter can be performed in real time via numerical data defined operation.

\* Numerical values other than "Moving force," "Area 1," and "Area 2" can be used to perform operation under numerical instructions from JXCL1.

### <Application example> Movement between 2 points

No.	Movement mode	Speed	Position	Acceleration	Deceleration	Pushing force	Trigger LV	Pushing speed	Moving force	Area 1	Area 2	In position
0	1: Absolute	100	10	3000	3000	0	0	0	100	0	0	0.50
1	1: Absolute	100	100	3000	3000	0	0	0	100	0	0	0.50

### <Step no. defined operation>

Sequence 1: Servo ON instruction

Sequence 2: Instruction to return to origin

Sequence 3: Specify step data No. 0 to input the DRIVE signal.

Sequence 4: Specify step data No. 1 after the DRIVE signal has been temporarily turned OFF to input the DRIVE signal.

### <Numerical data defined operation>


Sequence 1: Servo ON instruction

Sequence 2: Instruction to return to origin

Sequence 3: Specify step data No. 0 and turn ON the input instruction flag (position). Input 10 in the target position. Subsequently the start flag turns ON.

Sequence 4: Turn ON step data No. 0 and the input instruction flag (position) to change the target position to 100 while the start flag is ON.







The same operation can be performed with any operation command.

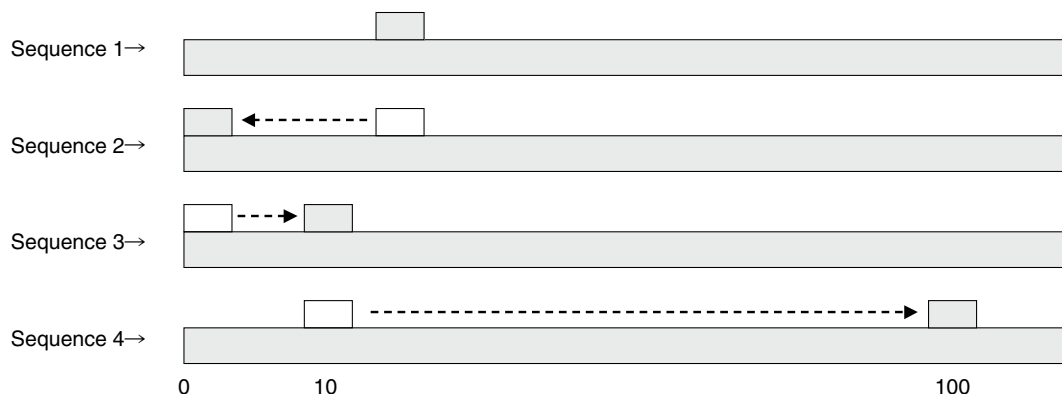





# JXCE1/91/P1/D1/L1 Series

## Dimensions

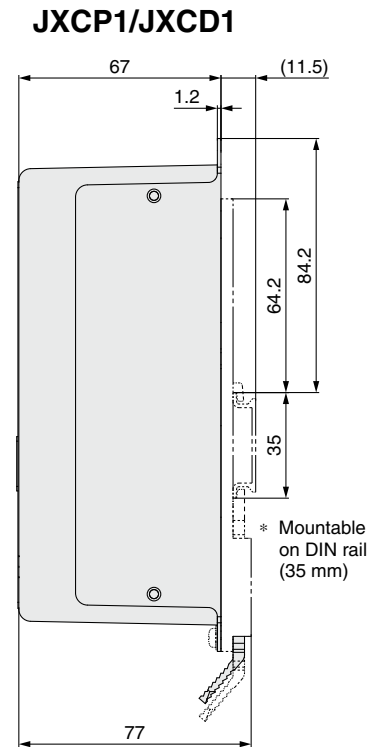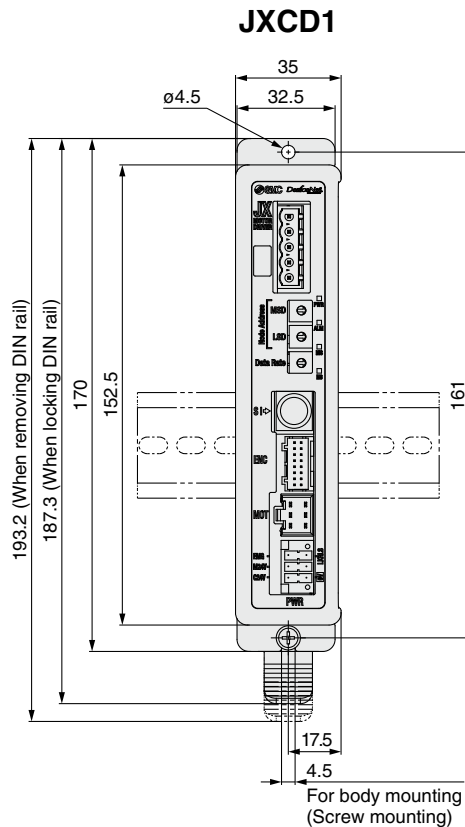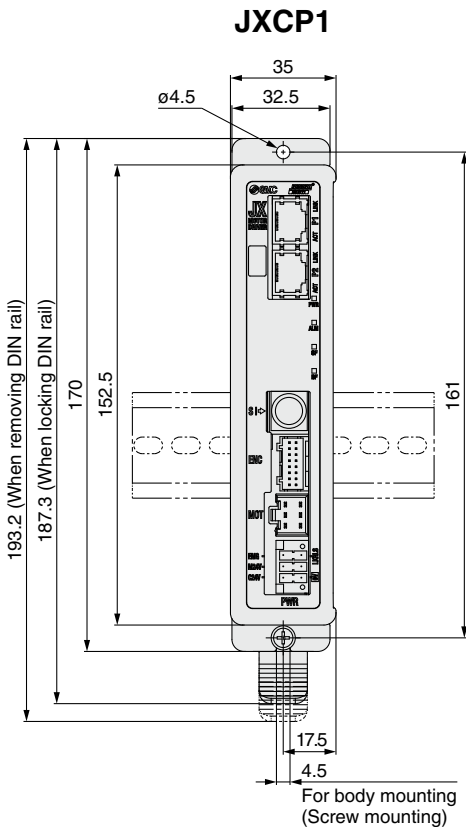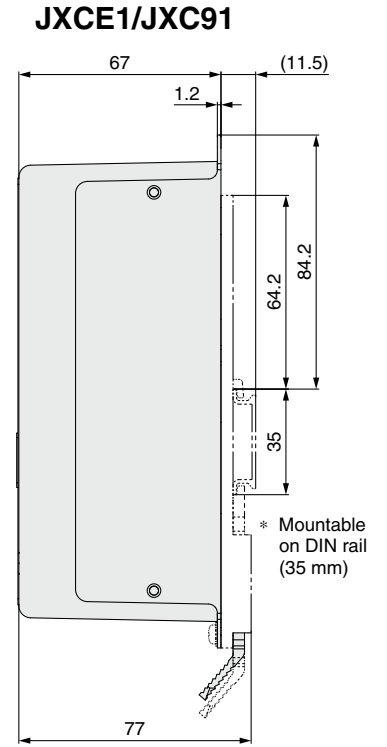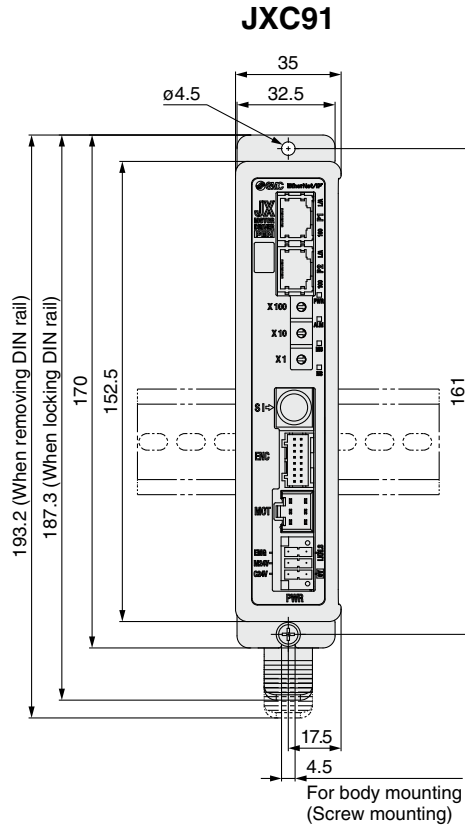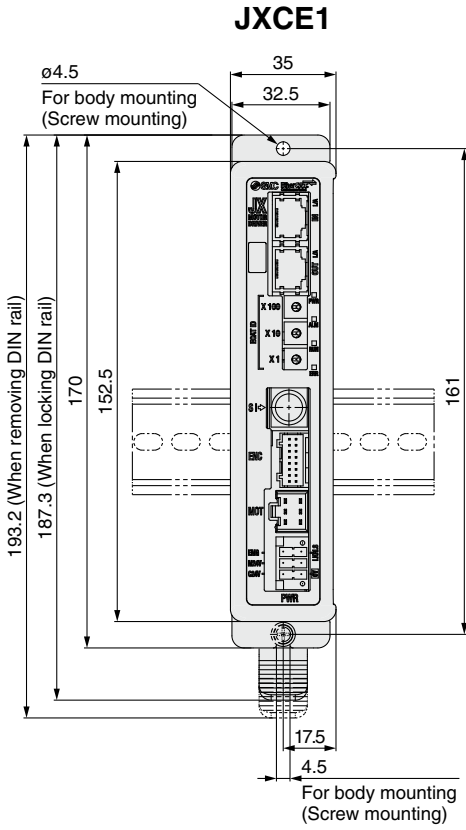



## Dimensions

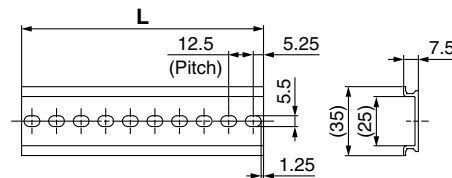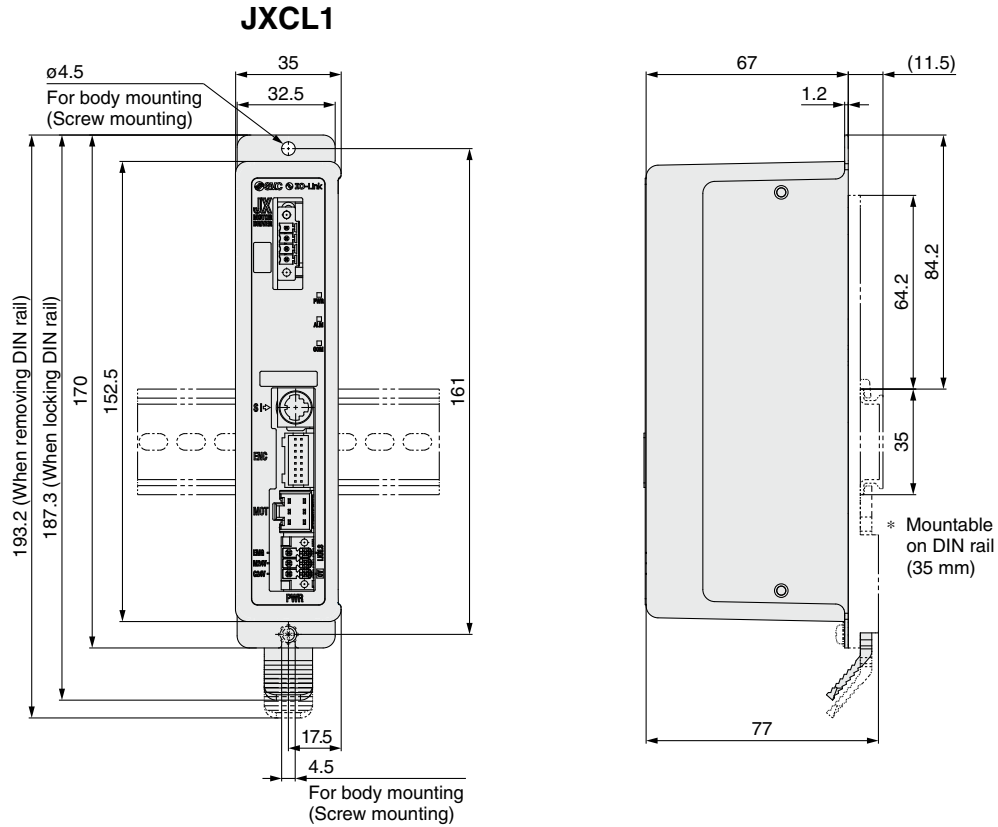

### L Dimensions [mm]

No.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
<b>L</b>	23	35.5	48	60.5	73	85.5	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5
No.	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
<b>L</b>	273	285.5	298	310.5	323	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5

# JXCE1/91/P1/D1/L1 Series

## Options

### ■ Controller setting kit JXC-W2

#### [Contents]


- ① Communication cable
- ② USB cable
- ③ Controller setting software
- \* A conversion cable (P5062-5) is not required.

JXC-W2-□

#### ● Contents

<b>Nil</b>	A kit includes: Communication cable, USB cable, Controller setting software
<b>C</b>	Communication cable
<b>U</b>	USB cable
<b>S</b>	Controller setting software (CD-ROM)

#### ① Communication cable JXC-W2-C

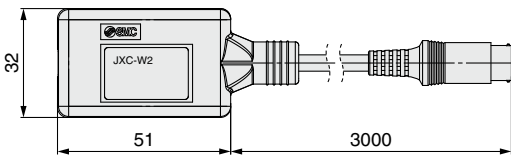


\* It can be connected to the controller directly.

#### ② USB cable JXC-W2-U

#### ③ Controller setting software JXC-W2-S

\* CD-ROM



### ■ DIN rail mounting adapter LEC-3-D0

\* With 2 mounting screws



This should be used when a DIN rail mounting adapter is mounted onto a screw mounting type controller afterwards.

### ■ DIN rail AXT100-DR-□

\* For □, enter a number from the No. line in the table on page 6. Refer to the dimension drawings on page 6 for the mounting dimensions.

### ■ Power supply plug JXC-CPW

\* The power supply plug is an accessory.

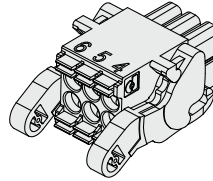

- ① C24V
- ② M24V
- ③ EMG
- ④ 0V
- ⑤ N.C.
- ⑥ LK RLS

#### Power supply plug



Terminal name	Function	Details
0V	Common supply (-)	M24V terminal/C24V terminal/EMG terminal/LK RLS terminal are common (-).
M24V	Motor power supply (+)	Motor power supply (+) of the controller
C24V	Control power supply (+)	Control power supply (+) of the controller
EMG	Stop (+)	Connection terminal of the external stop circuit
LK RLS	Lock release (+)	Connection terminal of the lock release switch

### ■ Communication plug connector

#### For DeviceNet™

Straight type  
JXC-CD-S

T-branch type  
JXC-CD-T

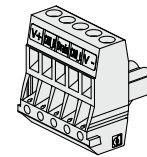


#### Communication plug connector for DeviceNet™

Terminal name	Details
V+	Power supply (+) for DeviceNet™
CAN_H	Communication wire (High)
Drain	Grounding wire/Shielded wire
CAN_L	Communication wire (Low)
V-	Power supply (-) for DeviceNet™

#### For IO-Link


Straight type  
JXC-CL-S

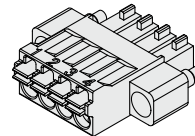

#### Communication plug connector for IO-Link

Terminal no.	Terminal name	Details
1	L+	+24 V
2	NC	N/A
3	L-	0 V
4	C/Q	IO-Link signal

### ■ Conversion cable P5062-5 (Cable length: 300 mm)



\* To connect the teaching box (LEC-T1-3□G□) or controller setting kit (LEC-W2) to the controller, a conversion cable is required.






# JXCE1/91/P1/D1 Series

## Precautions Related to Differences in Controller Versions

As the controller version of the JXC series differs, the internal parameters are not compatible.

- Do not use a version V2.0 or S2.0 or higher controller with parameters lower than version V2.0 or S2.0.  
Do not use a version V2.0 or S2.0 or lower controller with parameters higher than version V2.0 or S2.0.
- Please use the latest version of the JXC-BCW (parameter writing tool).
  - \* The latest version is Ver. 2.0 (as of December 2017).

### Identifying Version Symbols

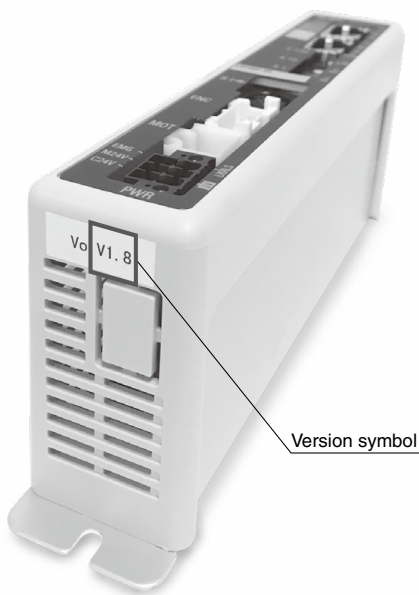

#### For versions lower than V2.0 and S2.0:

Do not use with controller parameters higher than V2.0 or S2.0.

VZ V1.8

**Applicable models**  
JXC91□ Series

VZ S1.3T1.0

**Applicable models**  
JXCD1□ Series  
JXCP1□ Series  
JXCE1□ Series

#### For versions higher than V2.0 and S2.0:


Do not use with controller parameters lower than V2.0 or S2.0.

VZ V2.0

**Applicable models**  
JXC91□ Series

VZ S2.0T1.0

**Applicable models**  
JXCD1□ Series  
JXCP1□ Series  
JXCE1□ Series

 **Safety Instructions** Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.