


Escapements

Series MIW/MIS

ø8, ø12, ø20, ø25, ø32

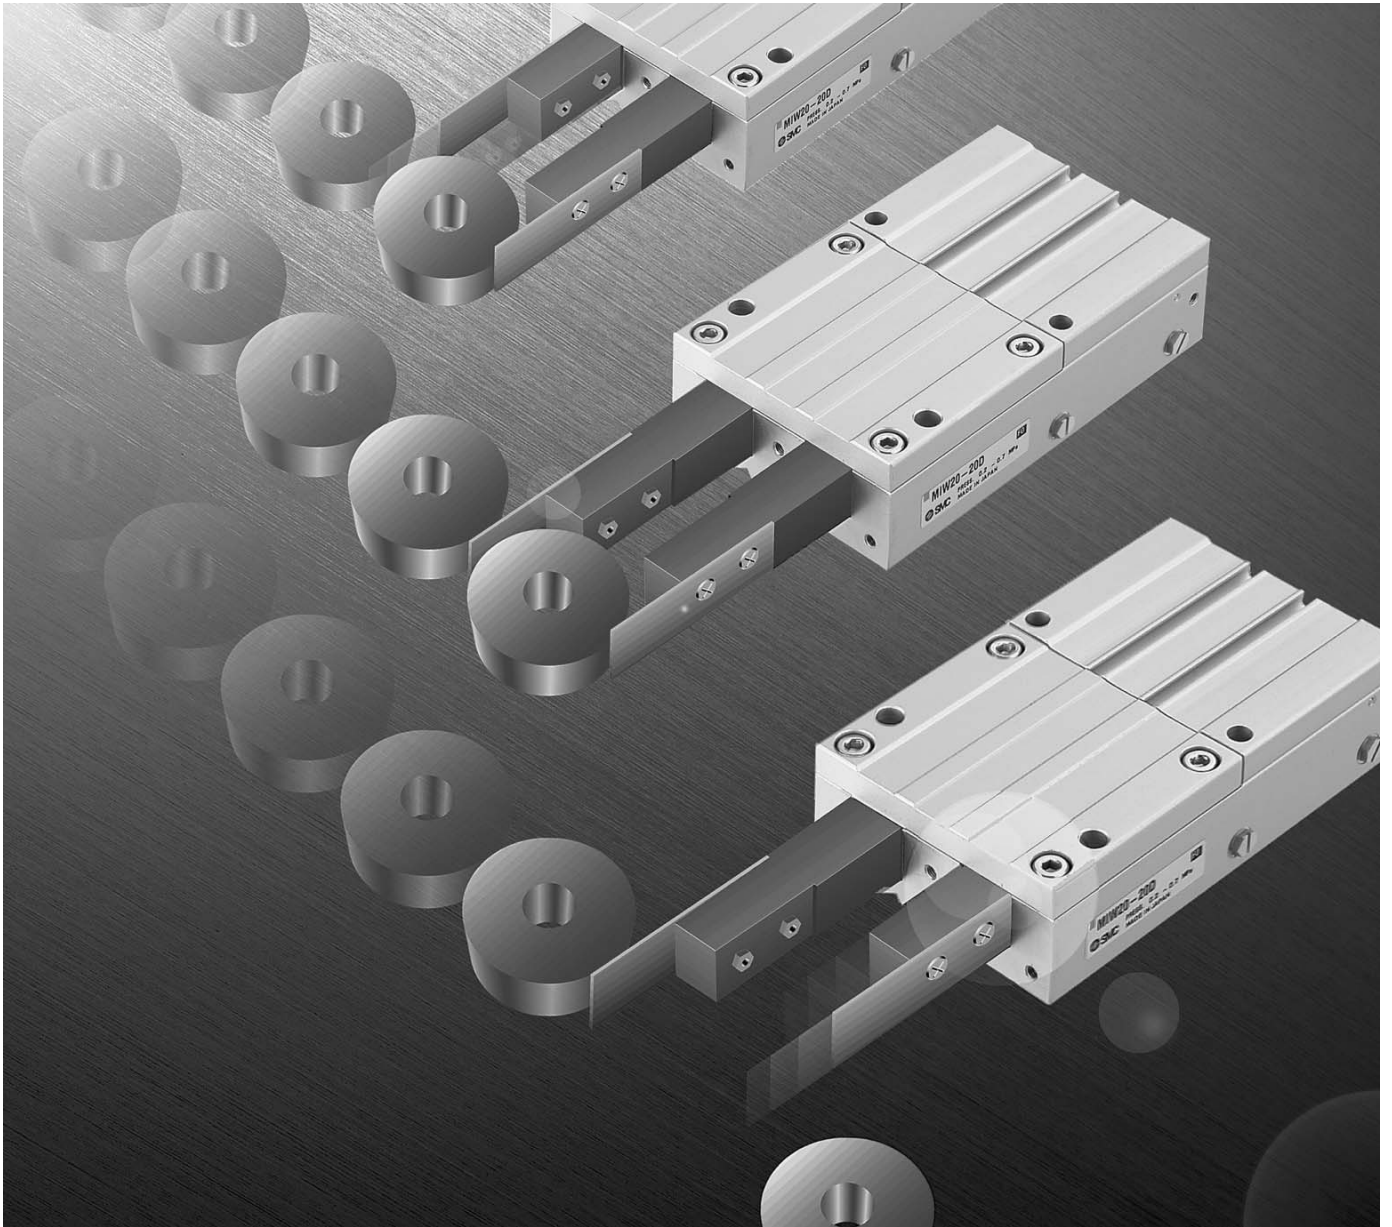

Ideal for separating and feeding individual parts from vibratory feeders, magazines, and hoppers.

**ø8, ø25, ø32
additionally released**

RE^A_B

REC

C□X

C□Y

MQ^Q_M

RHC

MK(2)

RS^Q_G

RS^H_A

RZQ

MI^W_S

CEP1

CE1

CE2

ML2B

C¹/₅-S

CV

MVGQ

CC

RB

J

D-


-X

20-

Data


Ideal for separating and from vibratory feeders,

feeding individual parts magazines, and hoppers.

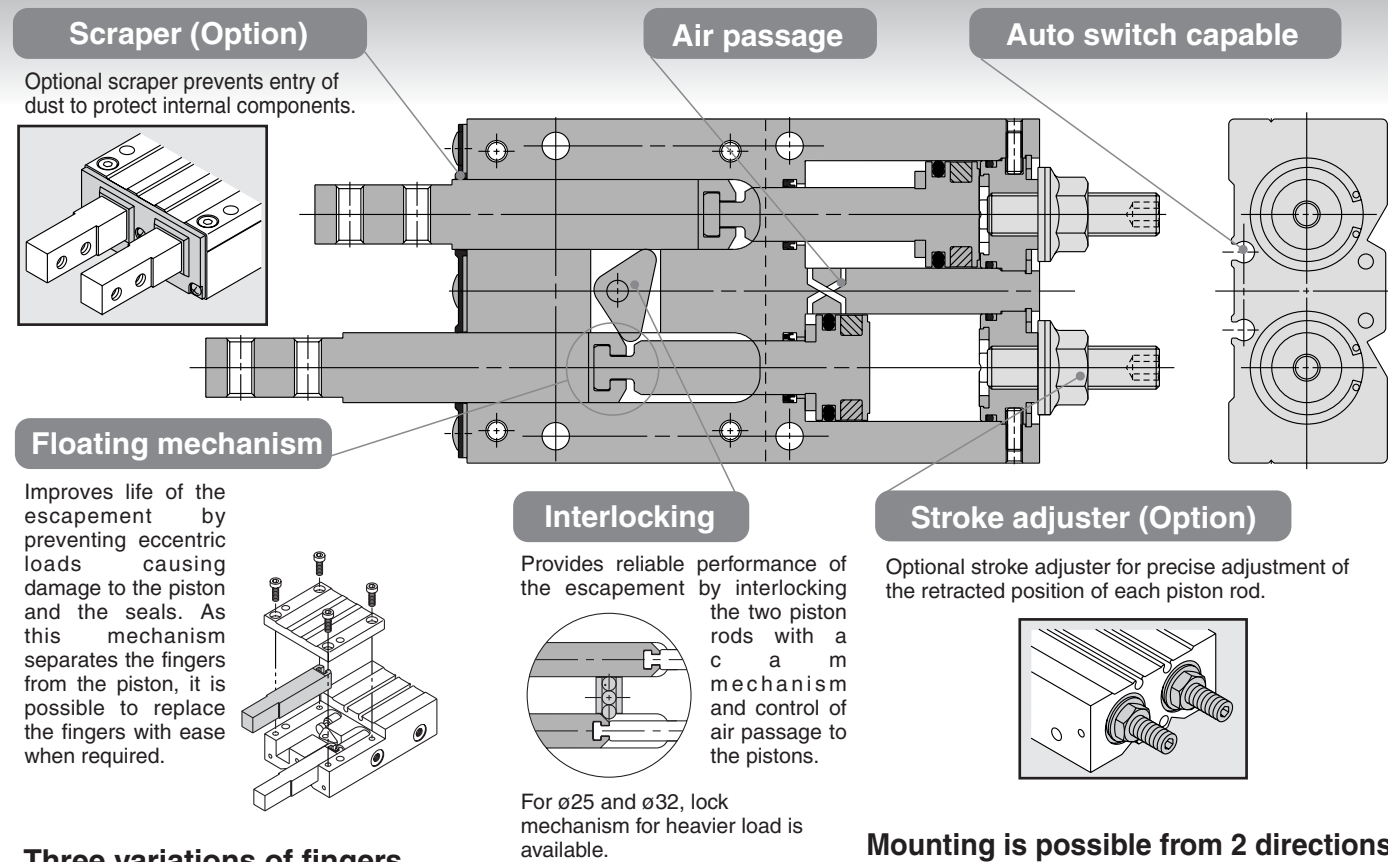


Three variations of fingers

Flexibility in mounting the finger options.

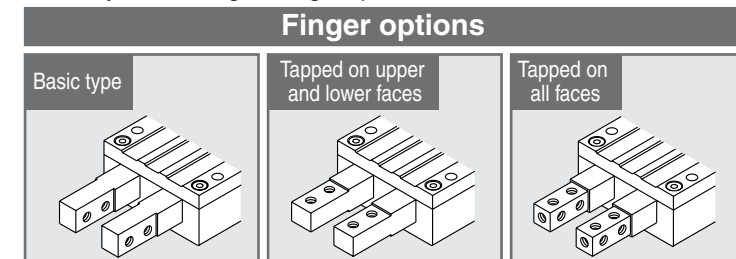


Mounting is possible from 2 directions.

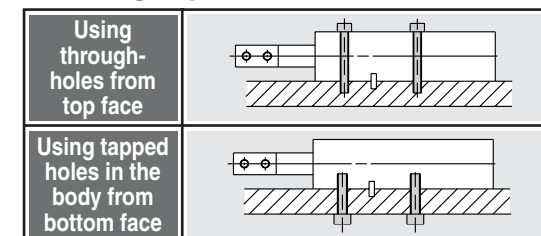


* Positioning pin holes allow for easy mounting.


$\phi 8, \phi 25, \phi 32$
additionally released

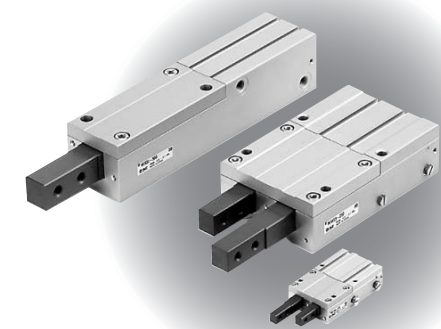

Piping from three directions are possible (Two directions for MIS)
Port position can be adjusted along with setting conditions by changing plug position.

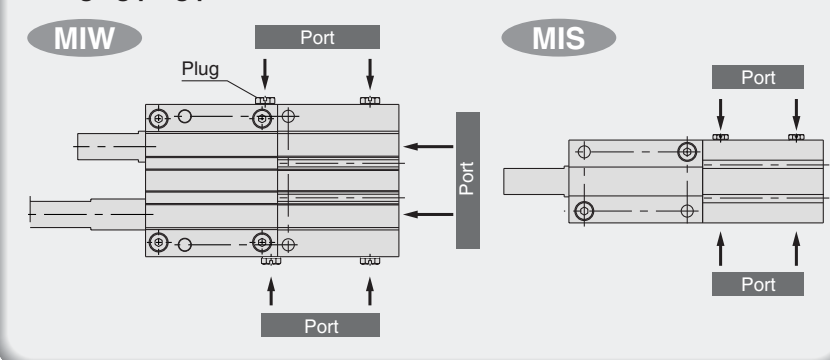

Application example

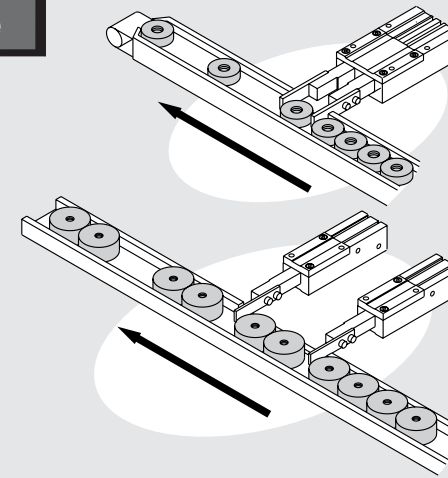

MIW Double finger type

Single valve operation easily separates and feed each workpiece.



MIS Single finger type


Operating speed and mounting position can be set according to the size of workpiece and its operating condition.



Working principle

The cam locks Finger B.

When Finger A is extended to reach the stroke end, air is supplied to retract Finger B. Extension of Finger A rotates the cam to unlock Finger B and lock finger A to allow retraction of Finger B.

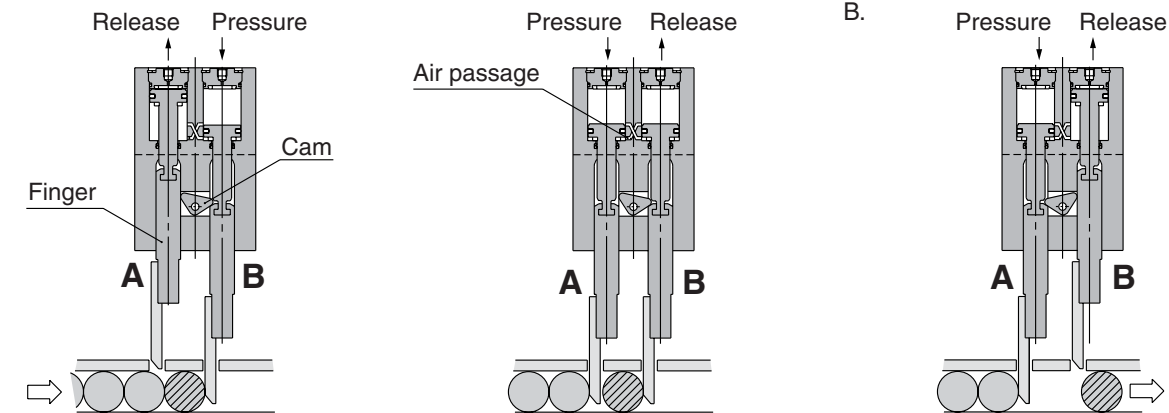

Series Variations

Series	Bore size (mm)	Stroke (mm)								Finger option	Stroke adjuster	Scraper
		8	10	12	20	25	30	32	50			
MIW	8	●								●		●
	12			●						●		●
	20				●					●		●
	25					●				●		●
MIS	8									●		●
	12									●		●
	20									●		●
	32									●		●

RE^A_B
REC
C□X
C□Y
MQ^M_M
RHC
MK(2)
RS^G_G
RS^H_A
RZQ
MI^W_S
CEP1
CE1
CE2
ML2B
C^J_{5-S}
CV
MVGQ
CC
RB
J
D-
-X
20-
Data

Series MIW/MIS

Model Selection 1

Model Selection

Selection procedure


Procedure 1 Condition confirmation

Procedure 2 Confirmation of impact by workpiece

Procedure 3 Confirmation of allowable lateral load


Procedure 1 Confirmation of conditions

- The workpiece moves horizontally on the conveyor.

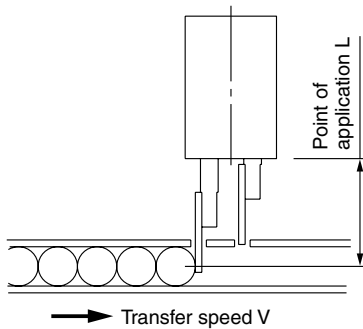

Operation conditions
 Operating pressure P (MPa)
 Workpiece weight m (Kg)
 Workpiece quantity x (Qty.)
 Point of application L (mm)
 Workpiece transfer speed
 V (m/min)
 Coefficient of friction
 between the workpiece
 and conveyor μ

- When the workpiece drops vertically from a shooter, etc.

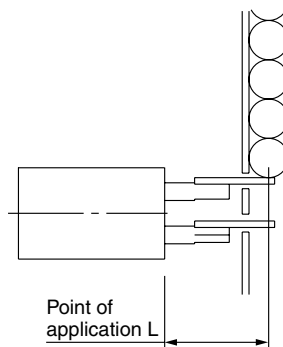

Operation conditions
 Operating pressure P (MPa)
 Workpiece weight m (Kg)
 Workpiece quantity x (Qty.)
 Point of application L (mm)
 Distance of workpiece drop
 H (m/min)
 Gravitational acceleration g (m/s²)

Procedure 2 Confirmation of impact

From the graph of operating range, obtain the point of intersection of the total weight of the workpiece xm (kg) indicated by the axis of ordinates and the transfer speed V (m/min) indicated by the axis of abscissas. Select a model so that the intersection will fall below the point of application L indicated by a line.

1. Calculation of workpiece collision speed
 The collision speed V is calculated from the distance of workpiece fall H.

$$\text{Workpiece collision speed } V = \sqrt{2gH/1000} \times 60 \text{ (m/min)}$$

2. From the graph of operating range, obtain the intersection of the total weight of the workpiece xm (kg) indicated by the axis of ordinates and the collision speed V (m/min) obtained by calculation. Select a model so that the intersection will fall below the point of application L indicated by a line.

Procedure 3 Confirmation of allowable lateral load

1. Calculation of applied lateral load F
 The lateral load F equals the coefficient between the workpiece and the conveyor. Thus, from the total amount of the work piece and coefficient of friction,



$$F = \mu \cdot x \cdot m \cdot g \text{ (N)}$$

1. Calculation of applied lateral load
 The lateral load F equals the total load of the workpiece.
 Thus, $F = x \cdot m \cdot g \text{ (N)}$

2. From the graph of allowable lateral load, obtain the allowable lateral load F max from the intersection of the operating pressure and the point of application L indicated by the axis of abscissas. Select a model so that the value will be larger than the lateral load F applied in real operation.
 Lateral load: $F \leq$ Allowable lateral load: Fmax

Model Selection

Operating range

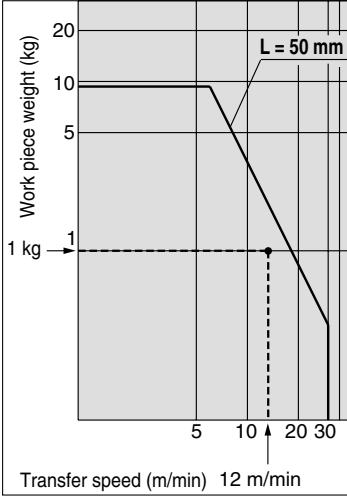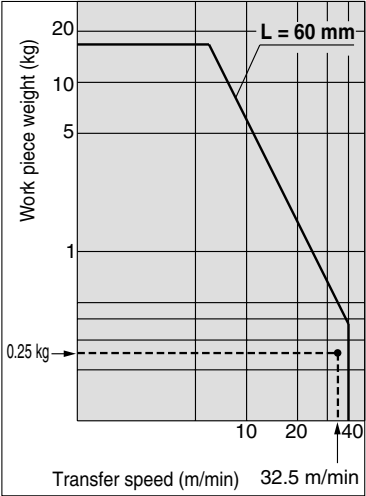Procedure 1: Confirmation of conditions																									
<p>● The workpiece moves horizontally on the conveyor.</p> <p>Operating conditions</p> <table style="width: 100%; border: none;"> <tr> <td style="padding: 2px;">Operating pressure</td> <td style="padding: 2px;">P = 0.4 MPa</td> </tr> <tr> <td style="padding: 2px;">Workpiece weight</td> <td style="padding: 2px;">m = 0.1 kg</td> </tr> <tr> <td style="padding: 2px;">Workpiece quantity</td> <td style="padding: 2px;">x = 10</td> </tr> <tr> <td style="padding: 2px;">Point of application</td> <td style="padding: 2px;">L = 50 mm</td> </tr> <tr> <td style="padding: 2px;">Workpiece transfer speed</td> <td style="padding: 2px;">V = 12 m/min</td> </tr> <tr> <td colspan="2" style="padding: 2px;">Coefficient of friction between the workpiece and conveyor $\mu = 0.2$</td> </tr> </table>	Operating pressure	P = 0.4 MPa	Workpiece weight	m = 0.1 kg	Workpiece quantity	x = 10	Point of application	L = 50 mm	Workpiece transfer speed	V = 12 m/min	Coefficient of friction between the workpiece and conveyor $\mu = 0.2$		<p>● When the workpiece drops vertically from a shooter, etc.</p> <p>Operating conditions</p> <table style="width: 100%; border: none;"> <tr> <td style="padding: 2px;">Operating pressure</td> <td style="padding: 2px;">P = 0.4 MPa</td> </tr> <tr> <td style="padding: 2px;">Workpiece weight</td> <td style="padding: 2px;">m = 0.05 kg</td> </tr> <tr> <td style="padding: 2px;">Workpiece quantity</td> <td style="padding: 2px;">x = 5</td> </tr> <tr> <td style="padding: 2px;">Point of application</td> <td style="padding: 2px;">L = 60 mm</td> </tr> <tr> <td style="padding: 2px;">Distance of workpiece drop</td> <td style="padding: 2px;">H = 15 mm</td> </tr> <tr> <td style="padding: 2px;">Gravitation acceleration</td> <td style="padding: 2px;">g = 9.8 m/s</td> </tr> </table>	Operating pressure	P = 0.4 MPa	Workpiece weight	m = 0.05 kg	Workpiece quantity	x = 5	Point of application	L = 60 mm	Distance of workpiece drop	H = 15 mm	Gravitation acceleration	g = 9.8 m/s
Operating pressure	P = 0.4 MPa																								
Workpiece weight	m = 0.1 kg																								
Workpiece quantity	x = 10																								
Point of application	L = 50 mm																								
Workpiece transfer speed	V = 12 m/min																								
Coefficient of friction between the workpiece and conveyor $\mu = 0.2$																									
Operating pressure	P = 0.4 MPa																								
Workpiece weight	m = 0.05 kg																								
Workpiece quantity	x = 5																								
Point of application	L = 60 mm																								
Distance of workpiece drop	H = 15 mm																								
Gravitation acceleration	g = 9.8 m/s																								
Procedure 2: Confirmation of impact																									
<ul style="list-style-type: none"> Obtain the total amount of the workpiece. Total weight $m = 10 \times 0.1$ (kg) = 1 (kg) Obtain the intersection of the transfer speed V and the total weight of workpiece m. Confirm that the value is within the operating range of the point of application L = 50 mm $\varnothing 12$ 	<ul style="list-style-type: none"> Obtain the total amount of the workpiece. Total weight $m = 5 \times 0.05$ (kg) = 0.25 (kg) Obtain the collision speed of the workpiece V. $V = \sqrt{2gH/1000} \times 60$ $= \sqrt{2 \times 9.8 \times 15/1000} \times 60 \varnothing 20$ $= 32.5$ (m/min) Obtain the intersection of the collision speed V and the total weight of the workpiece m. Confirm that the value is within the operating range of the point of application L = 60 mm. 																								
Procedure 3: Confirmation of allowable lateral load																									
<p>1. Calculation of applied lateral load F</p> $F = \mu \cdot N \cdot m \cdot g \text{ (N)}$ $= 0.2 \times 10 \times 0.1 \times 9.8$ $= 2.1 \text{ (N)}$ <p>2. Confirmation of allowable lateral load From the graph, the allowable lateral load at L = 50 mm and P = 0.4 MPa is 18 N. Because 2.1 N < 18 N, it is applicable.</p>	<p>1. Calculation of applied lateral load The lateral load F equals the total load of the workpiece. Thus, $F = 5 \times 0.05 \times 9.8$ $= 2.5 \text{ (N)}$</p> <p>2. Confirmation of allowable lateral load In the same way, the lateral load at L = 50 mm and P = 0.4 MPa is 48 N from the graph. Because 2.5 N < 48 N, it is applicable.</p>																								
Therefore select MIW (MIS) 12.	Therefore select MIW (MIS) 20.																								

RE^A_B

REC

C□X

C□Y

MQ^Q_M

RHC

MK(2)

RS^Q_G

RS^H_A

RZQ

MI^W_S

CEP1

CE1

CE2

ML2B

C_G¹_{5-S}

CV

MVGQ

CC

RB

J

D-

-X

20-

Data


Series MIW/MIS

Model Selection 2


Model Selection

Operating range


The graph at right shows conditions of the workpiece to be stopped; that is, the weight, transfer speed and the operating range of the point of application L.

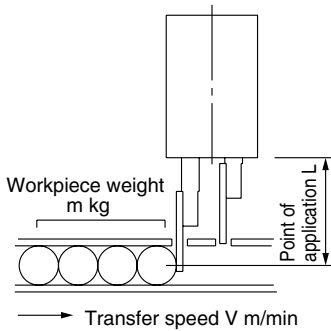


**MIW8
MIS8**

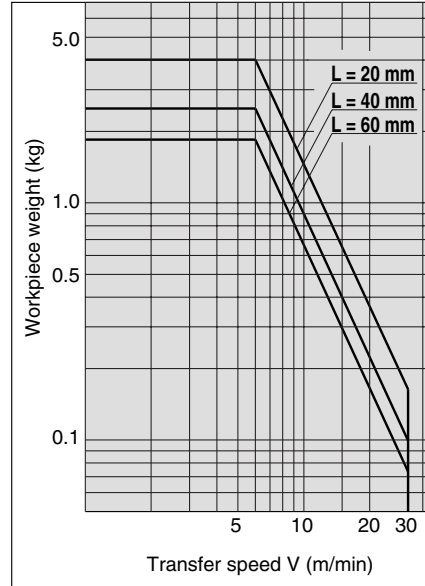


**MIW12
MIS12**

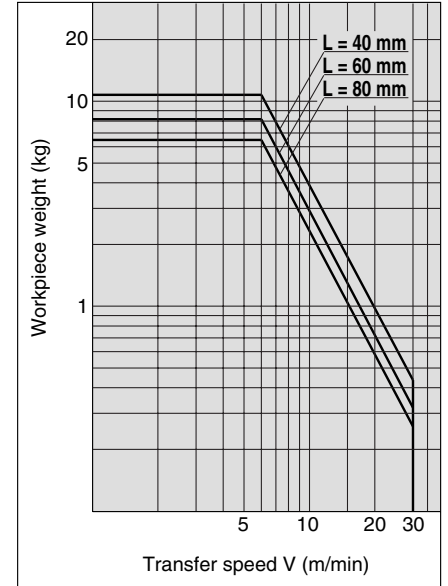


**MIW20
MIS20**

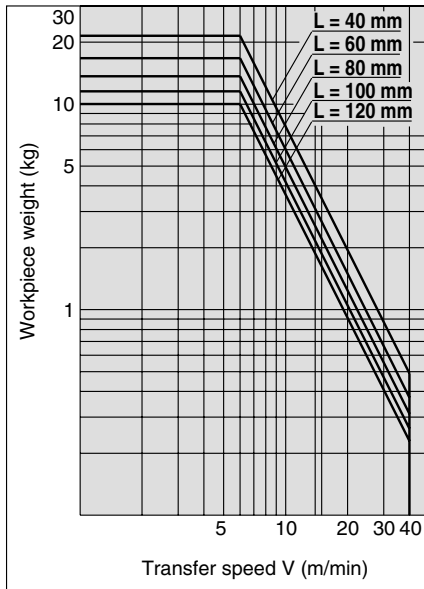

**MIW25
MIS25**

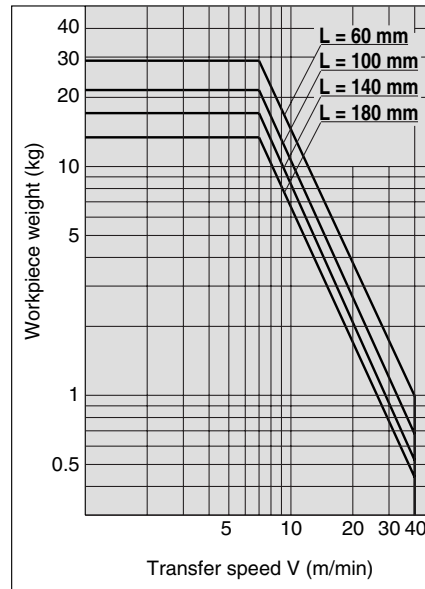


**MIW32
MIS32**

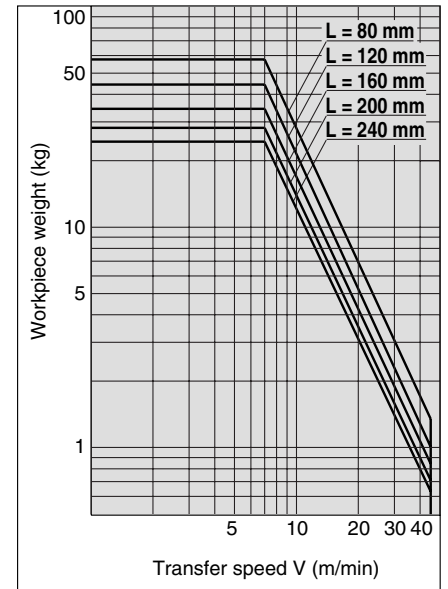


Model Selection


Allowable lateral load

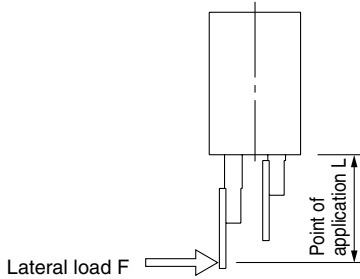


**MIW8
MIS8**

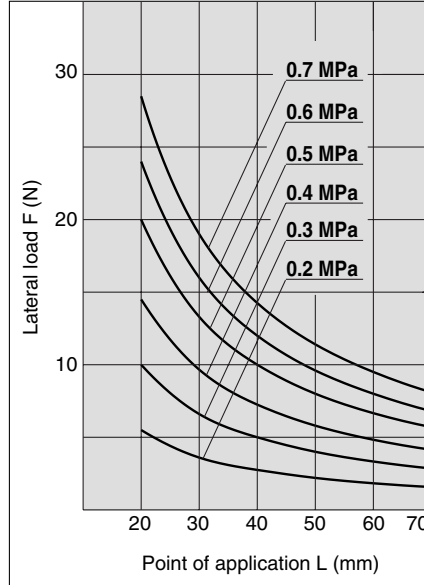


**MIW12
MIS12**

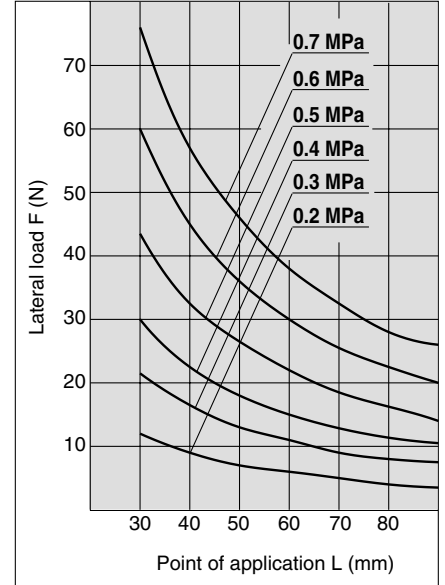


**MIW20
MIS20**

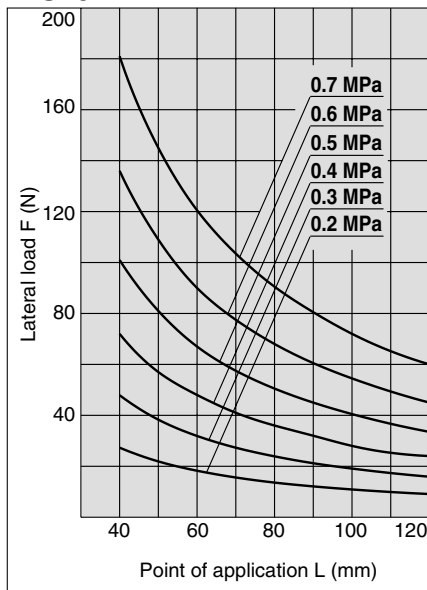

**MIW25
MIS25**

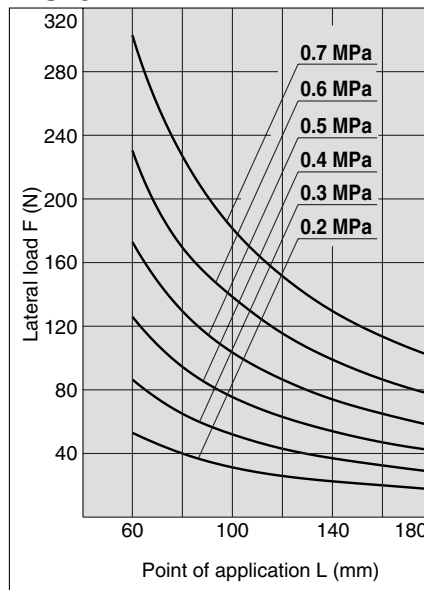

**MIW32
MIS32**

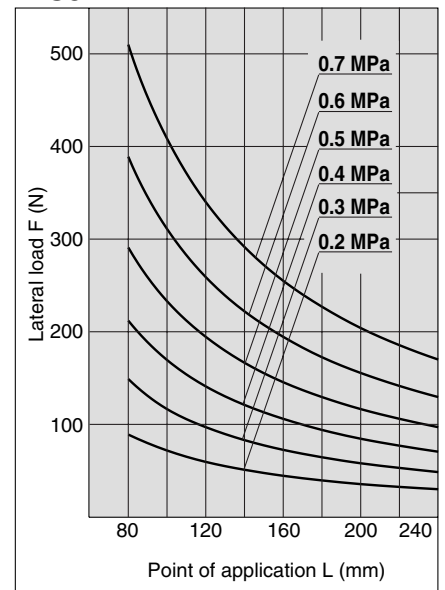

RE^A_B

REC

C□X

C□Y

MQ^Q_M

RHC

MK(2)

RS^Q_G

RS^H_A

RZQ

MI^W_S

CEP1

CE1

CE2

ML2B

C¹/₅-S

CV

MVGQ

CC

RB

J

D-

-X

20-

Data

Escapements

Series MIW/MIS

ø8, ø12, ø20, ø25, ø32

How to Order

Double finger type MIW 12 [] 12 D 1 A S [] M9B []

Single finger type MIS 32 [] 50 D 1 A S [] M9B []

Cylinder bore

8	8 mm
12	12 mm
20	10 mm
25	25 mm
32	32 mm




Thread type

Symbol	Type	Bore size
Nil	M thread	ø8, ø12 ø20, ø25
	Rc	
TN	NPT	ø32
TF	G	

Stroke

* Refer to the next page for standard stroke table.

Finger option

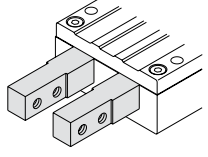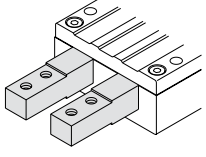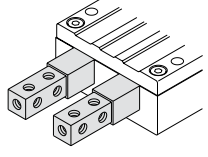Nil: Basic type (Standard) 	1: Tapped on upper and lower faces 	2: Tapped on all faces (5 surfaces including end surface) 
---	--	---

Scrapper

Nil	No
S	Yes

Stroke adjuster

Nil	No
A	Yes

Number of auto switches




Nil	2 pcs.
S	1 pc.

Auto switch

Nil	Without auto switch (Built-in magnet)
-----	---------------------------------------

* Refer to the table below for auto switch part numbers.

Finger option

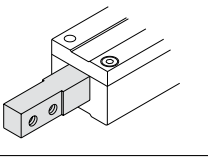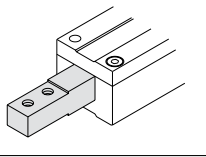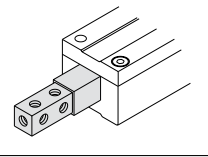Nil: Basic type (Standard type) 	1: Tapped on upper and lower faces 	2: Tapped on all faces (5 surfaces including end surface) 
--	--	---

Applicable Auto Switch/Refer to page 10-20-1 for further information on auto switches.

Type	Special function	Electrical entry	Indicator light	Wiring (output)	Load voltage		Auto switch model		Lead wire length (m)			Applicable load	
					DC	AC	Perpendicular	In-line	0.5 (Nil)	3 (L)	5 (Z)		
Solid state switch	-	Grommet	Yes	3-wire (NPN)	5 V, 12 V	-	M9NV	M9N	●	●	○	IC circuit	Relay PLC
				3-wire (PNP)			M9PV	M9P	●	●	○		
				2-wire			M9BV	M9B	●	●	○		
	Diagnostic indication (2-color indication)			3-wire (NPN)	5 V, 12 V		F9NWV	F9NW	●	●	○	IC circuit	
				3-wire (PNP)			F9PWV	F9PW	●	●	○		
				2-wire			F9BWV	F9BW	●	●	○		

* Lead wire length symbols: 0.5 m Nil (Example) M9N
 3 m L (Example) M9NL
 5 m Z (Example) M9NZ

* Auto switches marked with a "○" symbol are produced upon receipt of order.

Made to Order Specifications Please contact SMC.

- -50 Without indicator light
- -61 Flexible lead wire
- Pre-wire connector

Specifications



Series	MIW (Double finger)	MIS (Single finger)
Fluid	Air	
Operating pressure	0.2 to 0.7MPa	
Ambient temperature and fluid temperature	-10 to 60°C (No freezing)	
Lubrication	Non-lube	
Action	Double acting	
Auto switch (Option) ^{Note)}	Solid state switch (3-wire, 2-wire)	
Stroke tolerance	+1 0 mm	

Note) Refer to page 10-20-1 for auto switch specifications.

Option

Finger options	Standard, Tapped on upper and lower faces, Tapped on all faces (5 surfaces including end surface)
Stroke adjuster (Rear end stroke only)	MI□8: Arrangement range 4 mm
	MI□12: Arrangement range 6 mm
	MI□20: Arrangement range 12 mm
	MI□25: Arrangement range 15 mm
	MI□32: Arrangement range 20 mm
Scraper	Can be mounted on standard products

Theoretical Output

Bore size (mm)	Rod size (mm)	Operating direction	Piston area (mm ²)	Operating pressure MPa					
				0.2	0.3	0.4	0.5	0.6	0.7
8	4	OUT	50	10	15	20	26	31	36
		IN	38	7	11	15	19	23	26
12	6	OUT	113	23	34	45	57	68	79
		IN	85	17	26	34	43	51	60
20	10	OUT	314	63	94	126	157	188	220
		IN	236	47	71	94	118	142	165
25	10	OUT	491	98	147	196	245	295	344
		IN	412	82	124	165	206	247	288
32	12	OUT	804	161	241	322	402	482	563
		IN	691	138	207	276	346	415	484

Unit: N

Standard Stroke

Double finger type: MIW (mm)

Bore size	Stroke
8	8 mm
12	12 mm
20	20 mm
25	25 mm
32	32 mm

* For MIW, same stroke as bore size

Single finger type: MIS (mm)

Bore size	Stroke
8	10, 20 mm
12	10, 20, 30 mm
20	10, 20, 30 mm
25	30, 50 mm
32	30, 50 mm

Weight

Model	Model	Stroke (mm)	Weight (g)	Increase by stroke adjuster	Increase by scraper
MIW	MIW8-8D	8	110	6	3
	MIW12-12D	12	240	10	5
	MIW20-20D	20	650	30	10
	MIS25-25D	25	1550	30	20
	MIS32-32D	32	2650	100	35
MIS	MIS8-10D	10	62	3	2
	MIS8-20D	20	80		
	MIS12-10D	10	130	5	3
	MIS12-20D	20	160		
	MIS12-30D	30	190		
	MIS20-10D	10	300	15	5
	MIS20-20D	20	355		
	MIS20-30D	30	410		
	MIS25-30D	30	800	15	10
	MIS25-50D	50	1000		
	MIS32-30D	30	1350	50	18
MIS32-50D	50	1650			

Unit: g

RE_A
B

REC

C□X

C□Y

MQ^Q_M

RHC

MK(2)

RS^Q_GRS^H_A

RZQ

MI^W_S

CEP1

CE1

CE2

ML2B

C¹/₅-S

CV

MVGQ

CC

RB

J

D-

-X


20-

Data


Series MIW/MIS

Construction: Double Finger Type (MIW)


ø8

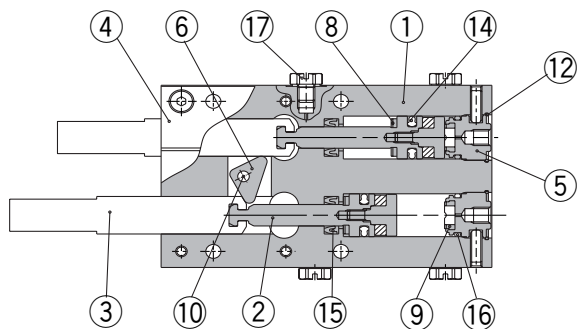


ø12, ø20

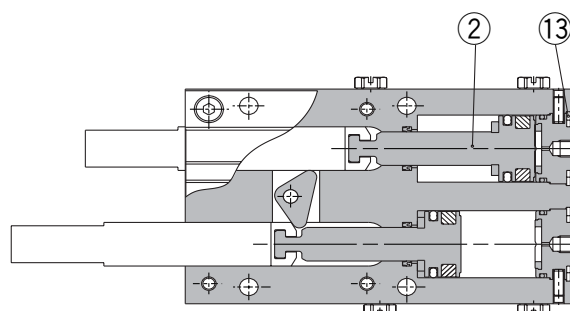

ø25, ø32

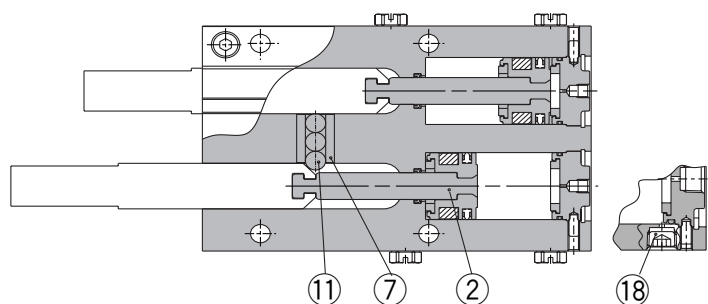

Option

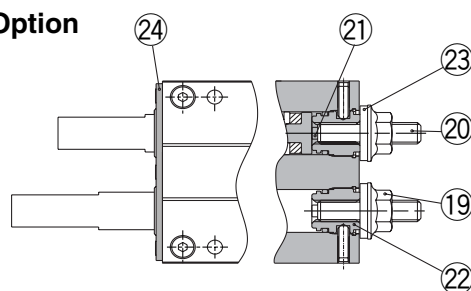

Scraper

Stroke adjuster

(ø32 only)

Component Parts

No.	Description	Material	Note
①	Body	Aluminium alloy	Hard anodized
②	Piston assembly		
③	Finger	Carbon steel	Heat treatment/Special treatment
④	Cover	Aluminium alloy	Hard anodized
⑤	Cap (W)	Aluminium alloy	White anodized
⑥	Cam	Stainless steel	Heat treatment (MIW8 to 20)
⑦	Roller holder	Stainless steel	Heat treatment (MIW25, 32)
⑧	Bumper	Urethane rubber	
⑨	Head bumper	Urethane rubber	
⑩	Needle roller	High carbon chromium bearing steel	(MIW8 to 20)

No.	Description	Material	Note
⑪	Cylinder roller	Carbon steel	(MIW25, 32)
⑫	Clip	Carbon steel	(MIW8)
⑬	R shape snap ring	Carbon steel	(MIW12 to 32)
⑭	Piston seal	NBR	
⑮	Rod seal	NBR	
⑯	Gasket	NBR	
⑰	Plug		(MIW8 ... M-3P) (MIW12 to 25 ... M-5P)
⑱	Hexagon socket taper plug		(MIW32 ... Rc1/8)

Option: Adjuster

No.	Description	Material	Note
⑲	Hexagon nut with flange	Carbon steel	Nickel plated
⑳	Adjustment bolt	Carbon steel	Nickel plated
㉑	Adjustment bumper	Urethane rubber	
㉒	Adjustment cap	Aluminium alloy	White anodized
㉓	Die thread	NBR	



Option: Scraper

No.	Description	Material	Note
㉔	Scraper	Stainless steel + NBR	

Replacement Parts


Model	Description			Kit	Scraper assembly	Grease pack
	Standard	Finger Tapped on upper and lower faces	Finger Tapped on all faces			
MIW8-8D	MI-A0801-8	MI-A0802-8	MI-A0803-8	MIW8-PS	MIW-A0804	MH-G01 (contents quantity 30 g)
MIW12-12D	MI-A1201-12	MI-A1202-12	MI-A1203-12	MIW12-PS	MIW-A1204	
MIW20-20D	MI-A2001-20	MI-A2002-20	MI-A2003-20	MIW20-PS	MIW-A2004	
MIW25-25D	MI-A2501-25	MI-A2502-25	MI-A2503-25	MIW25-PS	MIW-A2504	
MIW32-32D	MI-A3201-32	MI-A3202-32	MI-A3203-32	MIW32-PS	MIW-A3204	
Main parts no.	③ (1 pc.)			⑭, ⑮, ⑯	㉔	

Construction: Single Finger Type (MIS)

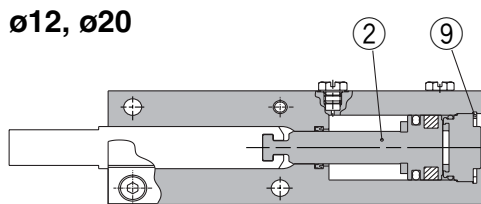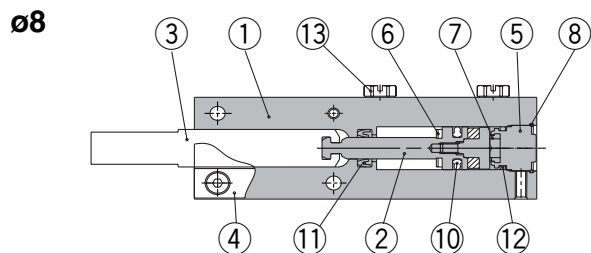


ø25, ø32

Option

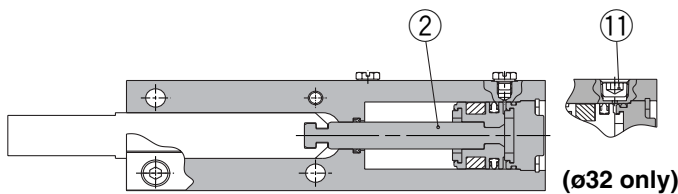

(ø32 only)

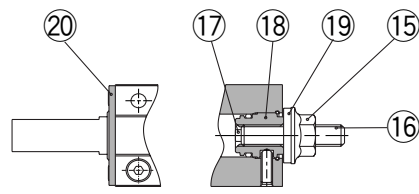

Scraper

Stroke adjuster

Component Parts

No.	Description	Material	Note
①	Body	Aluminium alloy	Hard anodized
②	Piston assembly		
③	Finger	Carbon steel	Heat treatment/Special treatment
④	Cover	Aluminium alloy	Hard anodized
⑤	Cap (S)	Aluminium alloy	White anodized
⑥	Bumper	Urethane rubber	
⑦	Head bumper	Urethane rubber	
⑧	Clip	Carbon steel	(MIS8)
⑨	R shape snap ring	Carbon steel	(MIS12 to 32)

No.	Description	Material	Note
⑩	Piston seal	NBR	
⑪	Rod seal	NBR	
⑫	Gasket	NBR	
⑬	Plug		(MIW8 ... M-3P) (MIW12 to 25 ... M-5P)
⑭	Hexagon socket taper plug		(MIW32 ... Rc1/8)

Option: Adjuster

No.	Description	Material	Note
⑮	Hexagon nut with flange	Carbon steel	Nickel plated
⑯	Adjustment bolt	Carbon steel	Nickel plated
⑰	Adjustment bumper	Urethane rubber	
⑱	Adjustment cap	Aluminium alloy	White anodized
⑲	Die thread	NBR	

Option: Scraper

No.	Description	Material	Note
⑳	Scraper	Stainless steel + NBR	

Replacement Parts


Description Model	Finger			Kit	Scraper assembly	Grease pack
	Standard	Tapped on upper and lower faces	Tapped on all faces			
MIS8-10D	MI-A0801-10	MI-A0802-10	MI-A0803-10	MIS8-PS	MIS-A0804	MH-G01 (contents quantity 30 g)
MIS8-20D	MI-A0801-20	MI-A0802-20	MI-A0803-20			
MIS12-10D	MI-A1201-10	MI-A1202-10	MI-A1203-10			
MIS12-20D	MI-A1201-20	MI-A1202-20	MI-A1203-20	MIS12-PS	MIS-A1204	
MIS12-30D	MI-A1201-30	MI-A1202-30	MI-A1203-30			
MIS20-10D	MI-A2001-10	MI-A2002-10	MI-A2003-10			
MIS20-20D	MI-A2001-20	MI-A2002-20	MI-A2003-20	MIS20-PS	MIS-A2004	
MIS20-30D	MI-A2001-30	MI-A2002-30	MI-A2003-30			
MIS25-30D	MI-A2501-30	MI-A2502-30	MI-A2503-30			
MIS25-50D	MI-A2501-50	MI-A2502-50	MI-A2503-50	MIS25-PS	MIS-A2504	
MIS32-30D	MI-A3201-30	MI-A3202-30	MI-A3203-30			
MIS32-50D	MI-A3201-50	MI-A3202-50	MI-A3203-50			
Main parts no.	③ (1 pc.)			⑩, ⑪, ⑫	⑳	

- RE^A_B
- REC
- C□X
- C□Y
- MQ^Q_M
- RHC
- MK(2)
- RS^Q_G
- RS^H_A
- RZQ
- MI^W_S
- CEP1
- CE1
- CE2
- ML2B
- C¹_{5-S}
- CV
- MVGQ
- CC
- RB
- J
- D-
- X
- 20-
- Data

Series MIW/MIS

Dimensions: Double Finger Type

MIW□-□D

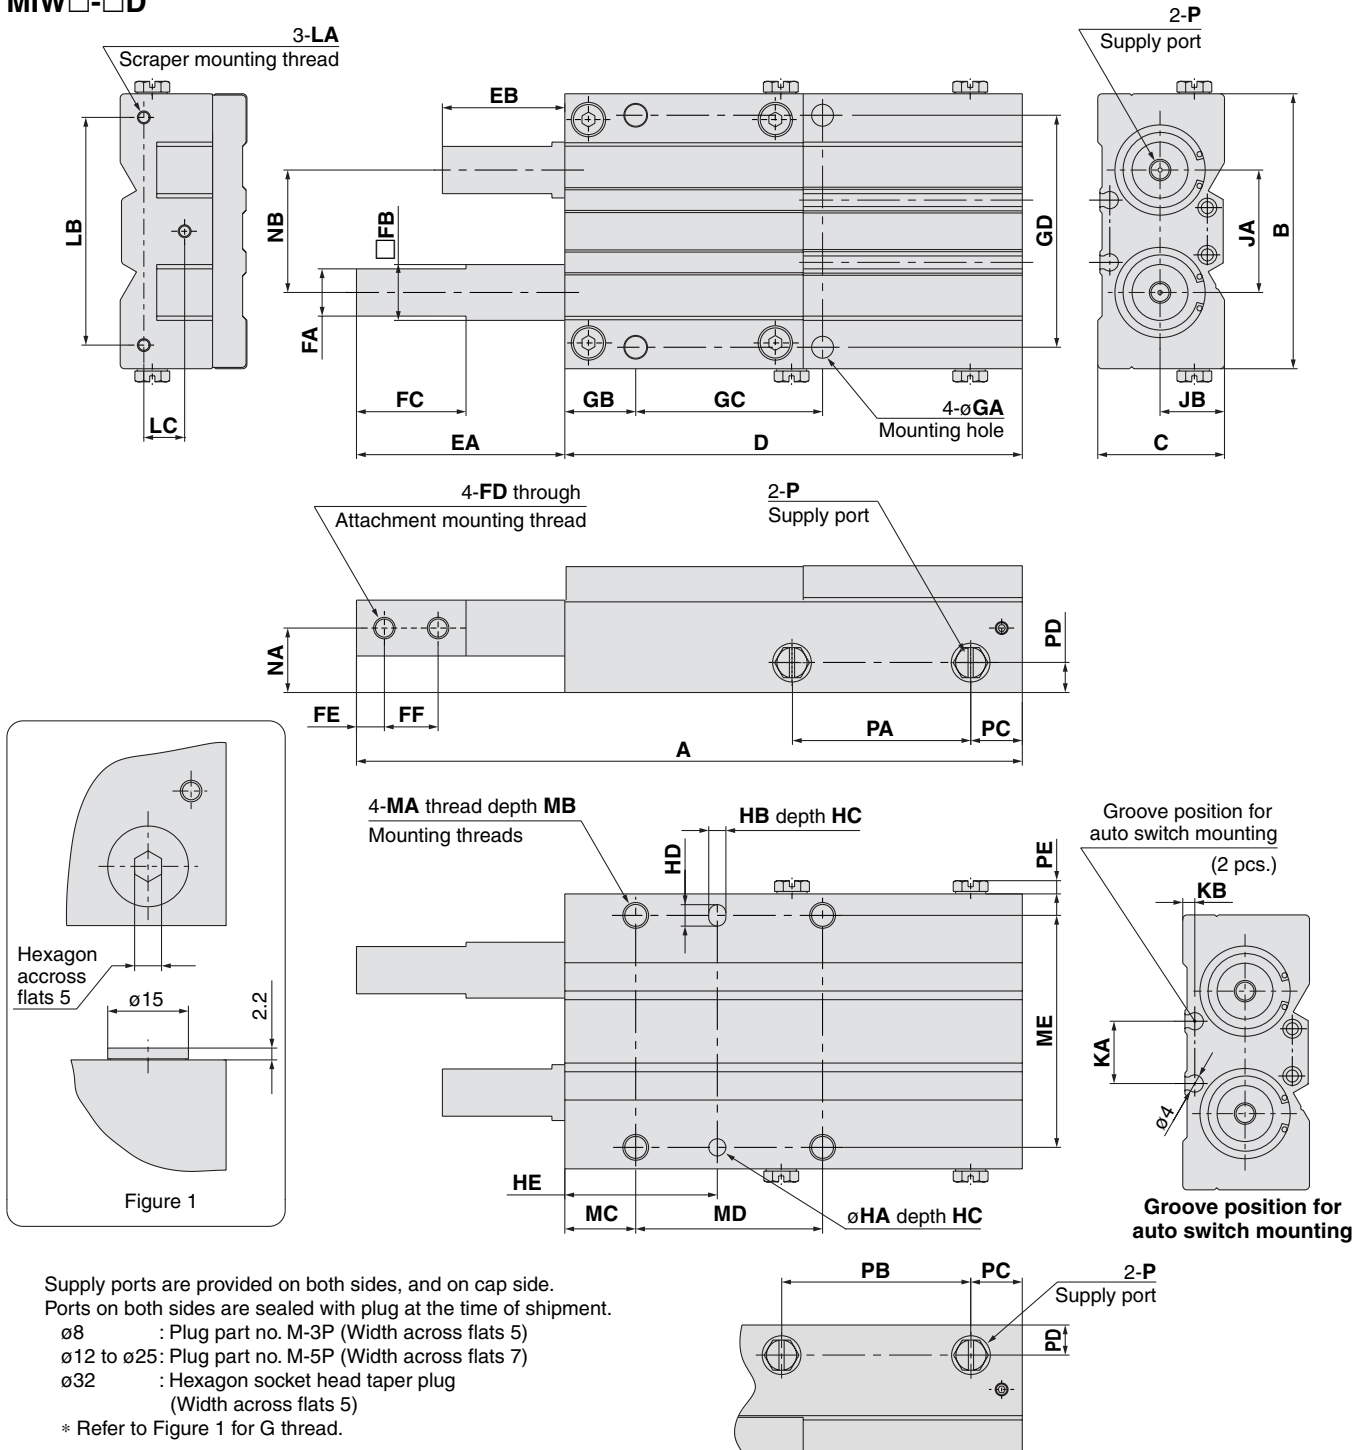


Model	A	B	C	D	EA	EB	FA	FB	FC	FD	FE	FF	FG	GA	GB	GC	GD
MIW8-8	83	34	16	57	26	18	6 ⁰ _{-0.1}	7h9 ⁰ _{-0.036}	15	M3 x 0.5	4	7	6 (Effective depth 2.5)	2.6	9	22	28
MIW12-12	111	44	21	76	35	23	8 ⁰ _{-0.1}	10h9 ⁰ _{-0.036}	19	M3 x 0.5	4.5	9.5	6 (Effective depth 3)	3.3	12.5	34	37
MIW20-20	155	64	29.5	106.5	48.5	28.5	11 ⁰ _{-0.1}	13h9 ⁰ _{-0.043}	25.5	M5 x 0.8	6.5	12.5	10 (Effective depth 4)	5.1	16.5	43.5	54
MIW25-25	200	84	40	134	66	41	15 ⁰ _{-0.1}	17h9 ⁰ _{-0.043}	37	M6 x 1	10	17	15 (Effective depth 7)	6.8	20	58	71
MIW32-32	256	95	47	169	87	55	19.5 ⁰ _{-0.1}	21h9 ⁰ _{-0.052}	51	M8 x 1.25	12.5	22	17 (Effective depth 8.5)	8.6	24.5	73	80


Model	HA, HB	HC	HD	HE	JA	JB	KA	KB	LA	LB
MIW8-8	2H9 ^{+0.025} ₀	2	3	15	14.5	7.5	20.3	1.6	M2 x 0.4	28.4
MIW12-12	2.5H9 ^{+0.025} ₀	4	3.5	25	19	11	7.6	2.2	M2.6 x 0.45	37
MIW20-20	4H9 ^{+0.030} ₀	5	5	35.3	28.5	15	14.5	2.8	M3 x 0.5	53
MIW25-25	5H9 ^{+0.030} ₀	5	7	40	35.5	20	24.5	3	M3 x 0.5	70
MIW32-32	6H9 ^{+0.030} ₀	6	8	50	44.5	25	24.1	2.5	M4 x 0.7	81

Finger options


Tapped on upper and lower faces

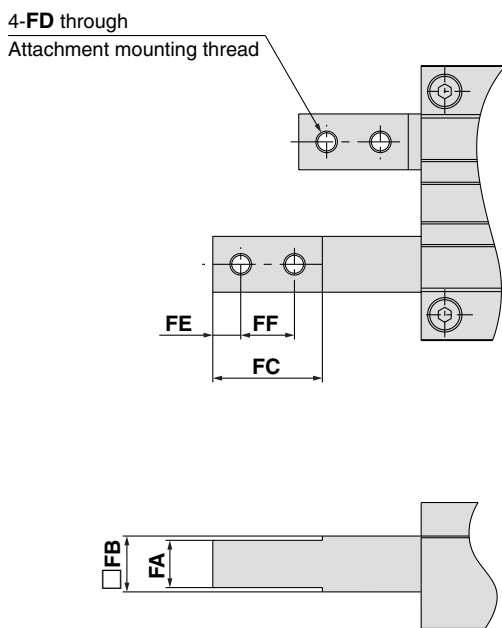


Tapped on all faces

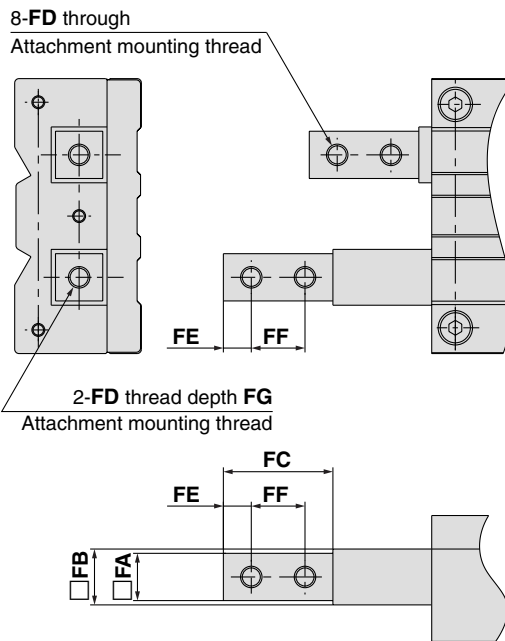

Stroke adjuster

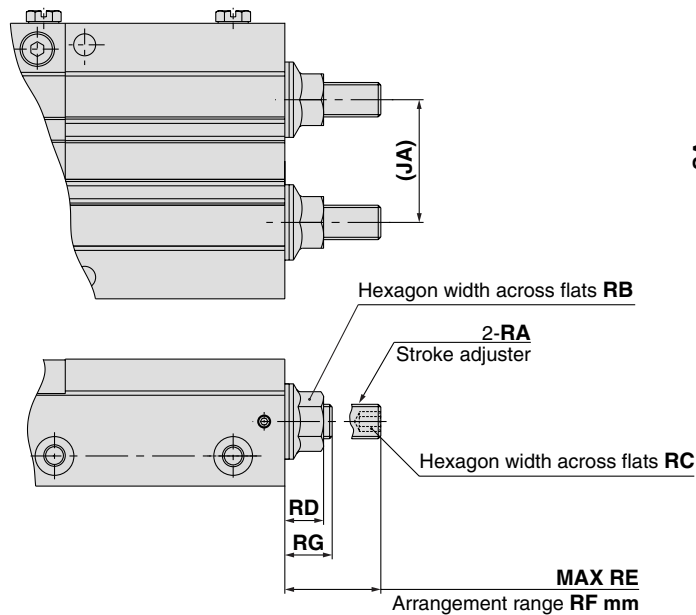

Scraper

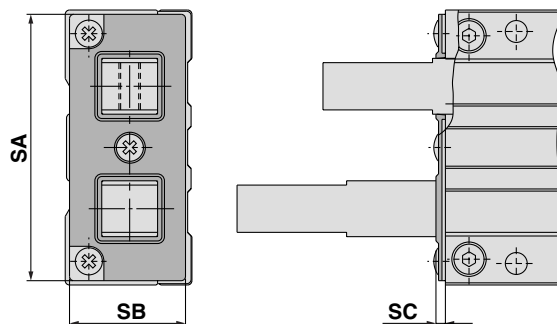

Note) Observe the specified adjustment range when adjusting with a stroke adjuster.

Model	LC	MA	MB	MC	MD	ME	NA	NB	P	PA	PB	PC	PD	PE	RA	RB	RC	RD
MIW8-8	4.5	M3 x 0.5	6	9	22	28	7.5	14.5	M3 x 0.5	22.5	24	8	4.5	2.2	M4 x 0.7	7	2	5.7
MIW12-12	7.5	M4 x 0.7	7	12.5	34	37	11	19	M5 x 0.8	25	27	10	6	2.8	M5 x 0.8	8	2.5	6
MIW20-20	9.5	M6 x 1	10	16.5	43.5	54	15	28.5	M5 x 0.8	42	44.5	11.5	7	2.7	M8 x 1	12	4	9
MIW25-25	12	M8 x 1.25	12	20	58	71	20	35.5	M5 x 0.8	50	55	14	8.5	2.7	M8 x 1	12	4	9
MIW32-32	16.5	M10 x 1.5	15	24.5	73	80	25	44.5	Rc1/8	69.5	75.5	14.5	11	—	M12 x 1.25	17	6	12.4

Model	RE	RF	RG	SA	SB	SC
MIW8-8	12.5	4	8.5	33	14.5	1.4
MIW12-12	14	6	8	43	18.5	1.8
MIW20-20	22.5	12	10.5	62	27	2.2
MIW25-25	26	15	11	82	36	2.8
MIW32-32	33	20	13	93	42	3.4

- RE^A_B
- REC
- C□X
- C□Y
- MQ^Q_M
- RHC
- MK(2)
- RS^Q_G
- RS^H_A
- RZQ
- MI^W_S
- CEP1
- CE1
- CE2
- ML2B
- C¹_{5-S}
- CV
- MVGQ
- CC
- RB
- J
- D-
- X
- 20-
- Data

Series MIW/MIS

Dimensions: Single Finger Type

MIS□-□D


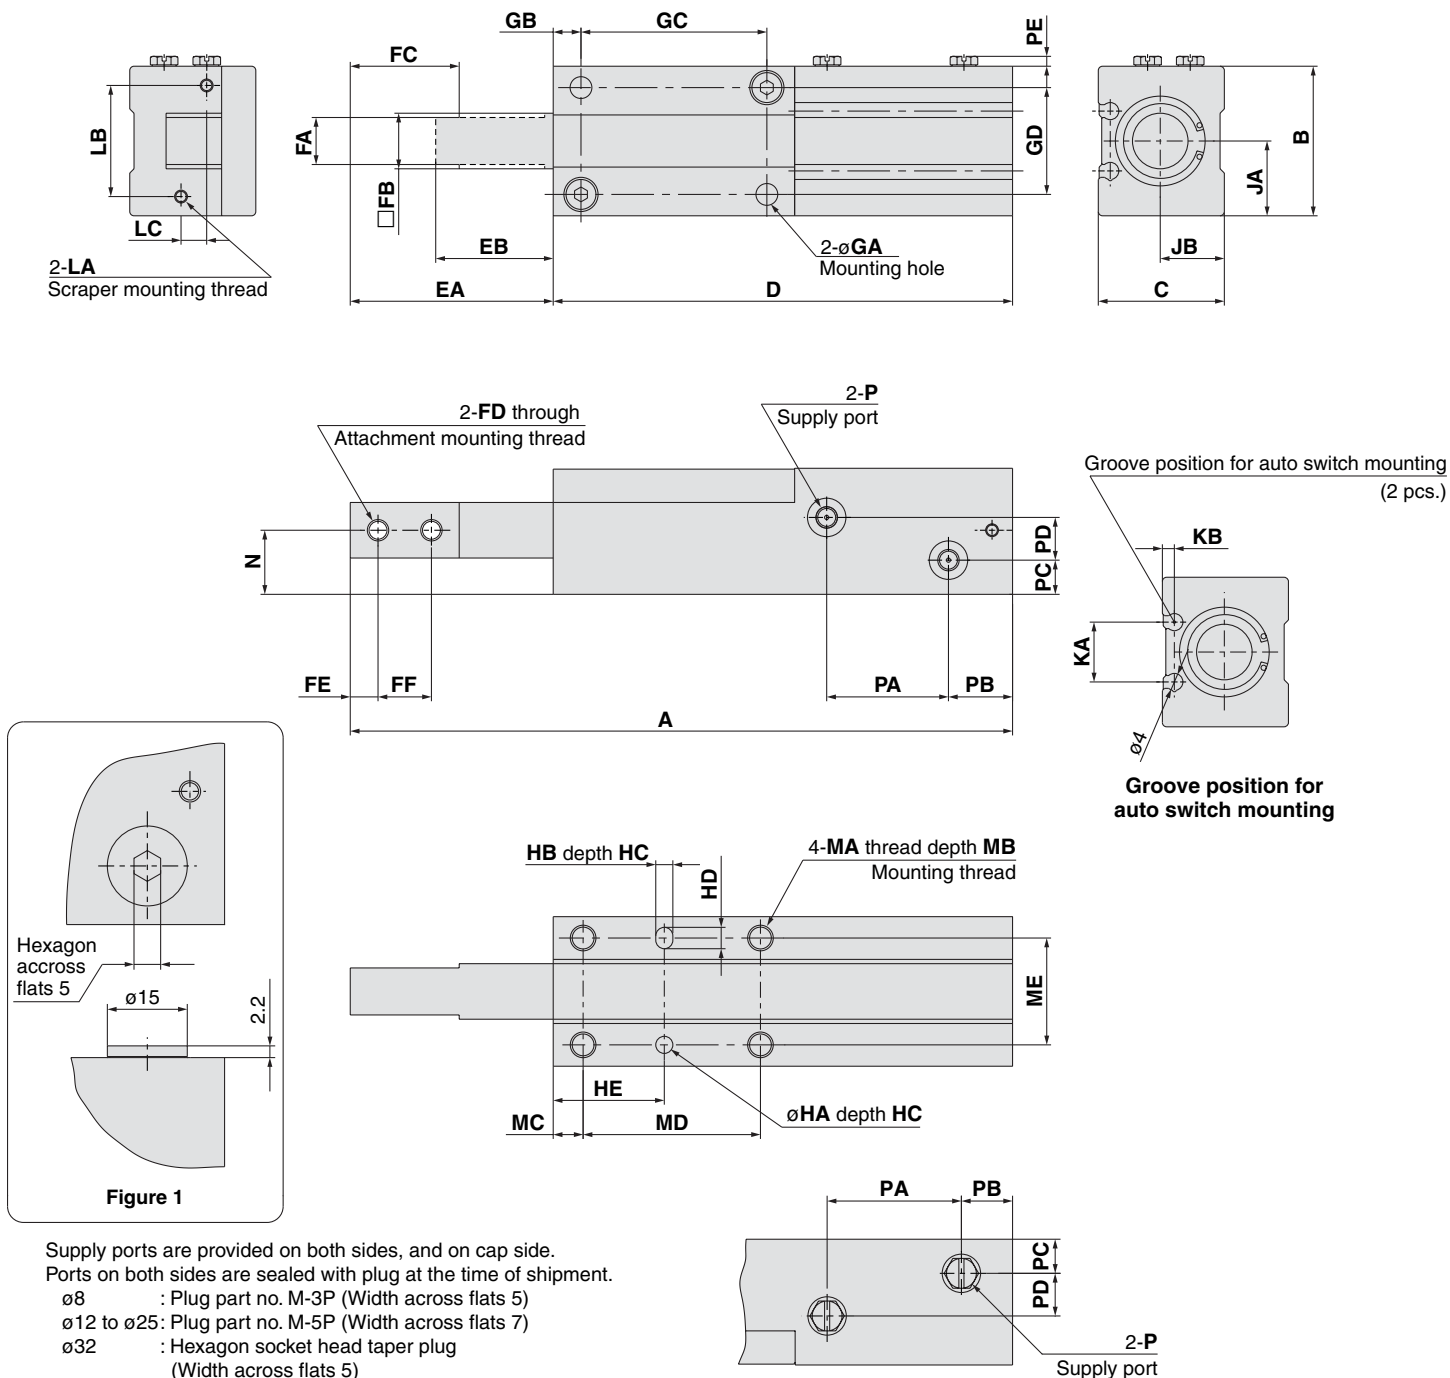


Figure 1


Supply ports are provided on both sides, and on cap side.
 Ports on both sides are sealed with plug at the time of shipment.
 ø8 : Plug part no. M-3P (Width across flats 5)
 ø12 to ø25: Plug part no. M-5P (Width across flats 7)
 ø32 : Hexagon socket head taper plug
 (Width across flats 5)
 * Refer to Figure 1 for G thread.

Model	A	B	C	D	EA	EB	FA	FB	FC	FD	FE	FF	FG	GA	GB	GC	GD	HA, HB
MIS8-10	87	19	16	59	28	18	6 ⁰ _{-0.1}	7h9 ⁰ _{-0.036}	15	M3 x 0.5	4	7	6 (Effective depth 2.5)	2.6	4	20	13	2H9 ^{+0.025} ₀
MIS8-20	117			79	38											30		
MIS12-10	105	26	21	72	33	23	8 ⁰ _{-0.1}	10h9 ⁰ _{-0.036}	19	M3 x 0.5	4.5	9.5	6 (Effective depth 3)	3.3	5	28	18	2.5H9 ^{+0.025} ₀
MIS12-20	135			92	43											38		
MIS12-30	165			112	53											48		
MIS20-10	125	35	29.5	86.5	38.5	28.5	11 ⁰ _{-0.1}	13h9 ⁰ _{-0.043}	25.5	M5 x 0.8	6.5	12.5	10 (Effective depth 4)	5.1	7	32	25	4H9 ^{+0.030} ₀
MIS20-20	155			106.5	48.5											42		
MIS20-30	185			126.5	58.5											52		
MIS25-30	215	41	40	144	71	41	15 ⁰ _{-0.1}	17h9 ⁰ _{-0.043}	37	M6 x 1	10	17	15 (Effective depth 7)	6.8	10	55	28	5H9 ^{+0.030} ₀
MIS25-50	270			184	91											75		
MIS32-30	250	50	47	165	85	55	19.5 ⁰ _{-0.1}	21h9 ⁰ _{-0.052}	51	M8 x 1.25	12.5	22	17 (Effective depth 8.5)	8.6	12	64	34	6H9 ^{+0.030} ₀
MIS32-50	310			205	105											84		


Finger options
Tapped on upper and lower faces

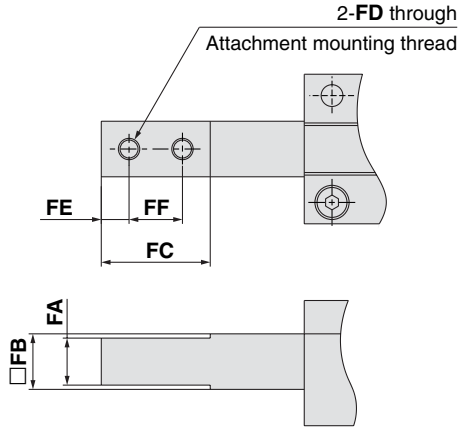


Tapped on all faces

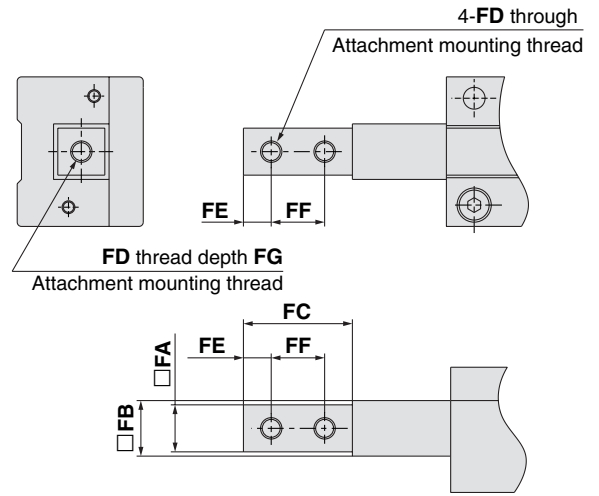

With adjuster

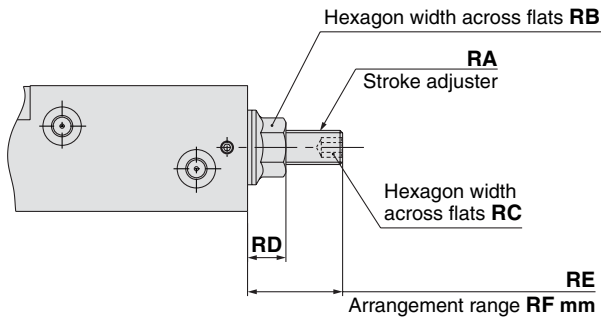

With scraper

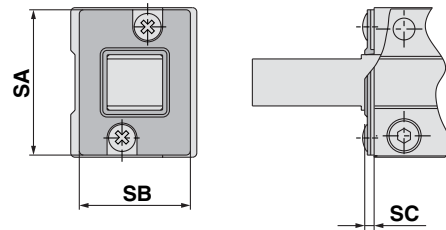

Note) Observe the specified adjustment range when adjusting with a stroke adjuster.

Model	HC	HD	HE	JA	JB	KA	KB	LA	LB	LC	MA	MB	MC	MD	ME	N	P	PA	PB	PC
MIS8-10	2	3	14	9.5	7.5	6.2	1.6	M2 x 0.4	14	3	M3 x 0.5	5	4	20	13	7.5	M3 x 0.5	19	8	4.5
MIS8-20														30				29		
MIS12-10	4	3.5	17.5	13	11	11.6	2.2	M2.6 x 0.45	19	4	M4 x 0.7	7	5	28	18	11	M5 x 0.8	19	10	6
MIS12-20														38				29		
MIS12-30														48				39		
MIS20-10	5	5	26	17.5	15	14	2.8	M3 x 0.5	26	6	M6 x 1	10	7	32	25	15	M5 x 0.8	20.5	12	8
MIS20-20														42				30.5		
MIS20-30														52				40.5		
MIS25-30														55				47		
MIS25-50	5	7	32	20.5	20	11	3	M3 x 0.5	32	10	M8 x 1.25	14	10	75	28	20	M5 x 0.8	67	14	12
MIS32-30														64				47		
MIS32-50	6	8	40	25	25	20.4	2.5	M4 x 0.7	39	12	M10 x 1.5	15	12	84	34	25	Rc1/8	67	14.5	11
MIS32-50														84				67		

Model	PD	PE	RA	RB	RC	RD	RE	RF	RG	SA	SB	SC
MIS8-10	6	2.2	M4 x 0.7	7	2	5.7	12.5	4	8.5	18.6	14	1.4
MIS8-20												
MIS12-10	7	2.8	M5 x 0.8	8	2.5	6	14	6	8	24	18	1.8
MIS12-20												
MIS12-30												
MIS20-10	10	2.7	M8 x 1	12	4	9	22.5	12	10.5	34	26	2.2
MIS20-20												
MIS20-30												
MIS25-30												
MIS25-50	14	2.7	M8 x 1	12	4	9	26	15	11	40	36	2.8
MIS32-30												
MIS32-50	27	—	M12 x 1.25	17	6	12.4	33	20	13	49	41	3.4
MIS32-50												

RE^A_B

REC

C□X

C□Y

MQ^Q_M

RHC

MK(2)

RS^Q_G

RS^H_A

RZQ

MI^W_S

CEP1

CE1

CE2

ML2B

C₆¹/₅-S

CV

MVGQ

CC

RB

J

D-

-X

20-

Data


Series MIW/MIS

Mounting of Auto Switch

When mounting an auto switch, insert the switch in the switch mounting groove on the escapement from the direction as below figure. Having set the mounting position, tighten the attached switch mounting screws with a flat head watchmakers' screwdriver.

* When adjusting the auto switch mounting screws, use a watchmakers' screwdriver with a handle 5 to 6 mm in diameter. (This is to prevent fracture due to an excessive torque.)

The guideline of the tightening torque is 0.05 to 0.1 N·m. Turn another 90° from the position where tightening is felt by hand.

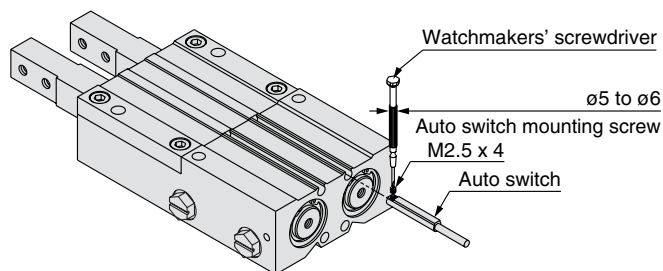

Proper mounting position for stroke end detection

Model	Electrical entry is in the → direction
M9□ M9□V F9□W(V)	
	Electrical entry is in the ← direction

Auto Switch Operating Range

MIW/MIS	(mm)				
Auto switch model	ø8	ø12	ø20	ø25	ø32
D-M9□, D-M9□V	2	2	2.5	3.5	4.5
D-F9□W(V)	2.5	3	3.5	5	5.5

Note) The operating ranges are provided as guidelines including hysteresis and are not guaranteed values (with ±30% variations). Hysteresis may fluctuate due to the operating environments.

Model	Proper mounting position		Model	Proper mounting position		Model	Proper mounting position	
	D-M9□ D-F9□W	D-M9□V D-F9□WV		D-M9□ D-F9□W	D-M9□V D-F9□WV		D-M9□ D-F9□W	D-M9□V D-F9□WV
MIW8-8D	A	16.5	MIS12-30D	A	18.5	MIS25-30D	A	7.5
	B	25		B	49		B	38
	C	4.5		C	6.5		C	21
	D	—		D	—		D	—
	E	6 4		E	3.5 1.5		E	— —
MIS8-10D	A	16.5	MIW20-20D	A	20.5	MIS25-50D	A	7.5
	B	27		B	41		B	38
	C	4.5		C	8.5		C	21
	D	—		D	—		D	—
	E	6 4		E	4 2		E	— —
MIS8-20D	A	16.5	MIS20-10D	A	20.5	MIW32-32D	A	8.5
	B	37		B	31		B	41
	C	4.5		C	8.5		C	29
	D	—		D	—		D	—
	E	6 4		E	4 2		E	— —
MIW12-12D	A	18.5	MIS20-20D	A	20.5	MIS32-30D	A	8.5
	B	31		B	51		B	39
	C	6.5		C	8.5		C	29
	D	—		D	—		D	—
	E	3.5 1.5		E	4 2		E	— —
MIS12-10D	A	18.5	MIS20-30D	A	20.5	MIS32-50D	A	8.5
	B	29		B	61		B	59
	C	6.5		C	8.5		C	29
	D	—		D	—		D	—
	E	3.5 1.5		E	4 2		E	— —
MIS12-20D	A	18.5	MIW25-25D	A	7.5			
	B	39		B	33			
	C	6.5		C	21			
	D	—		D	—			
	E	3.5 1.5		E	— —			

Series MIW/MIS



Specific Product Precautions 1

Be sure to read before handling.

Selection

Warning

1. Design the attachment to be light and short.

- 1) A long and heavy attachment can cause a large inertia force in operation, sometimes affecting the life time.
- 2) Design the attachment to be as short and light as possible even within the limitation.

Mounting

Warning

1. Do not scratch or gouge the escapement by dropping or bumping it when mounting.

Even a slight deformation can cause inaccuracy or malfunction.


2. Please observe the specified torque limits when tightening screws to mount the attachment.

A tightening torque beyond the specified limits can cause malfunction, while a tightening torque below the specified limits can cause dislocation or drop off.

Mounting attachment on fingers

When mounting an attachment on the finger, support the finger with a tool like a spanner to prevent twisting.

Mount attachments by inserting bolts, etc. into the female mounting threads on the fingers and tightening with the torque shown in the table below.

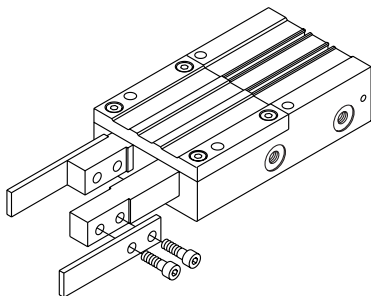

Model	Bolt	Max. tightening torque (N·m)
MIW8	M3 x 0.5	0.88
MIS8		
MIW12	M3 x 0.5	0.88
MIS12		
MIW20	M5 x 0.8	4.3
MIS20		
MIW25	M6 x 1	7.3
MIS25		
MIW32	M8 x 1.25	17.5
MIS32		


3. Please observe the specified torque limits when tightening screws to mount the attachment.

A tightening torque above the specified limits can cause malfunction, while a tightening torque below the specified limits can cause dislocation or drop off.

Mounting


Mounting

Body tap

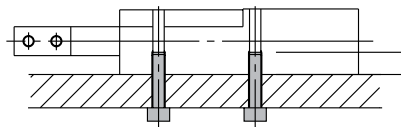

Model	Bolt	Max. tightening torque (N·m)	Max. screw-in depth (mm)
MIW8	M3 x 0.5	0.88	6
MIS8		0.63	4.5
MIW12	M4 x 0.7	1.5	6
MIS12			
MIW20	M6 x 1	5.2	9
MIS20			
MIW25	M8 x 1.25	12.5	12
MIS25			
MIW32	M10 x 1.5	24.5	15
MIS32			

Body through hole

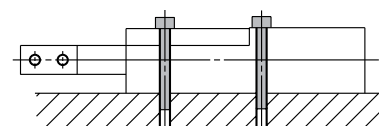

Model	Bolt	Max. tightening torque (N·m)
MIW8	M2.5 x 0.45	0.5
MIS8		
MIW12	M3 x 0.5	0.88
MIS12		
MIW20	M5 x 0.8	4.3
MIS20		
MIW25	M6 x 1	7.3
MIS25		
MIW32	M8 x 1.25	17.5
MIS32		

Caution

1. When mounting an attachment on the finger, support the finger with a tool like a spanner to prevent twisting.

Otherwise malfunction may result.

2. Please do not scratch or gouge the sliding part of the finger.

It may increase the sliding resistance or cause abrasion.

3. Use a speed controller, etc. to keep the operating speed of the finger within the proper range.

Otherwise the life time may be adversely affected by inertia force of the attachment.

4. Conduct meter-out control to throttle down the speed.

Applicable speed controller

Direct connection type –AS120□ Piping type – AS1001F

Direct connection type –AS220□ Piping type – AS2001F etc.

RE^A_B

REC

C□X

C□Y

MQ^Q_M

RHC

MK(2)

RS^Q_GRS^H_A

RZQ

MI^W_S

CEP1

CE1

CE2

ML2B

C¹/₅-S

CV

MVGQ

CC

RB

J

D-

-X

20-

Data



Series MIW/MIS

Specific Product Precautions 2

Be sure to read before handling.

Changing of Piping Directions


⚠ Caution

2. Please observe the specified torque limits when tightening a plug to change the piping directions.

A tightening torque above the specified limits can cause a damage to the plug, while tightening torque below the specified limits can cause a damage to seal or the screw come loose during the operation.

Model	Port size	How to tight
MIW8 MIS8	M3 x 0.5 (Plug part no.: M-3P)	Turn another 1/4 turn with a tool after manual tightening.
MIW12 MIS12	M5 x 0.8 (Plug part no.: M-5P)	Turn another 1/6 turn with a tool after manual tightening.
MIW20 MIS20		
MIW25 MIS25		
MIW32 MIS32	Rc1/8	Tightening torque 7 to 9 N·m

Supply port operation

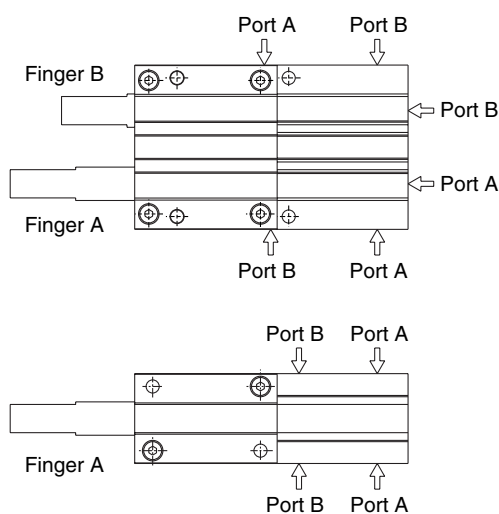

Pressured from A port → Finger A extends, finger B retracts
 Pressure from B port → Finger B extends, finger A retracts

Handling of Adjuster Options

Stroke adjuster


⚠ Warning

1. Observe the specified adjustment range as shown on right when adjusting with a stroke adjuster.

Bolts may shoot out when adjusting stroke adjuster over the maximum stroke as shown on right. Be sure to observe the specified adjustment range, otherwise malfunction may result.

Handling of Adjuster Options

Model	At the maximum stroke	At the maximum adjustment	Adjustment range
MIW8	12.5	8.4	4
MIS8			
MIW12	14	8	6
MIS12			
MIW20	22.5	10.5	12
MIS20			
MIW25	26	11	15
MIS25			
MIW32	33	13	20
MIS32			

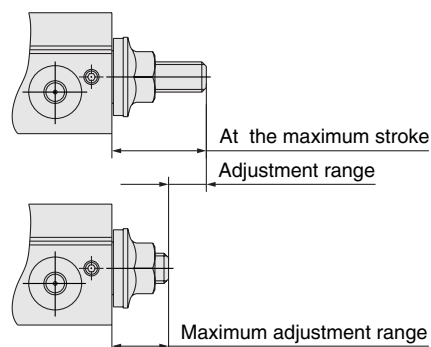

2. Be sure to use specified adjuster bolts for replacement.

Otherwise, fracture may be caused by an impact etc.

3. Refer to the table below for the lock nut tightening torque.

Insufficient tightening can cause air leakage.

Model	Tightening torque (N·m)
MIW8	1.2 to 1.5
MIS8	
MIW12	2.5 to 3.0
MIS12	
MIW20	10.5 to 12.5
MIS20	
MIW25	10.5 to 12.5
MIS25	
MIW32	34 to 42
MIS32	

Operating Environment

⚠ Caution

1. Do not use in an environment where the product is directly exposed to liquid such as cutting lubricant.

Avoid use in an environment where the product is exposed to cutting lubricant, liquid coolant or oil mist. It can cause rattles, increase in sliding resistance and air leakage.

2. Do not use in an environment where the product is directly exposed to foreign matter such as dust, coarse particular, chips and polishing powder from a spatter grinder, etc.

It can cause rattles, increase in sliding resistance and air leakage.



Specific Product Precautions 3

Be sure to read before handling.

Operating Environment

⚠ Caution

3. Provide shading in an environment where the product is exposed to the sunlight.
4. Block off heat radiation in an environment where a heat source is at a close distance.

Block off heat radiation with a cover if a heat source is at a close distance because the temperature of the product can rise to exceed the operating temperature range due to radiation.

5. Do not use in an environment where vibration or impact occurs.

Please contact SMC about use under such conditions because it can cause fracture or malfunction.

Lubrication

⚠ Caution

1. The non-lubricant type escapement is lubricated at the factory and does not need further lubrication for use.

In case the product is lubricated by the customer, apply class 1 turbin oil (non additive) ISO VG32.

In case the product is lubricated by the customer, be sure to continue lubrication.

If it is discontinued, malfunction may result due to loss of initial lubricant.

Maintenance

⚠ Warning

1. Keep away hands and other body parts from the fingers of the escapement or movement range of the attachment.

It can lead to an injury or accident.

2. When removing the escapement, first block off or remove the workpiece on the primary side of the escapement, release compressed air and remove it.


If the workpiece remains, it can be transferred by mistake and cause failure to the equipment on the secondary side.

Finger replacement


1. Remove the hexagon socket head screws.
2. Remove the cover.
3. Replace the finger.
 - Apply the specified grease to the sliding part and T groove part of the finger.
 - Insert the piston in the T groove so that it will be hooked there.
4. Mount the cover and tighten the hexagon socket head screws with the tightening torque in the table below.

Bore size	Hexagon socket head screw	Hexagon width across flats	Tightening torque (N·m)
8	M2 x 6	1.5	0.24
12	M2.5 x 6	2	0.36
20	M4 x 10	3	1.5
25	M5 x 14	4	3.0
32	M6 x 15	5	5.2

Maintenance

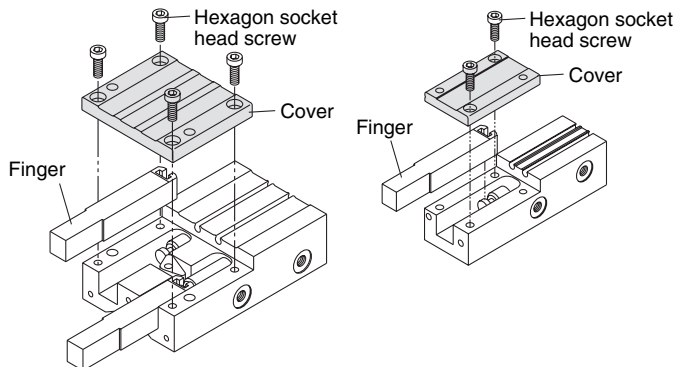

Finger and position connection

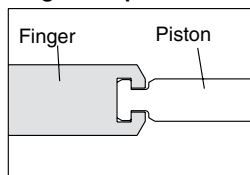

For information on the replacement parts and specified grease, refer to the replacement parts on page 10-11-10 to 11.

Scraper Option


⚠ Caution

1. Please observe the specified torque limits when mounting a scraper.

A tightening torque above the specified limits can cause a damage, while tightening torque below the specified limits can cause a dislocation or drop off.

Tightening torque

Model	Bolt (N·m)
MIW8	0.176
MIS8	
MIW12	0.36
MIS12	
MIW20	0.63
MIS20	
MIW25	0.63
MIS25	
MIW32	1.5
MIS32	

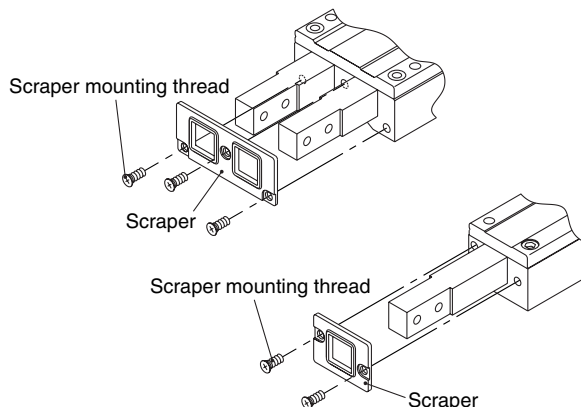RE_B^A

REC

C□X

C□Y

MQ_M^Q

RHC

MK(2)

RS_G^QRS_A^H

RZQ

MI_S^W

CEP1

CE1

CE2

ML2B

C_G5-S

CV

MVGQ

CC

RB

J

D-

-X

20-

Data