



Series VC

Series VCS

Direct Operated 2 Port Solenoid Valve for Steam



IP65 Enclosure

Long Life

Cv Range From 0.16 to 2.1

Multiple Wiring Options

Multipurpose Valve for Steam

Direct Operated 2 Port Solenoid Valve for Steam

Series VCS

Improved durability

(nearly twice the life of the previous series)


The internal resistance of moving parts has been reduced through the use of a unique magnetic material. Service life, durability and corrosion resistance have been increased.

High flow rate:
Cv factor 0.16 to 2.1



Smaller size:

Single valve volume reduced by 15% (Class 3)

Manifold length reduced by 18% (Class 3: 5 stations) (SMC comparison)

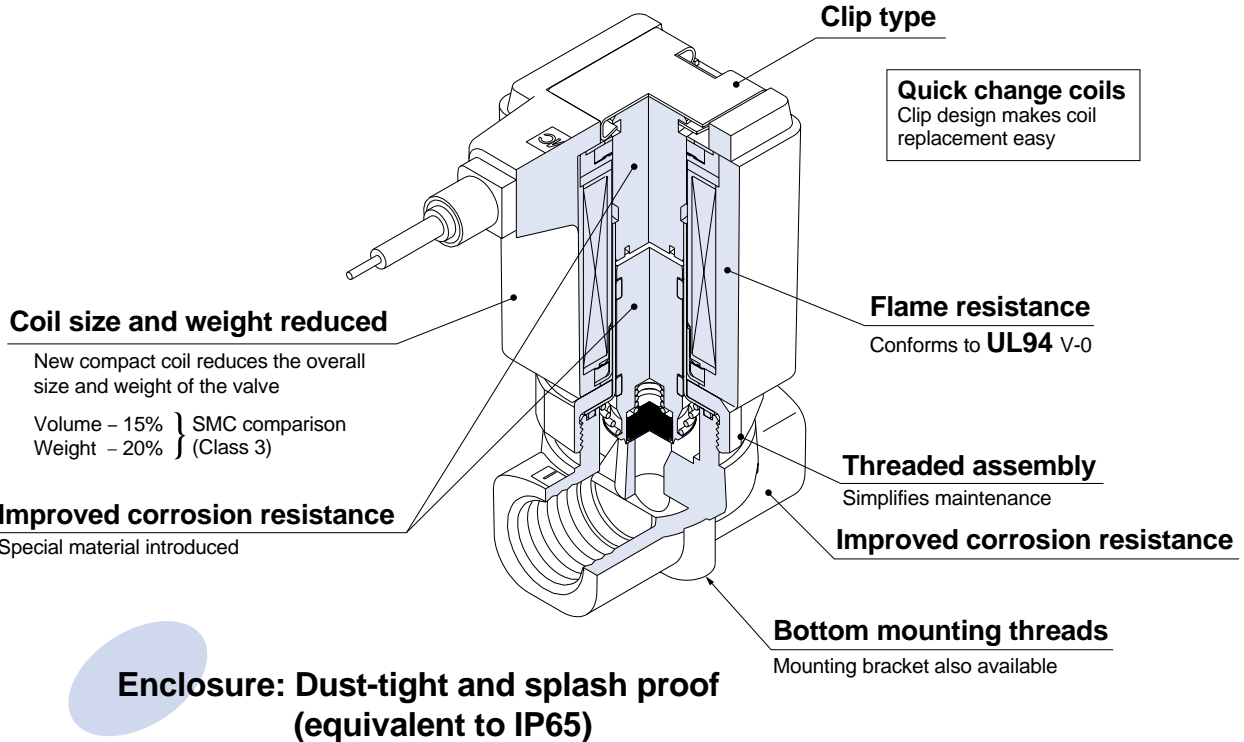

Wiring specifications (Class H coil)

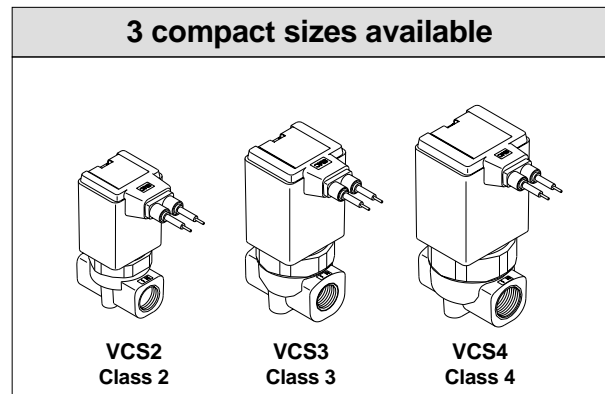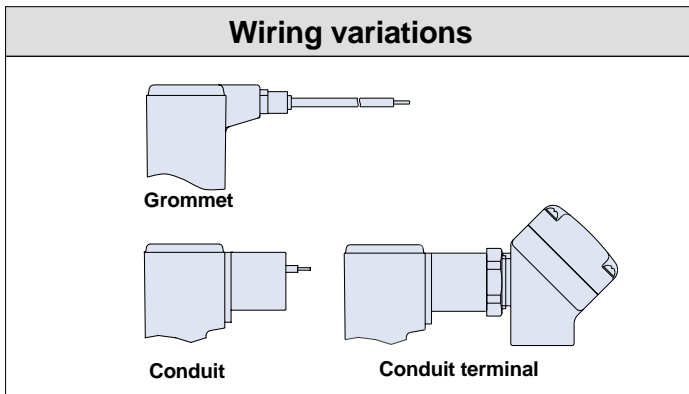

How to Order Valves (Single Type)

VC S 2 1 - 1 G 2 02

For steam ●
When no symbol is shown for "Material and insulation type"
 • Body material: Brass
 • Seal material: PTFE
 • Coil insulation: Class H

Series ●

2	Class 2
3	Class 3
4	Class 4

Valve type ●

Voltage ●

1	100VAC
2	200VAC
3	110VAC
4	220VAC
36	230VAC

* Consult SMC regarding other voltages.

Electrical entry ●

G - Grommet	C - Conduit
T - With conduit terminal TL - With conduit terminal/light	

Option

Nil	None
F	Foot type bracket

Material and insulation type

Symbol	Body material	Seal material	Coil insulation
Nil	Brass	PTFE	Class H
D		FKM	
R	Stainless steel	PTFE	
N		FKM	

Thread type

Nil	Rc
N	NPT
F	G

Port size

Symbol	Port size	Class 2	Class 3	Class 4
01	1/8 (6A)	○	—	—
02	1/4 (8A)	○	○	○
03	3/8 (10A)	—	○	○
04	1/2 (15A)	—	○	○
06	3/4 (20A)	—	—	○

Orifice size

Symbol	Orifice diameter	Class 2	Class 3	Class 4
2	ø2mm	○	—	—
3	ø3mm	○	○	○
4	ø4mm	○	○	○
5	ø5mm	○	○	○
7	ø7mm	—	○	○
10	ø10mm	—	○	○

* Refer to the table below for orifice and port size combinations.

Orifice and port size combinations

Class	Port size	Orifice size					
		ø2	ø3	ø4	ø5	ø7	Note 1) ø10
2	1/8 (6A)	●	●	●	●	—	—
	1/4 (8A)	●	●	●	●	—	—
3	1/4 (8A)	—	●	●	●	●	—
	3/8 (10A)	—	●	●	●	●	●
4	1/2 (15A)	—	—	—	—	—	●
	1/4 (8A)	—	●	●	●	●	—
	3/8 (10A)	—	●	●	●	●	●
	1/2 (15A)	—	—	—	—	—	●
	3/4 (20A)	—	—	—	—	—	●

Note 1) ø10 is available with seal material FKM only.

Standard Specifications



Valve specifications	Valve construction		Direct operated poppet
	Fluid		Steam (184°C or less)
	Withstand pressure MPa (psi)		5.0 (725)
	Body material		Brass, Stainless steel
	Seal material		PTFE (FKM)
	Ambient temperature		-20 to 100°C (-4 to 212°F)
	Fluid temperature		184°C (363°F) or less (PTFE), 120°C (248°F) or less (FKM) ^{Note 1)}
	Enclosure		Dust proof, Splash proof (equivalent to IP65)
	Environment		Location without corrosive or explosive gases
	Valve leakage cm³/min		300 (PTFE), 0.1 (FKM) with air
	Mounting orientation		Unrestricted
	Vibration/Impact resistance m/s² ^{Note 2)}		30/150 or less
Coil Specifications	Rated voltage		100VAC, 110VAC, 200VAC, 220VAC, 230VAC (50/60Hz)
	Allowable voltage fluctuation		±10% of rated voltage
	Coil insulation type		Class H
	Power consumption W 50/60Hz		VCS2: 4.9/4.1, VCS3: 7.7/6.6, VCS4: 10.5/9.3
	Apparent power VA 50/60Hz	Inrush	VCS2: 22/19, VCS3: 36/30, VCS4: 45/37
Holding		VCS2: 10/8, VCS3: 15/13, VCS4: 19/16	

Note 1) In case of low pressure steam at a temperature of 120°C or less, use FKM for the seal material.

Note 2) Vibration resistance ... Conditions when tested with one sweep of 10 to 300Hz in the axial direction and at a right angle to the armature, in both energized and deenergized states


Impact resistance Conditions when tested with a drop tester in the axial direction and at a right angle to the armature, one time each in energized and deenergized states

Characteristic Specifications

Model	Class	Note 1) Port size	Note 1) Orifice size mm	Maximum operating pressure differential MPa (psi)	Effective area mm ² (Cv factor)	Max. operating pressure MPa (psi)	Weight kg (lb)
VCS2	2	1/8 (6A) 1/4 (8A)	ø2	1.0 (145)	2.8 (0.16)	1.0 (10) 145 (1450)	1/8: 0.21 (0.46) 1/4: 0.24 (0.53)
			ø3	0.8 (116)	5.9 (0.33)		
			ø4	0.5 (72)	9.2 (0.51)		
			ø5	0.3 (43)	11.7 (0.65)		
VCS3	3	1/4 (8A) 3/8 (10A) 1/2 (15A)	ø3	1.0 (145)	6.3 (0.35)	1.0 (10) 145 (1450)	1/4: 0.42 (0.93) 3/8: 0.40 (0.88) 1/2: 0.49 (1.08)
			ø4	0.8 (116)	9.7 (0.54)		
			ø5	0.5 (72)	14.4 (0.8)		
			ø7	0.2 (29)	24.8 (1.38)		
			ø10	0.1 (14)	37.8 (2.10)		
VCS4	4	1/4 (8A) 3/8 (10A) 1/2 (15A) 3/4 (20A)	ø3	1.0 (145)	6.3 (0.35)	1.0 (10) 145 (1450)	1/4: 0.58 (1.28) 3/8: 0.55 (1.21) 1/2: 0.62 (1.37) 3/4: 0.78 (1.72)
			ø4	1.0 (145)	10.8 (0.60)		
			ø5	0.7 (101)	15.3 (0.85)		
			ø7	0.3 (43)	24.8 (1.38)		
			ø10	0.12 (17)	37.8 (2.10)		

Note 1) Refer to model selection on page 7 regarding port size and orifice size combinations.

Construction

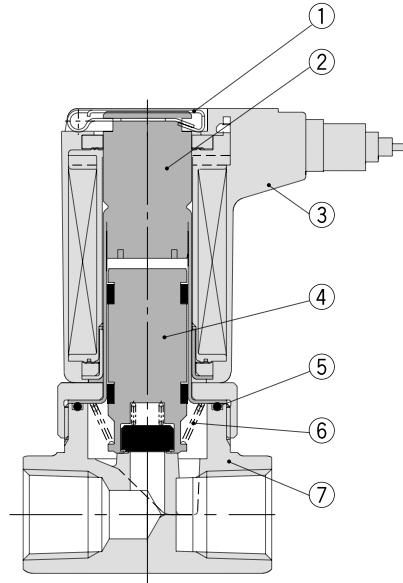


Parts list

No.	Description	Material
		Standard
1	Clip	Stainless steel
2	Tube assembly	Stainless steel, Cu
3	Coil assembly	Class H
4	Armature assembly	Stainless steel, PTFE (FKM)
5	Seal	PTFE (FKM)
6	Return spring	Stainless steel
7	Body	Brass

Dimensions (mm)/Bracket

1in = 25.4mm

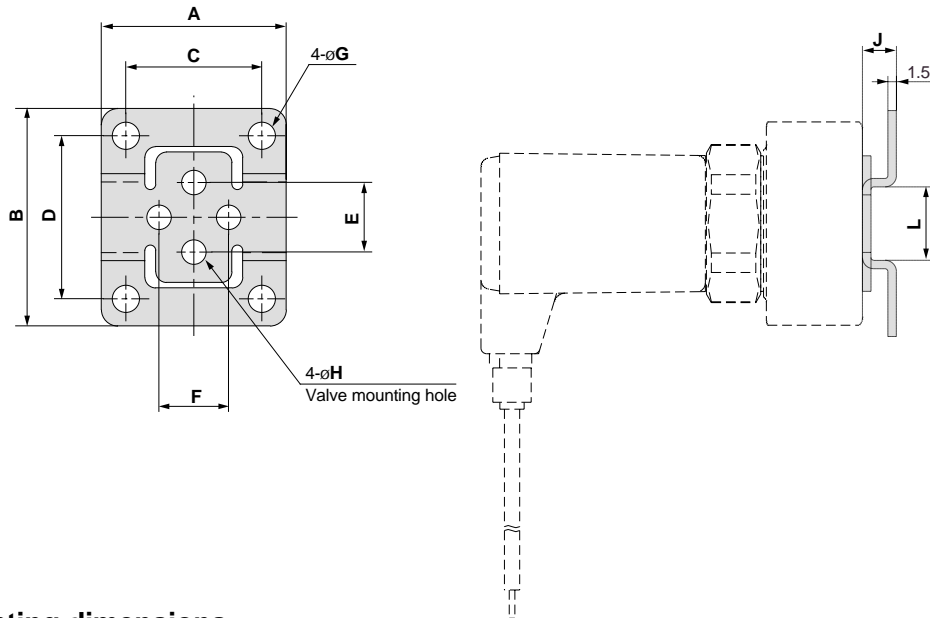

Bracket mounting dimensions

(mm)


Valve model	Port size	Bracket part no.	A	B	C	D	E	F	G	H	J	L
VCS21	1/8, 1/4	VCS20-12-01	34	40	25	30	12.8	12.8	5	4.5	6	13
VCS31	1/4, 3/8	VCS30-12-02	42	52	30	40	19	19	6	5.5	7	19
	1/2	VCS30-12-04	48	56	36	44	23	23	6	5.5	7	23
VCS41	1/4, 3/8	VCS40-12-02	42	52	30	40	23	23	6	5.5	7	19
	1/2	VCS30-12-04	48	56	36	44	23	23	6	5.5	7	23
	3/4	VCS40-12-06	56	65	44	53	28.2	28.2	6	5.5	7	26

* Bracket material: Stainless steel


Dimensions (mm)

1 in = 25.4mm


Grommet: G

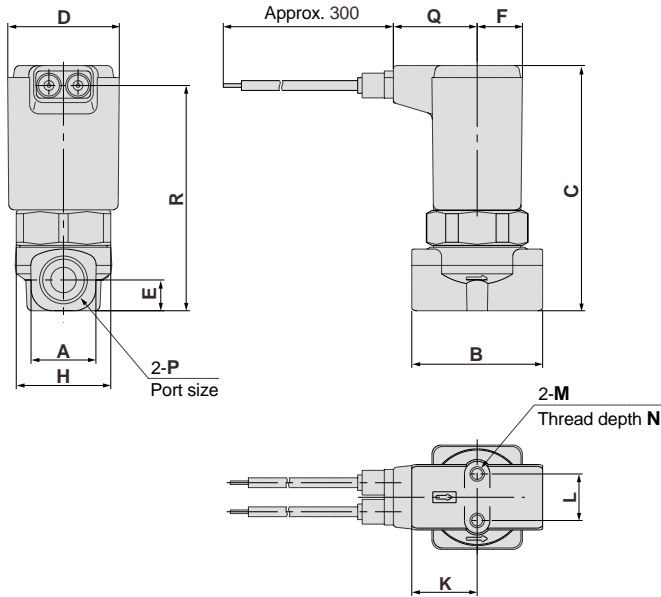

Conduit: C

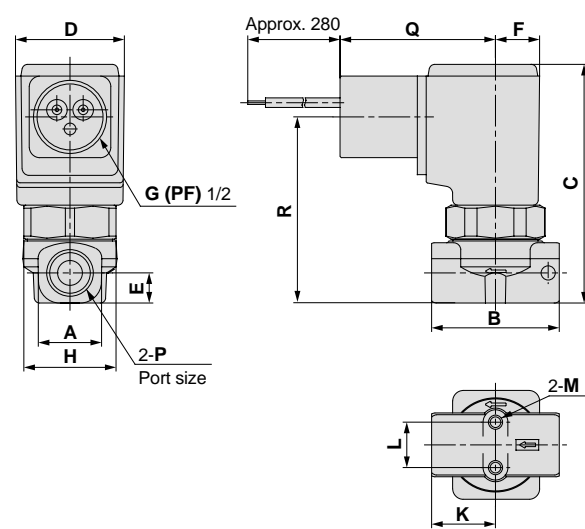

Conduit terminal: T

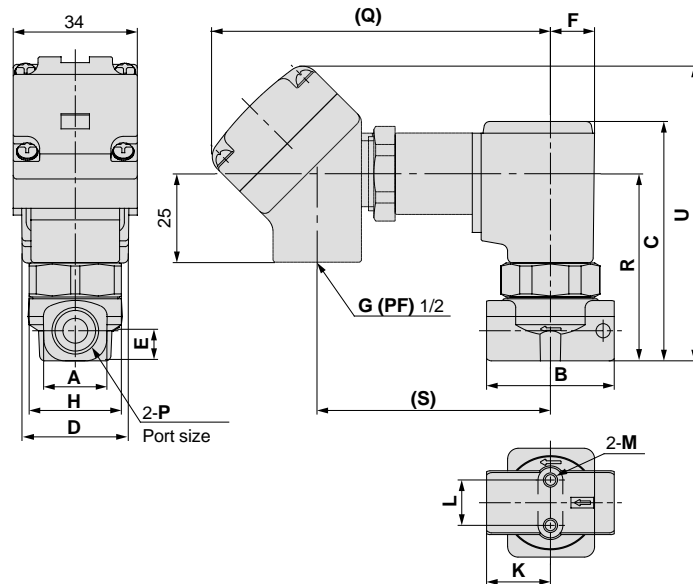

N.C.

(mm)

Model	P Port size	A	B	C	D	E	F	H	K	L	M	N	Electrical entry							
													Grommet: G		Conduit: C		Conduit terminal: T			
													Q	R	Q	R	Q	R	S	U
VCS21	1/8	13.5	28	64	31	6.5	12.5	28	14	12.8	M4	4.5	22	59	44	50	99	50	66	83
	1/4	18	36	67.5	31	8.5	12.5	28	18	12.8	M4	6	22	62	44	53	99	53	66	86
VCS31	1/4, 3/8	22	40	81.5	36.5	11	15	32	20	19	M5	8	24	76	46	66.5	101	66.5	68	99
	1/2	30	50	86	36.5	13.5	15	32	25	23	M5	8	24	80	46	71	101	71	68	104
VCS41	1/4, 3/8	22	45	90	41	11	17	36	22.5	23	M5	8	26	84	48	74.5	103	74.5	70	107
	1/2	30	50	94	41	13.5	17	36	25	23	M5	8	26	88	48	78.5	103	78.5	70	111.5
	3/4	35	60	102	41	17.5	17	36	30	28.2	M5	8	26	96	48	86.5	103	86.5	70	119

How to Order Manifolds

VV2C S 2-D 02 01

For steam
Manifold material: Brass

Series

2	Class 2
3	Class 3
4	Class 4

Material

Symbol	Body material	Seal material
D	Brass	FKM
H	Stainless steel	FKM

Stations

02	2 stations
:	:
10	10 stations

* Refer to the L dimensions on page 6 regarding the maximum number of stations.


Thread type

Symbol	Thread type
Nil	Rc
N	NPT
F	G

OUT port size

Symbol	Port size
01	1/8 (6A)
02	1/4 (8A)

* All IN ports are 3/8.




How to Order Manifold Assemblies (Example)

Enter the valve and option models to be mounted under the manifold base part number.

<Example>
 VV2CS2-D05011 set Manifold part no.
 * VCS23-1G-2 5 sets Valve part no.
 (Stations 1 to 5)

"*" is the symbol for mounting. Add a "*" in front of the part numbers for solenoid valves, etc., to be mounted.

Enter together in order, counting from station 1 on the D side.

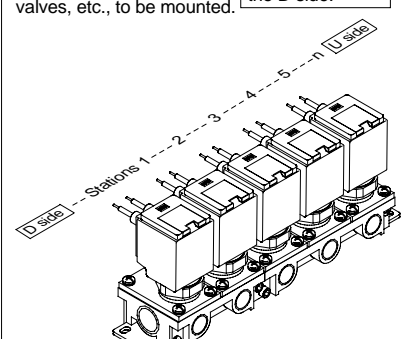

How to Order Valves (for Manifold)

VC S 2 3-1 G-2

For steam

- Body material: Brass
- Seal material: PTFE
- Coil insulation: Class H

Series

2	Class 2
3	Class 3
4	Class 4

Valve type

3	N.C. for manifold
---	-------------------

Voltage

1	100VAC
2	200VAC
3	110VAC
4	220VAC
36	230VAC

* Consult SMC regarding other voltages.

Material and insulation type

Symbol	Body material	Seal material	Coil insulation
Nil	Brass	PTFE	Class H
D	Brass	FKM	
R	Stainless steel	PTFE	
N	Stainless steel	FKM	

Note) High corrosion resistant specification used for armature material.

Orifice size

Symbol	Orifice size	Class 2	Class 3	Class 4
2	ø2mm	○	-	-
3	ø3mm	○	○	○
4	ø4mm	○	○	○
5	ø5mm	○	○	○
7	ø7mm	-	○	○

Electrical entry

G	Grommet
C	Conduit
T	Conduit terminal
TL	With conduit terminal/light

Manifold Options

Blanking plate assembly

VVCS 2 0 - 3A

Series

2	Class 2
3	Class 3
4	Class 4

This is used by mounting it on the manifold block when a valve is removed for maintenance or when the mounting of an additional valve is planned, etc.

Material and insulation type


Symbol	Plate material	Seal material
Nil	Brass	PTFE
D		FKM
R	Stainless steel	PTFE
N		FKM

JIS symbol



Dimensions (mm)

1 in = 25.4mm

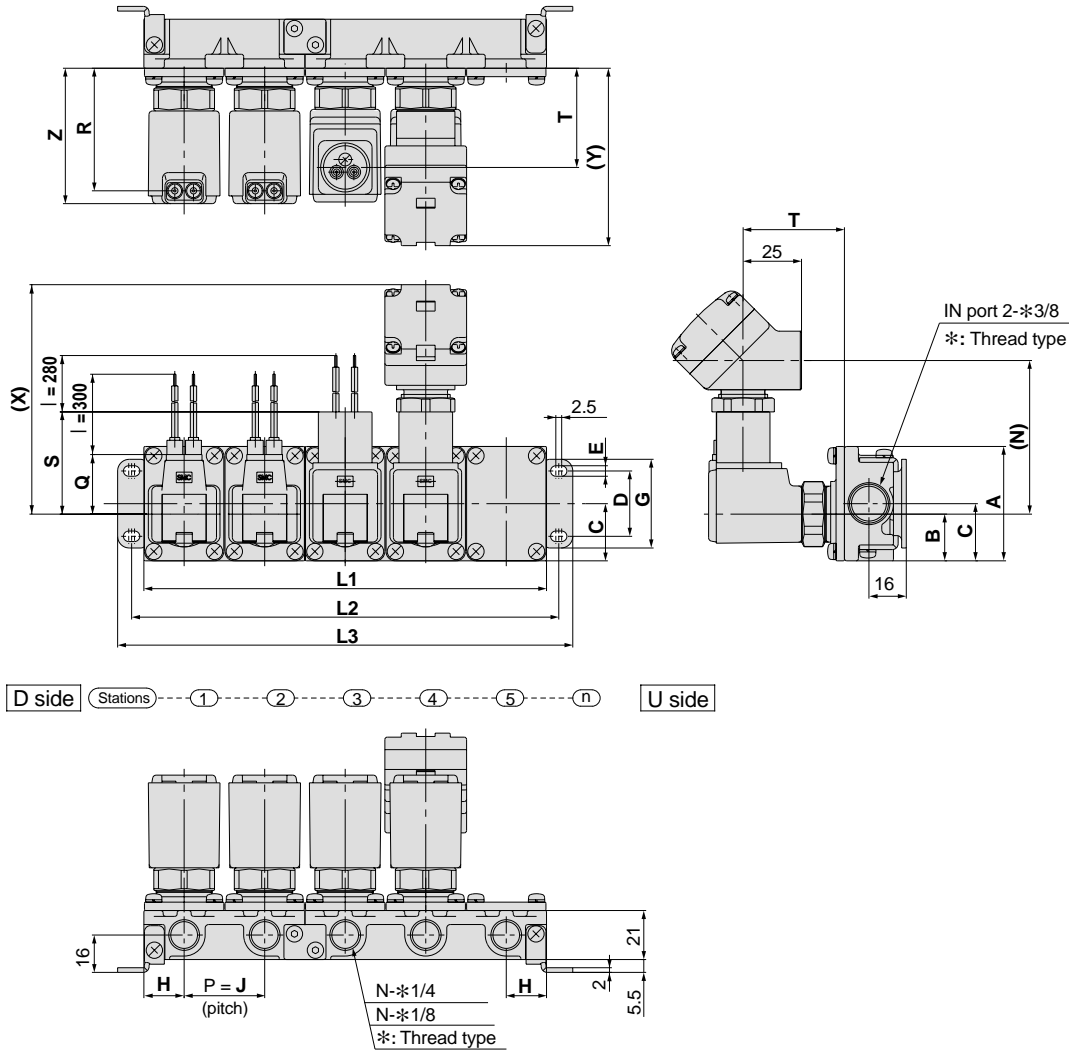

L dimensions

(mm)

Model	Dimensions	n (stations)								
		2	3	4	5	6	7	8	9	10
VV2CS2	L1	69	103.5	138	172.5	207	241.5	276	310.5	345
	L2	81	115.5	150	184.5	219	253.5	288	322.5	357
	L3	93	127.5	162	196.5	231	265.5	300	334.5	369
VV2CS3	L1	77	115.5	154	192.5	231	269.5	308	346.5	385
	L2	89	127.5	166	204.5	243	281.5	320	358.5	397
	L3	101	139.5	178	216.5	255	293.5	332	370.5	409
VV2CS4	L1	83	124.5	166	207.5	249	290.5	332	373.5	415
	L2	95	136.5	178	219.5	261	302.5	344	385.5	427
	L3	107	148.5	190	231.5	273	314.5	356	397.5	439
Manifold composition		2 stns. x 1	3 stns. x 1	2 stns. x 2	2 stns. + 3 stns.	3 stns. x 2	2 stns. x 2 + 3 stns.	2 stns. + 3 stns. x 2	3 stns. x 3	2 stns. x 2 + 3 stns. x 2

Note) Manifold bases are composed by connecting 2 station and 3 station bases.

Dimensions

(mm)


Model	A	B	C	D	E	G	H	J	Z	Electrical entry						
										Grommet: G		Conduit: C		Conduit terminal: T		
										Q	R	S	T	N	X	Y
VV2CS2	49	20	24.5	28	4.5	38	17.3	34.5	56	22	50.5	44	41.5	66	99	77
VV2CS3	57	25.5	28.5	30	5.5	42	19.3	38.5	66	24	60	45.5	51	68	101	86.5
VV2CS4	57	25.5	28.5	30	5.5	42	20.8	41.5	74	26	68	47.5	58.5	70	103	94

VCS (for steam) 2 port solenoid valve

Model	Material		Class	Port size	Orifice size					
	Body	Seal			ø2	ø3	ø4	ø5	ø7	ø10 ^{Note 1)}
VCS (for steam) 2 port solenoid valve	Brass (stainless steel)	PTFE (FKM)	2	1/8 (6A)	●	●	●	●	-	-
				1/4 (8A)	●	●	●	●	-	-
			3	1/4 (8A)	-	●	●	●	●	-
				3/8 (10A)	-	●	●	●	●	●
			4	1/2 (15A)	-	-	-	-	-	●
				1/4 (8A)	-	●	●	●	●	-
				3/8 (10A)	-	●	●	●	●	●
				1/2 (15A)	-	-	-	-	-	●
			3/4 (20A)	-	-	-	-	-	-	●

Note 1) ø10 is available with seal material FKM only.

For saturated steam

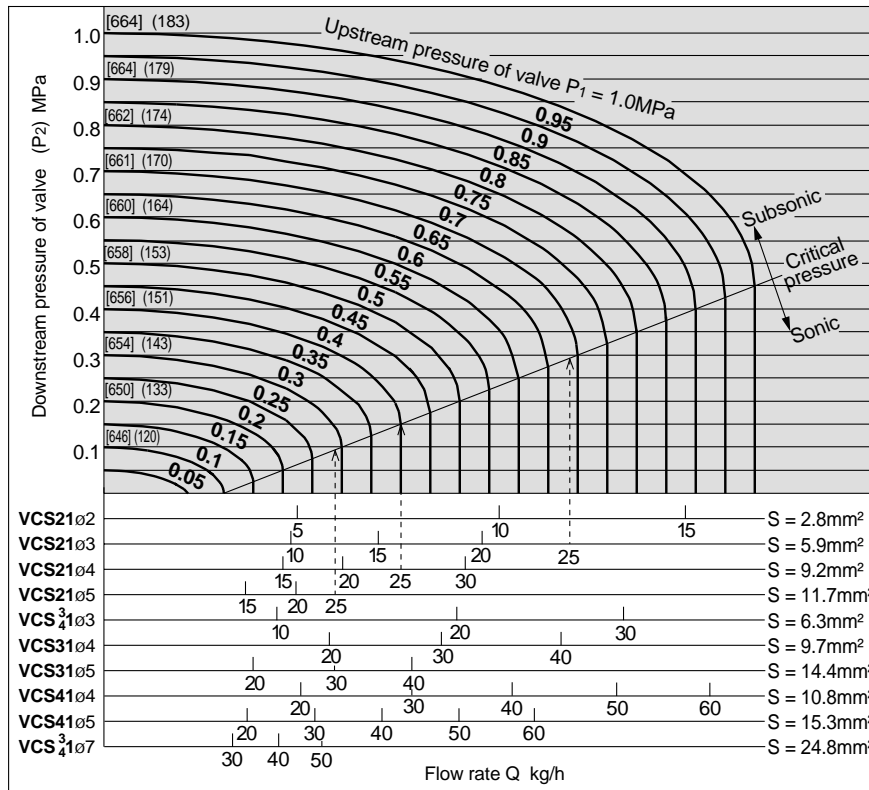

Figures inside [] indicate the saturated steam holding heat (kcal/kg).
 Figures inside () indicate the saturation temperature (°C).

Note: 1MPa = 145psi

Viewing the graph

The sonic range pressure to generate a flow rate of 25kg/h for orifice ø3 (VCS21) is P1 approx. 0.68MPa for orifice ø4 (VCS21) is P1 approx. 0.40MPa for orifice ø5 (VCS21) is P1 approx. 0.29MPa The holding heat differs somewhat depending on the pressure P1, but at 25kg/h it is approximately 16000kcal/h.

How to find the flow rate for saturated steam

- For subsonic range
 - Where $P_1 + 0.1013 = (1 \text{ to } 2) (P_2 + 0.1013)$
 - Formula based on Cv factor $Q = 197.8 \cdot C_v \cdot \sqrt{\Delta P (P_2 + 0.1013)} \dots \text{kg/h}$
 - Formula based on effective area $Q = 11.0 \cdot S \cdot \sqrt{\Delta P (P_2 + 0.1013)} \dots \text{kg/h}$
- For sonic range
 - Where $P_1 = 0.1013 \geq 2 (P_2 + 0.1013)$
 - Formula based on Cv factor $Q = 98.9 \cdot C_v \cdot (P_1 + 0.1013) \dots \text{kg/h}$
 - Formula based on effective area $Q = 5.5 \cdot S \cdot (P_1 + 0.1013) \dots \text{kg/h}$

Explanation of Terminology

Pressure Terminology

1. Maximum operating pressure differential

This indicates the maximum pressure differential (upstream and downstream pressure differential) which can be allowed for operation with the valve closed or open. When the downstream pressure is 0MPa, this becomes the maximum operating pressure.

2. Maximum operating pressure

This indicates the limit of pressure that can be applied inside the pipelines. (line pressure)

(The pressure differential of the solenoid valve unit must be no more than the maximum operating pressure differential.)

3. Withstand pressure

The pressure which must be withstood without a drop in performance after returning to the operating pressure range. (the value under the prescribed conditions)

Electrical Terminology

1. Surge voltage

A high voltage which is momentarily generated in the shut-off unit by shutting off the power.


Other


1. Materials


PTFE: Tetrafluoroethylene resin – Trade names: Teflon®, Polyflon®, etc.

FKM: Fluoro rubber – Trade names: Viton®, Dai-el®, etc.

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by a label of "**Caution**", "**Warning**" or "**Danger**". To ensure safety, be sure to observe ISO 4414 Note 1) and other safety practices.

 **Caution** : Operator error could result in injury or equipment damage.

 **Warning** : Operator error could result in serious injury or loss of life.

 **Danger** : In extreme conditions, there is a possible result of serious injury or loss of life.

Note 1) ISO 4414 : Pneumatic fluid power – Recommendations for the application of equipment to transmission and control systems

Warning

1. The compatibility of equipment is the responsibility of the person who designs the system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility for the specific system must be based on specifications or after analysis and/or tests to meet your specific requirements. Be particularly careful in determining the compatibility of the fluid to be used.

2. Only trained personnel should operate machinery and equipment.

The fluid can be dangerous if handled incorrectly. Assembly, handling or repair of systems should be performed by trained and experienced operators.

3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.

1. Inspection and maintenance of machinery/equipment should only be performed after confirmation of safe locked-out control positions and measures to prevent danger from the fluid.
2. When equipment is to be removed, confirm the safety process as mentioned above, release fluid pressure and be certain there is no danger from fluid leakage or fluid remaining in the system.
3. Restart machinery carefully, confirming that safety measures are being implemented.

4. Contact SMC if the product is to be used in any of the following conditions:

1. Conditions and environments beyond the given specifications, or if product is used outdoors.
2. With fluids whose application causes concern due to the type of fluid or additives, etc.
3. An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.

Precautions on Design

⚠ Warning**1. Cannot be used as an emergency shutoff valve, etc.**

The valves presented in this catalog are not designed for safety applications such as an emergency shutoff valve. If the valves are used in this type of system, other reliable safety assurance measures should also be adopted.

2. Extended periods of continuous energization

Consult SMC if valves will be continuously energized for extended periods of time.

3. Liquid seals

In cases with a flowing liquid, provide a by-pass valve in the system to prevent the liquid from entering the liquid seal circuit.

4. This solenoid valve cannot be used for explosion proof applications.**5. Maintenance space**

The installation should allow sufficient space for maintenance activities (removal of valve, etc.).

Selection

⚠ Warning**1. Confirm the specifications.**

Give careful consideration to operating conditions such as the application, fluid and environment, and use within the operating ranges specified in this catalog.

2. Fluid temperature

Operate within the prescribed fluid temperature range. The temperature range changes depending on the seal material, coil insulation and the type of power supply, etc.


3. Fluid quality

The use of fluid which contains foreign matter can cause problems such as malfunction and seal failure by promoting wear of the valve seat and core, and by sticking to the sliding parts of the armature, etc. Install a suitable filter (strainer) immediately upstream from the valve. As a general rule, use 80 to 100 mesh.

Water supplied to boilers includes substances such as calcium and magnesium which generate hard scale and sludge. Since this scale and sludge can cause valve malfunction, install water softening equipment, and a steam filter (strainer) directly upstream from the valve to remove these substances.

⚠ Caution**1. Leakage voltage**

Particularly when using a resistor in parallel with a switching element and using a C-R element (surge voltage suppressor) to protect the switching element, take note that leakage current will flow through the resistor and C-R element, etc., creating a danger that the valve may not shut OFF.

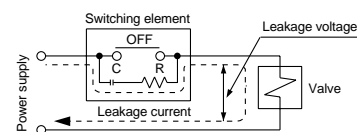**AC coil**

10% or less of rated voltage

2. Low temperature operation

1. The valve can be used at ambient temperatures as low as -20°C , but take measures to prevent freezing or solidification of impurities, etc.
2. When used in cold areas, adopt freeze prevention measures such as draining the water from pipelines. If warmed with a heater, etc., avoid the coil unit. Also, implement warming or other freeze prevention measures for the body.

Mounting

⚠ Warning

1. If air leakage increases or equipment does not operate properly, stop operation.

After mounting is completed, confirm that it has been done correctly by performing a suitable function test.

2. Do not apply external force to the coil section.

When tightening is performed, apply a wrench or other tool to the outside of the piping connection parts.

3. Do not warm the coil assembly with a heat insulator, etc.

Use tape and heaters, etc., for freeze prevention on the piping and body only. They can cause burn out of the coil.

4. Secure with brackets, except in the case of steel piping and copper fittings.

5. Avoid sources of vibration, or adjust the arm from the body to the minimum length so that resonance will not occur.

6. Instruction manual

Mount the product after reading the manual carefully and understanding its contents. Also keep the manual where it can be referred to as necessary.

7. Painting and coating

Warnings or specifications printed or pasted on the product should not be erased, removed or covered up.

Piping

⚠ Caution


1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

2. Wrapping of pipe tape

When connecting pipes and fittings, etc., be sure that chips from the pipe threads and sealing material do not get inside the valve.

Furthermore, when pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

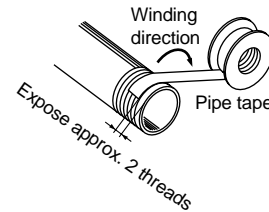

3. Avoid connection of ground lines to piping, as this may cause electric corrosion of the system.

4. Always tighten threads with the proper tightening torque.

When screwing fittings into valves, tighten with the proper tightening torque shown below.

Tightening torque for piping

Connection threads	Proper tightening torque N·m
Rc 1/8	7 to 9
Rc 1/4	12 to 14
Rc 3/8	22 to 24
Rc 1/2	28 to 30
Rc 3/4	28 to 30

5. Connection of piping to products

When connecting piping to a product, refer to its instruction manual to avoid mistakes regarding the supply port, etc.

6. Steam generated in a boiler contains a large amount of drainage.

Be sure to operate with a drain trap installed.

7. When connecting piping to a valve, be sure to tighten while holding the valve with a wrench or other tool.

Wiring


⚠ Caution

- As a rule, use electrical wire of 0.5 to 1.25mm² for wiring. Furthermore, do not allow excessive force to be applied to the lines.
- Use electrical circuits which do not generate chattering in their contacts.
- Use voltage which is within $\pm 10\%$ of the rated voltage. In cases with a DC power supply where importance is placed on responsiveness, stay within $\pm 5\%$ of the rated value. The voltage drop is the value in the lead wire section connecting the coil.
- When surge from the solenoid affects the electrical circuitry, install a surge absorber, etc., in parallel with the solenoid.

Electrical Connections


⚠ Caution

Grommet/Conduit

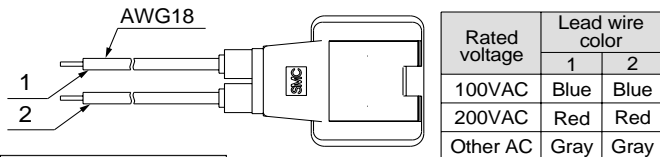

Conduit terminal

In the case of the conduit terminal, make connections according to the marks shown below.

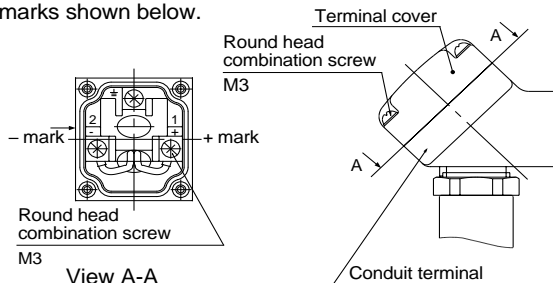

View A-A


(Internal connection diagram)

* There is polarity only when equipped with light.


Electrical Circuits

⚠ Caution

Grommet/Conduit

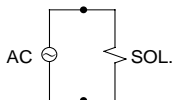

Conduit terminal

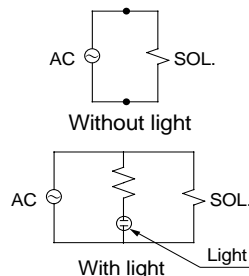

Operating Environment

⚠ Warning

- Do not use valves in atmospheres of corrosive gases, chemicals, salt water, water, or where there is direct contact with same.
- Do not use in explosive atmospheres.
- Do not use in locations subject to vibration or impact.
- Do not use in locations where radiated heat will be received from nearby heat sources.
- Employ suitable protective measures in locations where there is contact with water droplets, oil or welding spatter, etc.

Maintenance

⚠ Warning

- Perform maintenance in accordance with the procedures in the instruction manual.

Improper handling can cause damage or malfunction of machinery and equipment, etc.

In addition, perform maintenance inspections once every six months to ensure optimum performance.

- Removing the product

The valve will reach a high temperature when used with high temperature fluids such as steam. Confirm that the valve temperature has dropped sufficiently before performing work. If touched inadvertently, there is a danger of being burned.

Removal

- Shut off the fluid supply and release the fluid pressure in the system.
- Shut off the power supply.
- Demount the product.

- Low frequency operation

Switch valves at least once every 30 days to prevent malfunction.

⚠ Caution

- Filters and strainers

- Be careful regarding clogging of filters and strainers.
- Replace filter elements after one year of use, or earlier if the pressure drop reaches 0.1MPa.
- Clean strainers when the pressure drop reaches 0.1MPa.

- Storage

In case of long term storage after use with steam, first thoroughly remove all moisture to prevent rust and deterioration of rubber materials, etc.

Operating Precautions

⚠ Warning

- Valves will reach high temperatures from high temperature fluids such as steam. Use caution, as there is a danger of being burned if a valve is touched directly.
- Valves may reach high temperatures when continuously energized. Use caution, as there is a danger of being burned if a valve is touched directly.


Specific Product Precautions
Be sure to read before handling

Refer to pages 9 through 12 for safety instructions and precautions regarding 2 port solenoid valve for fluid control

Replacing the Solenoid Coil

⚠ Caution


The valve will reach high temperatures from high temperature fluids such as steam. Confirm that the valve has cooled sufficiently before performing work. If touched inadvertently, there is a danger of being burned.

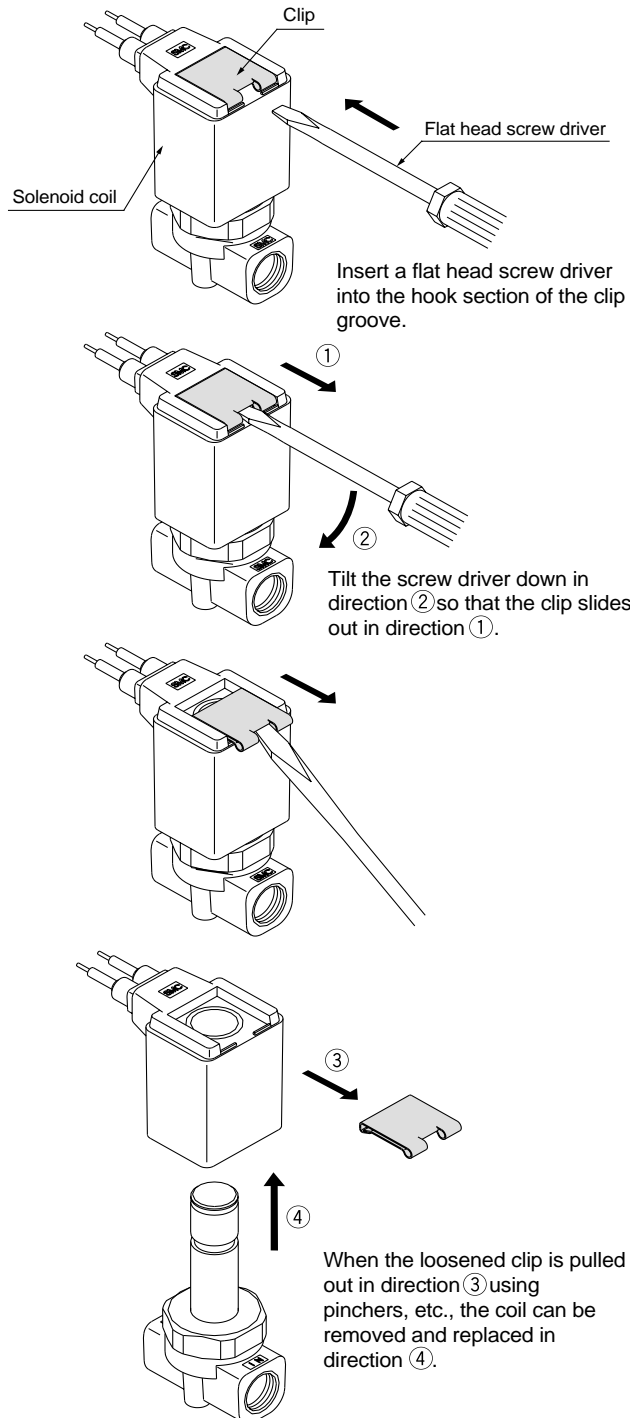

After replacing the coil, the clip is reinstalled by pushing it back in the direction opposite to its removal.

Replacement Parts

Solenoid coil part numbers

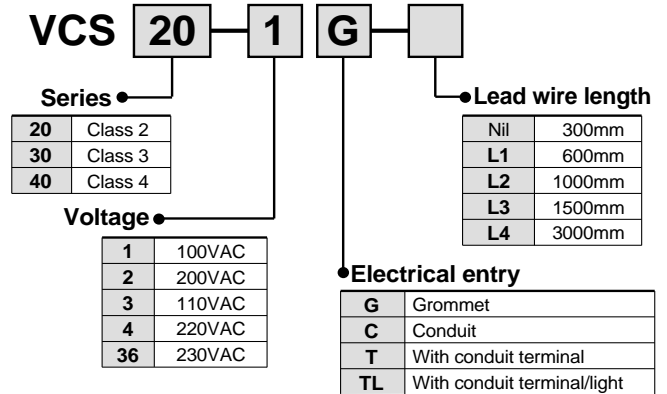

• Clip part numbers

AZ-T-VCS

Page 1 Valve model
How to Order Valves → Page 5 Valve model

Note) Indicate the valve model, as a label will be attached to the clip.

• Seal part numbers

Valve

For VCS20

OR-1860-120-P

P: PTFE
F: FKM

For VCS30

OR-2380-130-P

P: PTFE
F: FKM

For VCS40

OR-2600-180-P

P: PTFE
F: FKM

Manifold

For VCS20

OR-1400-178-P

P: PTFE
F: FKM

OR-2670-178-P

P: PTFE
F: FKM

For VCS30, 40

OR-1717-178-P

P: PTFE
F: FKM

OR-3305-178-P

P: PTFE
F: FKM

When external leakage occurs after disassembling a valve, replace the above seals.

World Wide SMC Support...

North American Branch Offices For a branch office near you call: 1-800-SMC-SMC1 (762-7621)

SMC Pneumatics Inc. (Atlanta) 1440 Lakes Parkway, Suite 600 Lawrenceville, GA 30043 Tel: (770) 624-1940 FAX: (770) 624-1943	SMC Pneumatics Inc. (Cleveland) 2305 East Aurora Rd., Unit A-3 Twinsburg, OH 44087 Tel: (330) 963-2727 FAX: (330) 963-2730	SMC Pneumatics Inc. (Milwaukee) 16850 W. Victor Road New Berlin, WI 53151 Tel: (262) 827-0080 FAX: (262) 827-0092	SMC Pneumatics Inc. (Richmond) 5377 Glen Alden Drive Richmond, VA 23231 Tel: (804) 222-2762 FAX: (804) 222-5221
SMC Pneumatics Inc. (Austin) 9101 Wall Street, Suite 1030 Austin, TX 78754 Tel: (512) 926-2646 FAX: (512) 926-7055	SMC Pneumatics Inc. (Columbus) 3687 Corporate Drive Columbus, OH 43231 Tel: (614) 895-9765 FAX: (614) 895-9780	SMC Pneumatics Inc. (Mnpls.) 990 Lone Oak Road, Suite 162 Eagan, MN 55121 Tel: (651) 688-3490 FAX: (651) 688-9013	SMC Pneumatics Inc. (Rochester) 245 Summit Point Drive Henrietta, NY 14467 Tel: (716) 321-1300 FAX: (716) 321-1865
SMC Pneumatics Inc. (Boston) Zero Centennial Drive Peabody, MA 01960 Tel: (978) 326-3600 Fax: (978) 326-3700	SMC Pneumatics Inc. (Dallas) 12801 N. Stemmons Frwy, Ste. 815 Dallas, TX 75234 Tel: (972) 406-0082 FAX: (972) 406-9904	SMC Pneumatics Inc. (Nashville) 5000 Linbar Drive, Suite 297 Nashville, TN 37211 Tel: (615) 331-0020 FAX: (615) 331-9950	SMC Pneumatics Inc. (S.F.) 85 Nicholson Lane San Jose, CA 95134 Tel: (408) 943-9600 FAX: (408) 943-9111
SMC Pneumatics Inc. (Charlotte) 5029-B West W.T. Harris Blvd. Charlotte, NC 28269 Tel: (704) 597-9292 FAX: (704) 596-9561	SMC Pneumatics Inc. (Detroit) 2990 Technology Drive Rochester Hills, MI 48309 Tel: (248) 299-0202 FAX: (248) 293-3333	SMC Pneumatics Inc. (Newark) 3434 US Hwy. 22 West, Ste. 110 Somerville, NJ 08876 Tel: (908) 253-3241 FAX: (908) 253-3452	SMC Pneumatics Inc. (St. Louis) 4130 Rider Trail North Earth City, MO 63045 Tel: (314) 209-0080 FAX: (314) 209-0085
SMC Pneumatics Inc. (Chicago) 27725 Diehl Road Warrenville, IL 60555 Tel: (630) 393-0080 FAX: (630) 393-0084	SMC Pneumatics Inc. (Houston) 9001 Jameel, Suite 180 Houston, TX 77040 Tel: (713) 460-0762 FAX: (713) 460-1510	SMC Pneumatics Inc. (Phoenix) 2001 W. Melinda Lane Phoenix, AZ 85027 Tel: (623) 492-0908 FAX: (623) 492-9493	SMC Pneumatics Inc. (Tampa) 8507-H Benjamin Road Tampa, FL 33634 Tel: (813) 243-8350 FAX: (813) 243-8621
SMC Pneumatics Inc. (Cincinnati) 4598 Olympic Blvd. Erlanger, KY 41018 Tel: (606) 647-5600 FAX: (606) 647-5609	SMC Pneumatics Inc. (L.A.) 14191 Myford Road Tustin, CA 92780 Tel: (714) 669-1701 FAX: (714) 669-1715	SMC Pneumatics Inc. (Portland) 14107 N.E. Airport Way Portland, OR 97230 Tel: (503) 252-9299 FAX: (503) 252-9253	SMC Pneumatics Inc. (Tulsa) 10203 A East 61st Street Tulsa, OK 74146 Tel: (918) 252-7820 FAX: (918) 252-9511

Europe ENGLAND SMC Pneumatics (U.K.) Ltd. GERMANY SMC Pneumatik GmbH ITALY SMC Italia SpA FRANCE SMC Pneumatique SA HOLLAND SMC Controls BV SWEDEN SMC Pneumatics Sweden AB SWITZERLAND SMC Pneumatik AG AUSTRIA SMC Pneumatik GmbH SPAIN SMC España, S.A. IRELAND SMC Pneumatics (Ireland) Ltd. Asia JAPAN	SMC Corporation KOREA SMC Pneumatics Korea Co., Ltd. CHINA SMC (China) Co., Ltd. HONG KONG SMC Pneumatics (Hong Kong) Ltd. SINGAPORE SMC Pneumatics (S.E.A.) Pte. Ltd. PHILIPPINES SMC Pneumatics (Philippines), Inc. MALAYSIA SMC Pneumatics (S.E.A.) Sdn. Bhd. TAIWAN SMC Pneumatics (Taiwan) Co., Ltd. THAILAND SMC Thailand Ltd. INDIA SMC Pneumatics (India) Pvt., Ltd. North America CANADA SMC Pneumatics (Canada) Ltd. MEXICO SMC Pneumatics (Mexico) S.A. de C.V.	South America ARGENTINA SMC Argentina S.A. CHILE SMC Pneumatics (Chile) Ltda. Oceania AUSTRALIA SMC Pneumatics (Australia) Pty. Ltd. NEW ZEALAND SMC Pneumatics (N.Z.) Ltd.
--	--	--

SMC offers the same quality and engineering expertise in many other pneumatic components

Valves Directional Control Valves Manual Valves Mufflers Exhaust Cleaners Quick Exhaust Valves	Valves Proportional Valves Mechanical Valves Miniature Valves Fluid Valves	Cylinders/Actuators Compact Cylinders Miniature Cylinders Rodless Cylinders Rotary Actuators Pneumatic Grippers	Vacuum Vacuum Ejectors Vacuum Accessories Instrumentation Pneumatic Positioners Pneumatic Transducers	Air Preparation Equipment Filters-Regulators-Lubricators Coalescing Filters Micro Mist Separators Fittings Air Fittings
--	---	---	--	--

SMC Pneumatics Inc.

P.O. Box 26640, Indianapolis, IN 46226
Tel: (317) 899-4440 • FAX: (317) 899-3102