

# Vacuum Module: Ejector System/Vacuum Pump System Series ZX


For electronic components and precision components up to 100 g

## Modular design

Customized application function through selection of module components.


Compact size and lightweight (120 g with complete unit);  
well suitable for actuator mounting

Ejector nozzle size:  $\varnothing 0.5$  to  $\varnothing 1.0$  (Suction flow: 5 to 22  $\ell/\text{min}$  (ANR))

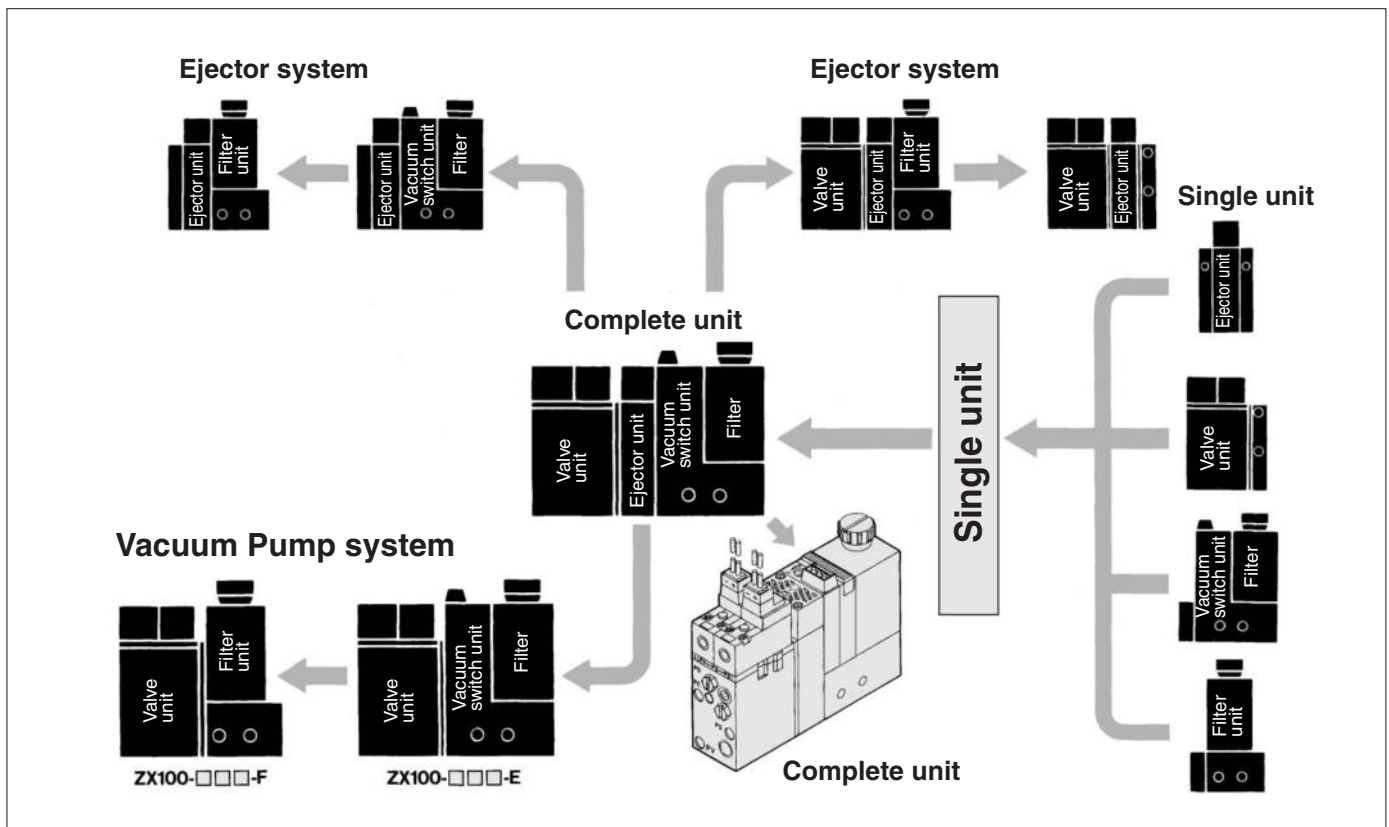


## Application Example


Chip bonding

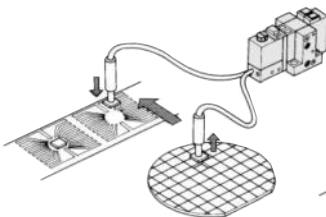


Chip mounting

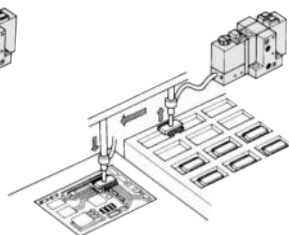

Picking & placing miniature components

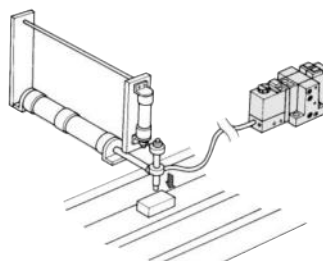



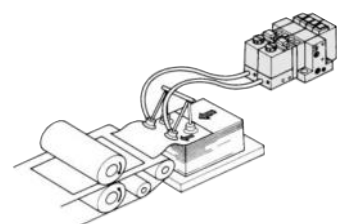

Escorting printed matter




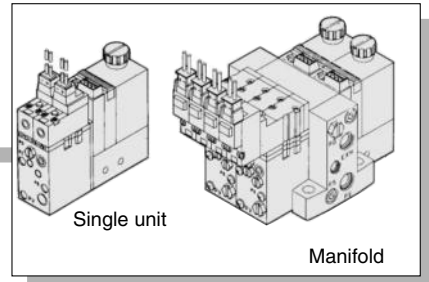
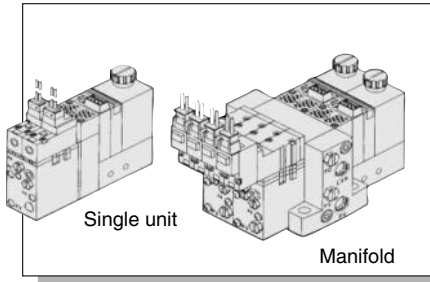
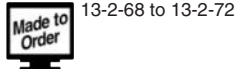
# Vacuum Module: Ejector System/Vacuum Pump System **Series ZX**


## Modular Components Introduction

System		Ejector System			Vacuum Pump System		
<b>Component equipment</b>	<b>Characteristics</b>	13-2-4 to 13-2-39			13-2-40 to 13-2-65		
<b>Ejector unit</b> Series ZX1 		Nozzle diameter $\phi$ (mm)	0.5	0.7	1.0		
		Max. suction flow (#/min(ANR))	5	10	22		
		Air consumption (#/min(ANR))	13	23	46		
		Maximum vacuum pressure	-84 kPa				
		Exhaust release	Built-in silencer/Manifold exhaust Individual exhaust port: (RC 1/8)				
<b>Valve unit</b> ZX1-V□ 		Component equipment	Supply valve/Release valve				
		Function	N.C., N.O.				
		Operation	Solenoid valve/Air operated valve				
		Power supply voltage	3, 5, 6, 12, 24 VDC, 100, 110 VAC (50/60 Hz)				
<b>Vacuum pressure switch unit</b> Series ZS 		Series	Vacuum switch	Adsorption confirmation switch	Vacuum switch	Adsorption confirmation switch	
		Set pressure range	0 to -101 kPa	-20 kPa to -101 kPa	0 to -101 kPa	-20 kPa to -101 kPa	
		Hysteresis	3% or less			0.5 kPa	
		Applicable pad dia. (mm)	$\phi 2$ to $\phi 25$	$\phi 0.3$ to $\phi 1.2$	$\phi 2$ to $\phi 25$	$\phi 0.3$ to $\phi 1.2$	
		Supply voltage	24 VDC			24 VDC	
<b>Suction filter unit</b> ZX1-F 		Operating pressure range	Vacuum to 0.5 MPa				
		Filtration	30 $\mu$ m				
Common specifications		Unit	Air supply port				M5 (Standard)/M6 (Option)
			Vacuum pad connection port				M5 (Standard)/M6 (Option)
		Manifold	Air supply port				Rc 1/8
			Exhaust port				Rc 1/8
			External pilot port				M5
			Stations				Max. 8 units

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.


 • Refer to pages 13-2-8 to 13-2-18 for more detailed specifications for each unit.  
 • Refer to pages 13-2-4 to 13-2-5 for ejector system unit.  
 • Refer to pages 13-2-32 for ejector system manifold.  
 • Refer to pages 13-2-40 to 13-2-41 for external vacuum supply system unit.





 • Refer to page 13-2-54 for external vacuum supply system manifold.  
 • Refer to pages 13-2-62 to 13-2-65 for units for replacement.

# Vacuum Module: Ejector System Series ZX

## How to Order

### Components

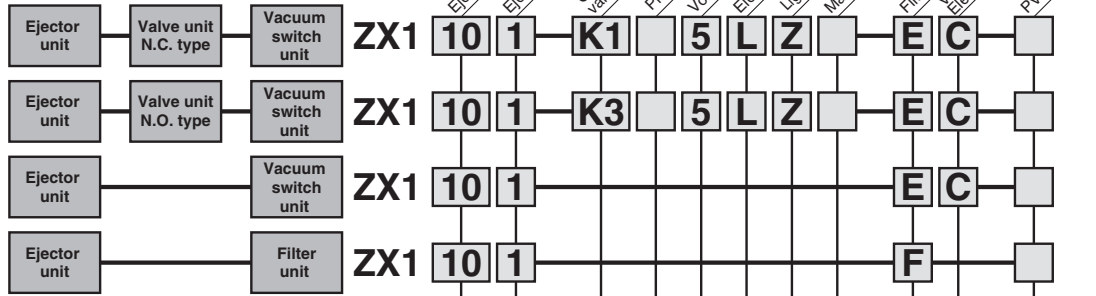

**Ejector unit nozzle dia.**

05	0.5 mm
07	0.7 mm
10	1.0 mm

**Ejector exhaust**

1	With silencer
2	Port exhaust Rc 1/8
3	Common exhaust (Manifold only)

**PV/V port size**

Nil	M5 x 0.8
Y	M6 x 1 (Option)

**Valve unit/Combination of supply valve and release valve**  
Refer to "Table (1)" on page 13-2-7.

**Caution**  
When using the AC type, the DC solenoids are operated via a rectifier. Therefore, when using this type, make sure to combine the connector assembly equipped with a rectifier with the exclusive solenoids. Using other combinations could lead to burned coils or other types of malfunctions.

**Pilot valve**

Nil	DC: 1 W (With indicator light: 1.05 W) AC
Y*	DC: 0.45 W (With indicator light: 0.5 W)

\* 24 VDC and 12 VDC are applicable to 0.45 W.

**Voltage**

1*	100 VAC 50/60 Hz
3*	110 VAC 50/60 Hz
5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC
Nil	Air operated (K6, K8, J3, J4, D3, D4)

\* Applicable to plug connector. (Connector assembly with rectifier is attached.)

**Vacuum switch electrical entry**

Nil	Grommet type	Lead wire length 0.6 m
L	Grommet type	Lead wire length 3 m
C	Connector type	Lead wire length 0.6 m
CL	Connector type	Lead wire length 3 m
CN	Connector type	Without connector (Without lead wire)

Refer to "Table (3)" on page 13-2-5 for part number of lead wire with connector.


**Vacuum switch unit/Filter unit**

E	Vacuum switch (For general purpose)	With suction
PS	Adsorption confirmation switch	Nozzle dia. (ø0.3 to 0.7)
PB	Adsorption confirmation switch	Nozzle dia. (ø0.5 to 1.2)
F	Only suction filter	filter

**Vacuum digital pressure switch unit**

D	kPa	21	2 outputs/without analog output
D	kPa	22	2 outputs/with analog output
DP	kPa	23	1 output (with trouble detection)/without analog
DP	kPa	24	1 output (with trouble detection)/with analog

Note) Analog output is available only on grommet type.

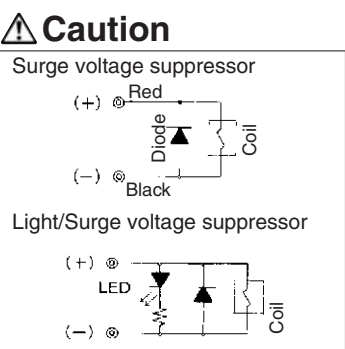

**Using the DC type:**  
Match the polarity of the connectors according to the ⊕ and ⊖ marks on the connectors. Do not interchange the polarities to prevent the diodes or the switching elements from becoming burned. If lead wires are pre-connected, the red wire is ⊕ and the black wire is ⊖.

**Using the AC type:**  
The AC type is not equipped with a surge voltage suppressor because the rectifier assembly prevents the generation of surge voltage.

**Electrical entry**

L	Plug connector type	Lead wire length 0.3 m
LN		Without lead wire (Applicable to DC only)
LO		Without connector
M		Lead wire length 0.3 m
MN		Without lead wire (Applicable to DC only)
MO		Without connector
G	Grommet type	Lead wire length 0.3 m (Applicable to DC only)
H	Grommet type	Lead wire length 0.6 m (Applicable to DC only)
Nil		Air operated

Note) In the case of "K1" or "J1" (combination of supply and release valves), M type plug connector can not be used.

- Refer to "Table (2)" on page 13-2-5 for part number of lead wire with connector.
- Refer to page 13-2-32 for ordering the manifold.
- Refer to page 13-2-62 to 13-2-63 for ordering a unit for replacement.

**Manual operation**

Nil	Non-locking push type
B	Locking slotted type

**Light/Surge voltage suppressor**

Nil	None
Z	With light/surge voltage suppressor
S*	With surge voltage suppressor

\* In the case of AC, "S" is not available.

**Table (1) Valve Unit/Combination of Supply Valve and Release Valve**



(Refer to page 13-2-6 for detailed specifications.)

Components		Symbol	Supply valve					Release valve				
Supply valve	Release valve		Solenoid valve		Air operated		None	Solenoid valve		Air operated	External release	None
			N.C. (VJ114)	N.O. (VJ324)	N.C. (ZX1A)	N.O. (VJA324)		N.C. (VJ114)	N.C. (VJ314)	N.C. (VJA314)	ZX1A	
Solenoid (N.C.)	Solenoid (N.C.)	<b>K1</b>	●	—	—	—	—	●	—	—	—	—
Solenoid (N.O.)	Solenoid (N.C.)	<b>K3</b>	—	●	—	—	—	—	●	—	—	—
Air operated (N.C.)	External release	<b>K6</b>	—	—	●	—	—	—	—	—	●	—
Air operated (N.O.)	Air operated (N.C.)	<b>K8</b>	—	—	—	●	—	—	—	●	—	—
Solenoid (N.C.)	None	<b>J1</b>	●	—	—	—	—	—	—	—	—	●
Solenoid (N.O.)	None	<b>J2</b>	—	●	—	—	—	—	—	—	—	●
—		<b>Nil</b>	Without valve module									

- Air operated valve: Controlled by external 3 port valve. • Weight (g)/K1: 82, K3: 132, K6: 58, K8: 132, J1: 77, J2: 100
- External release: Directly released by external 2 port valve.

**Table (2) Valve Unit/Valve Plug Connector Assembly**

Connector ass'y part no.

(For DC)

**VJ10-20-4A-6**

(For 100 VAC)

**VJ10-36-1A-6**

(For 110 VAC)

**VJ10-36-3A-6**

Lead wire length

Nil	0.3 m (Standard)
6	0.6 m
10	1 m
15	1.5 m
20	2 m
25	2.5 m
30	3 m

How to order

If ordering vacuum module with 600 m or the longer lead wire, specify both vacuum module and connector assembly part numbers.

Ordering example)

**ZX1051-K15LOZ-EC .....1 pc.**  
\*VJ10-20-4A-6 .....2 pcs.

**Table (3) Vacuum Switch/Plug Connector Assembly**

**ZS-10-5A-6**

Note) If ordering a vacuum switch with 3 m lead wire, specify both the vacuum unit switch and the 3 m lead wire connector part numbers.

Ordering example)


**ZX1051-K15LO- ECN ..... 1 pc.**  
\*VJ10-20-4A-6 ..... 2 pcs.  
\*ZS-10-5A-50 ..... 1 pc.

Lead wire length


Nil	0.6 m
30	3 m
50	5 m

**Ejector System/Recommended Model** (The models below will have shorter deliveries.)

Nozzle diameter (mm)	Model	Ejector unit exhaust type	Combination		Solenoid valve rated voltage	Lead wire electrical entry	Light/Surge voltage suppressor	Vacuum switch unit	Vacuum switch electrical entry
			Supply valve (Pilot valve)	Release valve (Direct operated)					
ø0.5	<b>ZX1051-K15LZ-EC</b>	With silencer	N.C. (VJ114)	N.C. (VJ114)	24 VDC	Plug connector type	With light/surge voltage suppressor	General vacuum switch (ZSE)	Connector type
	<b>ZX1051-K35MZ-EC</b>		N.O. (VJ324)	N.C. (VJ314)					
ø0.7	<b>ZX1071-K15LZ-EC</b>		N.C. (VJ114)	N.C. (VJ114)					
	<b>ZX1071-K35MZ-EC</b>		N.O. (VJ324)	N.C. (VJ314)					
ø1.0	<b>ZX1101-K15LZ-EC</b>		N.C. (VJ114)	N.C. (VJ114)					
	<b>ZX1101-K35MZ-EC</b>		N.O. (VJ324)	N.C. (VJ314)					

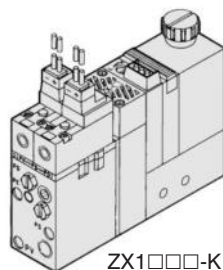

ZX1051-K15LZ-EC

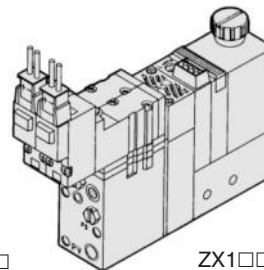

ZX1051-K35MZ-EC

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU


AMJ

Misc.

# Series ZX

## Ejector System/Combination of Supply Valve and Release Valve

### Combination Symbol: K1

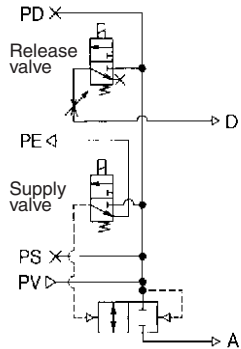


An N.C. solenoid valve is used for the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals.

#### How to Operate

Condition	Valve	Supply valve (N.C.) Solenoid valve	Release valve (N.C.) Solenoid valve
1. Work adsorption		ON	OFF
2. Vacuum release		OFF	ON
3. Operation stop		OFF	OFF

### Combination Symbol: K8

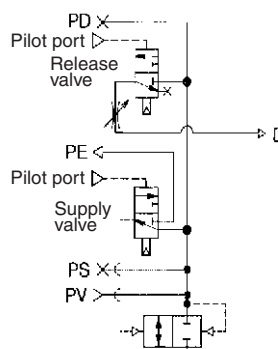


An air operated N.O. valve is used as the supply valve. An air operated N.C. valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Condition	Valve	Supply valve (N.O.) Air operated valve	Release valve (N.C.) Air operated valve
1. Work adsorption		OFF	OFF
2. Vacuum release		ON	ON
3. Operation stop		ON	OFF

### Combination Symbol: K3

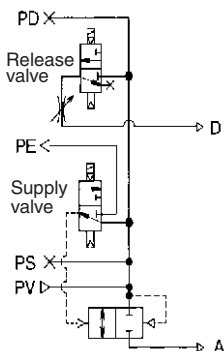


An N.O. solenoid valve is used for the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Condition	Valve	Supply valve (N.O.) Solenoid valve	Release valve (N.C.) Solenoid valve
1. Work adsorption		OFF	OFF
2. Vacuum release		ON	ON
3. Operation stop		ON	OFF

### Combination Symbol: J1

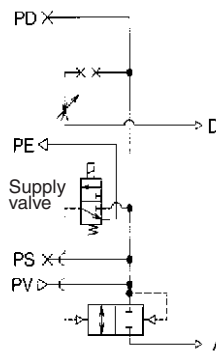


An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** This combination is used for effecting control in accordance with electric signals. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This combination is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Condition	Valve	Supply valve (N.C.) Solenoid valve	Release valve None
1. Work adsorption		ON	—
2. Vacuum release		OFF	—
3. Operation stop		OFF	—

### Combination Symbol: K6

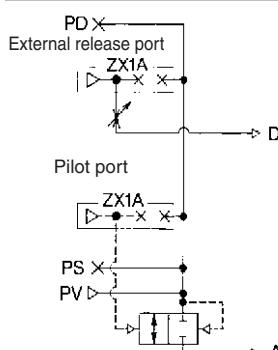


An external 3 port valve must be provided to serve as the supply valve. Also, an external 2 port valve (vacuum release valve) must be provided to serve as the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals.

#### How to Operate

Condition	Valve	Supply valve External 3 port valve	Release valve External 2 port valve
1. Work adsorption		ON	OFF
2. Vacuum release		OFF	ON
3. Operation stop		OFF	OFF

### Combination Symbol: J2

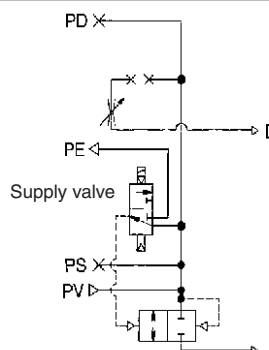


An N.O. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This type is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Condition	Valve	Supply valve (N.O.) Solenoid valve	Release valve None
1. Work adsorption		OFF	—
2. Vacuum release		ON	—
3. Operation stop		OFF	—

Ejector System/Construction

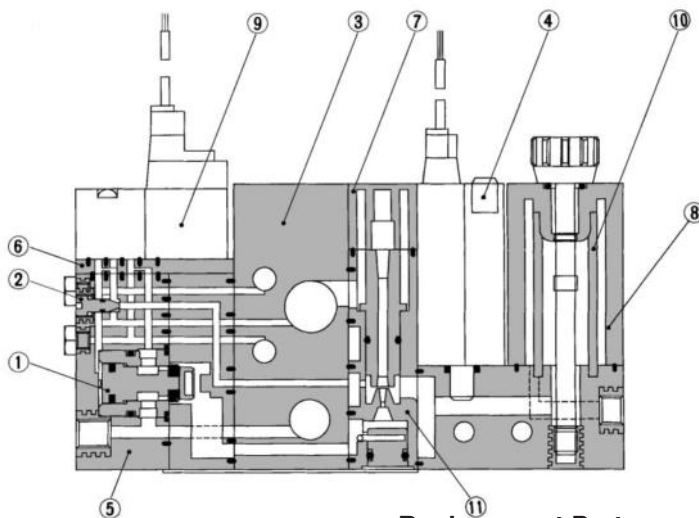

Component Parts

No.	Description	Material	Note
①	Poppet valve assembly	—	ZX1-PV-O
②	Release flow rate adjustment needle	Stainless steel	
③	Manifold	Aluminum	
④	Vacuum switch	—	ZSE2, ZSP1
⑤	Valve unit	—	ZX1-VA□□□□□□-D-□
⑥	Interface plate	—	(PV↔PS → PD)
⑦	Silencer case		
⑧ (Note)	Filter case	Polycarbonate	

Replacement Parts

No.	Description	Material	Part no.
⑨	Pilot valve Air operated	—	☉ Refer to "Table (1)", "(2)", "(3)".
⑩	Filter element	PVF	ZX1-FE
⑪	Ejector assembly	—	☉ Refer to "Table (4)".

- Note) Caution when handling filter case
- 1) The case is made of polycarbonate. Therefore, do not use with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, watersoluble cutting oil (alkalinc), etc.
  - 2) Do not expose it to direct sunlight.

Table (1) How to Order Pilot Valves

No.	Components		Model	Combination of supply and release valve
	Supply valve	Release valve		
①	Solenoid valve N.C. (VJ114)	Solenoid valve N.C. (VJ114)	ZX1-VJ114-□□□□	K1, J1
②	Solenoid valve N.O. (VJ324)	Solenoid valve N.C. (VJ314)	ZX1-VJ3 $\frac{1}{2}$ 4□-□□□□	K3, J2
③	Air operated N.O. (VJA324)	Air operated N.C. (VJA314)	ZX1-VJA3 $\frac{1}{2}$ 4	K8
④	Air operated N.C. (ZX1A)		ZX1A-□	K6

Table (3) How to Order Air Operated Valves

**ZX1A-M3**

Port size

M3	M3 x 0.5	Pilot port/
M5	M5 x 0.8	External release port

Table (2) How to Order Solenoid Valves

**ZX1-VJ114** — [5] [L] [Z] [ ]

**ZX1-VJ3** [2] [4] [ ] [5] [L] [Z] [ ]

Type of actuation

1	N.C. (Normally closed)
2	N.O. (Normally open)

Manual override

Nil	Non-locking push type
B	Locking slotted type

Light/Surge voltage suppressor

Nil	Without light/surge voltage suppressor
S	With surge voltage suppressor
Z	With light/surge voltage suppressor

Electrical entry

L	Connector (0.3 m)
LN	Connector (w/o lead wire)
LO	Without connector
M	Connector (0.3 m)
MN	Connector (w/o lead wire)
MO	Without connector
G	Grommet (0.3 m)
H	Grommet (0.6 m)

Rated voltage

1 *	100 VAC
3 *	110 VAC
5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC

Body option

Nil	Pilot valve Individual exhaust
M	Common exhaust for main and pilot valves

Pilot valve

Nil	DC: 1 W (With indicator light: 1.05 W) AC
Y*	DC: 0.45 W (With indicator light: 0.5 W)

Note) In the case of N.C. type, indicate no symbol. (Individual exhaust for Pilot valve)

\* 24 VDC and 12 VDC are applicable to 0.45 W.

Note) Screw length of VJ100 and VJ300 for series ZX is different from that of the standard model.

<Screw length> VJ100-M1.7 x 15  
VJ300-M1.7 x 22

\* Applicable to plug connector

Note) In the case of "ZX1-VJ114", M, MN and MO cannot be used.

Table (4) How to Order Ejector Assembly

**ZX1-W D 05 1**

Assembly no.

Ejector unit nozzle dia.

05	0.5 mm
07	0.7 mm
10	1.0 mm

Ejector type (Exhaust type)

1	With silencer
2	Port exhaust
3	Common exhaust

\* An adapter should be attached to the assembly to be used as a unit. PV port and V port can be connected.

Ejector assembly

- Combination/ ZX-WD
- Used as a unit by attaching an adapter/ ZX-W-□

⚠ Caution

Turning the vacuum release flow volume adjustment needle clockwise reduces the vacuum release flow volume; the needle valve is fully closed when the needle stops turning. Turning the needle 2 full turns counterclockwise from the fully closed position renders the needle valve fully open. The needle will fall out if it is turned more than 4 full turns.

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX

## Ejector Unit



### Specifications

Unit no.	ZX1-W05 <sub>1</sub> <sup>2</sup>	ZX1-W07 <sub>1</sub> <sup>2</sup>	ZX1-W10 <sub>1</sub> <sup>2</sup>
Nozzle dia. $\phi$ (mm)	0.5	0.7	1.0
Max. suction flow (l/min (ANR))	5	10	22
Air consumption (l/min (ANR))	13	23	46
Maximum vacuum pressure	-84 kPa		
Maximum operating pressure	0.7 MPa		
Supply pressure range	0.2 to 0.55 MPa		
Standard supply pressure	0.45 MPa		
Operating temperature range	5 to 50°C		
Ejector exhaust type *	Code ①	Built-in silencer..... For single and manifold	
	Code ②	Individual exhaust..... For single and manifold	
Weight	Built-in silencer: 35 g/Port exhaust: 45 g		
Standard accessory	Bracket B		

\* Codes ① and ② are corresponding to the suffixes in "How to Order" to indicate the exhaust method.

### How to Order

ZX1 — W 05 1

#### Nozzle diameter

05	0.5 mm
07	0.7 mm
10	1.0 mm

#### PV, V port size






Nil	M5 x 0.8
Y	M6 x 1 (Option)

#### Ejector exhaust

1	Silencer
2	Individual exhaust Rc 1/8

### Dimensions: ZX1-W□□<sub>1</sub><sup>2</sup>

#### JIS Symbol

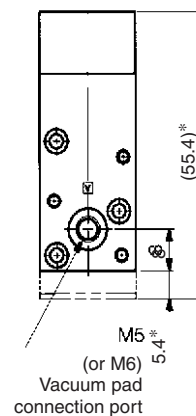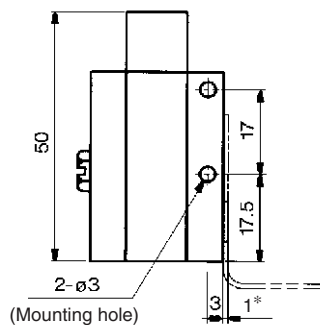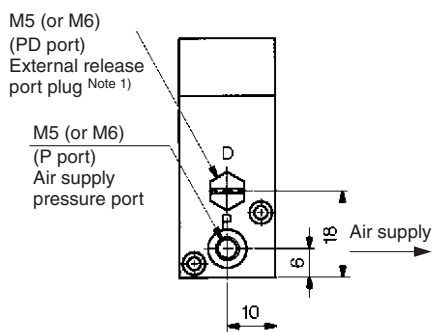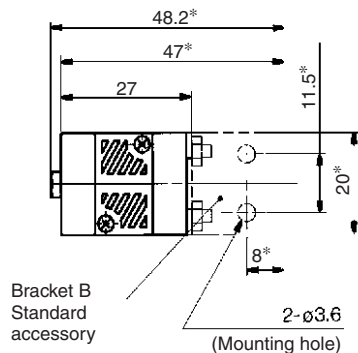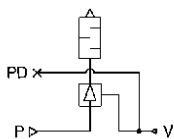

Note 1) Remove the plug at external release. Note 2) Dimensions \*: For mounting bracket B.


**Flow Characteristics/Exhaust Characteristics**

[At 0.45 MPa]


**How to Read Flow Characteristics Graph**

**ZX1-W05**

**Exhaust Characteristics**

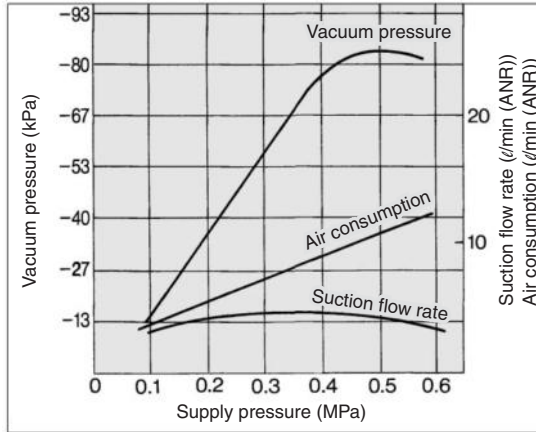


**Flow Characteristics**

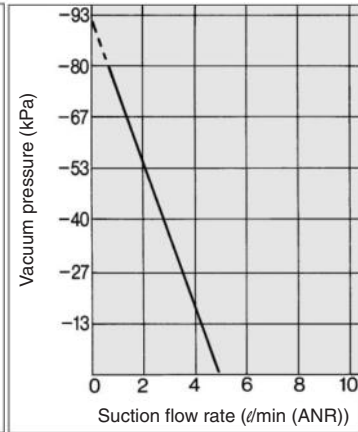


**ZX1-W07**

**Exhaust Characteristics**

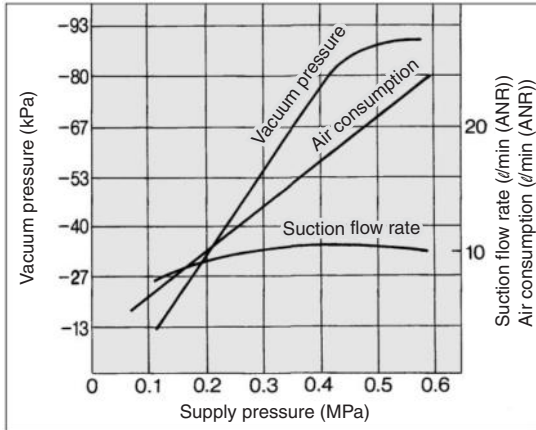


**Flow Characteristics**


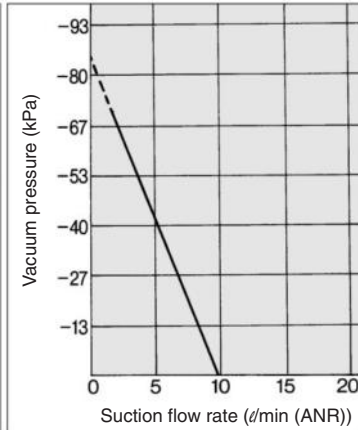


**ZX1-W10**

**Exhaust Characteristics**

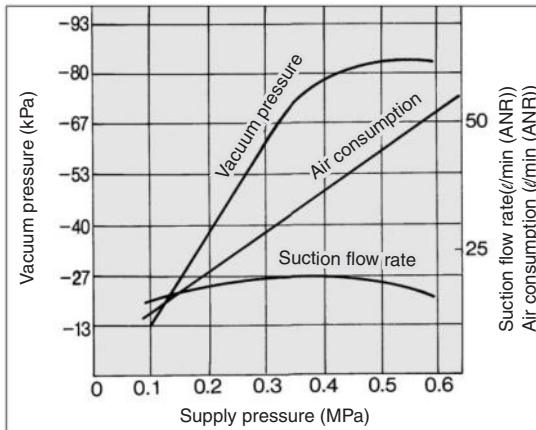

**Flow Characteristics**

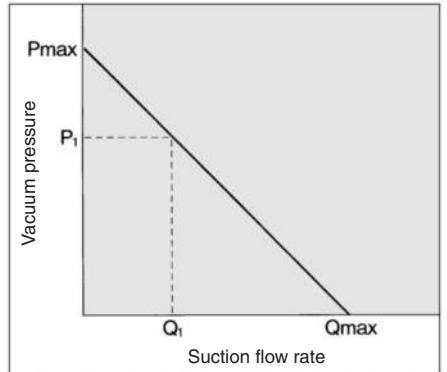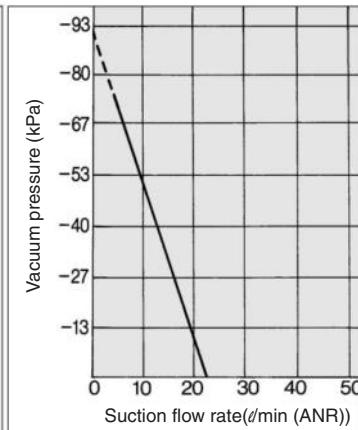

Flow characteristics are expressed in ejector vacuum pressure and suction flow. If suction flow rate changes, a change in vacuum pressure will also be expressed. Normally this relationship is expressed in ejector standard use.

In graph, Pmax is max. vacuum pressure and Qmax is max. suction flow. The valves are specified according to catalog use. Changes in vacuum pressure are expressed in the below order.

1. When ejector suction port is covered and made airtight, suction flow becomes 0 and vacuum pressure is at maximum value (Pmax).
2. When suction port is opened gradually, air can flow through, (air leakage), suction flow increases, but vacuum pressure decreases. (condition P<sub>1</sub> and Q<sub>1</sub>)
3. When suction port is opened further, suction flow moves to maximum value (Qmax), but vacuum pressure is near 0. (atmospheric pressure).

When vacuum port (vacuum piping) has no leakage, vacuum pressure becomes maximum, and vacuum pressure decreases as leakage increases. When leakage value is the same as max. suction flow, vacuum pressure is near 0.

When ventirative or leaky work must be adsorbed, please note that vacuum pressure will not be high.

**⚠ Precautions**

**Be sure to read before handling. Refer to pages 13-15-3 to 13-15-4 for Safety Instructions and Common Precautions on the products mentioned this catalog, and refer to page 13-1-5.**

**⚠ Caution**

Refer to 13-1-10 to 13-1-19 for the product selection in series ZX and the sizing program.

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.



# Series ZX

## Valve Unit: ZX1-VA



### Specifications

Unit no.	ZX1-VA□□□□□							
Components	Vacuum supply valve				Vacuum release valve			
Operation	Pilot operated				Direct operated			
	Solenoid valve		Air operated		Solenoid valve		External release	Air operated
	N.C. (VJ314)	N.C. (VJ114)	N.O. (VJA324)	N.C. (ZX1A)	N.O. (VJA324)	N.C. (VJ114)	(ZX1A)	N.C. (VJA314)
Effective area (mm <sup>2</sup> ) (Cv factor)	3 (0.17) Main valve				0.07 (0.004)	0.45 (0.025)	—	
Operating pressure range	0.3 to 0.6 MPa							
Max. operating frequency	5 Hz							
Operating temperature range	5 to 50°C							
Interface plate symbol	PV ↔ PS ↔ PD							
Standard accessory	Bracket C							

### Solenoid Valve/Specifications

	VJ114	VJ314, VJ324
Rated voltage	24, 12, 6, 5, 3 VDC/100, 110 VAC* (50/60 Hz)	
Electrical entry	L plug connector, grommet	L plug connector, M plug connector, grommet
Light/Surge voltage suppressor	With or Without	
Manual operation	Non-locking push type/Locking slotted type	

\* Applicable to plug connector; connector assembly with rectifier is attached.


### Model/Solenoid Valve

	Model	Supply valve			
		Solenoid valve N.C. (VJ114)	Solenoid valve N.O. (VJ324)	Air operated N.C. (ZX1A)	None
Release valve	Solenoid valve N.C. (VJ114)	● K1 [82]	—	● K5 [73]	● D1 [77]
	Solenoid valve N.C. (VJ314)	—	● K3 [132]	—	● D2 [100]
	External release (ZX1A)	● K2 [73]	—	● K6 [58]	● D3 [41]
	Air operated N.C. (VJA314)	—	● K4 [119]	—	● D2 [100]
	None	● J1 [77]	● J2 [100]	● J3 [41]	—

[ ]: Weight (g)

### How to Order

Refer to page 13-2-4 for details.

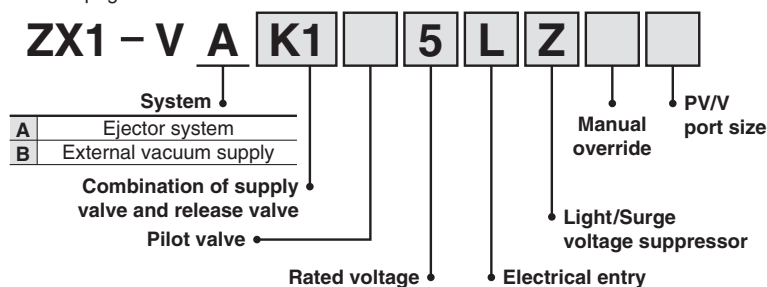

**Connector Assembly for 100 VAC**

Connector assembly with rectifier attached.

**Connector Assembly with Rectifier Part No.**


**VJ10 — 36 — [ ] A — [ ]**

**Rated voltage**

Symbol	Rated voltage	Lead wire color
1	100 VAC 50/60 Hz	Blue (2 pcs.)
3	110 VAC 50/60 Hz (115 VAC 60 Hz)	Gray (2 pcs.)





**Lead wire length**

Symbol	L (mm)
Nil	300
6	600
10	1000
15	1500
20	2000
25	2500
30	3000

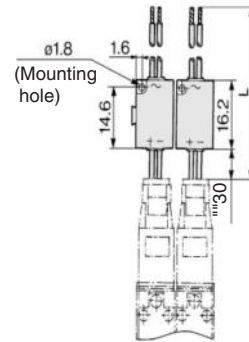




**Valve Unit**

**Normally closed**

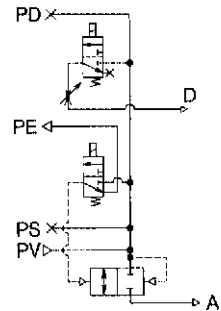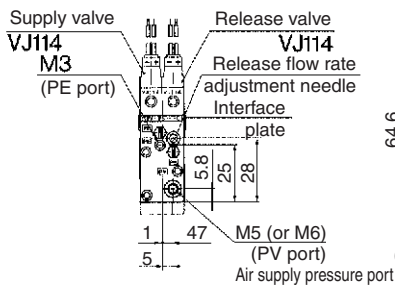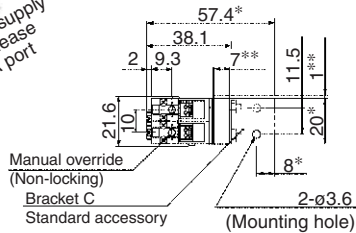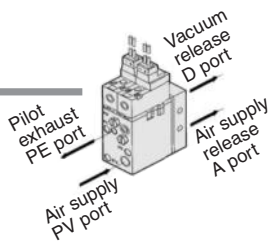

**Circuit diagram**

**Normally open**

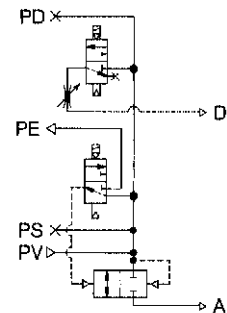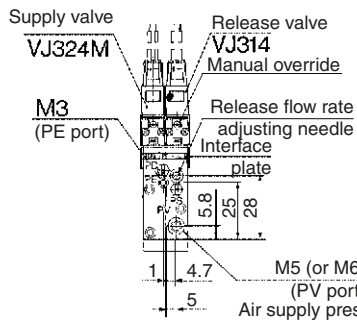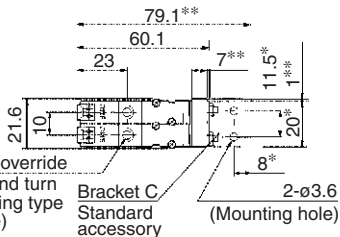

**Circuit diagram**

Note) Dimensions \*: For mounting bracket C \*\*: For mounting spacer.

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX

## Suction Filter Unit: ZX1-F



### Specifications



Unit no.	ZX1-F
Operating pressure range	Vacuum to 0.5 MPa
Operating temperature range	5 to 50°C
Filtration efficiency	30 μm
Element	PVF
Weight	35 g



Note) If not operated within the specified range of pressure and temperature, trouble may result.

### Filter

#### JIS Symbol

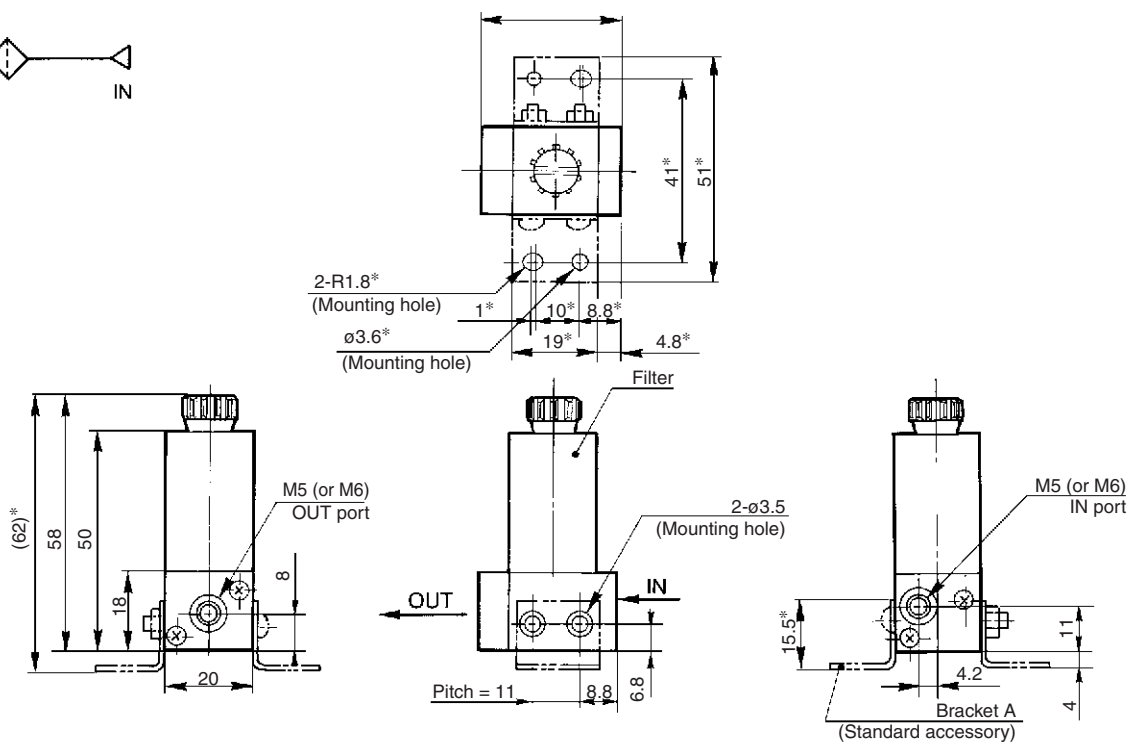

Note) Dimensions \*: For A mounting bracket.

#### • Filter case

#### ⚠ Caution

1. The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkalinic), etc.
2. Do not expose it to direct sunlight.

**Vacuum Pressure Switch Unit/Vacuum Pressure Switch: ZSE2-0X**


**Quick response: 10 ms**

**Compact size: 39H x 20W x 15D  
(except the connecting portion)**

**Improved wiring: connector type**

**Uses a carrier diffusion semiconductor pressure sensor**

**Pressure detector**  
(A carrier diffusion semiconductor pressure sensor is used.)

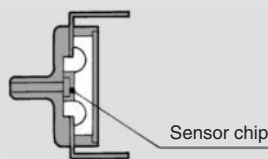


**Vacuum Pressure Switch**

Unit no.	<b>ZSE2-0X</b>
Fluid	Air
Set pressure range	0 to -101 kPa
Hysteresis	3% Full span or less
Accuracy	±3% Full span (5 to 40°C) ±5% Full span (0 to 60°C)
Voltage	12 to 24 VDC (Ripple ±10% or less)
Port size	M5 x 0.8


- **Weight** — 50 g • **Output** — Open collector 30 V/80 mA • **Indicator light** — Light at ON state
  - **Current consumption** — 17 mA or less (24 VDC, at ON state)
  - **Operating temperature range** — 0 to 60°C • **Max. operating pressure** — 0.2 MPa
- \* When using ejector system, instantaneous pressure up to 0.5 MPa will not damage the switch.  
Note) If not operated within the specified range of pressure of temperature, trouble may be result.

**Wiring**

**ZSE2 connection**



**Connection with PLC at negative COM terminal**

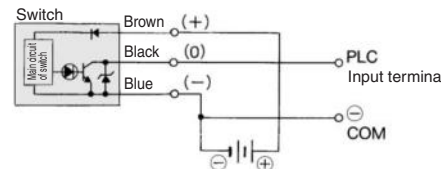

**How to Order**

**ZSE2 — 0X** [ ] — **15** [ ]

PV, V port size

Nil	M5 x 0.8
Y	M6 x 1 (Option)

Piping specifications

Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)
CN	Without connector

**• Filter case**

**⚠ Caution**

1. The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkalinic), etc.

2. Do not expose it to direct sunlight.

**• Vacuum pressure setting**


**⚠ Caution**

Observe the following precautions when setting the vacuum pressure. Lightly turn the screwdriver with your fingertips. To prevent damage to the trimmer groove, do not use a screwdriver that has a large grip or a tip that does not fit in the trimmer groove.


**How to Set Vacuum Pressure**

**ZSE2**

- Pressure setting trimmer selects the ON pressure. Clockwise rotation increases high vacuum set point.

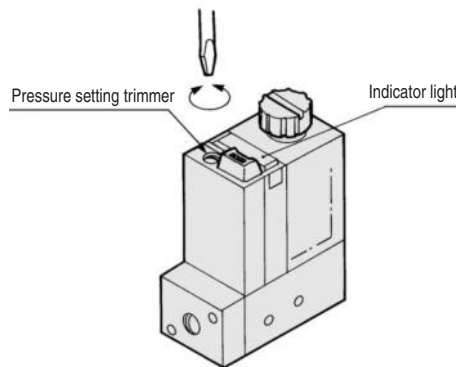

- When using the switch to confirm correct adsorption, the set pressure should be as low as possible. But not so low that a false confirmation signal is given when adsorption is incomplete.

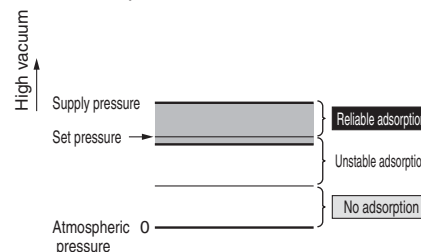

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.


# Series ZX

## Vacuum Pressure Switch Unit/Vacuum Pressure Switch: ZSE2-0X


### Guidelines for Use of Vacuum Pressure Switch Unit

#### System circuit for work adsorption

##### Ejector style

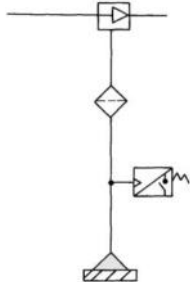

##### External vacuum supply style

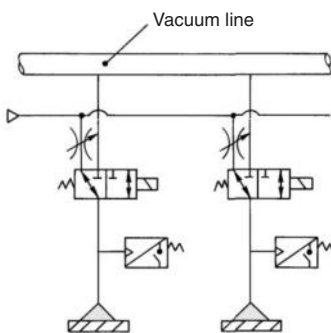


#### Set pressure

To use for picking verification, set a vacuum pressure that can pick the workpiece without fail. In some situations, the switch could turn ON even if the picking is not complete.

#### Using a small diameter picking nozzle

A nozzle that is used for picking electronic parts or small precision parts could be even smaller than  $\phi 2$ . If the nozzle diameter is approximately  $\phi 1$ , the pressure difference between ON and OFF becomes smaller, depending on the capacity of the ejector or the vacuum pump. In such a case, it is necessary to use **the picking verification switch ZSP1**, which provides a small hysteresis and high precision. On the other hand, an ejector with a large picking capacity will not be able to detect properly, so an ejector with an appropriate capacity must be used. Furthermore, it is necessary to stabilize the pressure of the ejector and the vacuum pump.


#### External vacuum supply system

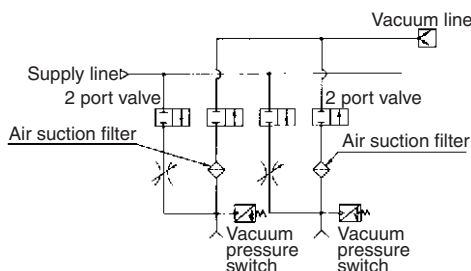

#### Using multiple pressure switches with a single vacuum source

If a single vacuum source is divided so that vacuum switches can be used on individual lines, the vacuum pressure might not come within the values set with the switches because the pressure of the vacuum source fluctuates depending on the number of picks and non-picks.




Especially, because pressure fluctuation exerts a great influence when picking with a small diameter nozzle, the countermeasures described below must be provided.

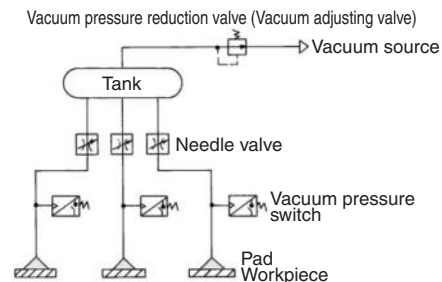

- Adjust the needle valve to reduce the pressure fluctuation between picking and non-picking.
- Stabilize the source pressure by providing a tank and a vacuum regulator.
- Provide a vacuum switch valve to individual lines. Thus, in case of an error, each valve can be turned OFF to minimize the influences on other pads.


### Vacuum Pressure Switch: ZSE2-0X-15

#### JIS Symbol

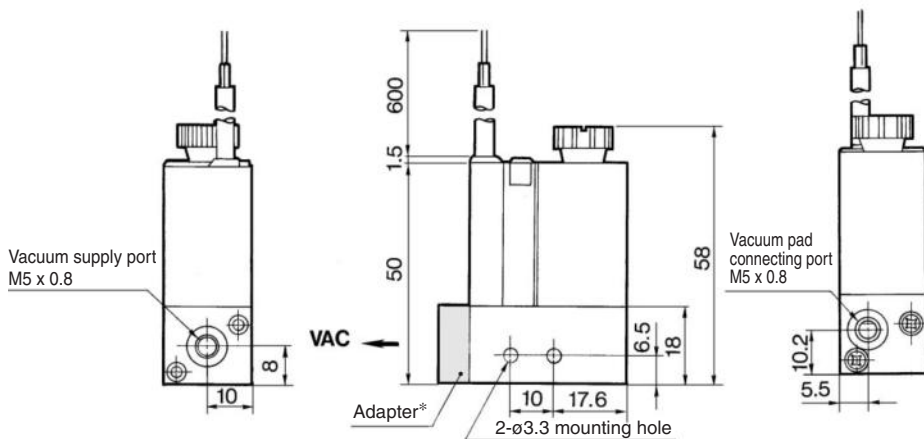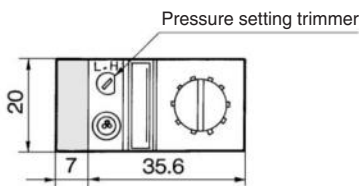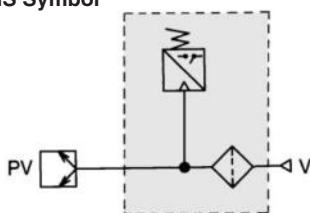

\* Remove the adapter when mounted on the ejector.

### Connector: ZSE2-0X-15C

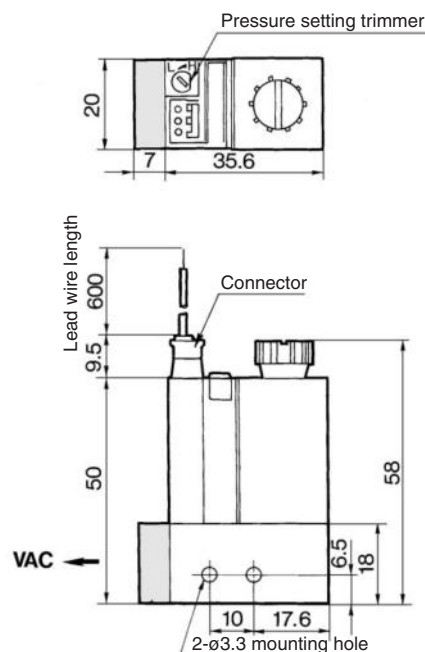

**Vacuum Pressure Switch Unit/Vacuum Pressure Switch: ZSE3-0X**

**Built-in failure prediction output function**


If the attainable amount of vacuum reduces due to a decrease in performance caused by clogging of the silencer of the vacuum system (ejectors), cracked pads, or the leakage of the vacuum pipes, this function quickly detects the abnormal condition and outputs a signal to halt the system.

**Two independent pressure settings possible**

This feature is well suited for applications that require 2 separate pressure outputs due to a change in the vacuum suction pad diameters, or for applications that require 2 pressure verifications to effect line changes in the positive pressure line.

**Comprehensive self diagnosis function**

- Overcurrent detection function
- Overvoltage detection function
- Data error

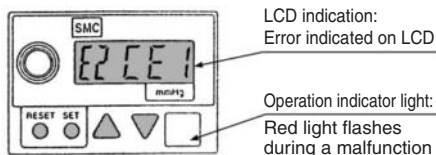

**Data saving function**

Even if the power is cut off, the settings are stored for 100,000 hours (approximately 11 years) in the exclusive IC (EEPROM).

**Filter case**

**⚠ Caution**


1. The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkalinic), etc.
2. Do not expose it to direct sunlight.

**Vacuum Pressure Switch**

Unit no.		ZSE3-0X
Fluid		Air, Non corrosive gas
Set pressure range		-101 to 0 kPa
Hysteresis	Hysteresis mode	Variable (3 digits or more)
	Window comparator mode	Fixed (3 digits)
Accuracy		±1% F.S. or less
Operating voltage		12 to 24 VDC (Ripple ±10% or less)
Port size		M5 x 0.8

- **Weight** — 50 g • **Indicator light** — Light at ON state
- **Current consumption** — 25 mA or less • **Operating temperature range** — 0 to 60°C
- **Max. operating pressure** — 0.2 MPa

**Wiring**

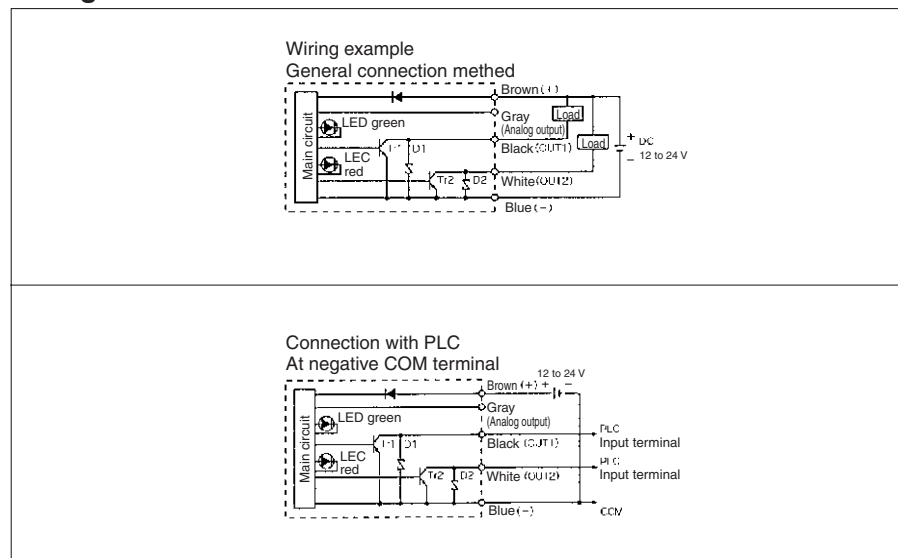

**How to Order**

**ZSE3 — 0X — 21**

**Output specifications**

Unit no.	Specifications
21	NPN open collector, double output Without analog output
22	NPN open collector, double output With analog output
23	NPN open collector 1 output/Trouble detection/ Without analog output
24	NPN open collector 1 output/Trouble detection/ With analog output

**Wiring specifications**

Wiring specification	Length
Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)
CN	Without connector

Note) Analog output is available only for grommet type.

**How to Set Vacuum Pressure**

Refer to "Best Pneumatics Vol.16".

**Guidelines for Use of Vacuum Pressure Switch Unit**

Refer to page 13-2-14.


- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX


## Vacuum Pressure Switch Unit/Vacuum Pressure Switch: ZSE3-0X

### Vacuum Pressure Switch/ZSE3-0X-21, 22, 23, 24

Grommet: ZSE3-0X-□

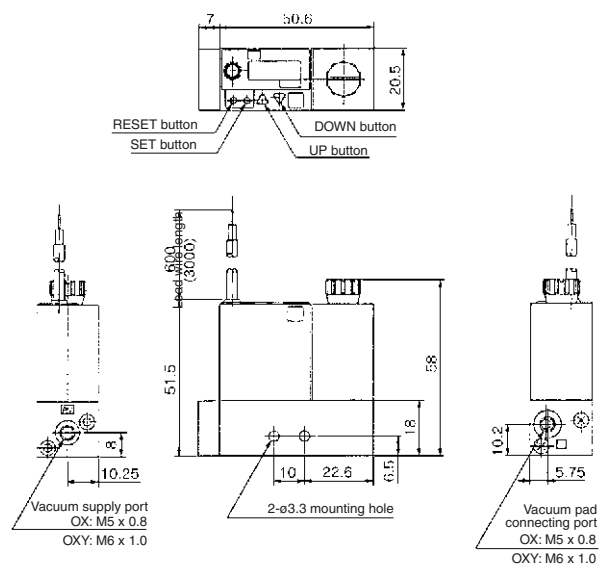


Connector: ZSE3-0X-□C

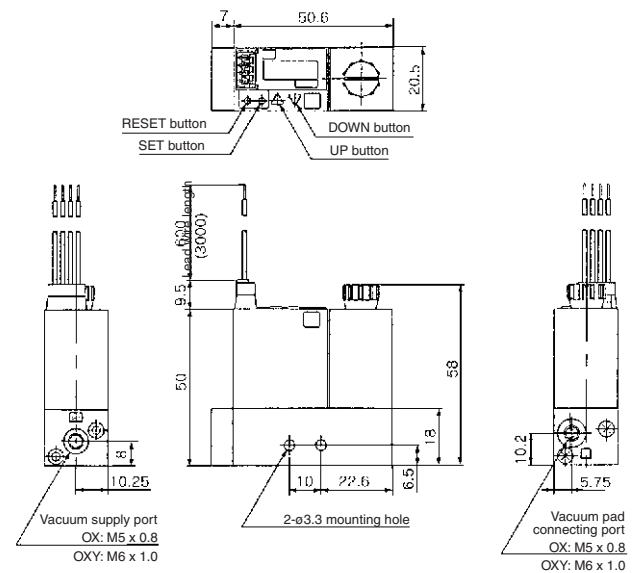

**Vacuum Pressure Switch Unit/Adsorption Confirmation Switch: ZSP1-S<sub>B</sub>**

**Small diameter nozzle/ø0.3 to ø1.2**

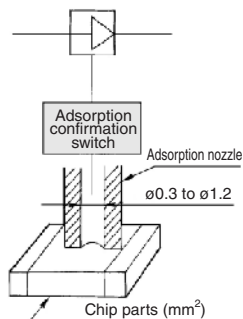

- With suction filter
- Improved wiring: connector type
- Uses a carrier diffusion semiconductor pressure sensor



**• Filter case**

**⚠ Caution**

- The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkalinic), etc.
- Do not expose it to direct sunlight.

**• Other caution**

**⚠ Caution**

It might not be possible to successfully pick a workpiece if a picking nozzle or a picking pad that is out of the applicable range is used.

**Adsorption Confirmation Switch Specifications**

Unit no.	ZSP1-S	ZSP1-B
Fluid	Air	
Operating pressure range	-20 kPa to 101 kPa	
Applicable adsorption nozzle dia.	ø0.3 to ø0.7 (Refer to Graph (1).)	ø0.5 to ø1.2 (Refer to Graph (2).)
Hysteresis	0.5 kPa	
Internal orifice	ø0.5	ø0.8


- **Weight**—62 g • **Voltage**—12 to 24 VDC (Ripple ±10% or less) • **Output**—Open collector 30 V/80 mA
- **Indicator light**—Light at ON state • **Current consumption**—17 mA (24 VDC, at ON state)
- **Operating temperature range**—0 to 60°C • **Port size**—M5 x 0.8

Note) If not operated within the specified range of pressure and temperature, trouble may result.


**Applicable Adsorption Nozzle**

Supply pressure and nozzle diameter are expressed in the graphs below.


**Graph (1)/ZSP1-S**

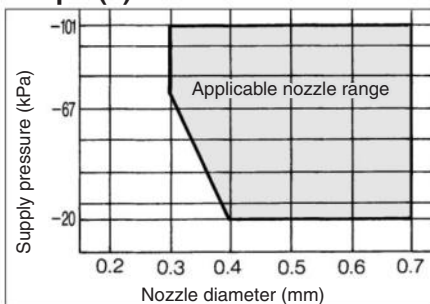

**Graph (2)/ZSP1-B**

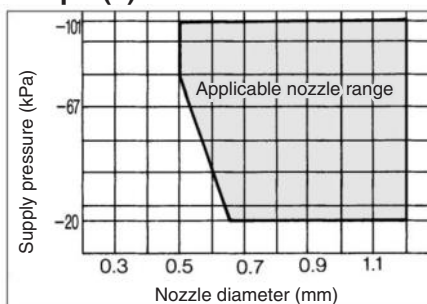

**Pneumatic Circuit and Principle**

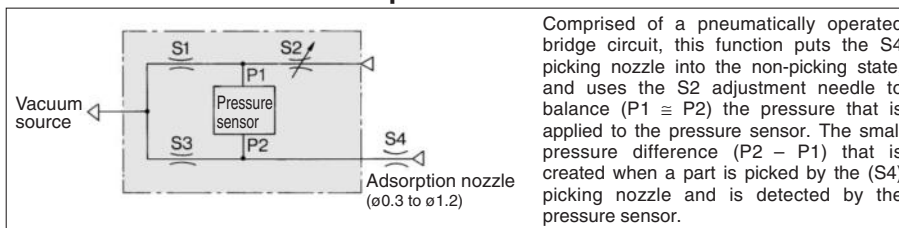

\* Wiring is the same as ZSE2.

**How to Order**

**ZSP1-S 0X 15**

Model

Symbol	Applicable model
S	Applicable nozzle dia. ø0.3 to ø0.7
B	Applicable nozzle dia. ø0.5 to ø1.2


PV, V port size

Nil	M5 x 0.8
Y	M6 x 1 (Option)

Piping specifications

Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)

**Circuit and Wiring**

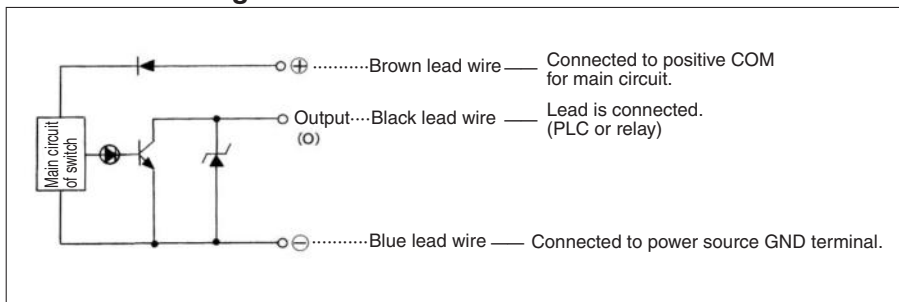

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ

Misc.




# Series ZX

## Vacuum Pressure Switch Unit/Adsorption Confirmation Switch: ZSP1-S<sub>B</sub>


### Hysteresis

Hysteresis is the difference in pressure when the output signal is ON and OFF. The pressure to be set is the ON pressure.

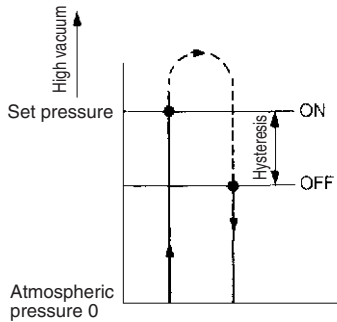


### How to Set Adsorption Confirmation Needle

1. Apply a vacuum and current. Turn the adjusting needle clockwise until it stops, thus fully closing the needle valve.
2. Without attaching a workpiece to the picking nozzle, turn the adjusting needle counterclockwise and verify the position in which the indicator light turns ON.
3. From the state described in step w, turn back the adjusting needle clockwise 1/4 turn to 1 full turn.




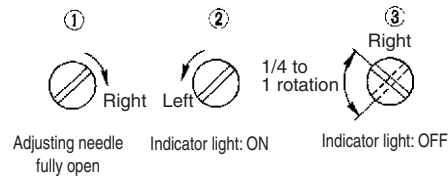


4. Pick a workpiece with the nozzle and readjust the adjusting needle so that the indicator light turns ON when the nozzle has picked the workpiece successfully.

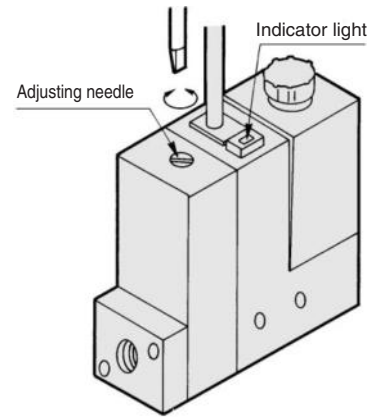

## Adsorption Confirmation Switch: ZSP1-□0X-15

### Connector: ZSP1-□0X-15

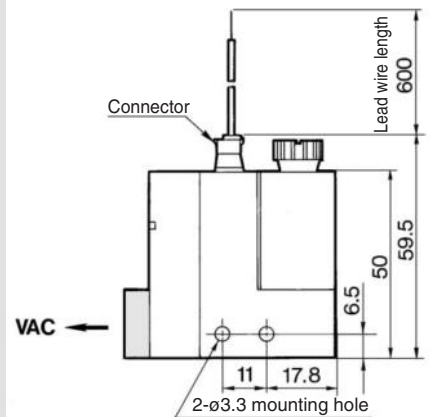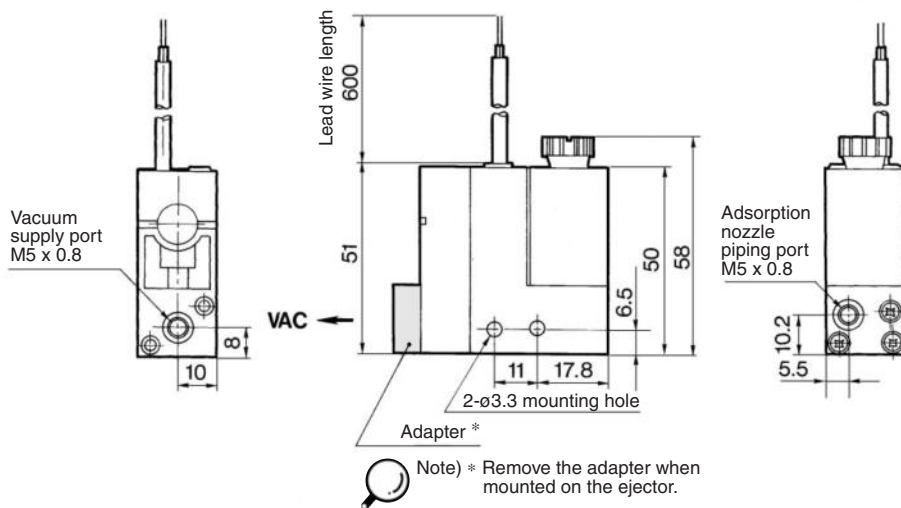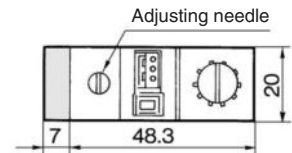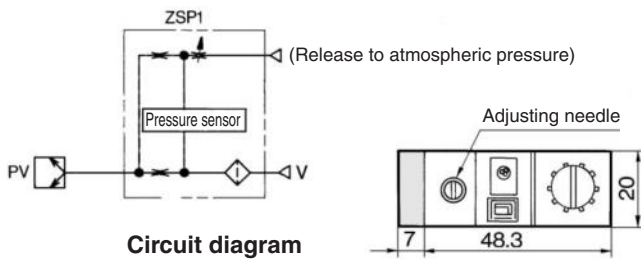


Note) \* Remove the adapter when mounted on the ejector.

**Without Valve Unit**

Configuration and combination  
**Ejector unit** + **Vacuum switch (ZSE2)**  
**Adsorption confirmation switch (ZSP1)**  
**Filter unit (F)**


Model  
 ZX1□□□□ — E□□

**Vacuum switch (ZSE2)**  
 ZX1□□□□-E□

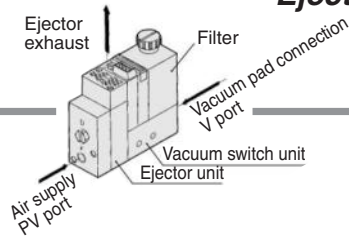


**Circuit diagram**






(Circuits other than those with vacuum switch are shown as below.)

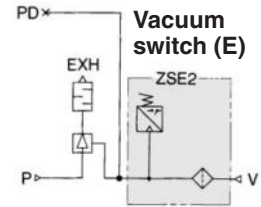

**Adsorption confirmation switch (P)**

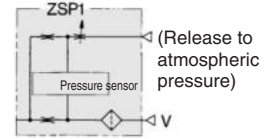



**Filter unit (F)**

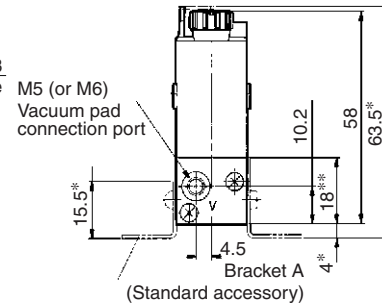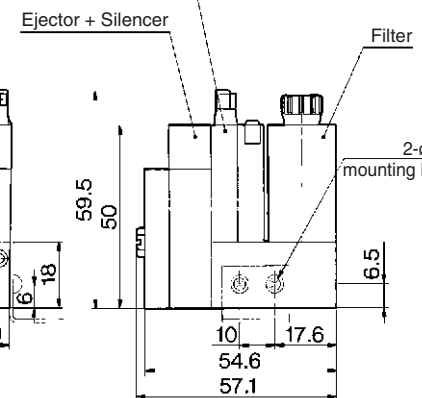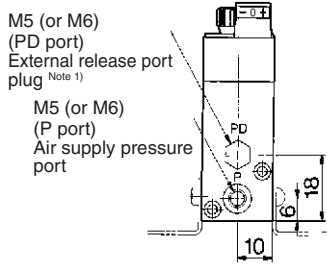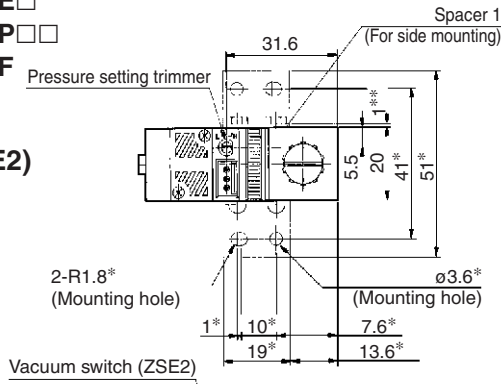



Note 1) Remove the plug at external release.

Note 2) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

**Adsorption confirmation switch (ZSP1)**  
 ZX1□□□□-P□□

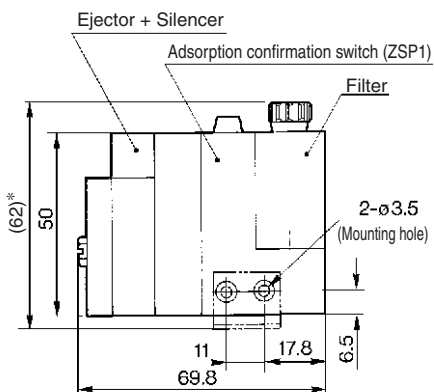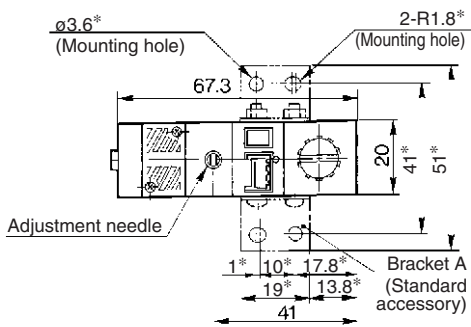

**Filter unit (F)**  
 ZX1□□□□-F

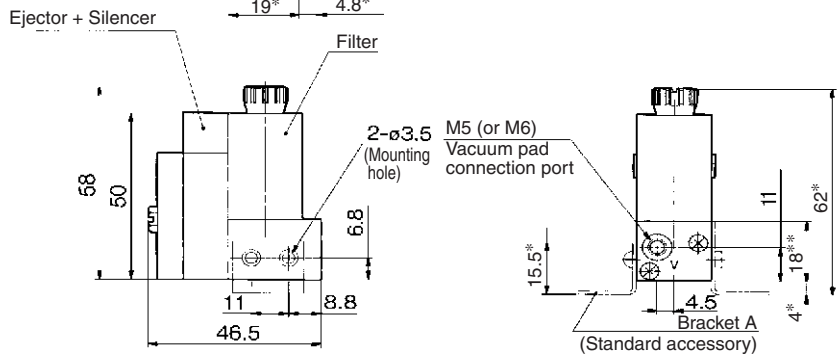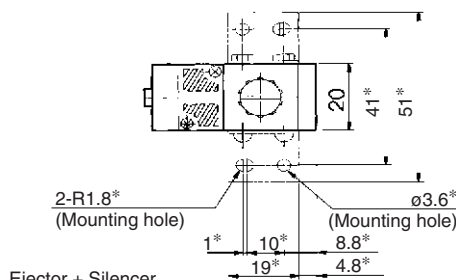

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX

## Valve Unit: Type K1

Configuration and combination

Ejector unit + Valve unit (K1) +

- Vacuum switch (ZSE2)
- Vacuum switch (ZSE3)
- Adsorption confirmation switch (ZSP1)
- Filter unit (F)
- Without switch and filter



Model

ZX1□□□□ — K1□□□□ — P□□


- E□
- D□
- P□□
- F□
- Nil

### Vacuum switch (ZSE2)


ZX1□□□-K1□□□□-E□

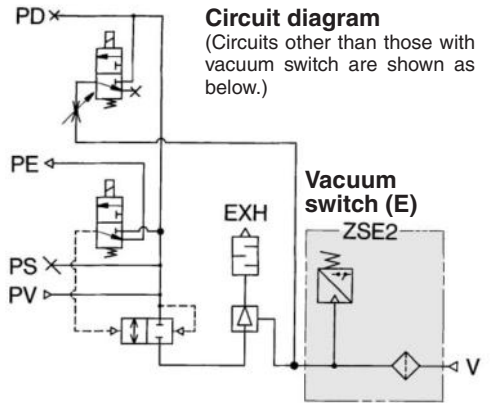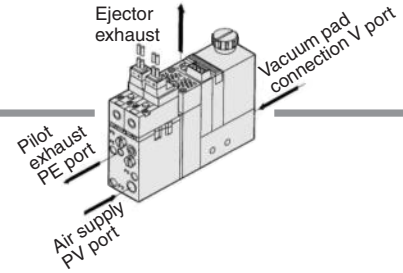


### Adsorption confirmation switch (P)

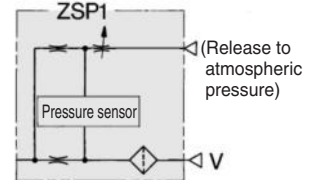

### Filter unit (F)




### Without switch and filter

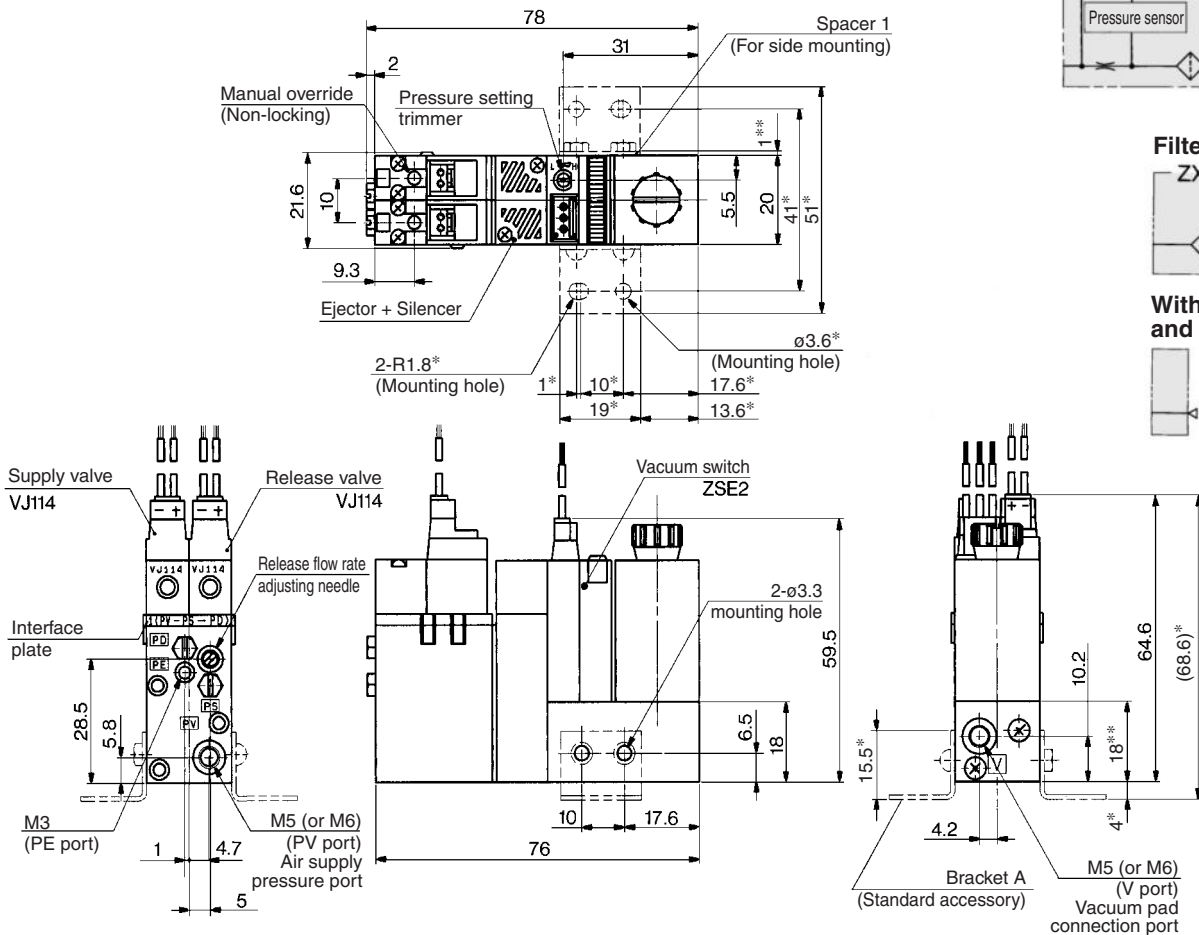


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

**Vacuum switch (ZSE3)**  
ZX1□□□-K1□□□-D□

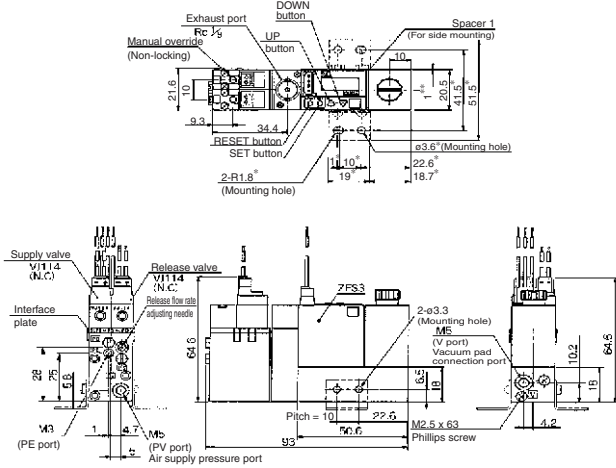


**Adsorption confirmation switch (ZSP1)**  
ZX1□□□-K1□□□□-P□□

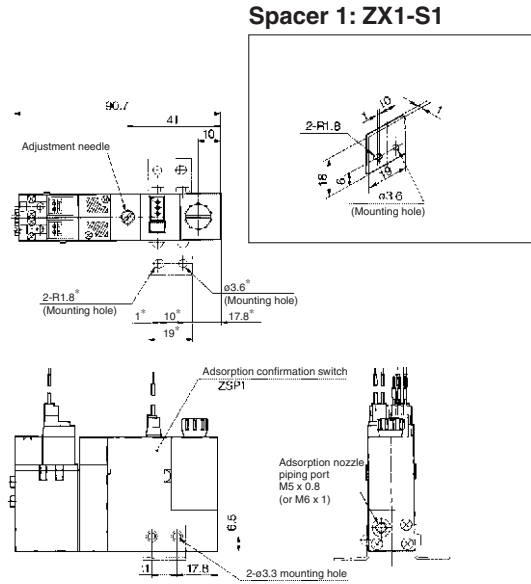


- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

**Filter unit**  
ZX1□□□-K1□□□□-F

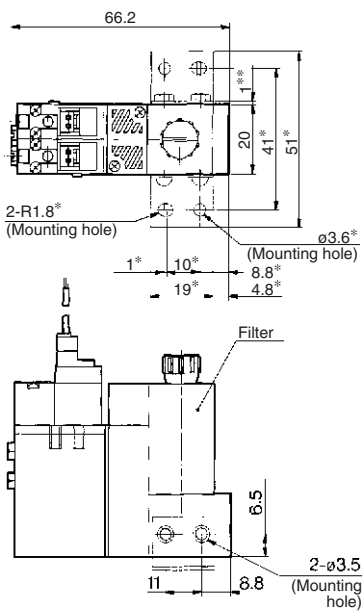

**Without switch and filter**  
ZX1□□□-K1□□□□

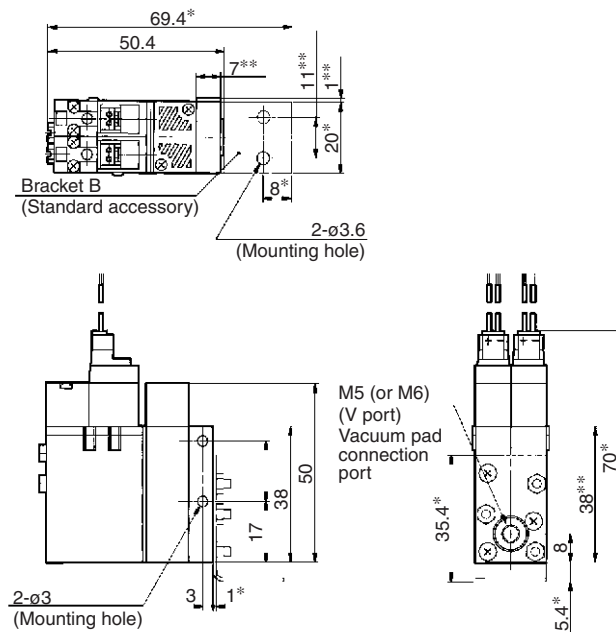



# Series ZX

## Valve Unit: Type K3


Configuration and combination Ejector unit + Valve unit (K3) +	Vacuum switch (ZSE2)
	Adsorption confirmation switch (ZSP1)
	Filter unit (F)
	Without switch and filter

**Model**  
**ZX1**□□□ — **K3**□□□□ — **P**□□  
**E**□  
**F**  
**Nil**


**Vacuum switch (ZSE2)**  
**ZX1**□□□-**K3**□□□-**E**□

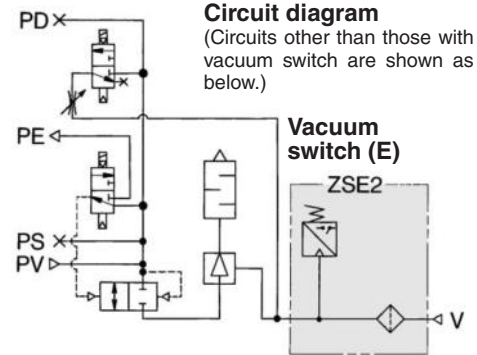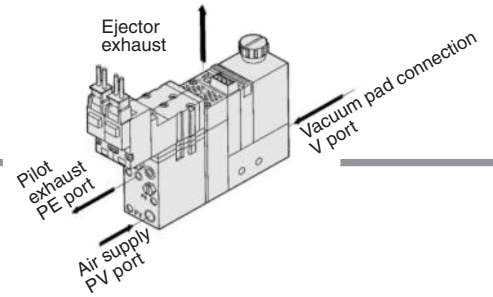



### Adsorption confirmation switch (P)

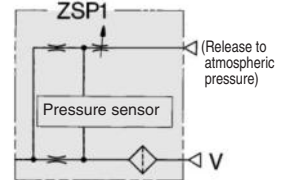

### Filter unit (F)




### Without switch and filter

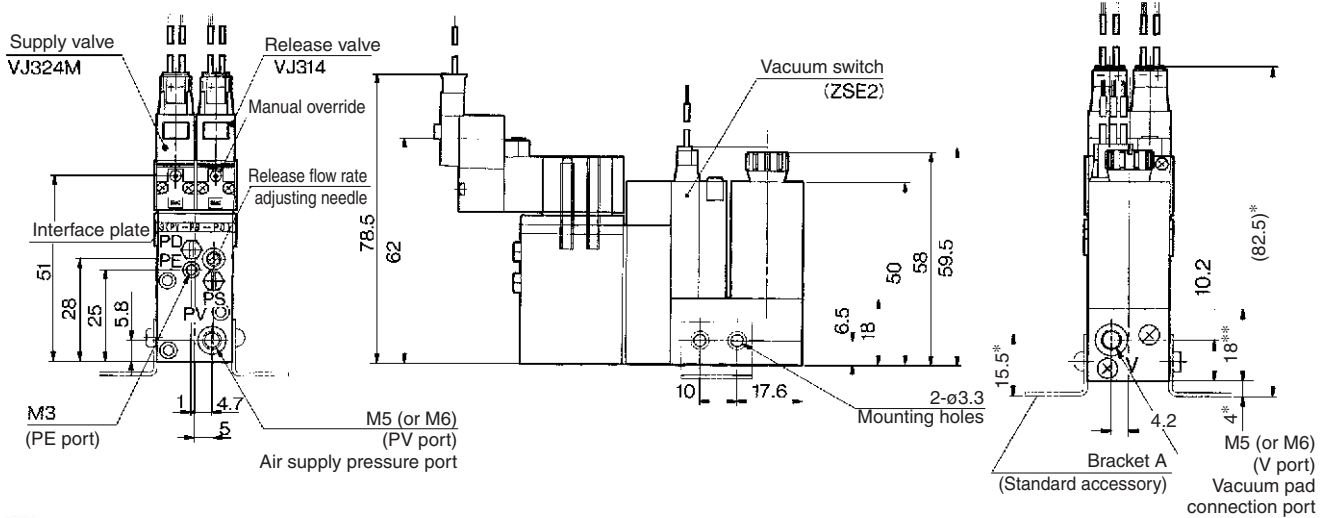
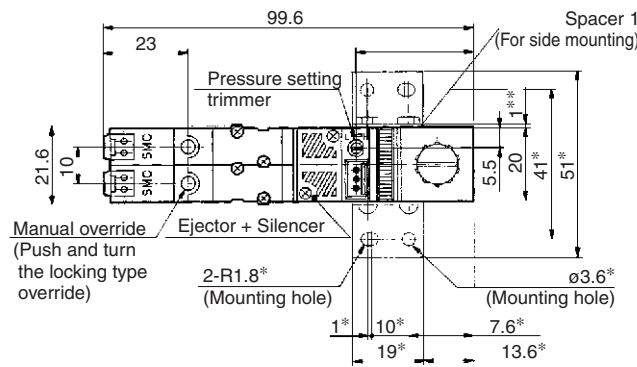


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.


**Adsorption confirmation switch (ZSP1)**  
ZX1□□□-K3□□□□-P□□

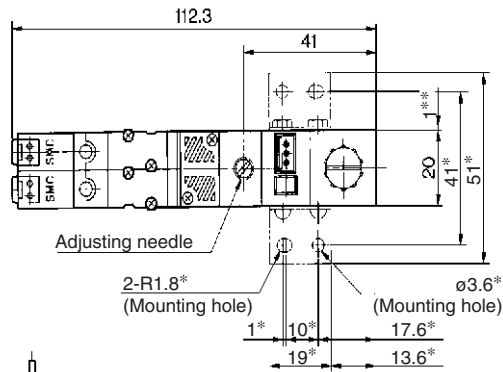


Spacer 1: ZX1-S1

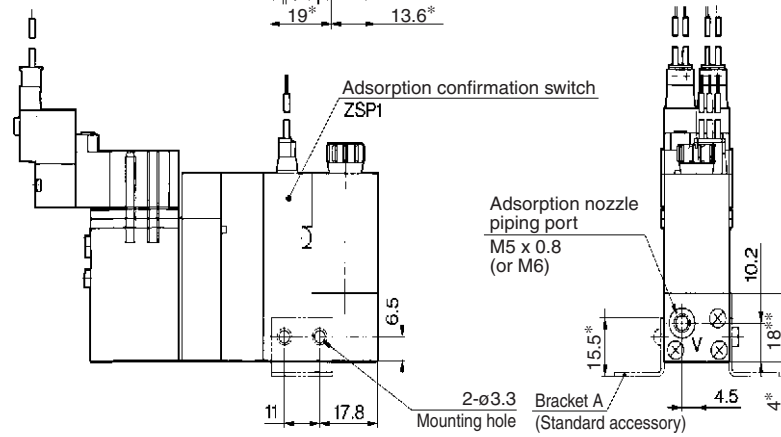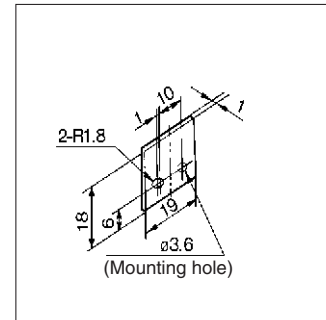

**Filter unit (F)**  
ZX□□□-K3□□□□-F

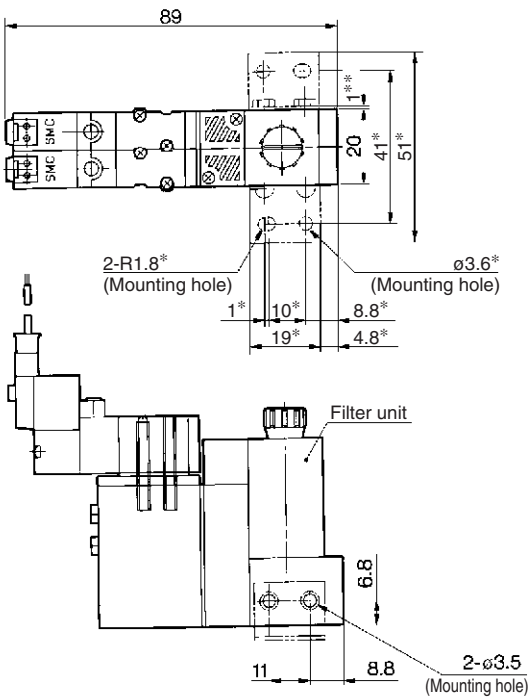


**Without switch and filter**  
ZX1□□□-K3□□□□

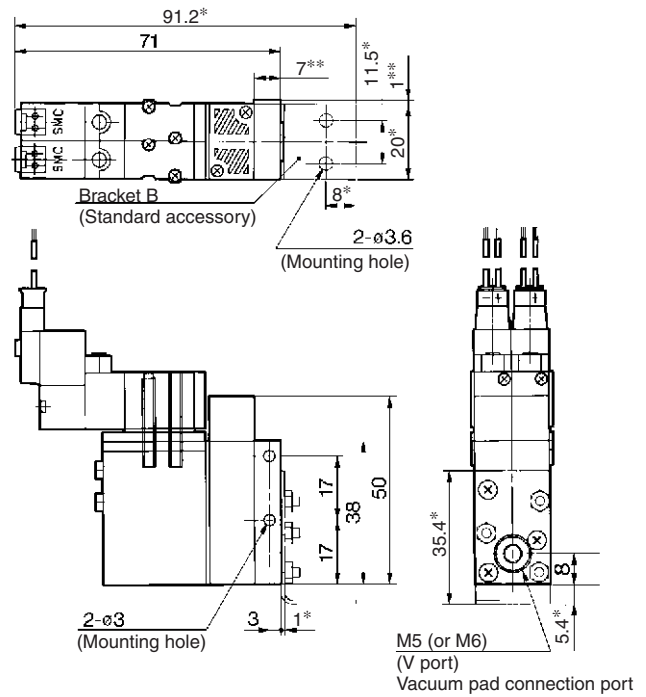

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.


# Series ZX

## Valve Unit: Type K6





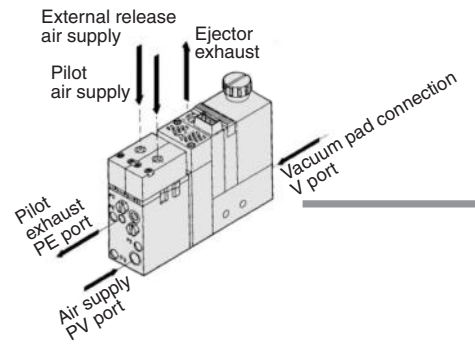


		Vacuum switch (ZSE2)
Configuration and combination		Adsorption confirmation switch (ZSP1)
Ejector unit +	Valve unit (K6) +	Filter unit (F)
		Without switch and filter

Model  
**ZX1**□□□ — **K6** — **E**□  
**P**□□  
**F**  
**Nil**

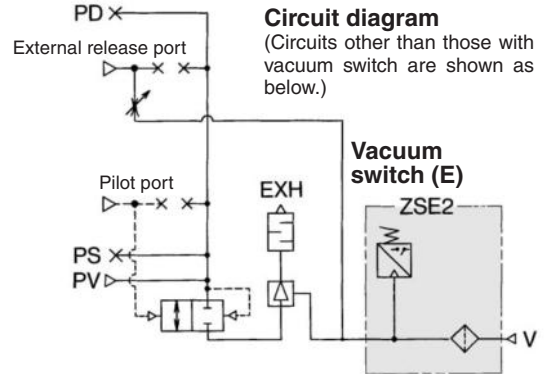


**Vacuum switch (ZSE2)**  
 ZX1□□□ - K6- E□

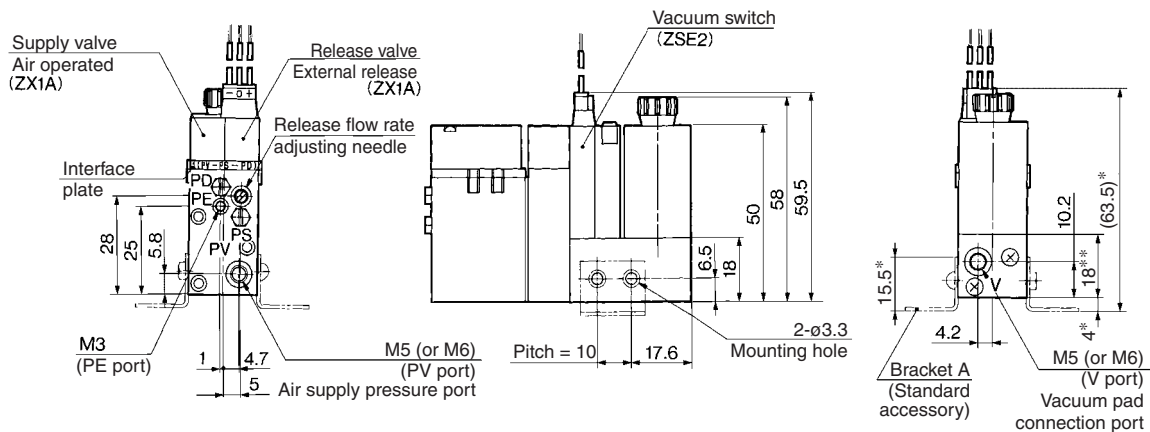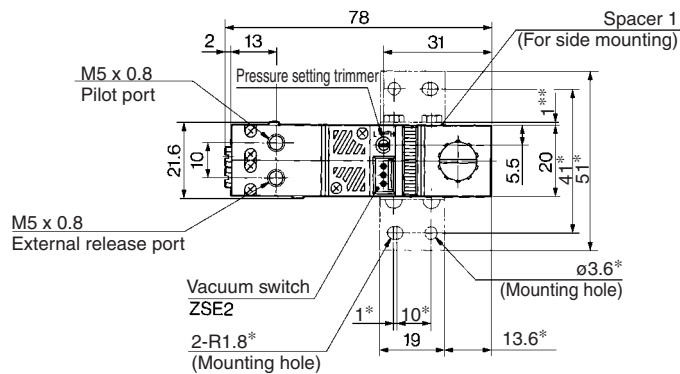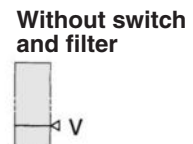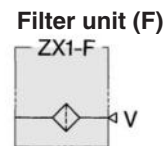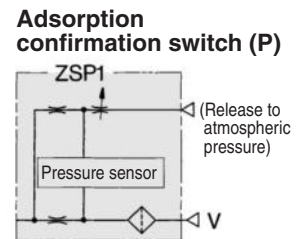



Note) Dimensions \*: For mounting bracket B \*\*: For mounting spacer 2.

Adsorption confirmation switch (ZSP1)

ZX1□□□-K6-P□□

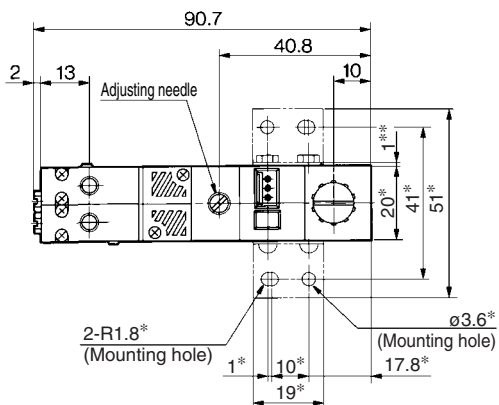


Spacer 1: ZX1-S1

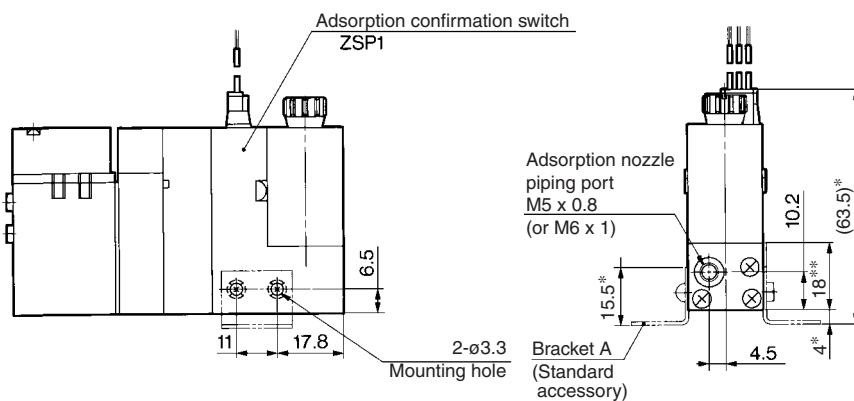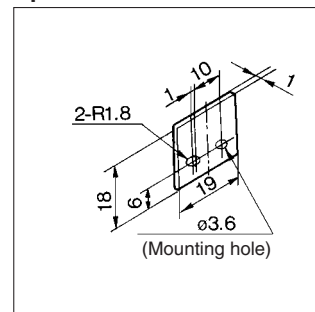


Filter unit (F)

ZX1-□□□-K6-F

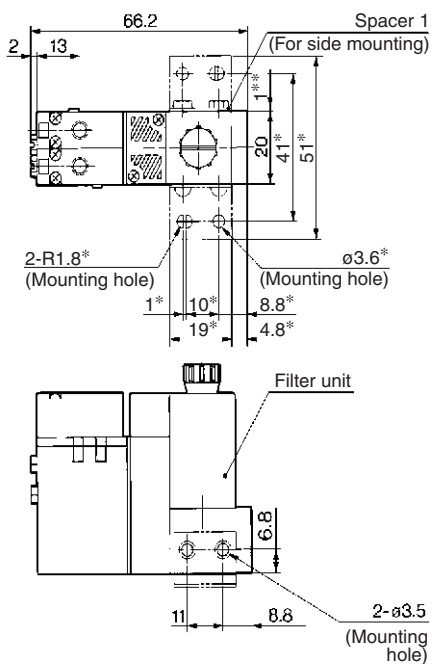

Without switch and filter

ZX1□□□-K6

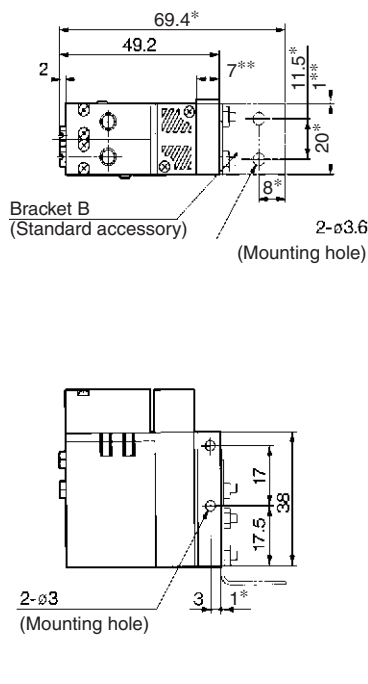

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.



# Series ZX

## Valve Unit: Type K8

Configuration and combination

Ejector unit + Valve unit (K8) +

Vacuum switch (ZSE2)
Adsorption confirmation switch (ZSP1)
Filter unit (F)
Without switch and filter

Model

ZX1□□□

— K8 —

E□



P□□

F

Nil

Vacuum switch (ZSE2)


ZX1□□□-K8-E□

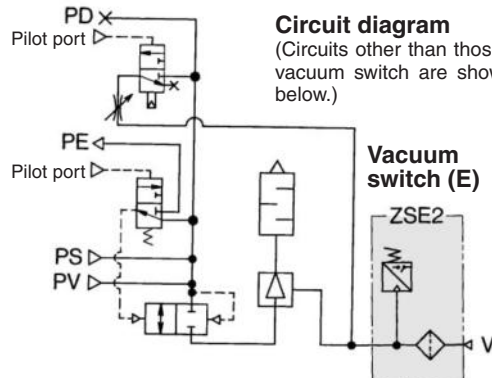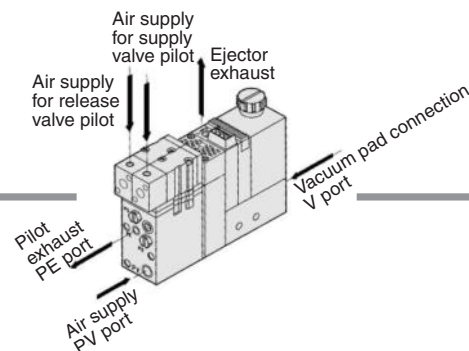


**Circuit diagram**

(Circuits other than those with vacuum switch are shown as below.)


**Vacuum switch (E)**

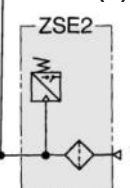



**Adsorption confirmation switch (P)**

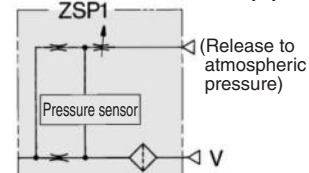

**Filter unit (F)**




**Without switch and filter**

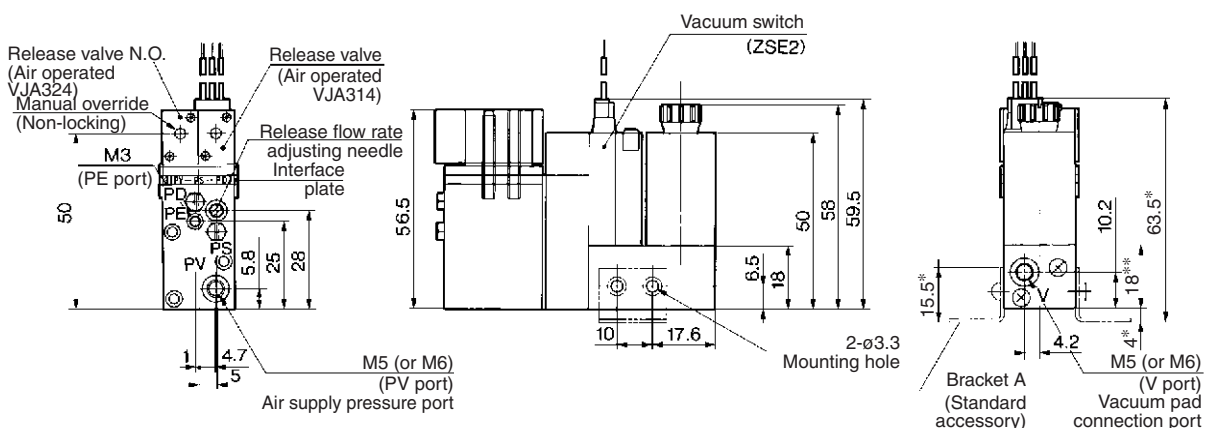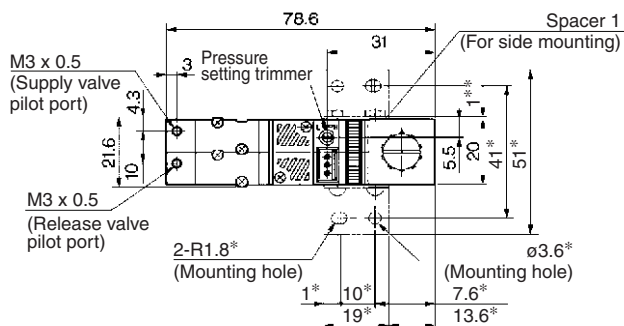



Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

**Adsorption confirmation switch (ZSP1)**

ZX1□□□-K8-P□□


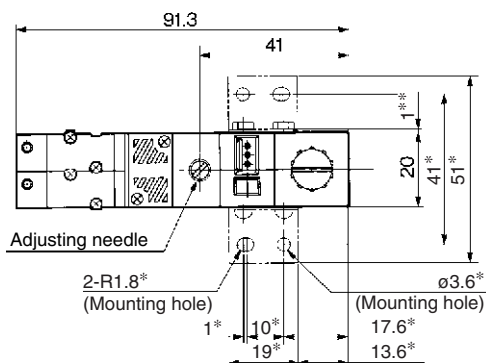


**Spacer 1: ZX1-S1**

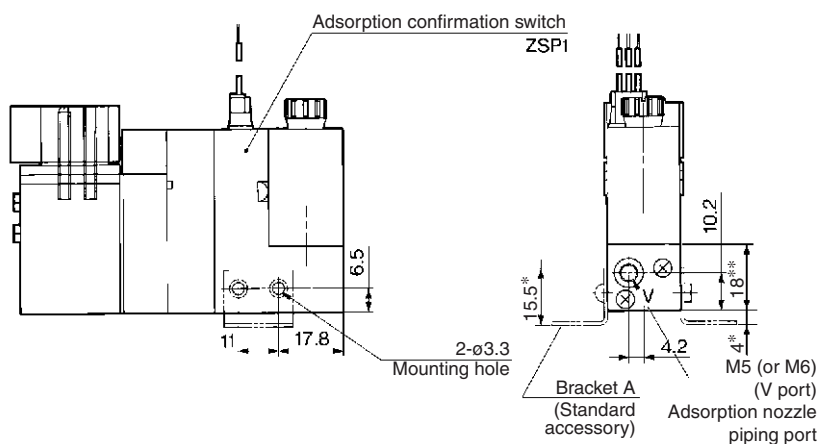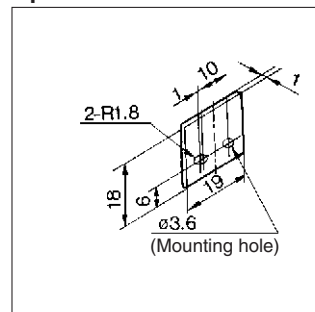



**Filter unit (F)**

ZX1□□□-K8-F

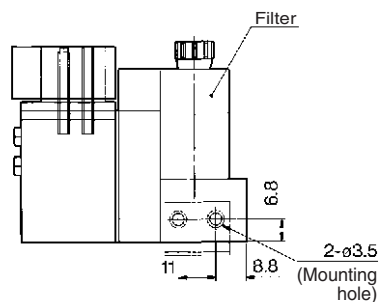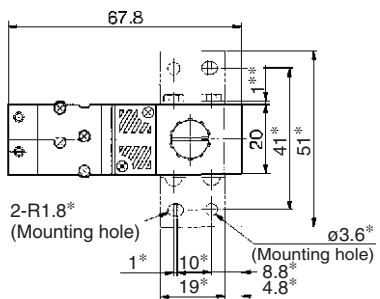

**Without switch and filter**


ZX1□□□-K8

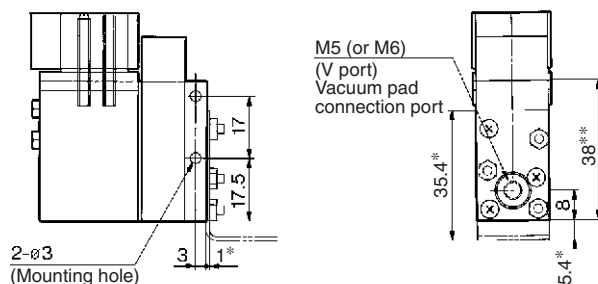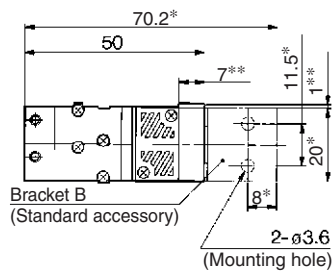

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.


# Series ZX

## Valve Unit: Type J1





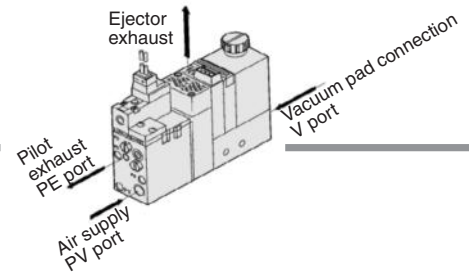


Configuration and combination		Vacuum switch (ZSE2)
Ejector unit	+ Valve unit (J1)	Adsorption confirmation switch (ZSP1)
	+ Filter unit (F)	Without switch and filter

**Model**  
 ZX1□□□ — J1□□□□ — P□□  
**E** □  
**F**  
 Nil

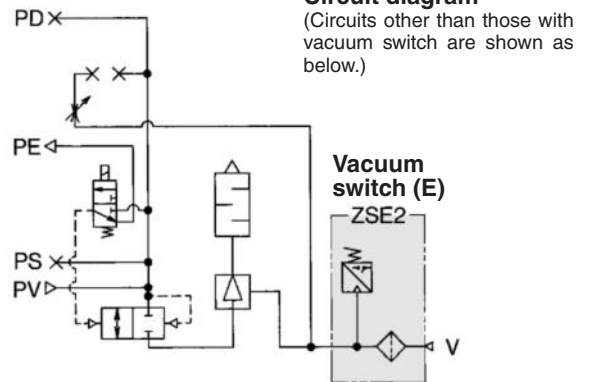


**Vacuum switch (ZSE2)**  
 ZX1□□□-J1□□□□-E□

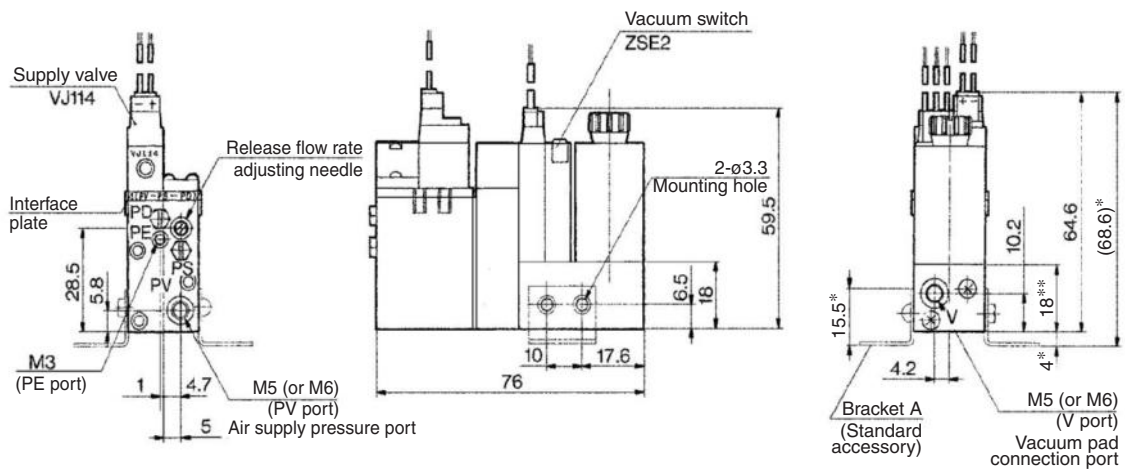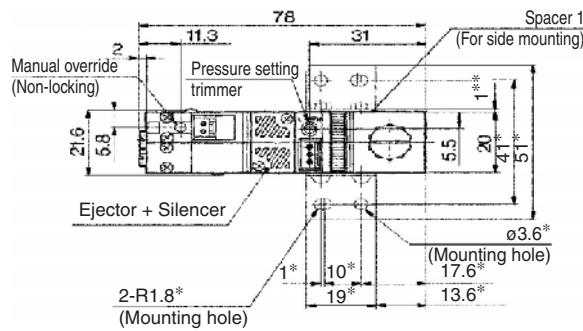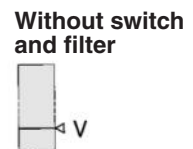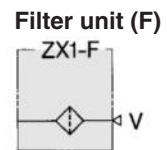
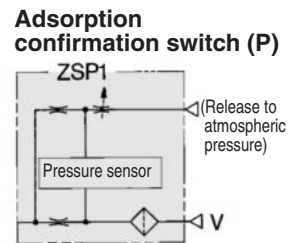


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.



**Adsorption confirmation switch (ZSP1)**  
ZX1□□-J1□□□□-P□□

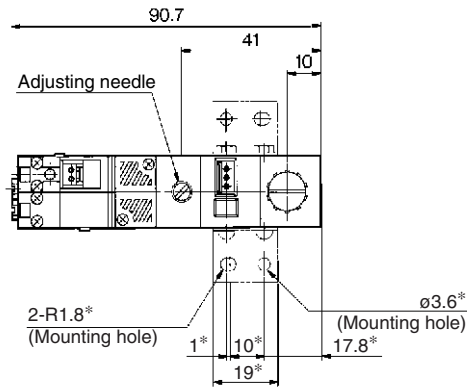



**Spacer 1: ZX1-S1**

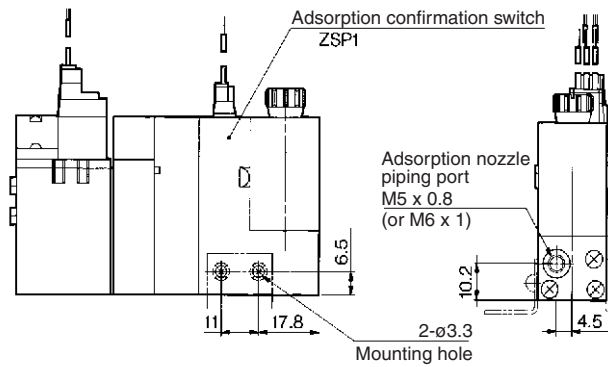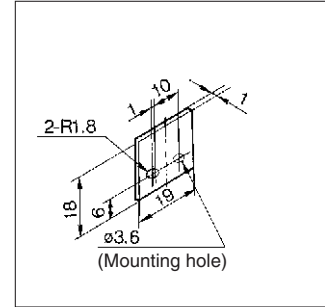

**Filter unit (F)**  
ZX1□□□-J1□□□□-F

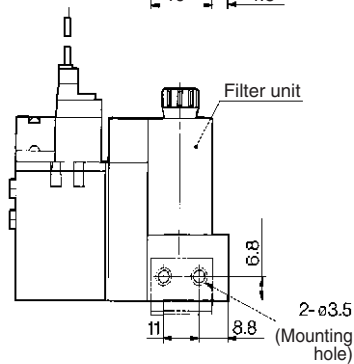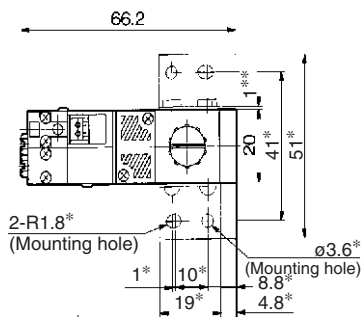


**Without switch and filter**  
ZX1□□□-J1□□□□

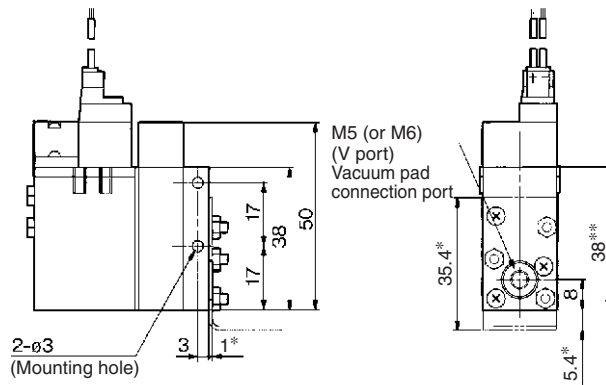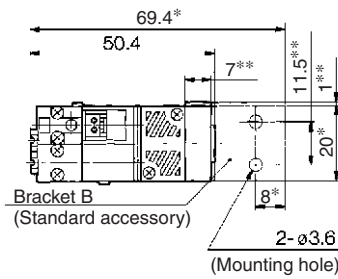

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.


# Series ZX

## Valve Unit: Type J2





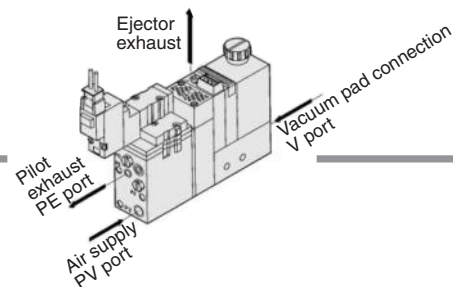


Configuration and combination		Vacuum switch (ZSE2)
Ejector unit + Valve unit (J2) +		Adsorption confirmation switch (ZSP1)
		Filter unit (F)
		Without switch and filter

**Model**  
**ZX1**□□□□ — **J2**□□□□ — **P**□□  
**F**  
**Nil**

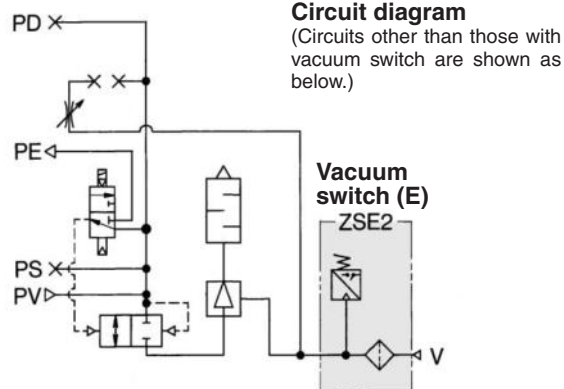


**Vacuum switch (ZSE2)**  
**ZX1**□□□□-**J2**□□□□□□-**E**□□

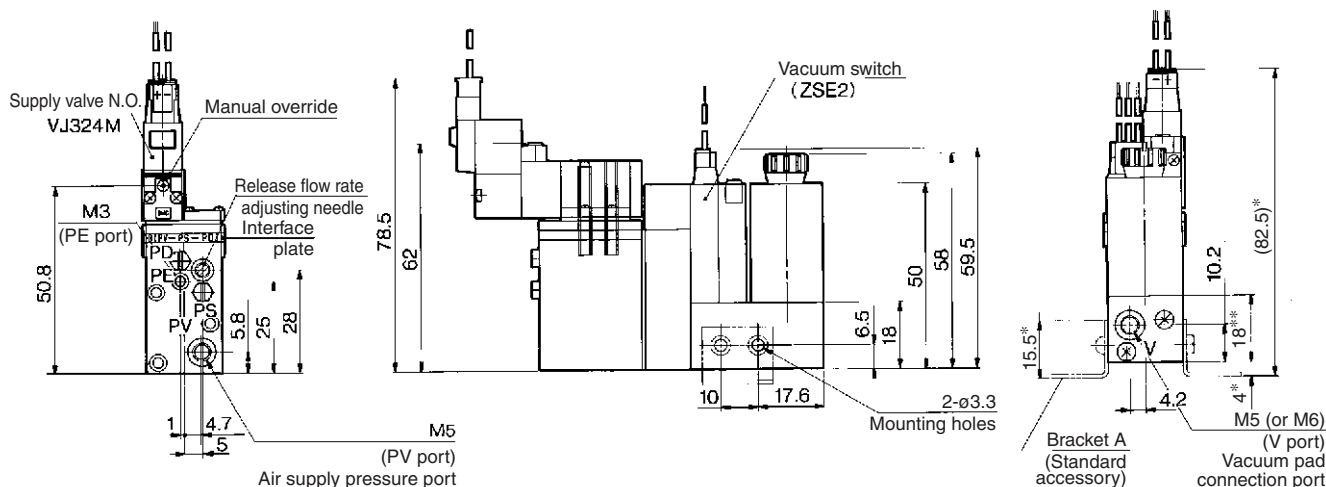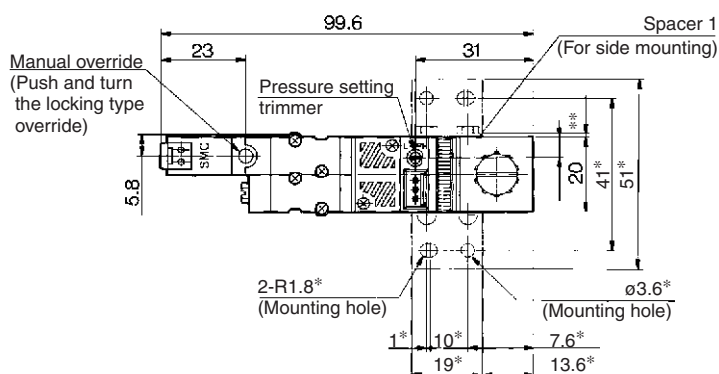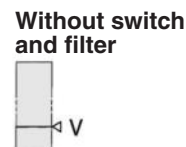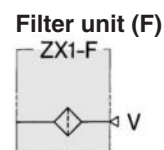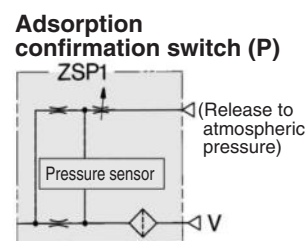


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

**Adsorption confirmation switch (ZSP1)**

ZX1□□□-J2□□□□-P□□

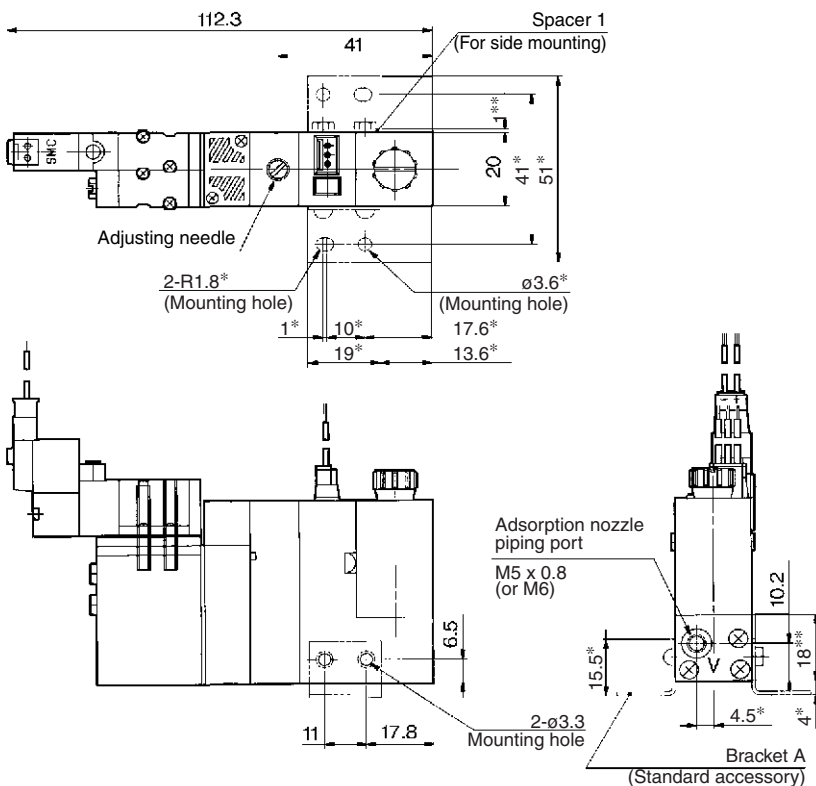


Spacer 1: ZX1-S1

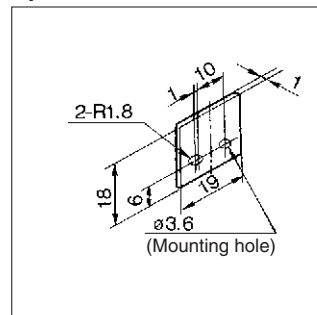


**Filter unit (F)**

ZX1□□□-J2□□□□-F

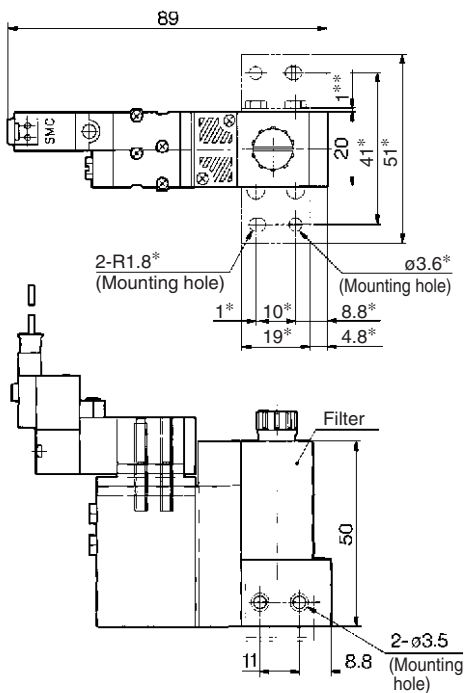

**Without switch and filter**



ZX1□□□-J2□□□□

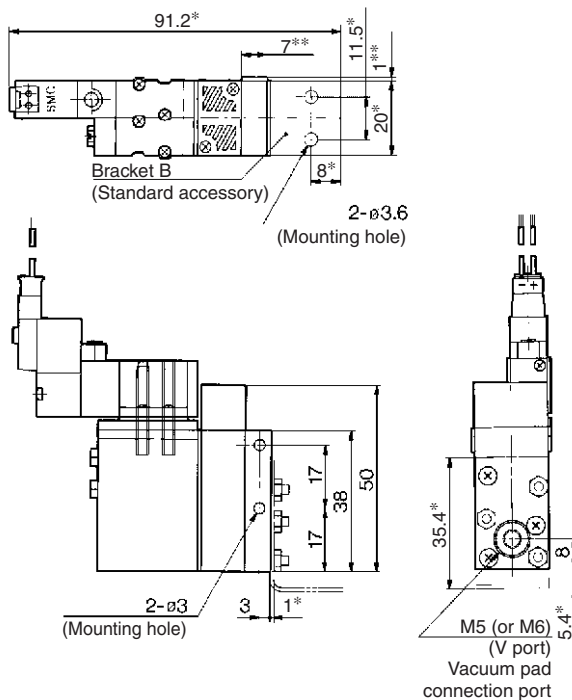

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX

## Ejector System/Manifold Specifications

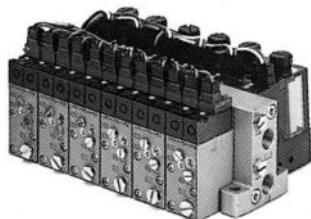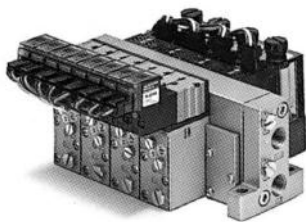

### Function

Max. number of units	8 units
Function	Supply air from PV port of manifold for common supply.

### When Using Individual Spacer R1

Function	Separates air supply from manifold and allows units to be used one by one.
----------	--

### Standard Specifications

Port	Port size	Function
PV port	Rc 1/8	Air supply
EXH port	Rc 1/8	Common exhaust
Weight	1 station: 73 g (50 g per additional station)	

Note 1) PD port: Blank

Note 2) Exhaust air from both sides for 4 or more stations of ZX1103 manifold.

### Air Supply

Supply port location	Manifold Port	Left side		Right side	
		PV	PS	PV	PS
L (Left)		○	●	●	●
R (Right)		●	●	○	●
B (Both sides)		○	●	○	●

○: Supply ●: Plugged (EXH port is released to atmospheric pressure.)

Note) Blank plugs are attached to all ports of each valve unit.



### Manifold Specification Sheet

When ordering the manifold type of series ZX, use the manifold specification sheet on page 13-14-18.

### When Using Individual Spacer R1

It functions as a single unit. Air is supplied from PV port of valve unit. PE port is released to atmospheric pressure. Other ports are plugged.  
 Note) When using individual spacer R1, other valves should be provided with dummy spacer R16. Functions are the same with the standard; common supply from the manifold.

## How to Order Manifold

Indicate the vacuum module, blank plate and individual spacer below the manifold base part number.

### <Manifold base>

ZZX1 06 — [ ] — R

Stations	
01	1
02	2
⋮	⋮
08	8

### Thread of supply and exhaust valve

Nil	Rc
F	G
T	NPTF

(Ordering example)

ZZX106-R.....1 pc. (Manifold base)

\*ZX1101-K15LZ-EC.....5 pcs. (Vacuum single unit)

\*ZX1-BM1.....1 pc. (Blank plate)

• First station from the valve side

### Supply port location

R	Right side (PV port on the right side)
L	Left side (PV port on the left side)
B	Both sides (PV port on both sides)

\*1 Viewed from the front side of valve unit, confirm the port location on the right and/or left side.

\*2 EXH ports are released to atmospheric pressure in both sides. Plugs are always attached to PD ports and all ports of the valve unit.

### <Individual spacer>

ZX1 — R1 — 1

### Arrangement

(First station from the right end of the valve side is station 1.)

Nil	All stations
1	Station 1 only
⋮	⋮
8	Station 8 only

\*When spacers are mounted alternately, specify them together.

(Ordering example)

If installed on station 1 and station 3:

ZZX106-R .....1 pc.

\*ZX1101-K15LZ-EL .....6 pcs.


\*ZX1-R1-1

\*ZX1-R1-3

\*ZX1-R16 .....4 pcs.


Manifold/System Circuit Example

When not using individual air pressure supply

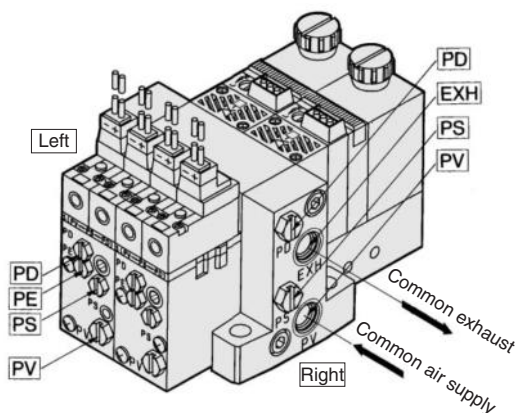


PV: Air supply port  
PS: Supply valve supply pressure port  
PD: Air supply port for release valve  
PE: Pilot exhaust port  
EXH: Common exhaust port


When using individual air pressure supply

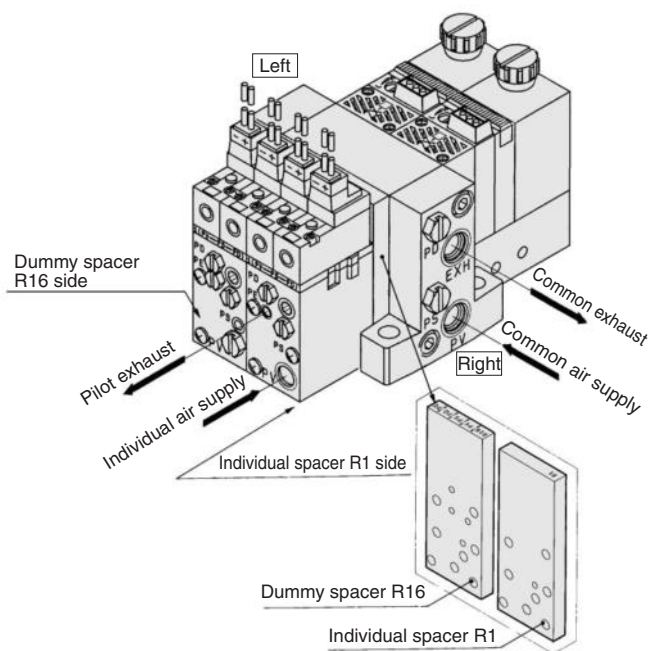

<System circuit example>

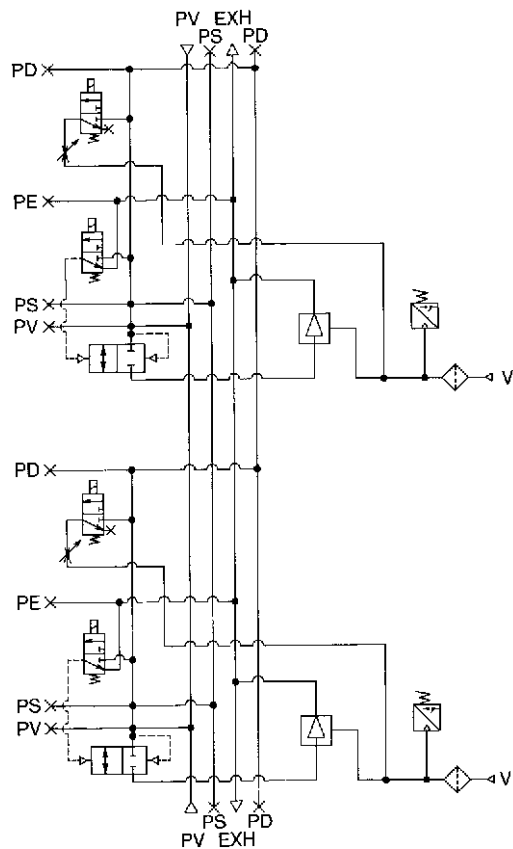

<System circuit example>

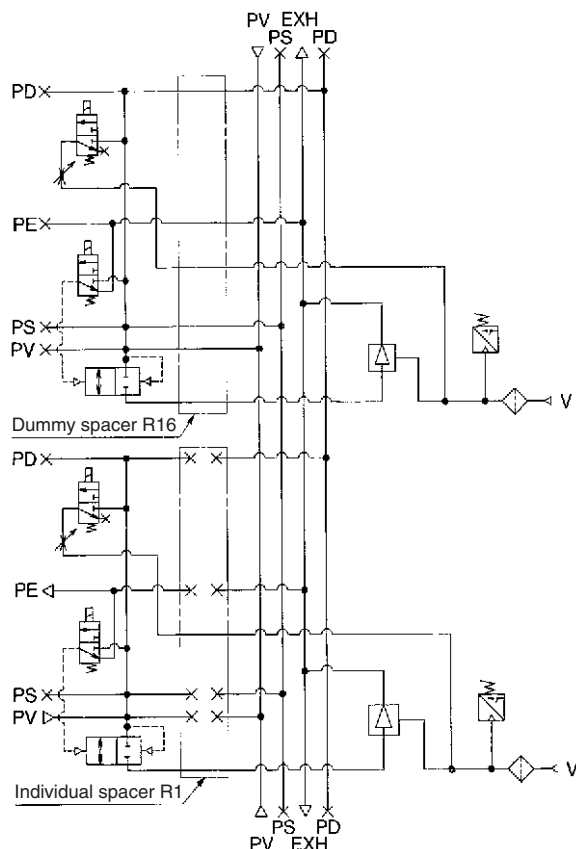

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU





AMJ

Misc.



# Series ZX

## Ejector System Manifold

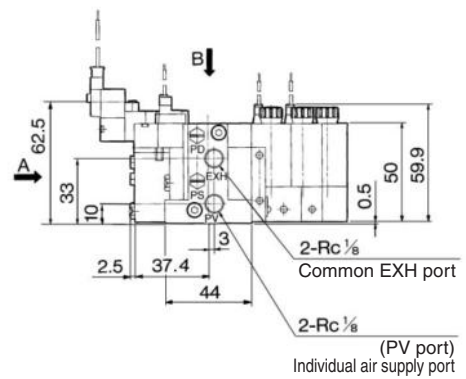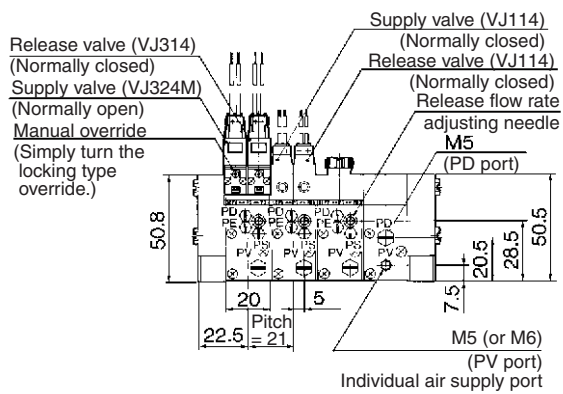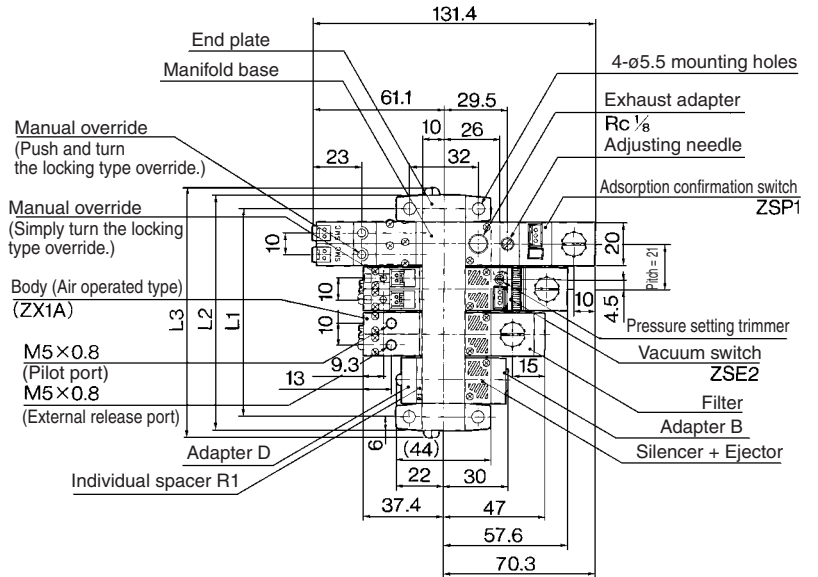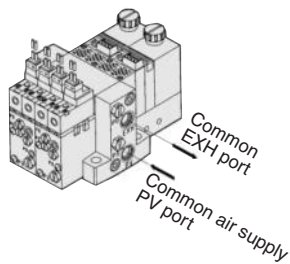


(mm)



Symbol	Stations	1	2	3	4	5	6	7	8
L1		33	54	75	96	117	138	159	180
L2		45	66	87	108	129	150	171	192
L3		50	71	92	113	134	155	176	197

(In the case of individual air pressure supply)

**B cross section**

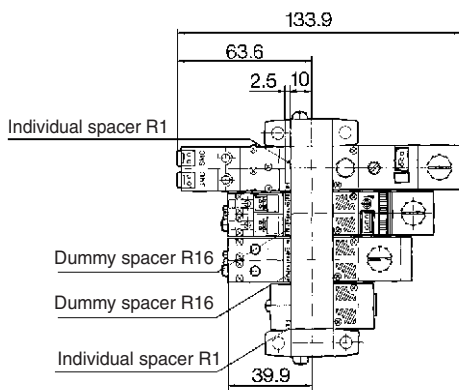


**A cross section**

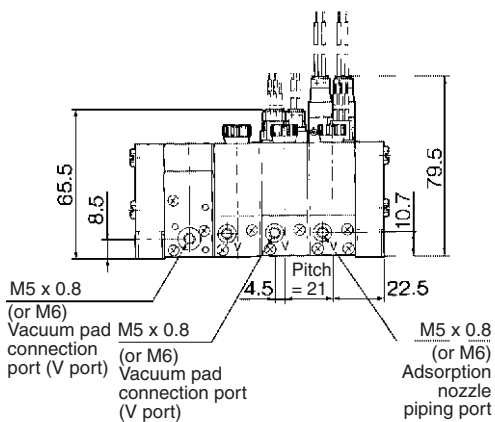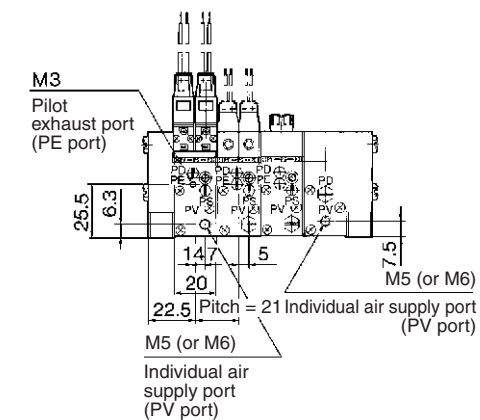


System circuit example

(Standard)

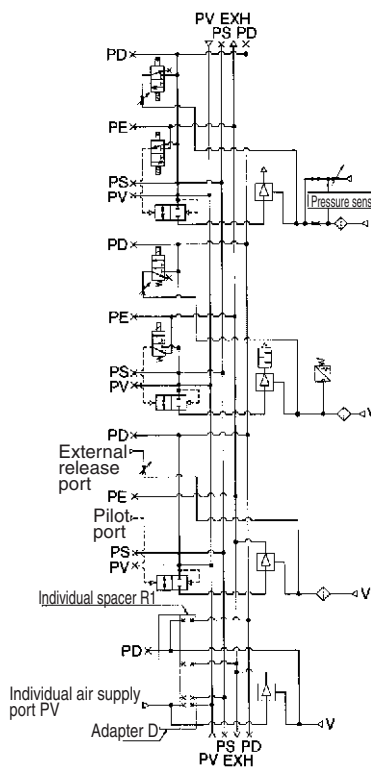

(Option)

(In the case of individual vacuum pressure supply)

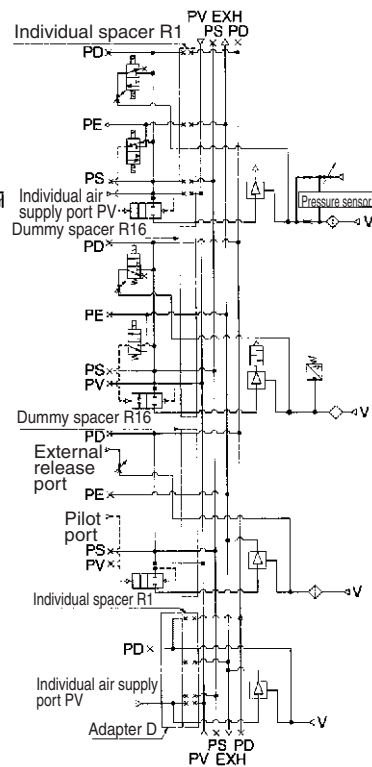

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP


ZCU

AMJ

Misc.

# Series ZX

## Ejector System



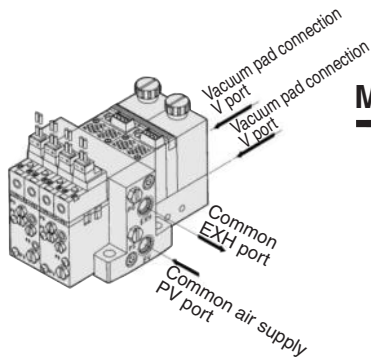


## Manifold: Type K1

### Type K1



ZZX1□□-□□

ZX1□□□-K1□L□-E□-□

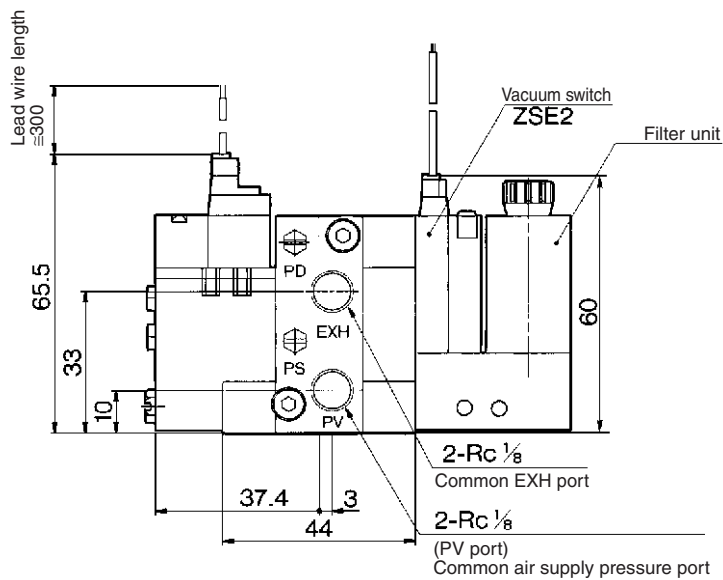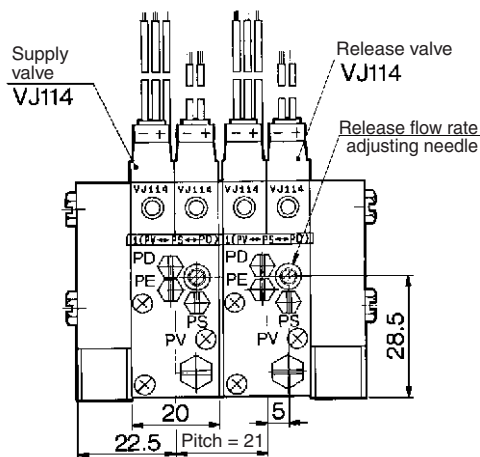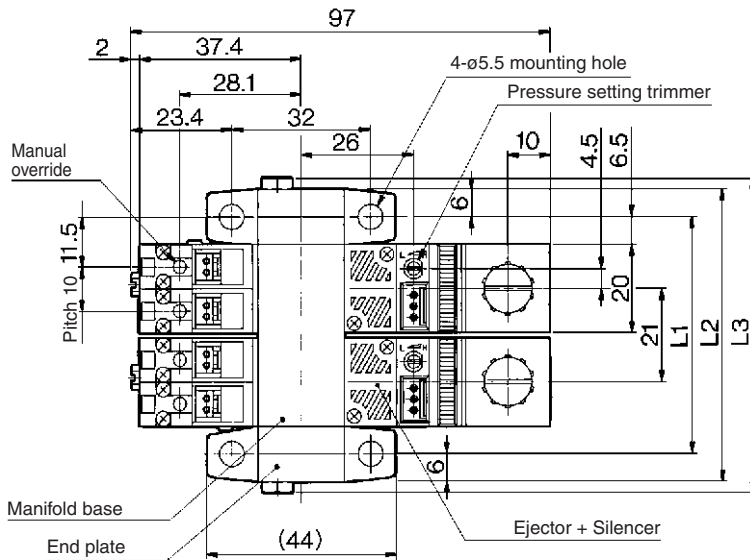


(mm)

Symbol	Stations	1	2	3	4	5	6	7	8
L1		33	54	75	96	117	138	159	180
L2		45	66	87	108	129	150	171	192
L3		50	71	92	113	134	155	176	197

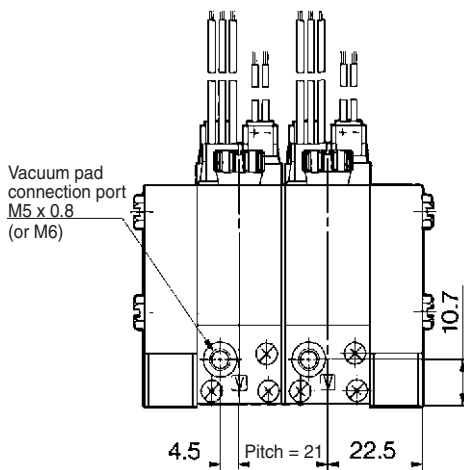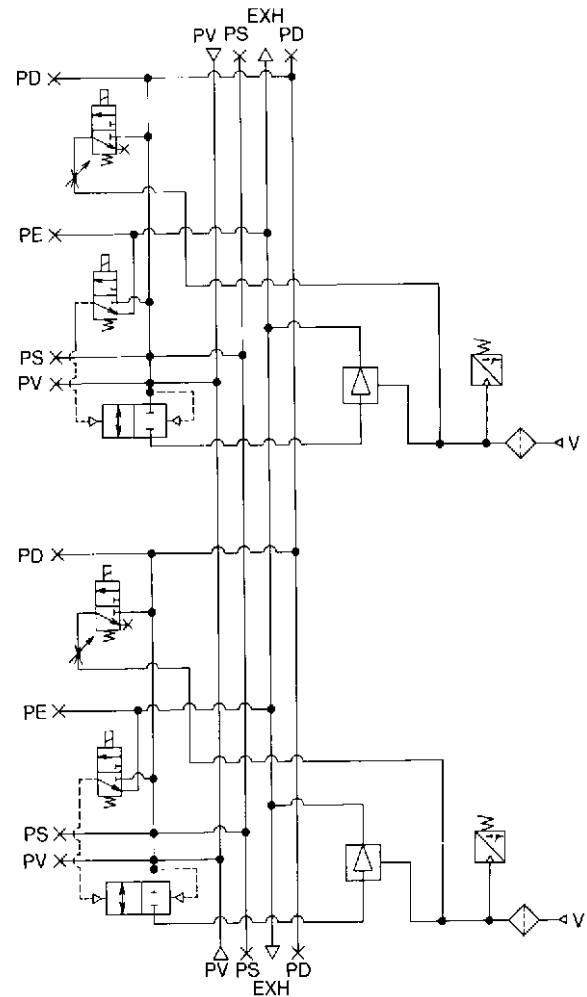**ZX****ZR****ZM****ZH****ZU****ZL****ZY****ZQ****ZF****ZP****ZCU****AMJ****Misc.****Circuit diagram**

# Series ZX

## Ejector System

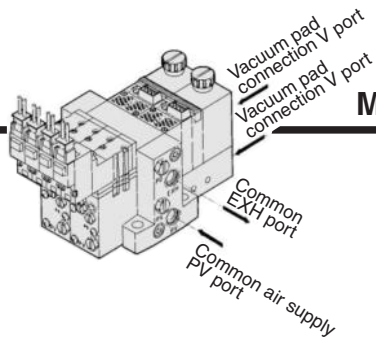




## Manifold: Type K3

### Type K3

ZZX1□□-□□



ZX1□□□-K3□□□-E□-□

Manual override  
(Push and turn the locking type override.)

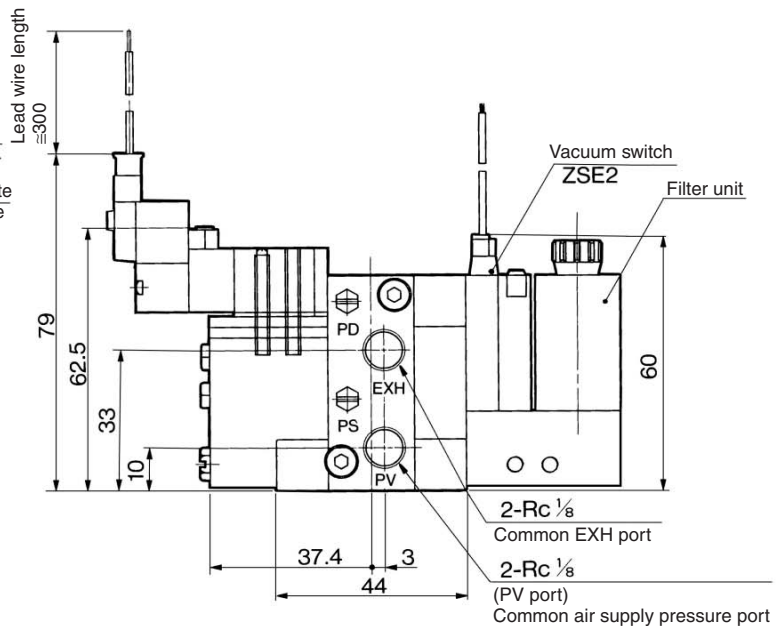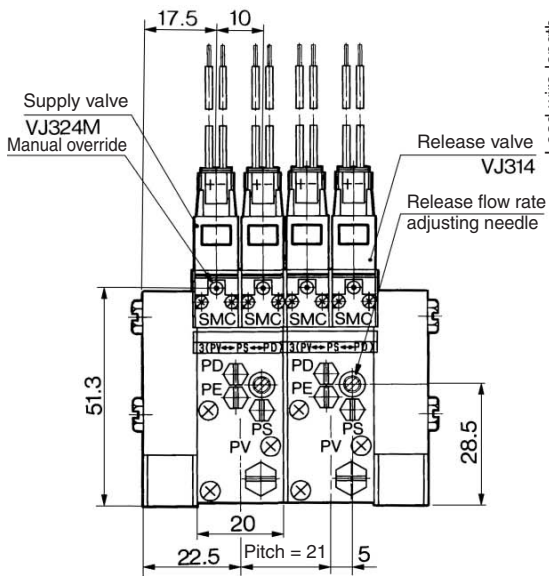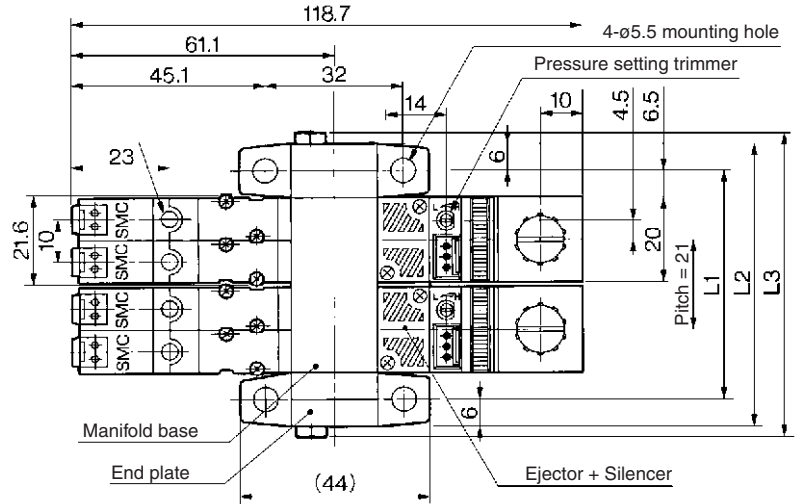

(mm)

Symbol	Stations	1	2	3	4	5	6	7	8
L1		33	54	75	96	117	138	159	180
L2		45	66	87	108	129	150	171	192
L3		50	71	92	113	134	155	176	197

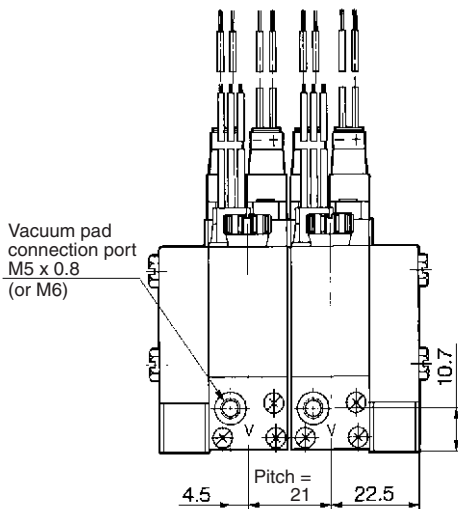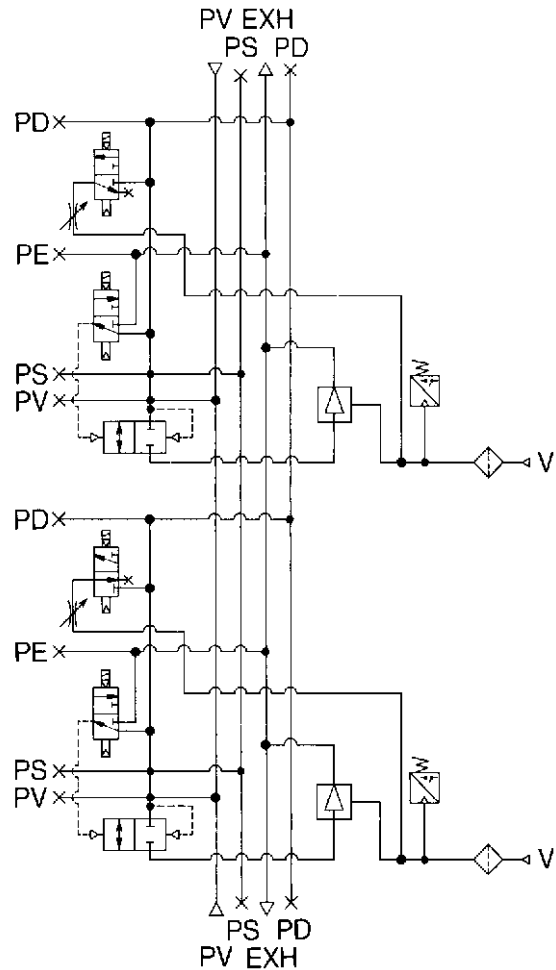**ZX****ZR****ZM****ZH****ZU****ZL****ZY****ZQ****ZF****ZP****ZCU****AMJ****Misc.****Circuit diagram**

# Vacuum Module: Vacuum Pump System Series ZX

## How to Order

### Components

Valve unit N.C. type	Vacuum switch unit
Valve unit N.O. type	Vacuum switch unit
Valve unit N.C. type	Filter unit

Valve unit/Combination of supply valve and release valve  
Refer to "Table (1)" on page 13-2-41.

**DC: 1 W**  
(With indicator light: 1.05 W)  
**AC**

**DC: 0.45 W**  
(With indicator light: 0.5 W)  
**Y\***

\* 24 VDC and 12 VDC are applicable to 0.45 W.

**Caution**

When using the AC type, the DC solenoids are operated via a rectifier. Therefore, when using this type, make sure to combine the connector assembly equipped with a rectifier with the exclusive solenoids. Using other combinations could lead to burned coils or other types of malfunctions.

- Refer to page 13-2-54 for ordering the manifold.
- Refer to page 13-2-64 to 65 for ordering a unit for replacement.

ZX100 — **K1** **5** **L** **Z** **E** **C**

ZX100 — **K3** **5** **L** **Z** **E** **C**

ZX100 — **K1** **5** **L** **Z** **F**

• PV/V port size

Nil	M5 x 0.8
Y	M6 x 1 (Option)

• Vacuum switch electrical entry

Nil	Grommet type	Lead wire length 0.6 m
L	Connector type	Lead wire length 3 m
C		Lead wire length 0.6 m
CL	Connector type	Lead wire length 3 m
CN		Without connector (Without lead wire)

• Refer to "Table (3)" on page 13-2-41 for part number of lead wire with connector.

• Vacuum switch unit/Filter unit

E	Vacuum switch (For general purpose)	
PS	Adsorption confirmation switch	Nozzle dia. (ø0.3 to 0.7)
PB	Adsorption confirmation switch	Nozzle dia. (ø0.5 to 1.2)
F	Only suction filter	

• Vacuum digital pressure switch unit

D	kPa	21	2 outputs/without analog output
		22	2 outputs/with analog output
DP	kPa	23	1 output (with trouble detection)/without analog
		24	1 output (with trouble detection)/with analog

Note) Analog output is available on grommet type only.

• Manual operation

Nil	Non-locking push type
B	Locking slotted type

• Light/Surge voltage suppressor

Nil	None
Z	With light/surge voltage suppressor
S*	With surge voltage suppressor

\* In the case of AC, "S" is not available.

• Electrical entry

L	Plug connector type	Lead wire length 0.3 m
LN		Without lead wire (Applicable to DC only)
LO		Without connector
M		Lead wire length 0.3 m
MN		Without lead wire (Applicable to DC only)
MO	Grommet type	Without connector
G		Lead wire length 0.3 m (Applicable to DC only)
H		Lead wire length 0.6 m (Applicable to DC only)
Nil		Air operated

Note) In the case of "K1" (combination of supply and release valves), M type plug connector can not be used.

• Refer to "Table (2)" on page 13-2-41 for part number of lead wire with connector.

## Caution

Surge voltage suppressor

Light/Surge voltage suppressor

**Using the DC type:**  
Match the polarity of the connectors according to the ⊕ and ⊖ marks on the connectors. Do not interchange the polarities to prevent the diodes or the switching elements from becoming burned. If lead wires are pre-connected, the red wire is ⊕ and the black wire is ⊖.

**Using the AC type:**  
The AC type is not equipped with a surge voltage suppressor because the rectifier assembly prevents the generation of surge voltage.

**Table (1) Valve Unit/Combination of Supply Valve and Release Valve**


(Refer to page 13-2-42 for details specifications.)

Components		Symbol	Supply valve					Release valve				
Supply valve	Release valve		Solenoid valve		Air operated		None	Solenoid valve		Air operated	External release	None
			N.C. (VJ114)	N.O. (VJ324)	N.C. (ZX1A)	N.O. (VJA324)		N.C. (VJ114)	N.C. (VJ314)	N.C. (VJA314)	ZX1A	
Solenoid (N.C.)	Solenoid (N.C.)	<b>K1</b>	●	—	—	—	—	●	—	—	—	—
Solenoid (N.O.)	Solenoid (N.C.)	<b>K3</b>	—	●	—	—	—	—	●	—	—	—
Air operated (N.O.)	External release	<b>K6</b>	—	—	●	—	—	—	—	—	●	—
Air operated (N.O.)	Air operated (N.C.)	<b>K8</b>	—	—	—	●	—	—	—	●	—	—
—		<b>Nil</b>	Without valve module									

**Table (2) Valve Unit/Valve Plug Connector Assembly**

Connector assembly part no.

(For DC)

**VJ10-20-4A-6**

(For 100 VAC)

**VJ10-36-1A-6**

(For 110 VAC)

**VJ10-36-3A-6**

Lead wire length

Nil	0.3 m (Standard)
6	0.6 m
10	1 m
15	1.5 m
20	2 m
25	2.5 m
30	3 m

**How to order**

If ordering vacuum module with 600 m or the longer lead wire, specify both vacuum module and connector assembly part numbers.

Ordering example)

**ZX100-K15LOZ-EC..... 1 pc.**
**\*VJ10-20-4A-6..... 2 pcs.**
**Table (3) Vacuum Switch/Plug Connector Assembly**
**ZS-10-5A**

Lead wire length

Nil	0.6 m
30	3 m
50	5 m



(Note) If ordering switch with 5 m lead wire, specify both switch and lead wire with connector part numbers.

Ordering example)

**ZX100-K150Z-ECN.....1 pc.**
**\*VJ10-20-4A-6..... 2 pcs.**
**\*ZS-10-5A-50..... 1 pc.**
**Vacuum Pump System/Recommended Model (The models below will have faster delivery.)**

Model	Combination		Solenoid valve rated voltage	Lead wire electrical entry	Light/Surge voltage suppressor	Vacuum switch unit /Filter unit	Vacuum switch electrical entry
	Supply valve (Pilot valve)	Release valve (Direct operated)					
<b>ZX100-K15LZ-F</b>	N.C. (VJ114)	N.C. (VJ114)	24 VDC	Plug connector type	With light/surge voltage suppressor	Suction filter (ZX1-F)	Connector type
<b>ZX100-K15LZ-EC</b>	N.C. (VJ114)	N.C. (VJ114)					
<b>ZX100-K35MZ-EC</b>	N.O. (VJ324)	N.C. (VJ314)					

\*The above models are for short delivery.

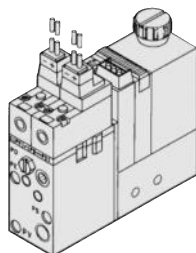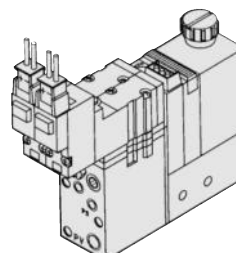
**ZX100-K15LZ-E**

**ZX100-K35MZ-E**
**ZX**
**ZR**
**ZM**
**ZH**
**ZU**
**ZL**
**ZY**
**ZQ**
**ZF**
**ZP**
**ZCU**
**AMJ**
**Misc.**




# Series ZX

## Vacuum Pump System/Combination of Supply Valve and Release Valve

### Combination Symbol: K1

An N.C. solenoid valve is used for the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals.

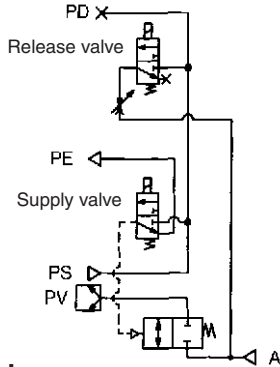


### How to Operate

Condition	Valve	
	Supply valve Solenoid valve	Release valve Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

### Combination Symbol: K6

An external 3 port valve must be provided to serve as the supply valve. Also, an external 2 port valve (vacuum valve) must be provided to serve as the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals.

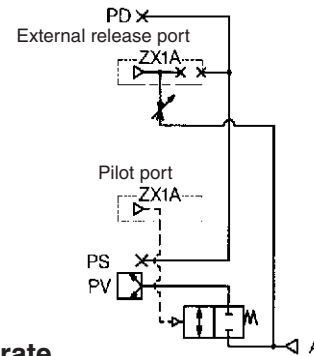


### How to Operate

Condition	Valve	
	Supply valve Solenoid valve	Release valve Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

### Combination Symbol: K3

An N.O. solenoid valve is used for the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

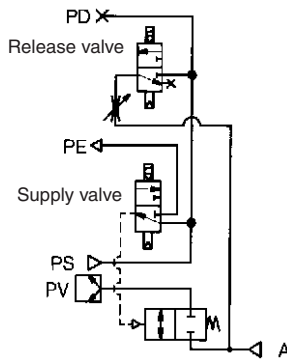


### How to Operate

Condition	Valve	
	Supply valve Solenoid valve	Release valve Solenoid valve
1. Work adsorption	OFF	OFF
2. Vacuum release	ON	ON
3. Operation stop	ON	OFF

### Combination Symbol: K8

An air operated N.O. valve is used as the supply valve. An air operated N.C. valve is used for the vacuum release valve.


**Application:** This combination is used for effecting control in accordance with electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This type is used for preventing the workpieces from dropping during

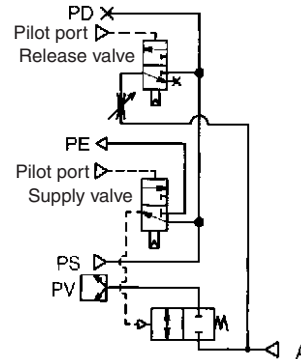

### How to Operate

Condition	Valve	
	Supply valve Air operated valve	Release valve Air operated valve
1. Work adsorption	OFF	OFF
2. Vacuum release	ON	ON
3. Operation stop	ON	OFF

## Vacuum Pump System/Construction

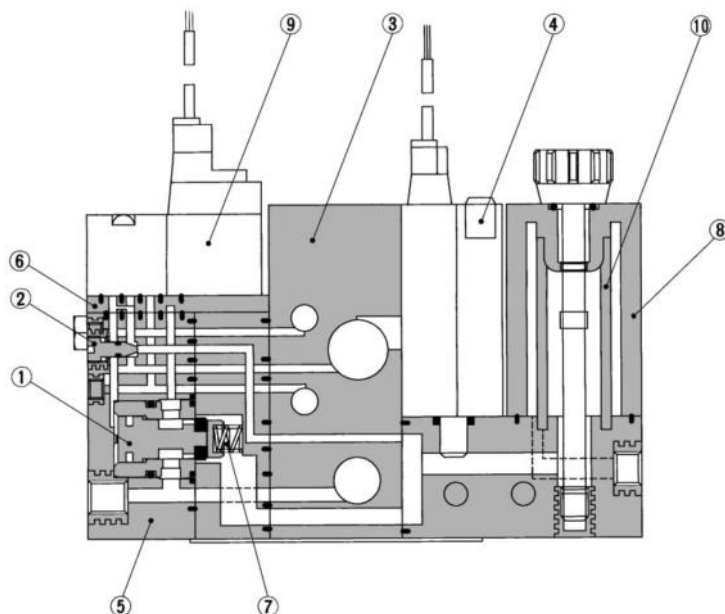

### Component Parts

No.	Description	Material	Note
①	Poppet valve assembly	—	ZX1-PV-O
②	Release flow rate adjusting needle	Stainless steel	
③	Manifold base	Aluminum	
④	Vacuum switch	—	ZSE2, ZSP1
⑤	Valve unit	—	ZX1-VB□□□□□□-D-□
⑥	Interface plate	—	(PV)/(PS↔PD)
⑦	Return spring	Stainless steel	
⑧ (Note)	Filter case	Polycarbonate	

### Replacement Parts

No.	Description	Material	Part no.
⑨	Pilot valve	—	Refer to "Table (2)", "(3)".
⑩	Filter element	PVF	ZX1-FE




Note) Caution when handling filter case

- The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, watersoluble cutting oil (alkalinic), etc.
- Do not expose it to direct sunlight.

### Table (1) How to Order Pilot Valves

No.	Component equipment		Model	Combination of supply and release valve
	Supply valve	Release valve		
1	Solenoid valve N.C. (VJ114)	Solenoid valve N.C. (VJ114)	ZX1-VJ114-□□□□	K1, J1
2	Solenoid valve N.O. (VJ324)	Solenoid valve N.C. (VJ314)	ZX1-VJ3 <sub>2</sub> 4□-□□□□	K3, J2
3	Air operated N.O. (VJA324)	Air operated N.C. (VJA314)	ZX1-VJA3 <sub>2</sub> 4	K6
4	Solenoid valve Air operated	Air operated Solenoid valve	No. 2 and 3 models only are applicable. Indicate each part number.	

### Table (2) How to Order Solenoid Valves

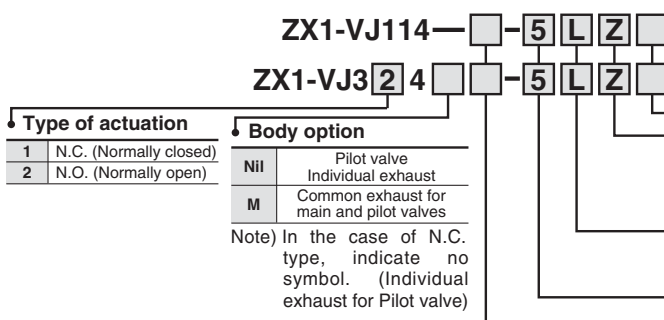

**Pilot valve**

NII	DC: 1 W (With indicator light: 1.05 W) AC
Y*	DC: 0.45 W (With indicator light: 0.5 W)



\* 24 VDC and 12 VDC are applicable to 0.45 W.  
Note) Screw length of VJ100 and VJ300 for series ZX is different from that of the standard model.  
<Screw length> VJ100-M1.7 x 15

### Table (3) How to Order Air Operated Valves

## ZX1A-M3

Port size

M3	M3 x 0.5	Pilot port/External release port
M5	M5 x 0.8	

### ⚠ Caution

Turning the vacuum release flow volume adjusting needle clockwise reduces the vacuum release flow volume; the needle valve is fully closed when the needle stops turning. Turning the needle 2 full turns counterclockwise from the fully closed position renders the needle valve fully open. The needle will fall out if it is turned more than 4 full turns.

# Series ZX







## Valve Unit: ZX1-VB

Refer to page 13-2-10 for details.

### Specifications



Unit no.	ZX1-VB□□□□□					
Components	Vacuum switch valve			Vacuum release valve		
Operation	Pilot type			Direct operated type		
	Solenoid valve		Air operated	Solenoid valve		External release
	N.C. (VJ114)	N.O. (VJ324)	N.C. (ZX1A) / N.O. (VJA324)	N.C. (VJ114)	N.C. (VJ314)	Air operated (VJA314)
Effective area (mm <sup>2</sup> ) (Cv factor)	3 (0.17) Main valve			0.07	0.45	—
Operating pressure range	0.3 to 0.6 MPa					
Max. operating frequency	5 Hz					
Operating temperature range	5 to 50°C					
Interface plate symbol	(PV) / (PS ↔ PD)					
Standard accessory	Bracket B/Spacer 2					

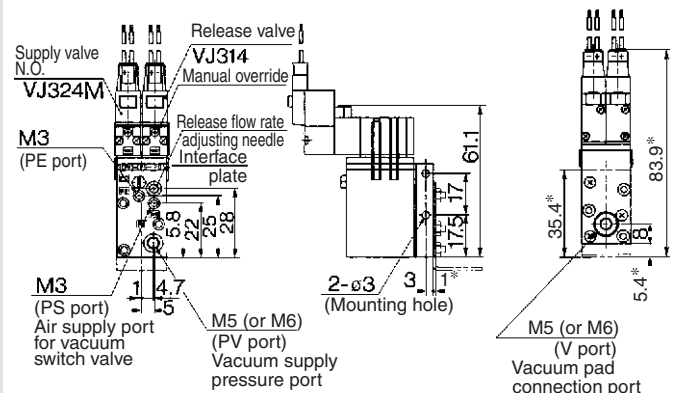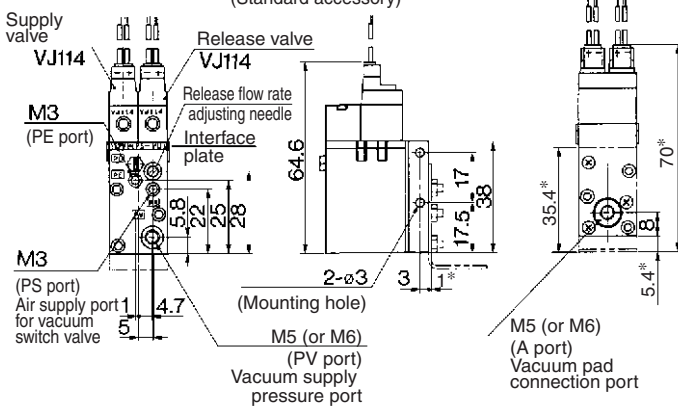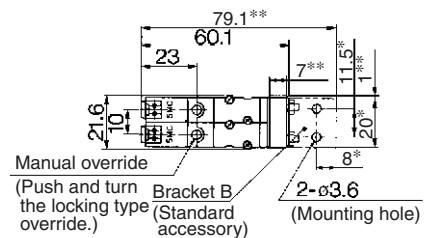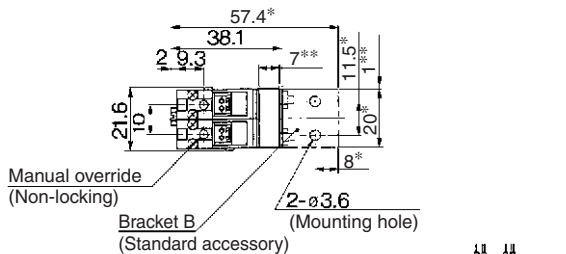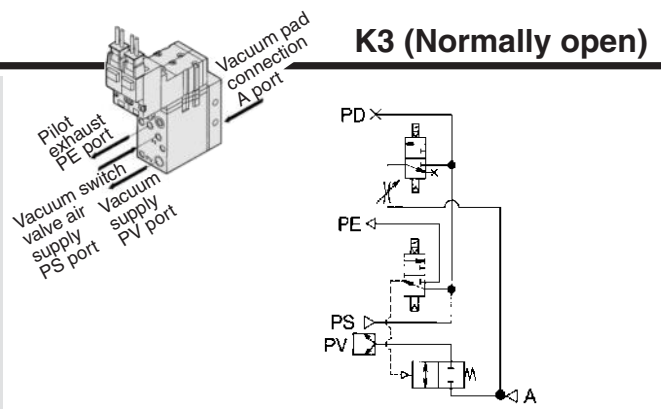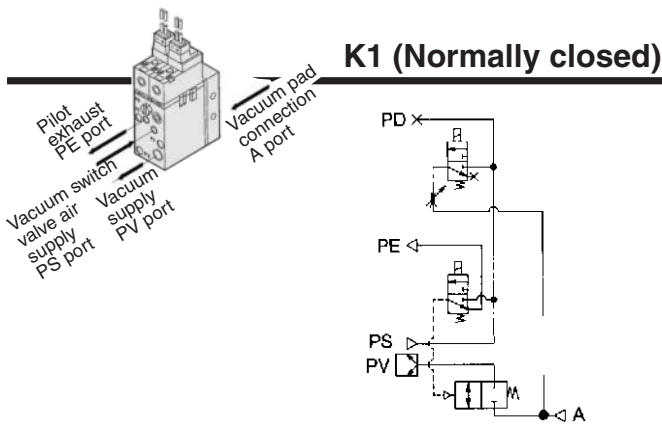

Note) Dimensions \*: For mounting bracket B \*\*: For mounting spacer

### Suction Filter Unit: ZX1-F

Refer to page 13-2-12 for details.



#### Specifications

Unit no.	ZX1-F
Operating pressure range	Vacuum to 0.5 MPa
Operating temperature range	5 to 50°C
Filtration efficiency	30 μm
Element	PVF
Weight	35 g




Note) If not operated within the specified range of pressure and temperature, trouble may be caused.

### Vacuum Pressure Switch Unit/ZSE2, ZSE3, ZSP1

Refer to page 13-2-13 to 13-2-18 for details.

**Vacuum Pressure Switch**  
High speed response/10 ms  
Uses a carrier diffusion semiconductor pressure sensor

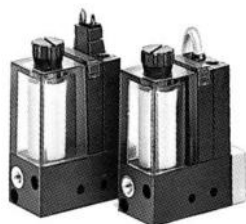

**Adsorption Confirmation Switch**  
Suitable for small size adsorption nozzle/ø0.3 to ø1.2  
With suction filter  
Improved wiring: connector type  
Uses a carrier diffusion semiconductor pressure sensor



#### Vacuum Pressure Switch Specifications



Refer to Best Pneumatics Vol.16 for details.

Unit no.	ZSE2-0X	ZSE3-0X
Fluid	Air	
Set pressure range	0 to -101 kPa	
Hysteresis	3% Full span or less	
Accuracy	±3% Full span (5 to 40°C) ±5% Full span (0 to 60°C)	±1% Full span
Voltage	12 to 24 VDC (Ripple ±10% or less)	
Port size	M5 x 0.8	



Note) If not operated within the specified range of pressure and temperature, trouble may be caused.

#### Adsorption Confirmation Switch Specifications

Unit no.	ZSP1-S	ZSP1-B
Fluid	Air	
Operating pressure range	-20 to -101 kPa	
Applicable adsorption nozzle dia.	ø0.3 to ø0.7	ø0.5 to ø1.2
Hysteresis	0.5 kPa	
Internal orifice	ø0.5	ø0.8

#### • Filter case

##### ⚠ Caution

- The case is made of polycarbonate. Therefore, do not use it with or expose it to the following chemicals: paint thinner, carbon tetrachloride, chloroform, acetic ester, aniline, cyclohexane, trichloroethylene, sulfuric acid, lactic acid, water-soluble cutting oil (alkalinic), etc.
- Do not expose it to direct sunlight.

#### • Other caution

##### ⚠ Caution

It might not be possible to successfully pick a workpiece if a picking nozzle or a picking pad that is out of the applicable range is used.

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ

Misc.



# Series ZX

## Valve Unit: Type K1








Configuration and combination	Vacuum switch (ZSE2)
	Valve unit (K1) + Vacuum switch (ZSE3)
	Adsorption confirmation switch (ZSP1)
	Filter unit (F)

Model ZX100 — K1□□□□ —

E □  
 D □  
 P □ □  
 F

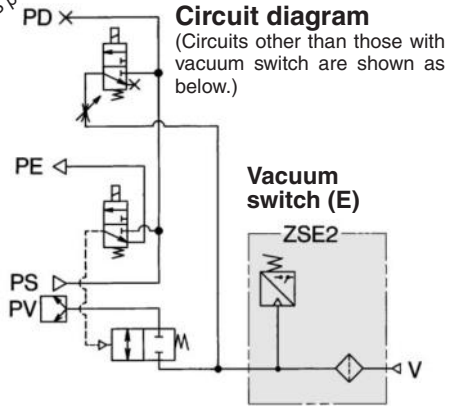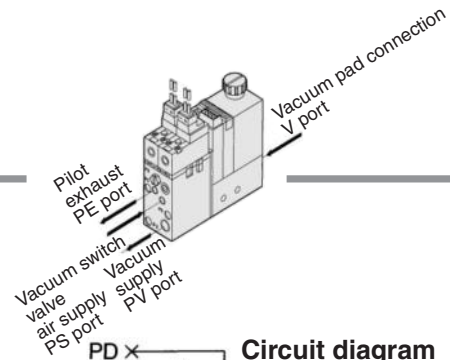


### Vacuum switch (ZSE2) ZX100-K1□□□□-E□

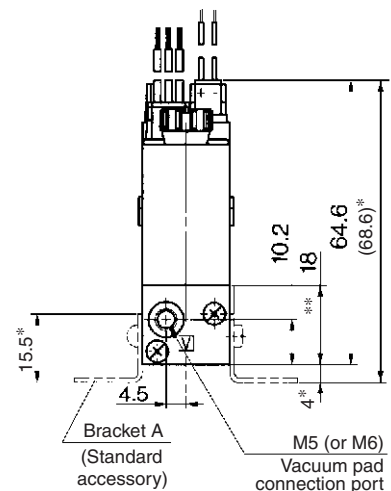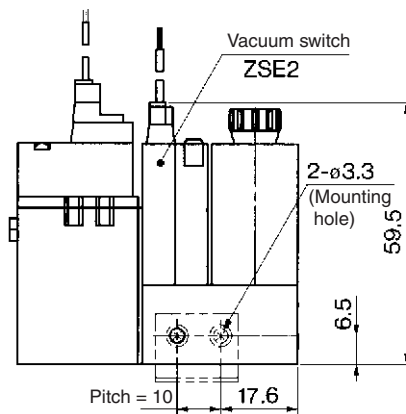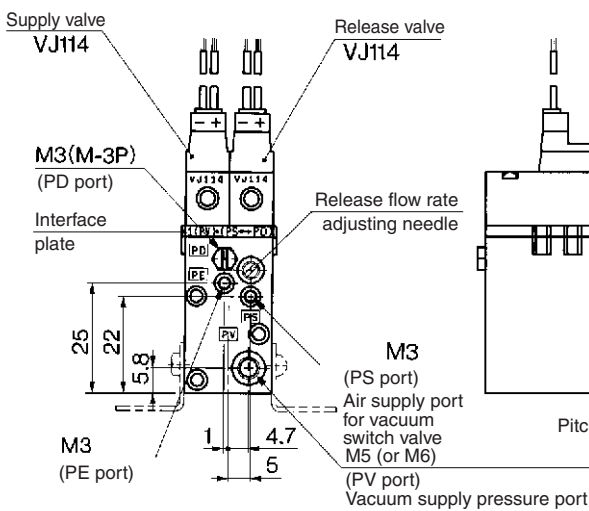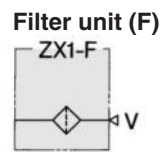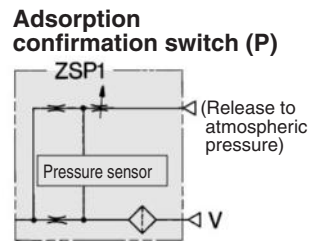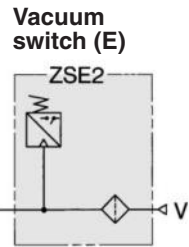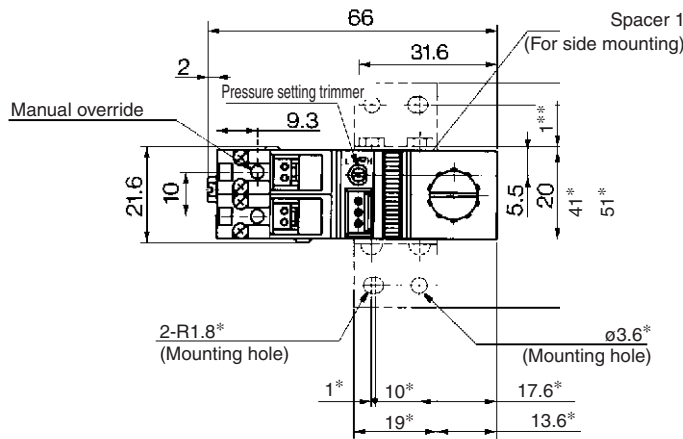


Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

**Vacuum switch (ZSE3)**  
ZX100-K1□□□□-D□□

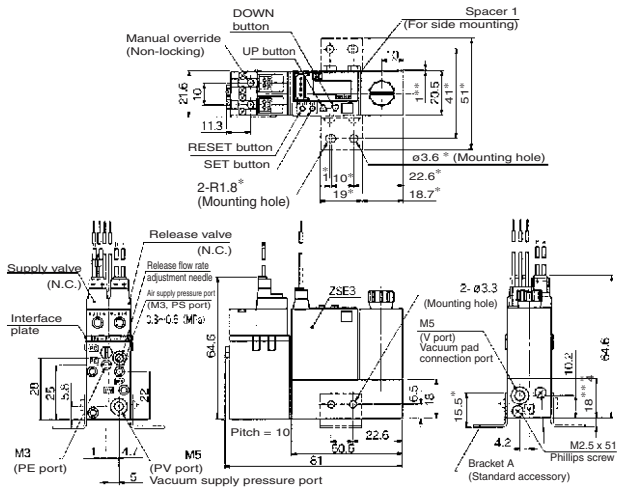


**Adsorption confirmation switch (ZSP1)**  
ZX100-K1□□□□-P□□

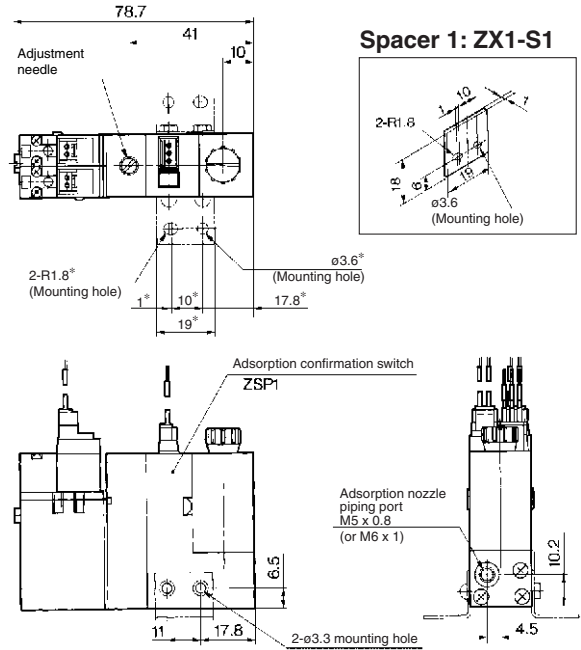

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

**Filter unit (F)**  
ZX100-K1□□□□-F

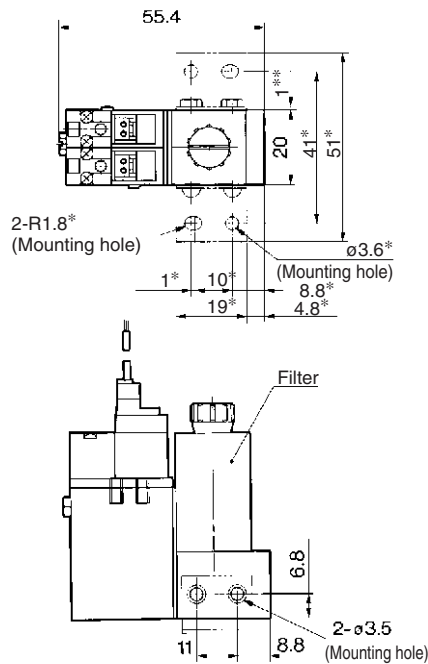


# Series ZX

## Valve Unit: Type K3


### Configuration and combination

Valve unit (K3) +	Vacuum switch (ZSE2)
	Adsorption confirmation switch (ZSP1)
	Filter unit (F)


Model ZX100 — K3□□□□ — P□□  
 E□  
 F

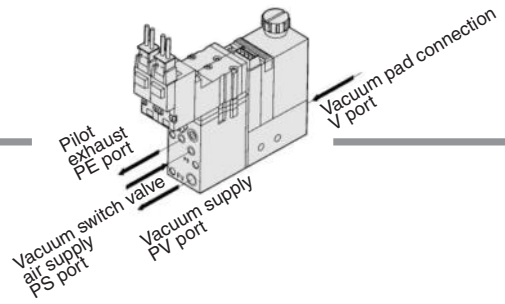


### Vacuum switch (ZSE2) ZX100-K3□□□□-E□

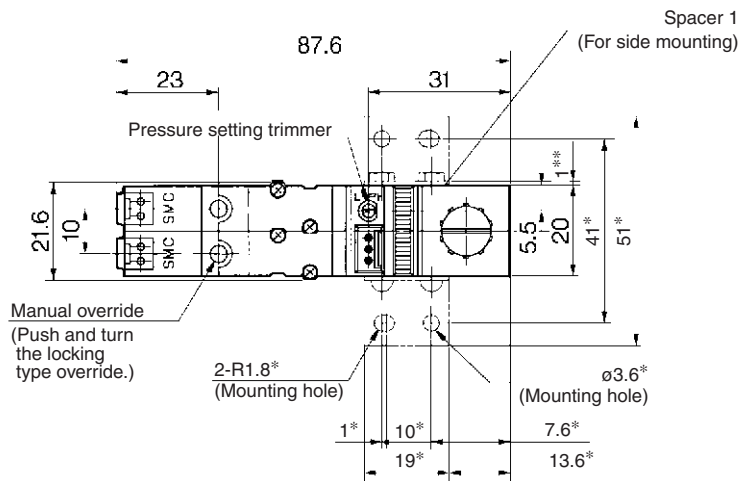



### Circuit diagram

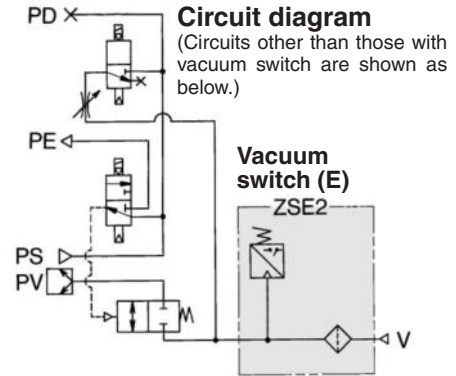

### Adsorption confirmation switch (P)

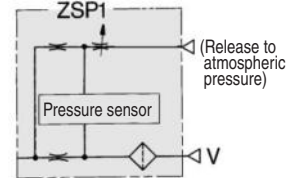


### Filter unit (F)

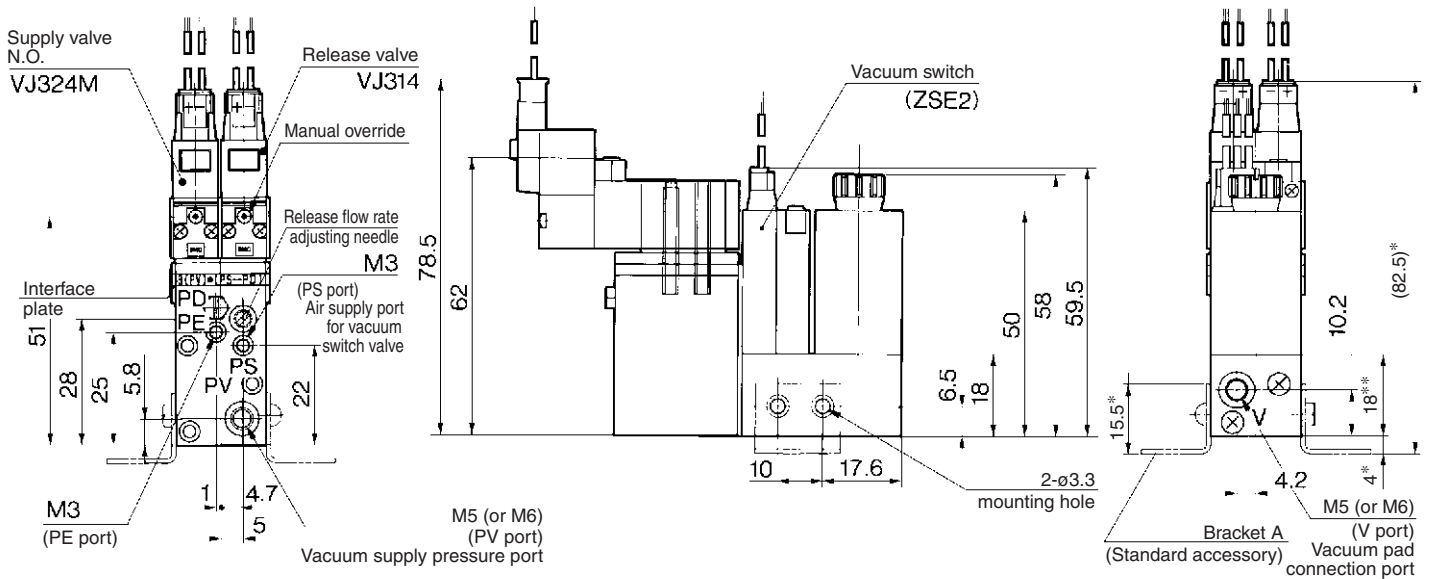



Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.


**Adsorption confirmation switch (ZSP1)**  
ZX100-K3□□□□-P□□

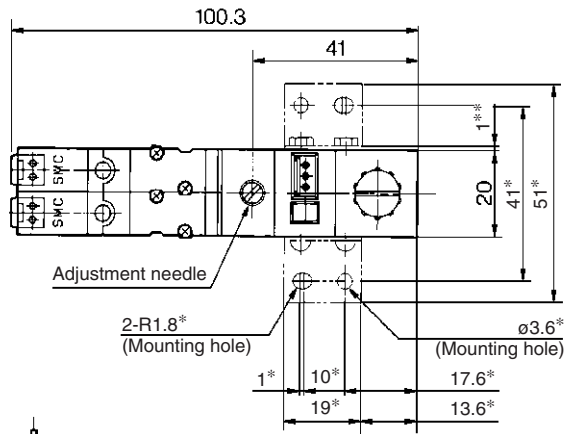

**Spacer 1: ZX1-S1**

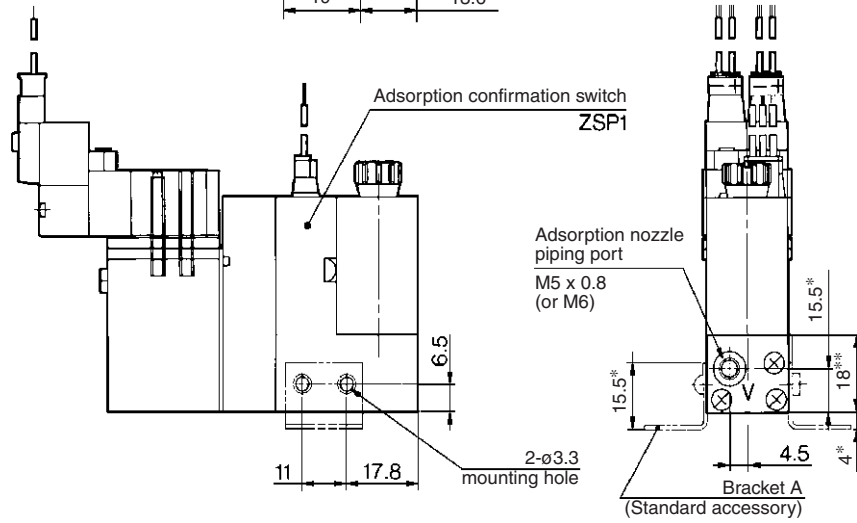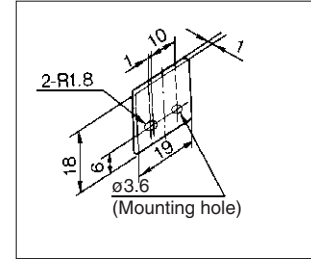

**Filter unit (F)**  
ZX100-K3□□□□-F

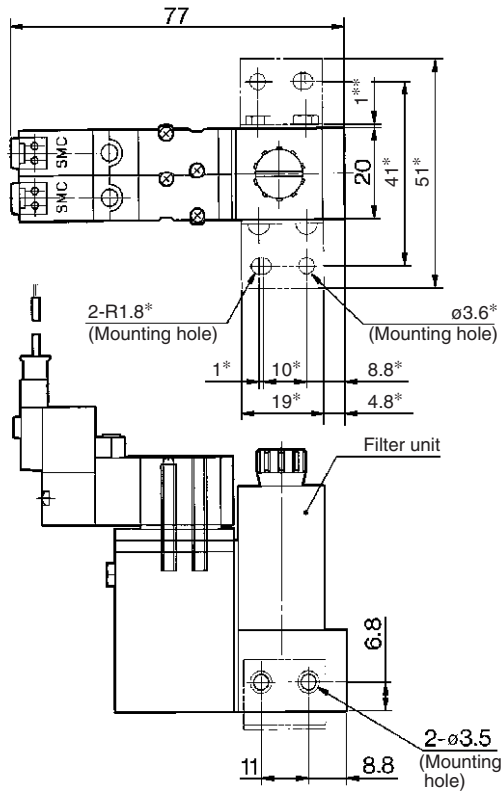

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.



# Series ZX



## Valve Unit: Type K6

Configuration and combination


Valve unit (K6)	+	Vacuum switch (ZSE2)
		Adsorption confirmation switch (ZSP1)
		Filter unit (F)

Model ZX100    K6


E  
 P  
 F

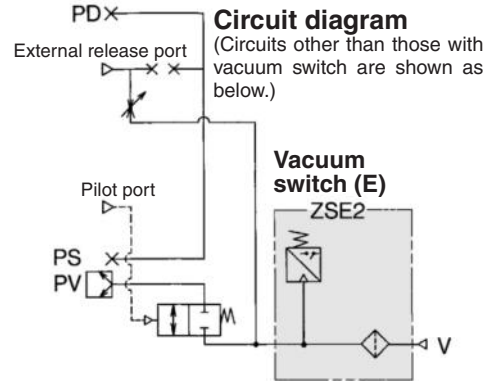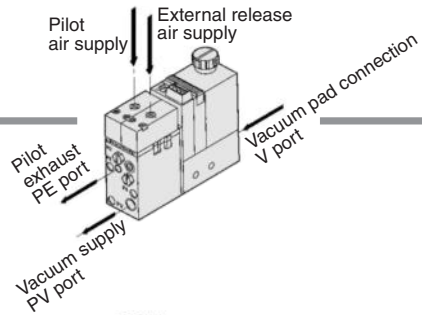



### Vacuum switch (ZSE2) ZX100-K6-E

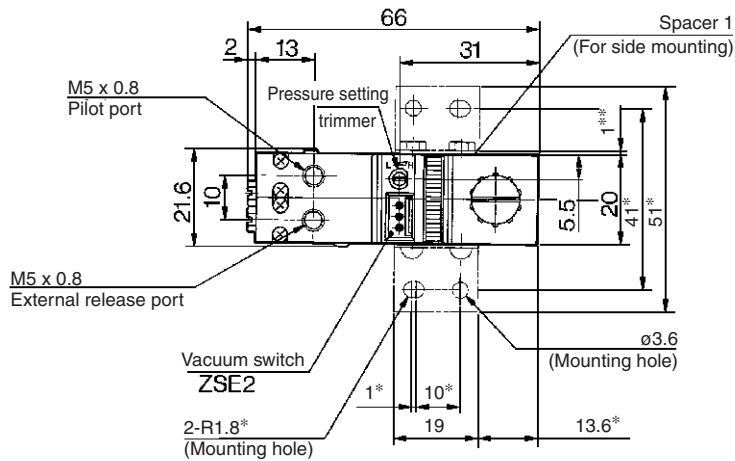

### Adsorption confirmation switch (P)

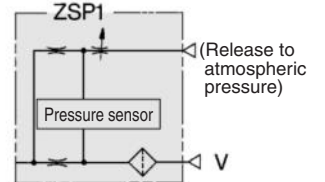


### Filter unit (F)

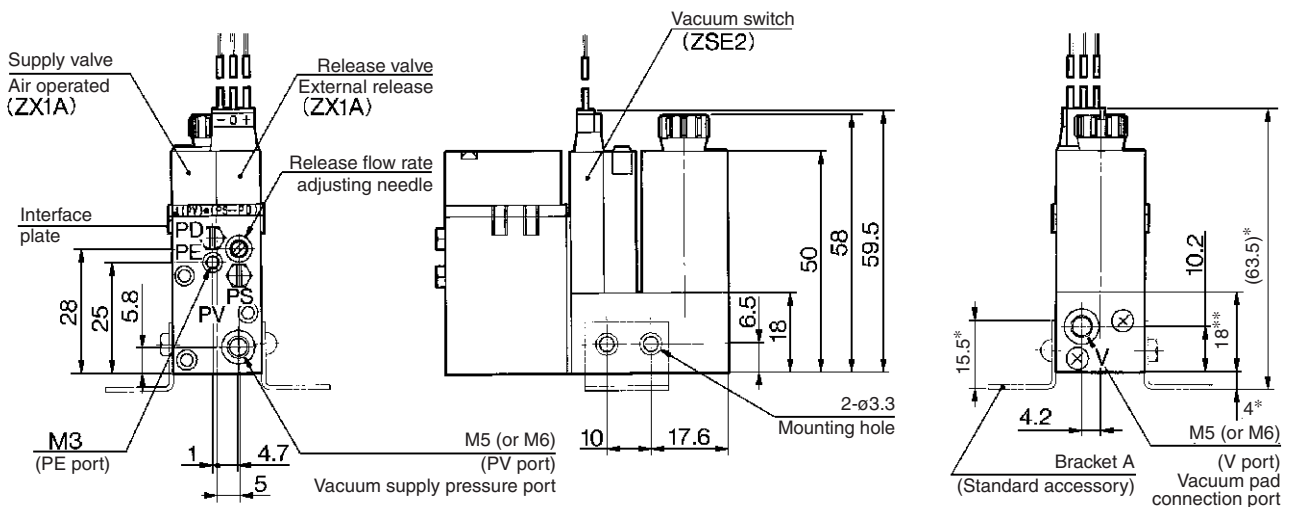



Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.



**Adsorption confirmation switch (ZSP1)**  
ZX100-K6-P□□

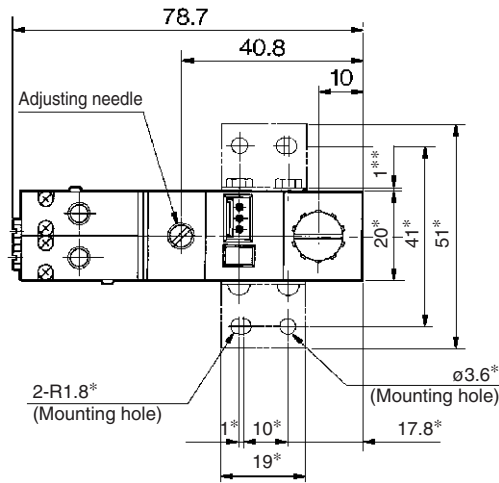

Spacer 1: ZX1-S1

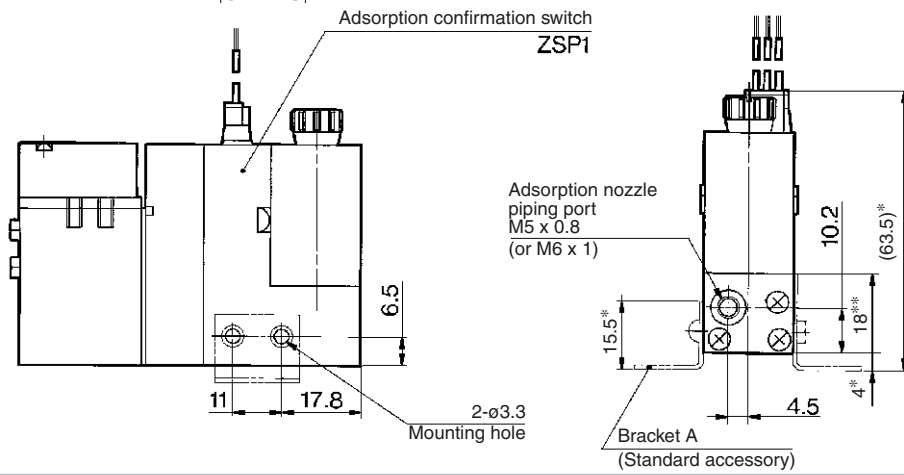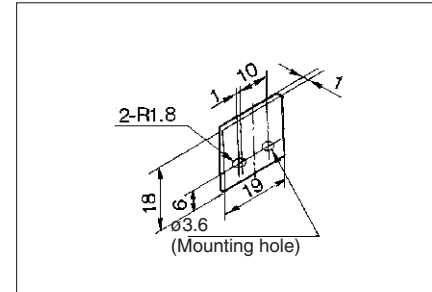

**Filter unit (F)**  
ZX100-K6-F

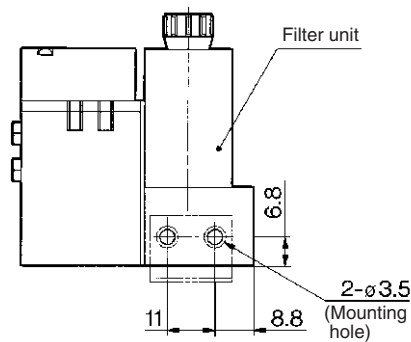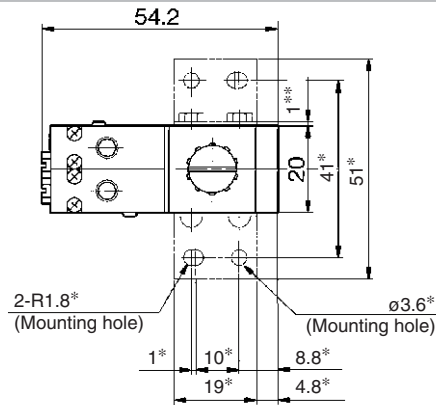

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.



# Series ZX

## Valve Unit: Type K8


Configuration and combination	Vacuum switch (ZSE2)
Valve unit (K8) +	Adsorption confirmation switch (ZSP1)
	Filter unit (F)

Model ZX100 ————— K8 —————


E   
 P   
 F

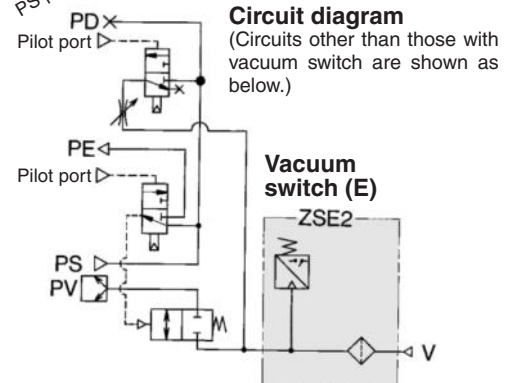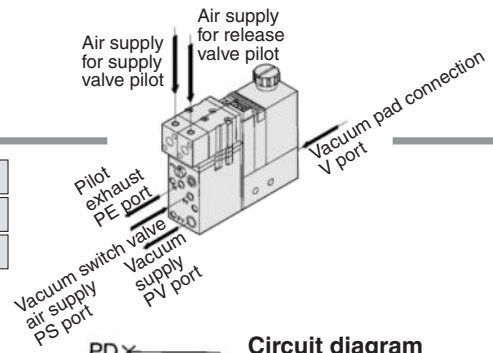





### Vacuum switch (ZSE2) ZX100-K8-E

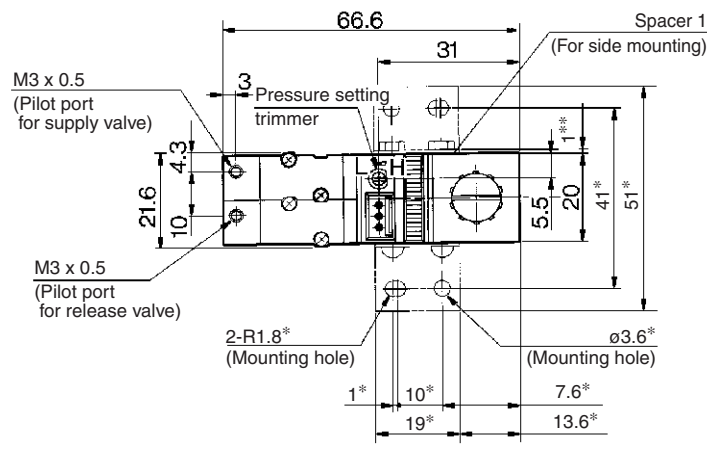

### Adsorption confirmation switch (P)

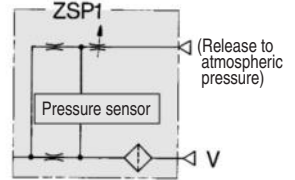


### Filter unit (F)

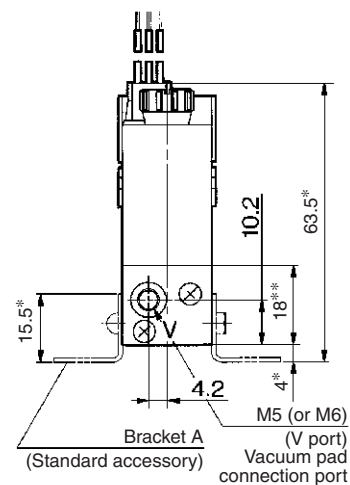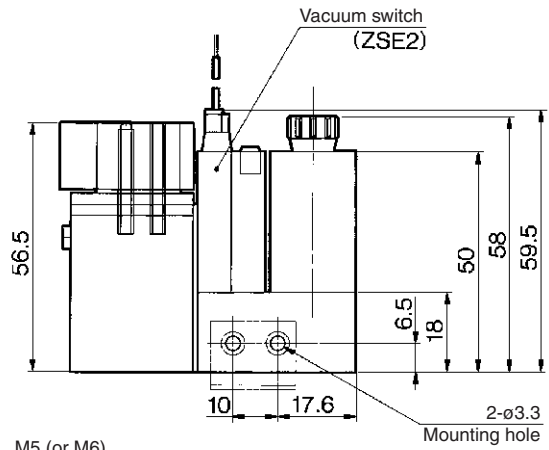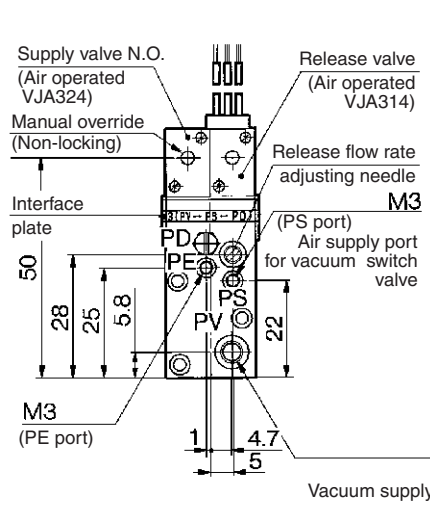




Note) Dimensions \*: For mounting bracket A \*\*: For mounting spacer 1.

### Adsorption confirmation switch (ZSP1)

ZX100-K8-P□□

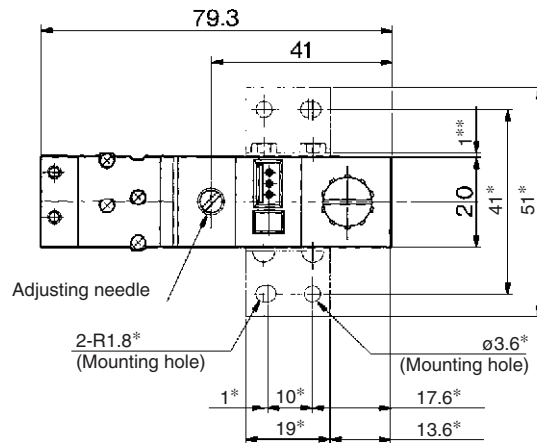

Spacer 1: ZX1-S1

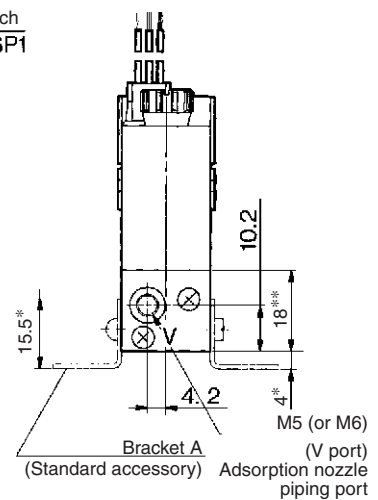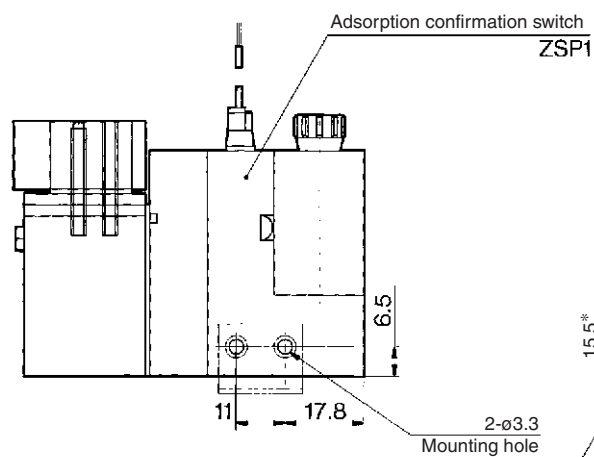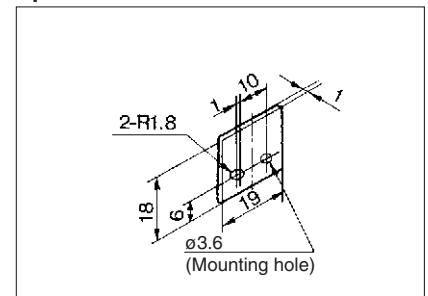

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP



ZCU

AMJ

Misc.



### Filter unit (F)

ZX100-K8-F

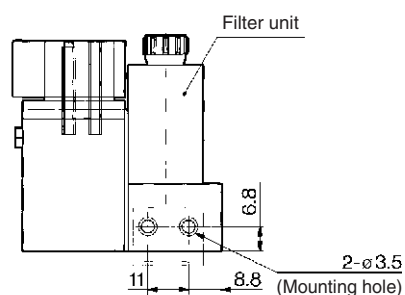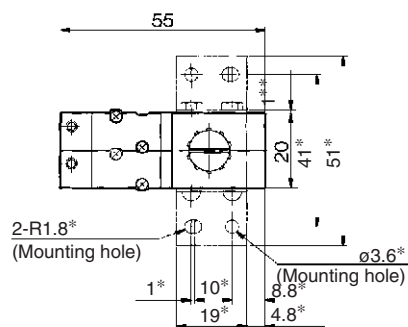

# Series ZX

## Vacuum Pump System/Manifold Specifications

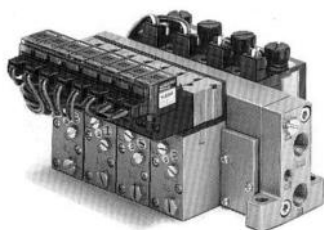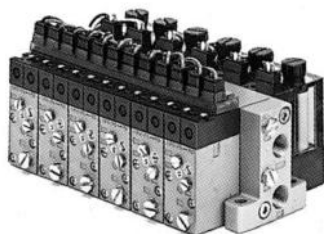

### Function

Max. number of units	8 units
Function	Vacuum supply from PV port of the manifold is common supply. Air supply from PS port is common supply.

### When Using Individual Spacer R1

Function	Separates air supply from manifold and makes units be used one by one.
----------	--

### Specifications

Port	Port size	Function
PV port	Rc 1/8	External vacuum pump connection
PS port	M5	Air supply for vacuum valve
EXH port	Rc 1/8	Common exhaust
Weight	1 station: 73 g (50 g per additional station)	

Note 1) PD port: Blank

Note 2) Vacuum from both sides of PV port for 6 or more stations of ZX100 external vacuum pump manifold.

### Air Supply

Supply port location	Manifold	Left side		Right side	
	Port	PV	PS	PV	PS
L		○	○	●	●
R		●	●	○	○
B		○	○	○	○

○: Vacuum supply from PV port    ○: Air supply from PS port

●: Plugged

Note) All ports for each valve unit are provided with plugs.



### Manifold Specification Sheet

When ordering the manifold type of series ZX, use the manifold specification sheet on page 13-14-19.

### When Using Individual Spacer R1

It functions as a single unit. Vacuum is supplied from PV port of valve unit. PE port is released to atmospheric pressure. Other ports are plugged.

## How to Order Manifold

Indicate the vacuum module, blank plate and individual spacer below the manifold base part number.

### <Manifold base>

ZZX1 06 — [ ] — R

#### Stations

01	1
02	2
⋮	⋮
08	8

#### Thread of supply and exhaust valve

Nil	Rc
F	G
T	NPTF

#### Supply port location

Symbol	Supply port location *1	Air Supply	
		Vacuum supply	Air supply
R	Right side	PV port on the right side	PS port on the right side
L	Left side	PV port on the left side	PS port on the left side
B	Both sides	PV port on both sides	PS port on both sides

\* 1 Viewed from the front side of valve unit, confirm the port location on the right and/or left side.

\* 2 EXH ports are released to atmospheric pressure in both sides. Plugs are always attached to PD ports and all ports of the valve unit.

(Ordering example)

ZZX106-R..... 1 pc. (Manifold base)  
\*ZX100-K15LZ-EC..... 5 pcs. (Vacuum single unit)  
\*ZX-BM1..... 1 pc. (Blank plate)

### <Individual spacer>

ZX1 — R1 — 1

#### Arrangement

(First station from the right end of the valve side is station 1.)

Nil	All stations
1	Station 1 only
⋮	⋮
8	Station 8 only

\* When spacers are mounted alternately, specify them together.

(Ordering example)


If mounted on station 1 and station 3:

ZZX106-R ..... 1 pc.  
\*ZX100-K15LZ-EC..... 6 pcs.  
\*ZX1-R1-1  
\*ZX1-R1-3  
\*ZX1-R16..... 4 pcs.

# Vacuum Module: Vacuum Pump System **Series ZX**


## Manifold/System Circuit Example

When not using individual air pressure supply

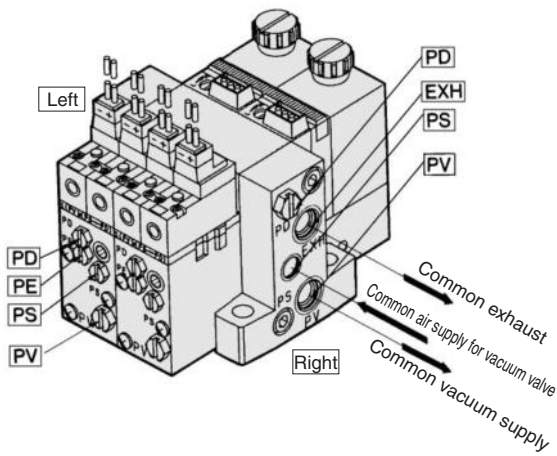


PV: Vacuum supply port  
 PS: Air supply port for vacuum valve  
 PD: Air supply port for release valve  
 PE: Pilot exhaust port  
 EXH: Common exhaust port


When using individual air pressure supply

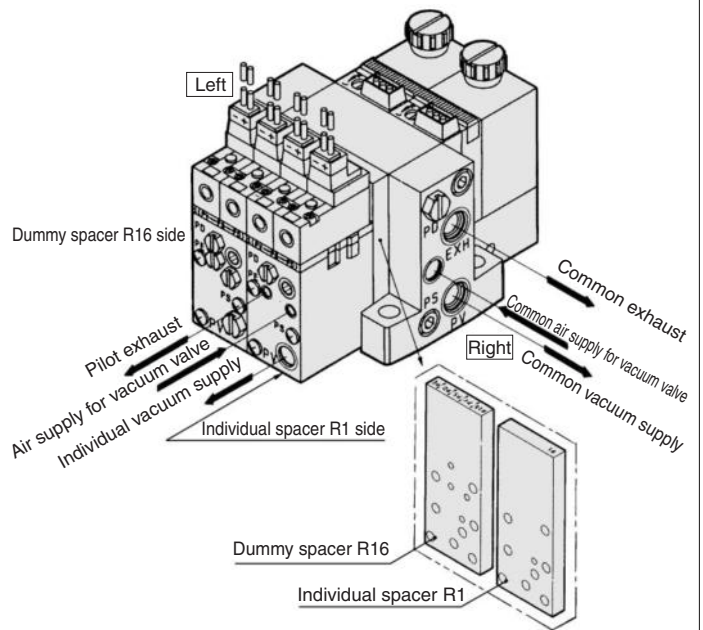

<System circuit example>

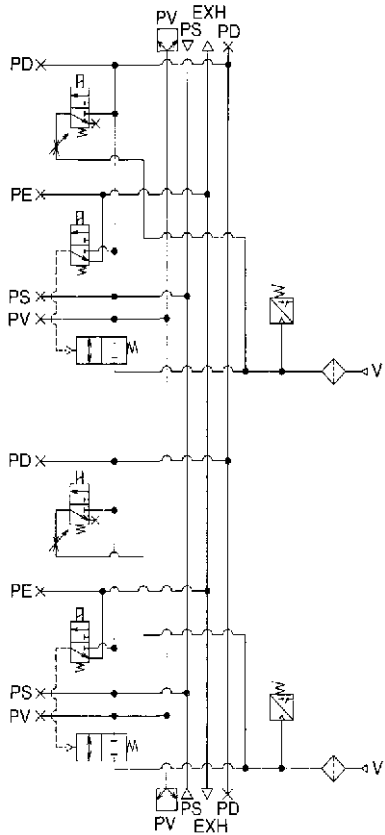


<System circuit example>

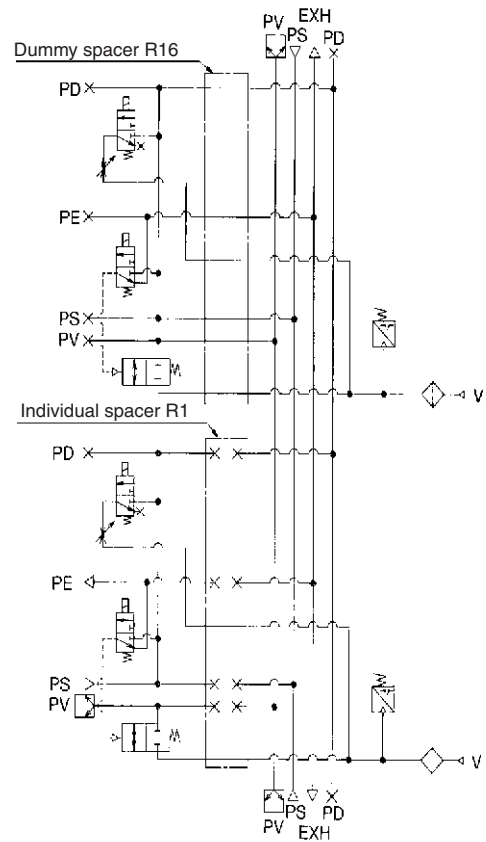




- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX

## Vacuum Pump System Manifold

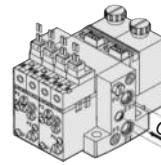

Common EXH  
Common air supply for vacuum valve  
Common vacuum supply

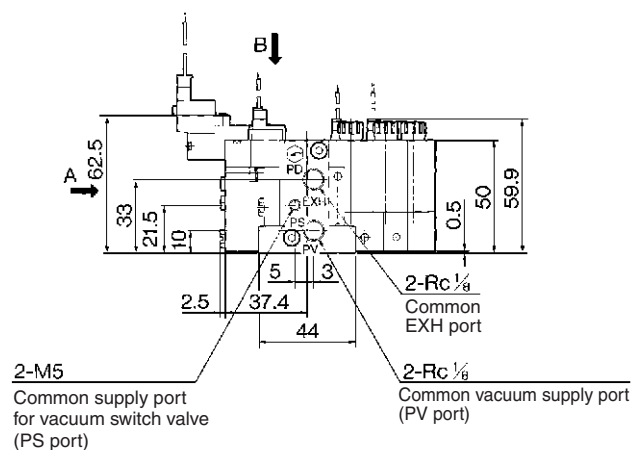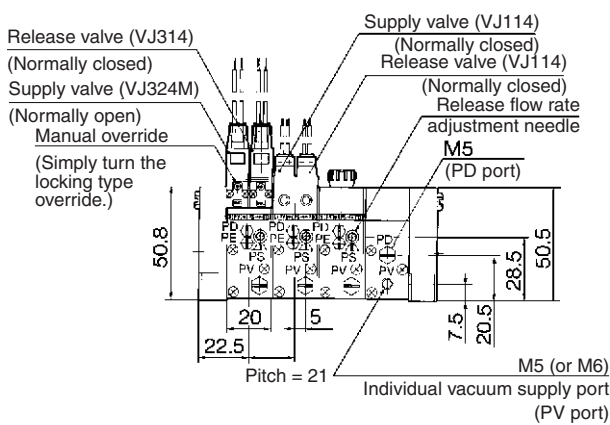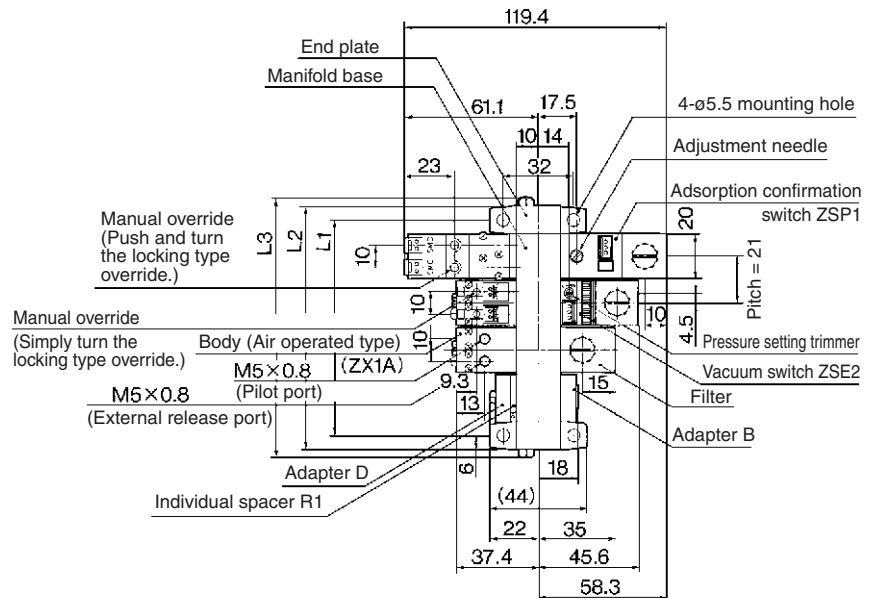


(mm)



Symbol	Stations	1	2	3	4	5	6	7	8
L1		33	54	75	96	117	138	159	180
L2		45	66	87	108	129	150	171	192
L3		50	71	92	113	134	155	176	197

(In the case of individual air pressure supply)

**B cross section**

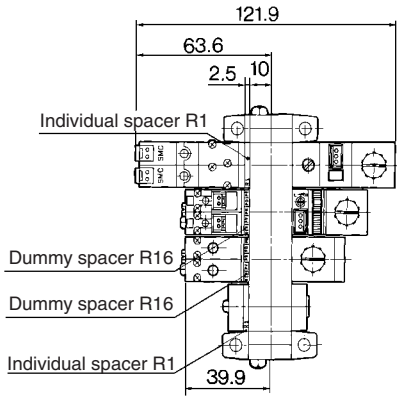


**A cross section**

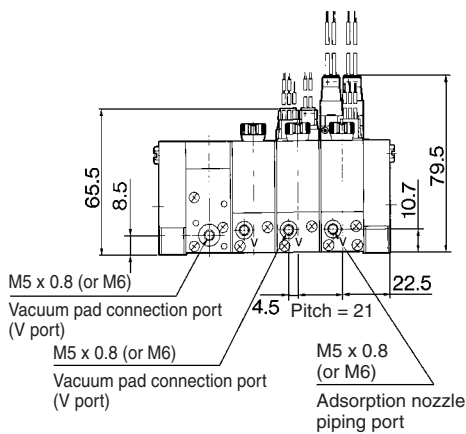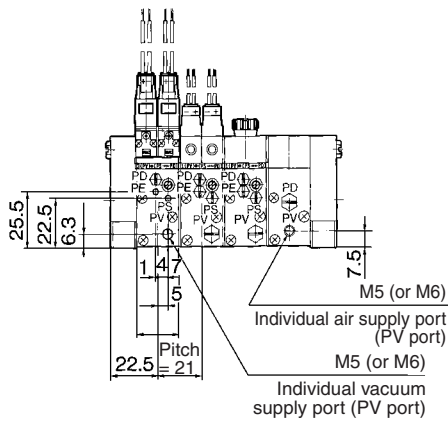


System circuit example

(Standard)

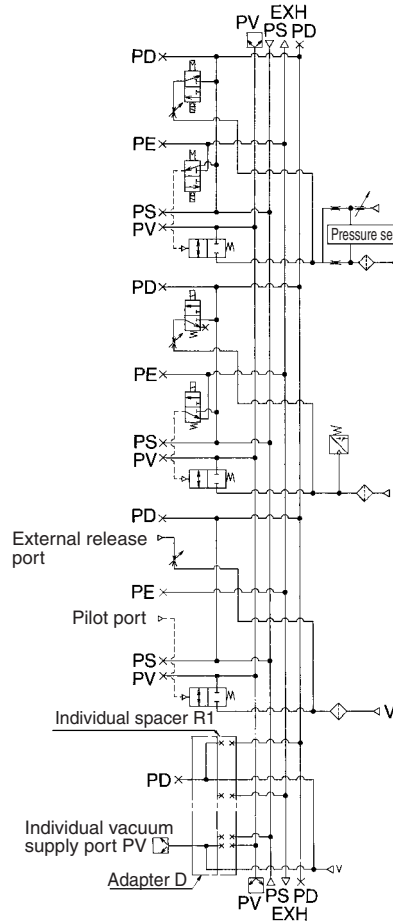

(Option)  
(In the case of individual vacuum pressure supply)

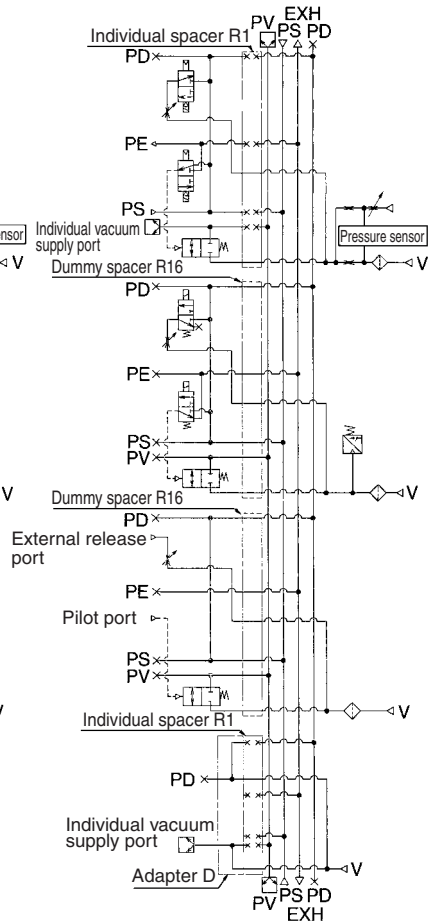


- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.



# Series ZX




## Vacuum Pump System Manifold: Type K1

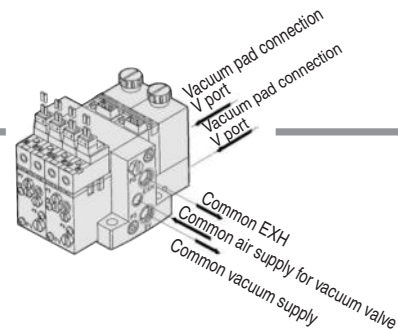

### Type K1


ZZX1□□-□□

ZX100-K1□L□-E□-□

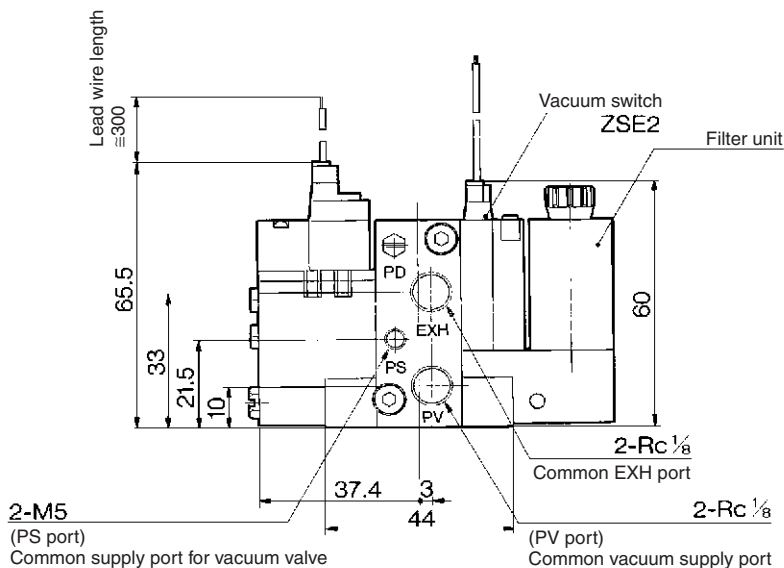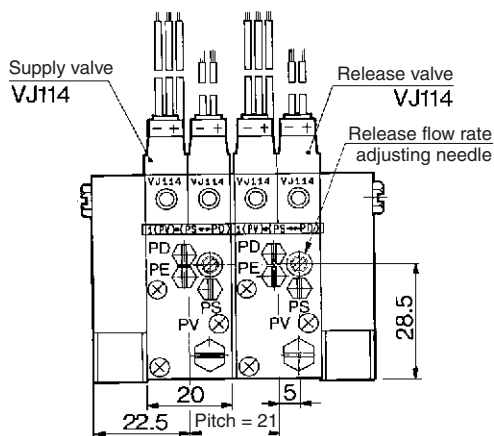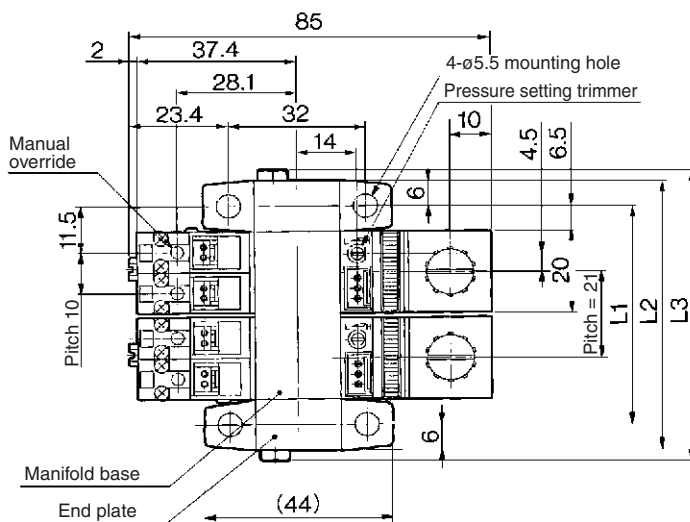


(mm)

Symbol	Stations	1	2	3	4	5	6	7	8
L1		33	54	75	96	117	138	159	180
L2		45	66	87	108	129	150	171	192
L3		50	71	92	113	134	155	176	197

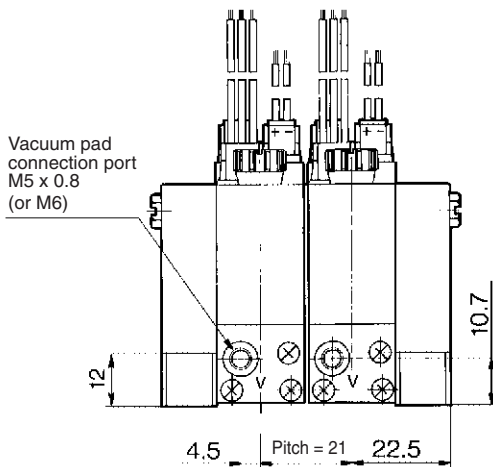


Circuit diagram

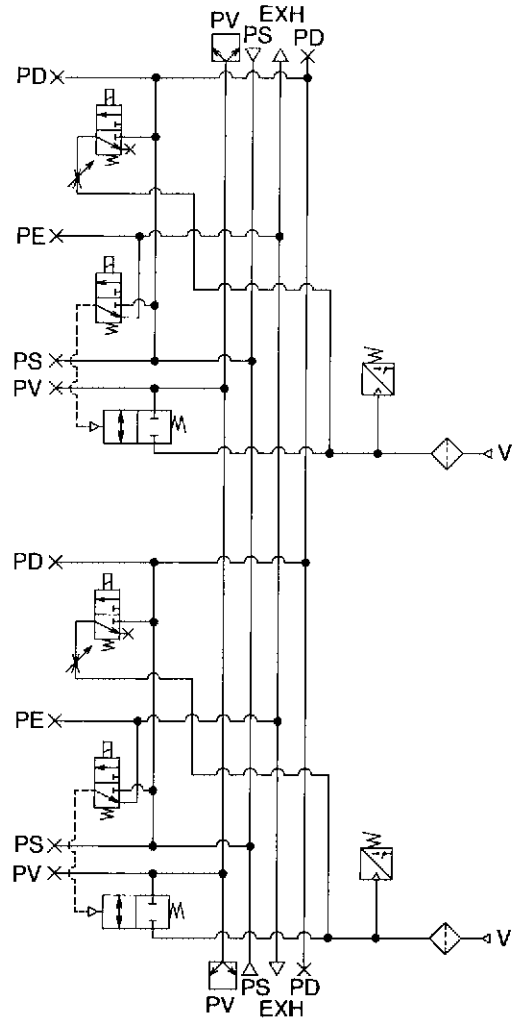

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX




## Vacuum Pump System Manifold: Type K3

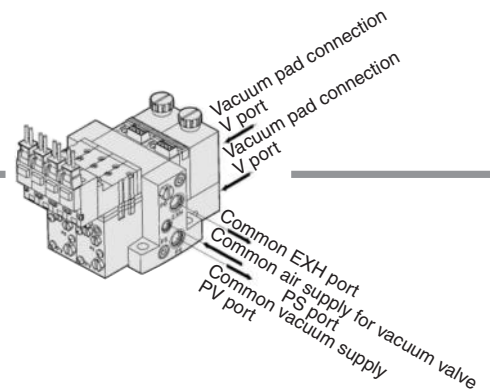

### Type K3

ZZX1□□-□□

ZX100-K3□□□-E□-□

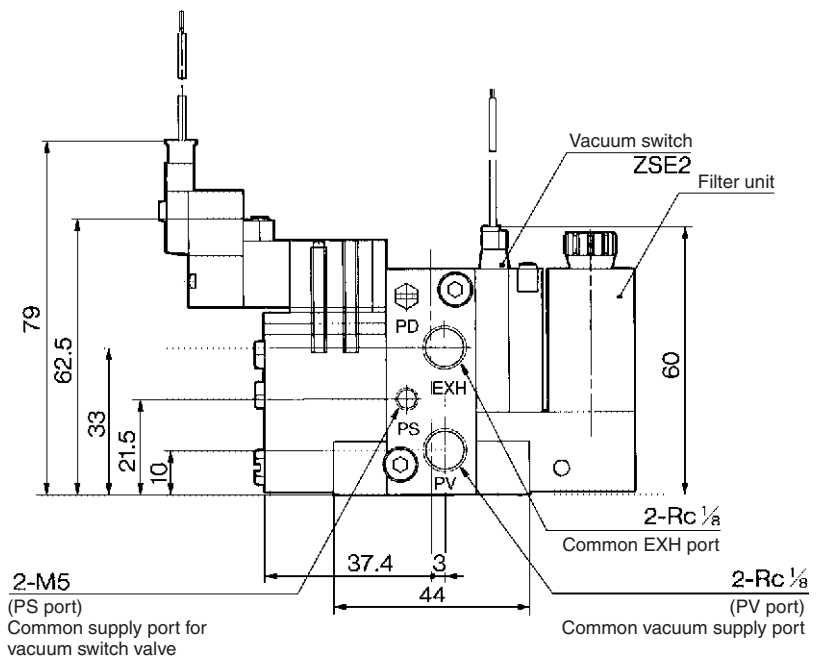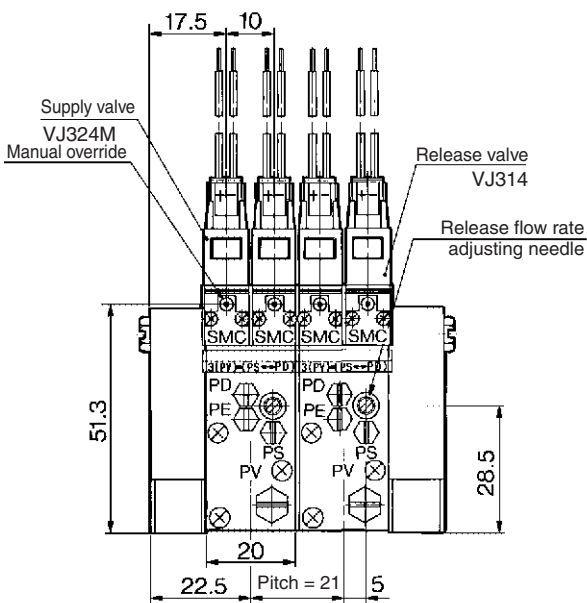
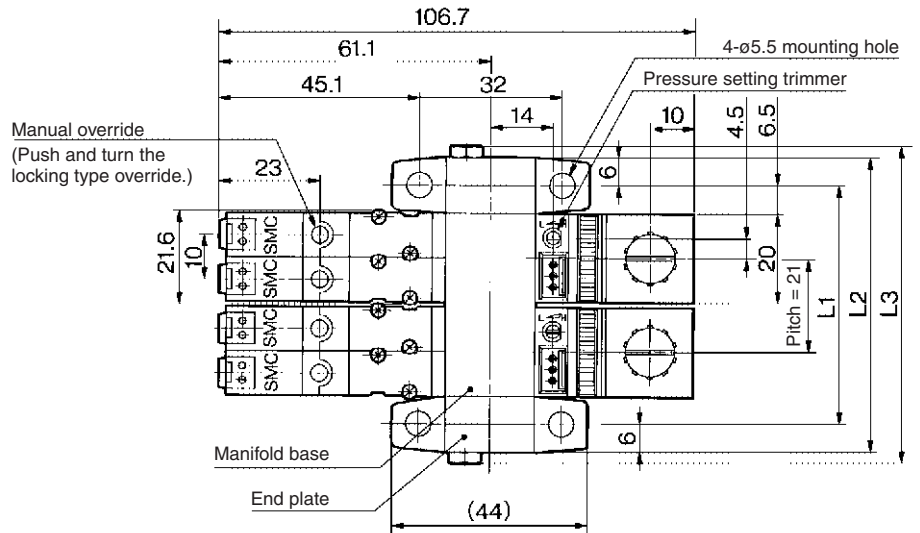


(mm)

Symbol	Stations	1	2	3	4	5	6	7	8
L1		33	54	75	96	117	138	159	180
L2		45	66	87	108	129	150	171	192
L3		50	71	92	113	134	155	176	197

# Vacuum Module: Vacuum Pump System **Series ZX**

Circuit diagram

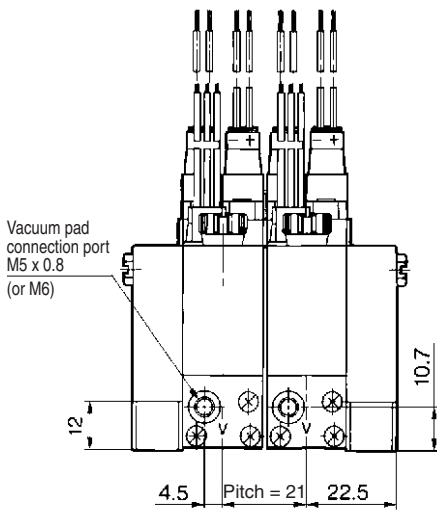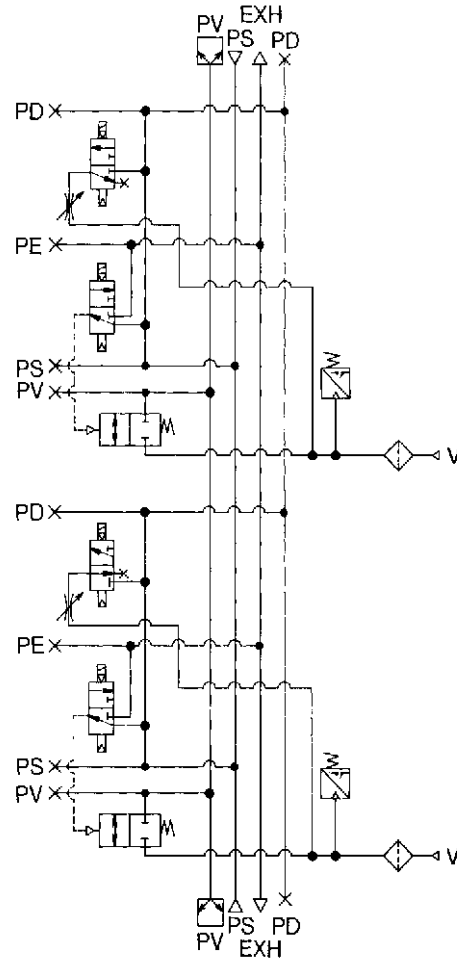


- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX

## Ejector System/Unit Construction (Refer to below for unit replacement.)

### Single

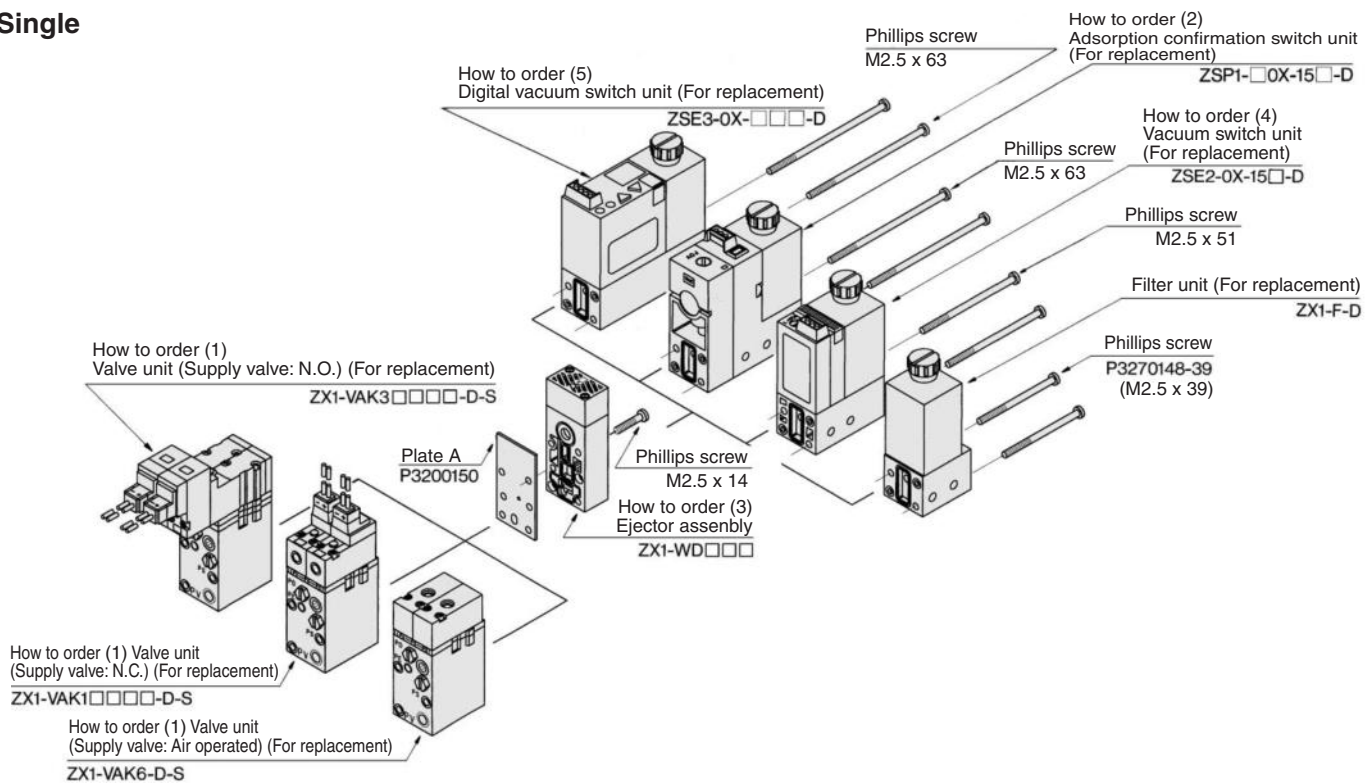

## How to Order Unit for Replacement

### (1) Valve unit

**ZX1-V A K1 □ 5 L Z B - D - S**

For ejector system

Combination of supply valve and release valve  
(Refer to page 13-2-42 for details.)

Pilot valve

Nil	DC: 1 W (With indicator light: 1.05 W)
	AC
Y*	DC: 0.45 W (With indicator light: 0.5 W)

\* 24 VDC and 12 VDC are applicable to 0.45 W.

Manual operation

Nil	Non-locking push type
B	Locking slotted type

Light/Surge voltage suppressor

Nil	None
Z	With light/surge voltage suppressor

Electrical entry

L	L plug connector
---	------------------

Unit for replacement

Single (PD and PS ports are equipped with plugs.)

Voltage

1*	100 VAC 50/60 Hz
3*	110 VAC 50/60 Hz
5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC

\* Applicable to plug connector. (Connector assembly with rectifier is attached.)

### (3) Ejector assembly

**ZX1-W D 05 1**

Unit for replacement

Nozzle diameter	05	0.5 mm
07	0.7 mm	
10	1.0 mm	

Ejector exhaust

1	Built-in silencer
2	Port exhaust Rc 1/8

### (4) Vacuum switch unit

**ZSE2-0X-15 C-D**

Piping specifications

Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)
CN	Without connector

### (2) Adsorption confirmation switch unit

**ZSP1-B 0X-15 C-D**

Applicable nozzle diameter

S	ø0.3 to ø0.7 mm
B	ø0.5 to ø1.2 mm

Unit for replacement

Piping specifications

Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)
CN	Without connector

### (5) Digital vacuum switch unit

**ZSE3-0X-□ 21 C-D**

Pressure indication

Nil	kPa	21	2 outputs/without analog output
		22	2 outputs/with analog output
P	kPa	23	1 output (with trouble detection)/without analog
		24	1 output (with trouble detection)/with analog

Output specifications

Unit for replacement

C	Connector (0.6 m)
---	-------------------


Note) Analog output is available only on grommet type.

### D: Unit for replacement.

Ex.) If an adsorption confirmation switch is replaced for a vacuum switch on ZX1071-K15LZ-PBC, indicate as ZSE2-0X-15C-D. In this case, mounting screws 3270148-49 (2 pcs.) are required.


If the unit is used on its own, not combined with others, "D" is not required. (Valve unit, ejector assembly and switch unit)  
Ex.) ZSE2-0X-15C, ZX1-VAK15LZ, ZX1-W051

## Manifold

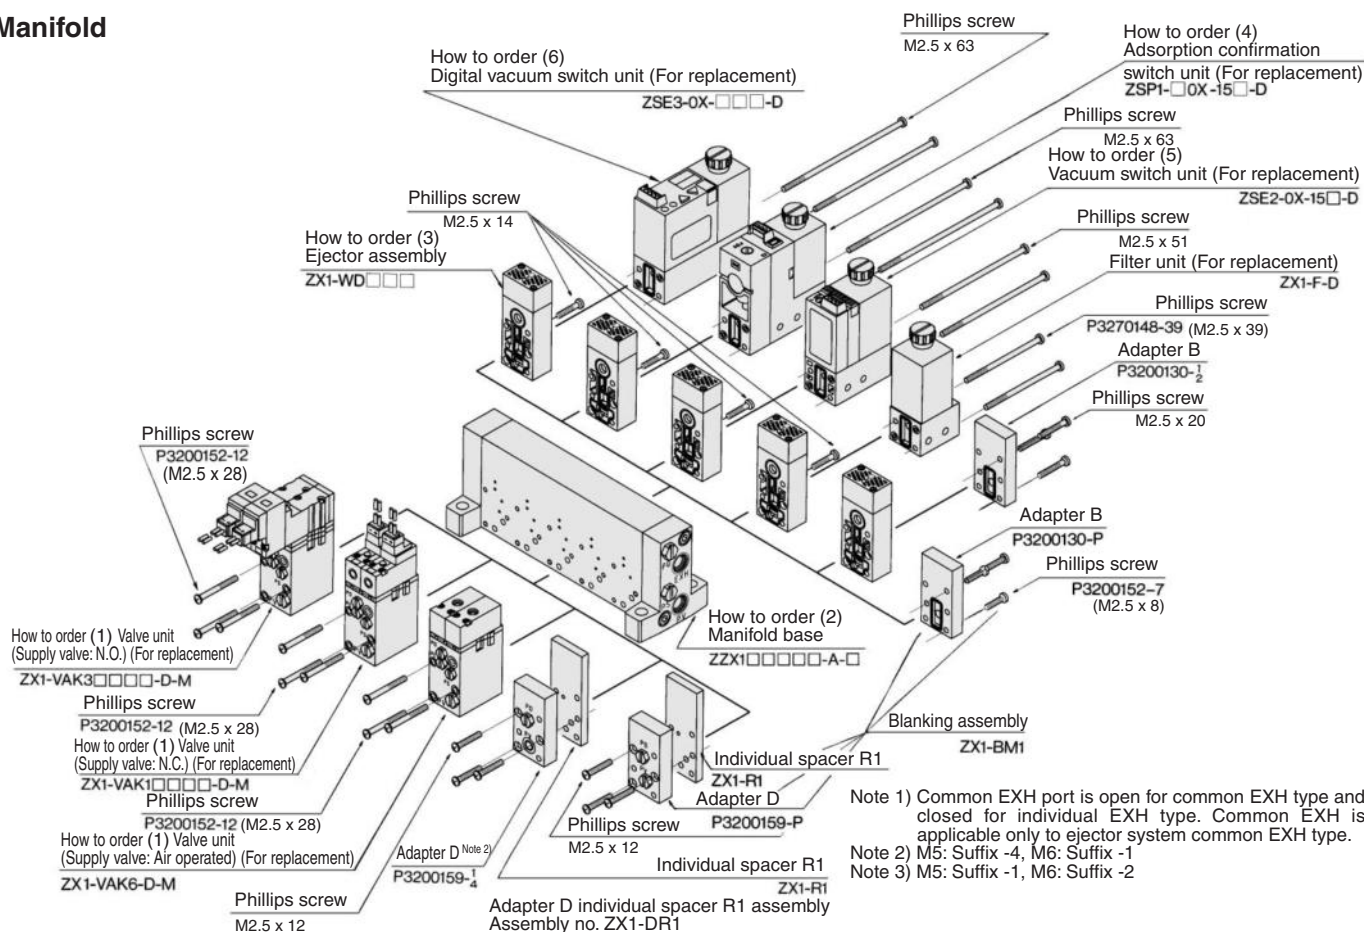


## How to Order Unit for Replacement


(1) Valve unit \* Refer to page 13-2-10 for details.

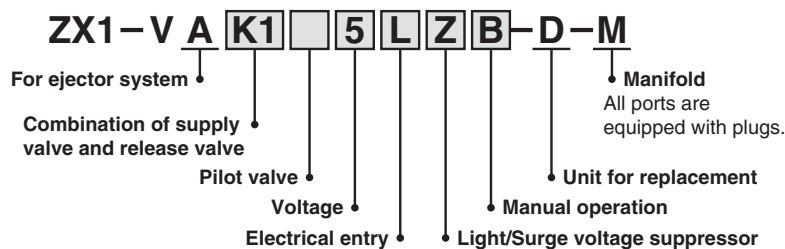


(4) Adsorption confirmation switch unit

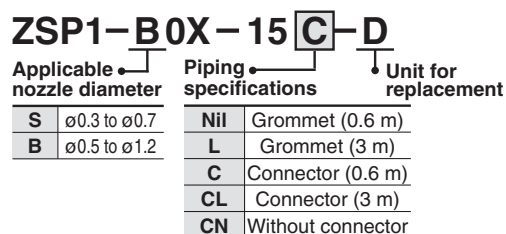


(2) Manifold base

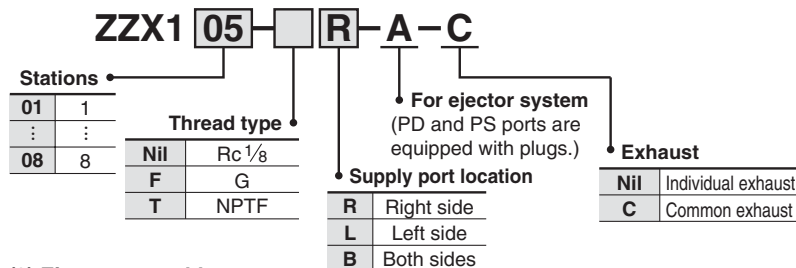


(5) Vacuum switch unit

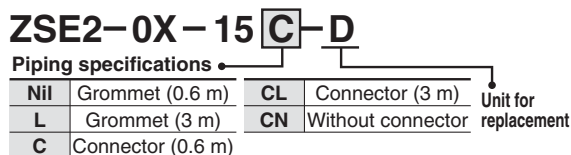

(3) Ejector assembly

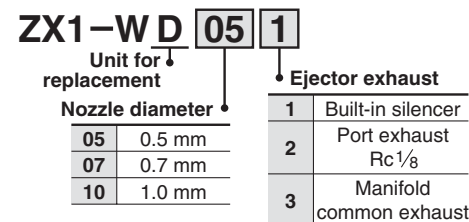

(6) Digital vacuum switch unit

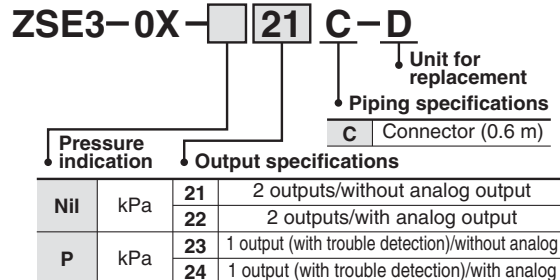


Note) Analog output is available only on grommet type.

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX

## Vacuum Pump System/Unit Construction (Refer to below for unit replacement.)

### Single

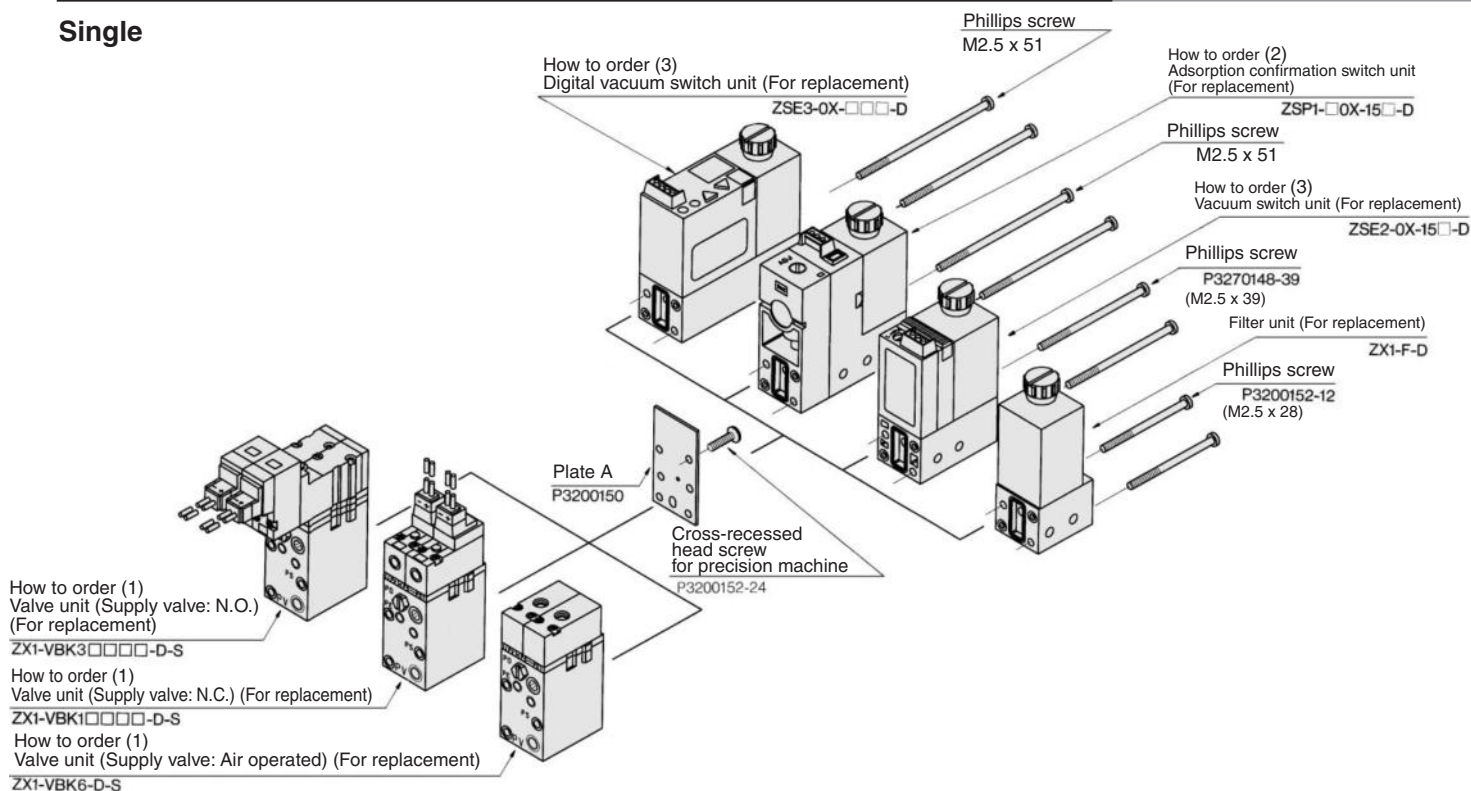

## How to Order Unit for Replacement

### (1) Valve unit

**ZX1-V B K1 □ 5 L Z B - D - S**

Vacuum pump for system

Combination of supply valve and release valve  
(Refer to page 13-2-42 for details.)

Pilot valve

Nil	DC: 1 W (With indicator light: 1.05 W)
Y*	DC: 0.45 W (With indicator light: 0.5 W)

\* 24 VDC and 12 VDC are applicable to 0.45 W.

Unit for replacement

Nil	Non-locking push type
B	Locking slotted type

Manual operation

Nil	None
Z	With light/surge voltage suppressor

Light/Surge voltage suppressor

Electrical entry

L	L plug connector
---	------------------

Voltage

1*	100 VAC 50/60 Hz
3*	110 VAC 50/60 Hz
5	24 VDC
6	12 VDC
V	6 VDC
S	5 VDC
R	3 VDC

\* Applicable to plug connector.  
(Connector assembly with rectifier is attached.)

### (2) Adsorption confirmation switch unit

**ZSP1-B0X-15 C-D**

Applicable nozzle diameter

S	ø0.3 to ø0.7 mm
B	ø0.5 to ø1.2 mm

Piping specifications

Nil	Grommet (0.6 m)
L	Grommet (3 m)
C	Connector (0.6 m)
CL	Connector (3 m)
CN	Without connector

Unit for replacement

### (3) Digital vacuum switch unit

**ZSE3-0X-□ 21 C-D**

Unit for replacement

Piping specifications

C	Connector (0.6 m)
---	-------------------

Pressure indication

Nil	kPa	21	2 outputs/without analog output
		22	2 outputs/with analog output
P	kPa	23	1 output (with trouble detection)/without analog
		24	1 output (with trouble detection)/with analog

Output specifications

Note) Analog output is available only on grommet type.

#### D: Unit for replacement

Ex.) If an adsorption confirmation switch is replaced for a vacuum switch on ZX1071-K15LZ-PBC, indicate as ZSE2-0X-15C-D. In this case, mounting screws P3270148-49 (2 pcs.) are required.

If the unit is used on its own, not combined with others, "D" is not required.

Ex.) ZSE2-0X-15C, ZX1-VAK15LZ






# Series ZX

## Vacuum Pump System/Manifold Disassembly from Individual Unit

### Manifold disassembly from individual unit

1. Remove Philips screws.
2. Remove cross-recessed head machine screw for precision machinery.
3. Mount plugs to valve unit.
4. Mount valve unit with Philips screws (P3200152-12) 3 pcs.
5. Mount vacuum switch to manifold with Philips screws.  
Follow tightening screw torque on Table (1).

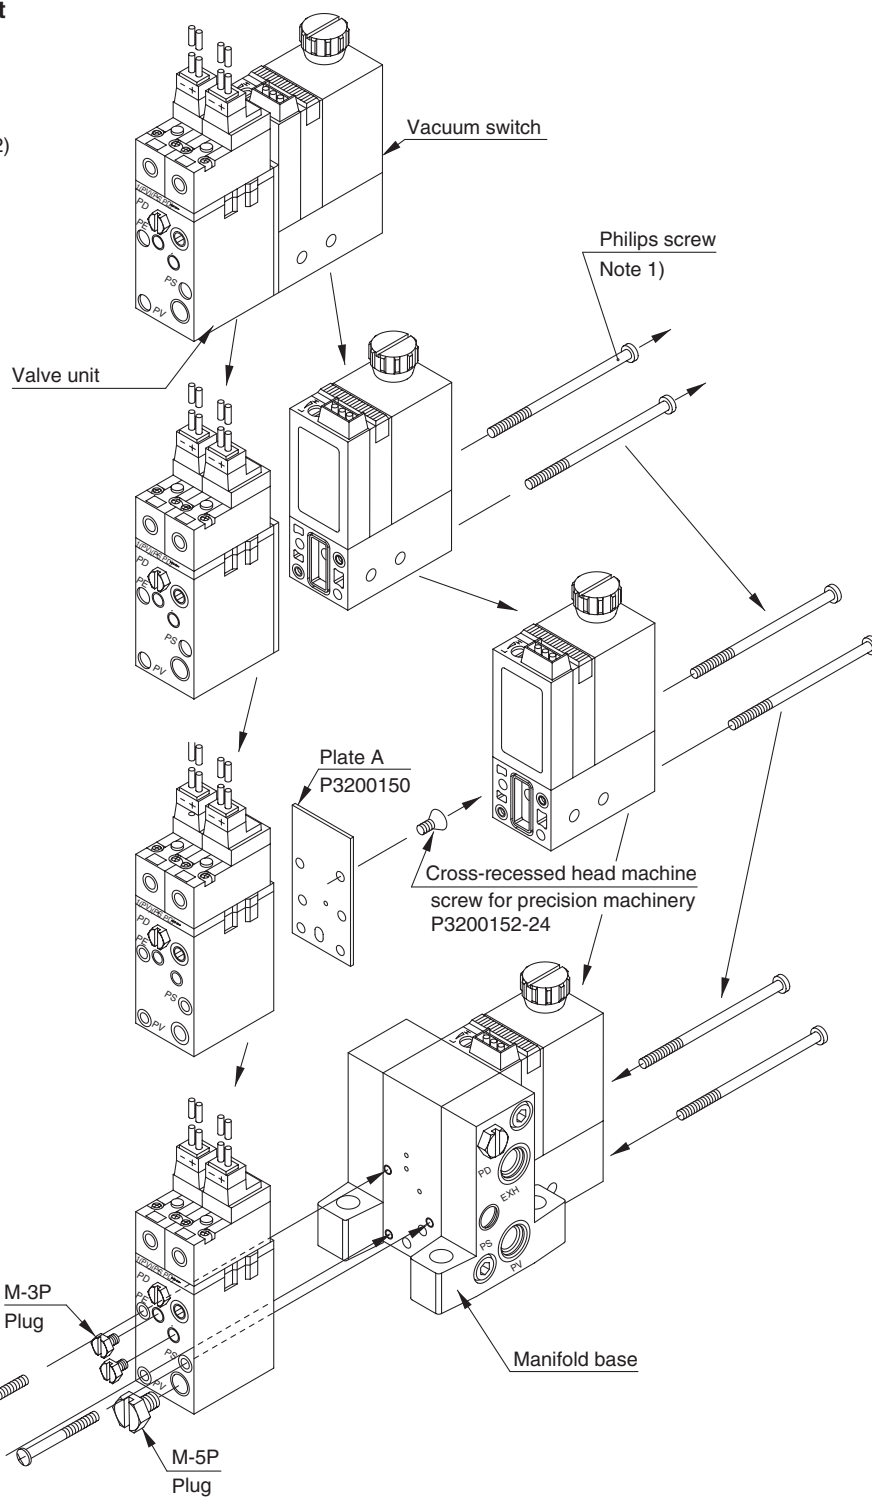

#### Note 1)

Even though screw type in use differs depending on the combination (Table (2)), screws for an individual unit and a manifold are common.

**Table (2)**

Combination	Part no.
Vacuum switch ZSE3, ZSP1	M2.5 x 51
Vacuum switch ZSE2	P3270148-39 (M2.5 x 39)
Filter unit ZX1-F	P3200152-12 (M2.5 x 28)

**Table (1)**

Part no.	Description	Quantity	Recommended tightening screw torque	In the case of manifold	Single unit
Note 1)	Philips screw	2	$0.28 \pm 0.1$ (N·m)	Necessary	Necessary
P3200150	Plate A	1		Not necessary	Necessary
P3200152-24	Cross-recessed head machine screw for precision machinery	1	$0.28 \pm 0.1$ (N·m)	Not necessary	Necessary
M-3P	Plug	2	$0.46 \pm 0.05$ (N·m)	Necessary	Not necessary
M-5P	Plug	1	$1.6 \pm 0.15$ (N·m)	Necessary	Not necessary
P3200152-12 (M2.5 x 28)	Philips screw	3	$0.28 \pm 0.1$ (N·m)	Necessary	Not necessary

## Ejector System/Manifold Disassembly from Individual Unit


### Manifold disassembly from individual unit

1. Remove Philips screws.
2. Remove Philips screws, and then remove ejector assembly from valve unit.
3. Mount plugs to valve unit.
4. Mount valve unit with Philips screws (P3200152-12) 3 pcs.
5. Mount ejector assembly to manifold with Philips screw (M2.5 x 14) 1 pc.
6. Mount vacuum switch to manifold with Philips screws 2 pcs.

Note 1)  
Even though screw type in use differs depending on the combination (Table (2)), screws for an individual unit and a manifold are common.  
Follow tightening screw torque on Table 1.

**Table (2)**

Combination	Part no.
Vacuum switch ZSE3, ZSP1	M2.5 x 63
Vacuum switch ZSE2	M2.5 x 61
Filter unit ZX1-F	P3270148-39 (M2.5 x 39)

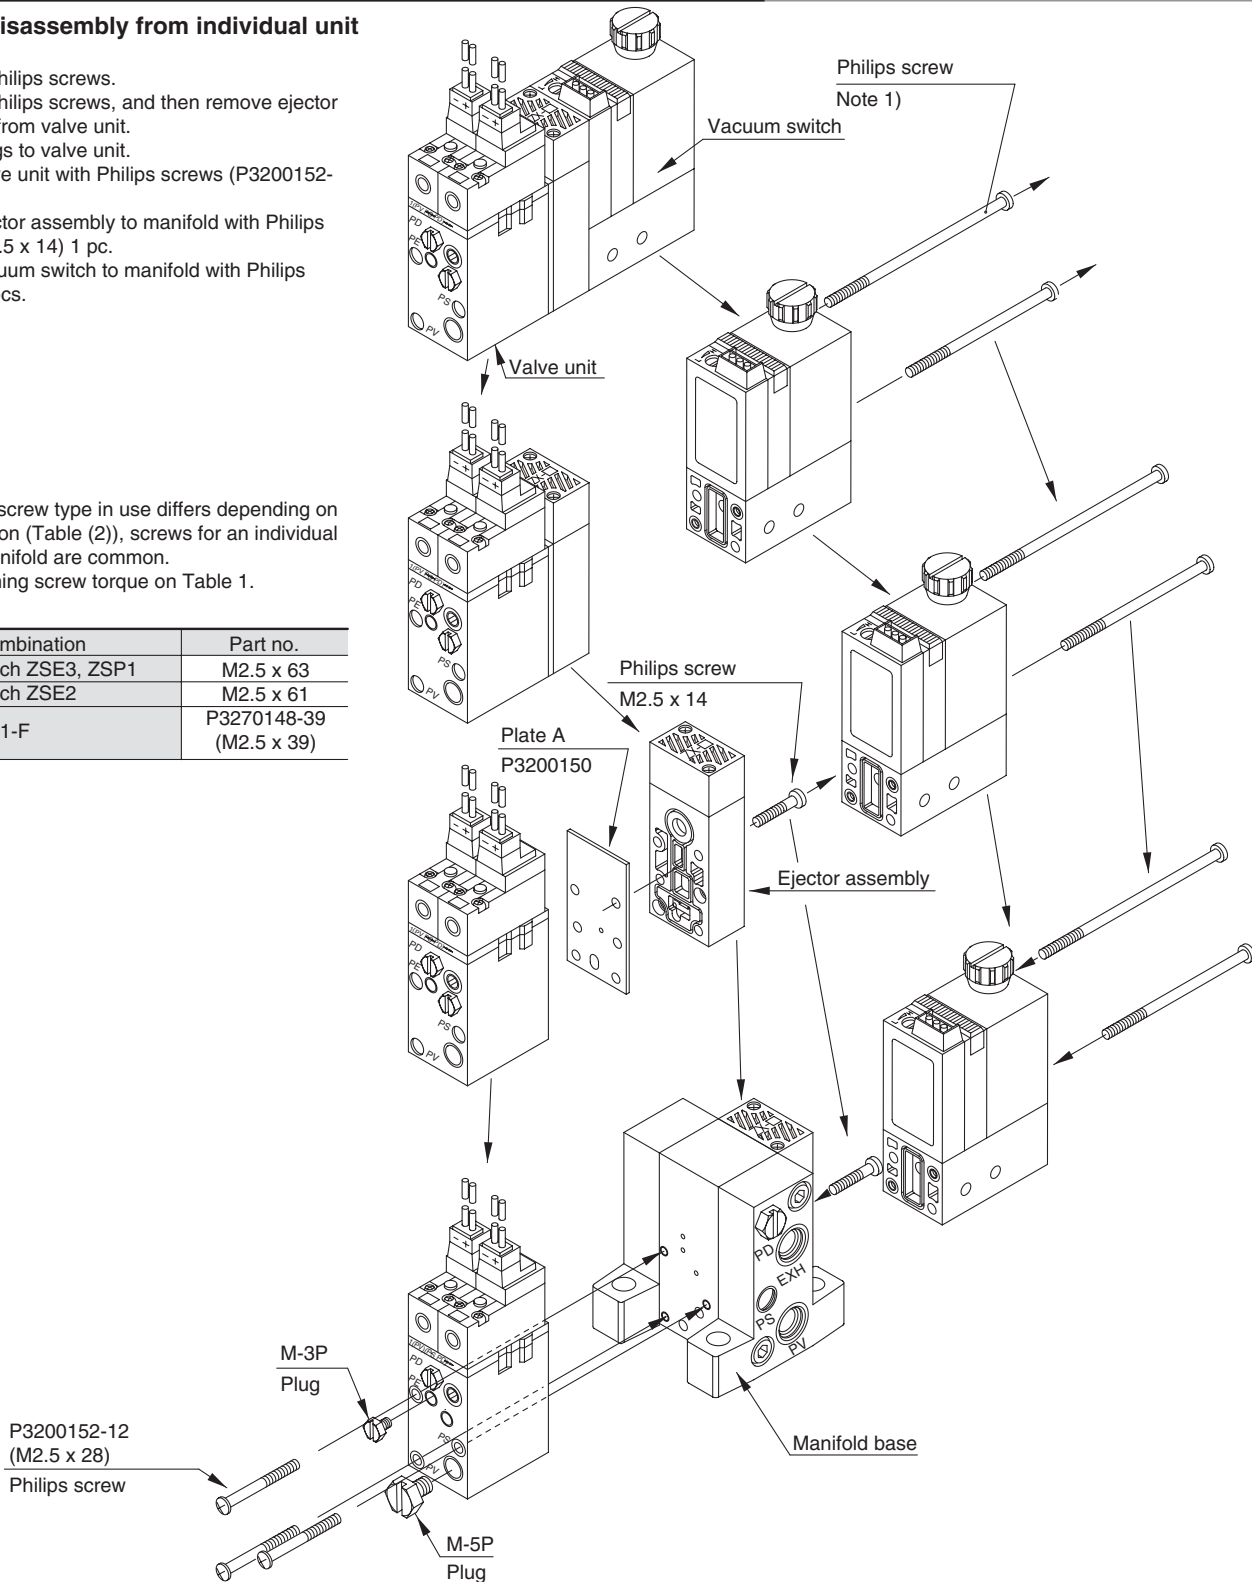

**Table (1)**

Part no.	Description	Quantity	Recommended tightening screw torque	In the case of manifold	Single unit
Note 1)	Philips screw	2	0.28 ± 0.1 (N·m)	Necessary	Necessary
P3200150	Plate A	1		Not necessary	Necessary
M2.5 x 14	Philips screw	1	0.28 ± 0.1 (N·m)	Necessary	Necessary
M-3P	Plug	1	0.46 ± 0.05 (N·m)	Necessary	Not necessary
M-5P	Plug	1	1.6 ± 0.15 (N·m)	Necessary	Not necessary
P3200152-12 (M2.5 x 28)	Philips screw	3	0.28 ± 0.1 (N·m)	Necessary	Not necessary

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

# Series ZX

# Made to Order Specifications:


Please consult with SMC for detailed specifications, size and delivery.

## 1. Valve Unit/Other Combinations of Supply Valve and Release Valve (Ejector unit)

### Ejector Unit

If those other than the standard combination of supply valves and release valves (Refer to page 13-2-5.) are required, select from the following combinations. (Refer to page 13-2-4 for "How to Order".)

#### Combination Symbol: K2

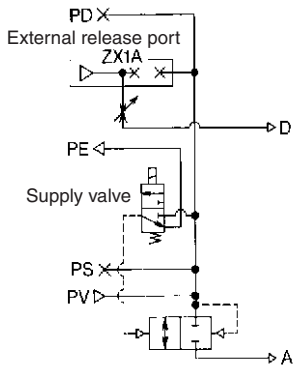


An N.C. solenoid valve is used as the supply valve. Also, an external 2 port valve (vacuum valve) must be provided to serve as the vacuum release valve.

**Application:** The supply pressure is controlled by electric signals and a vacuum release is effected by external air.

#### How to Operate

Condition	Valve	
	Supply valve	Release valve
	Solenoid valve	External 2 port valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

#### Combination Symbol: K7

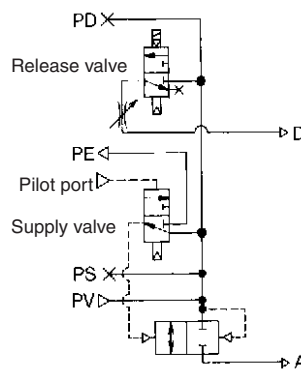


An air operated N.O. valve is used as the supply valve. An N.C. solenoid valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by external air signals and a vacuum release is effected by the solenoid valve. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Condition	Valve	
	Supply valve	Release valve
	Air operated valve	Solenoid valve
1. Work adsorption	OFF	OFF
2. Vacuum release	ON	ON
3. Operation stop	ON	OFF

#### Combination Symbol: K4

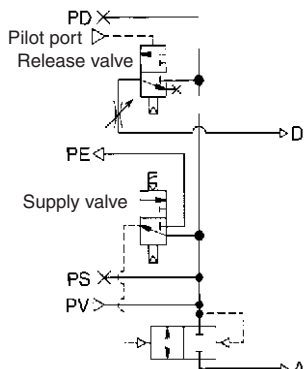


An N.O. solenoid valve is used as the supply valve. An air operated N.C. valve is used for the vacuum release valve.

**Application:** The supply pressure is restricted by electric signals and a vacuum release is effected by air signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Condition	Valve	
	Supply valve	Release valve
	Solenoid valve	Air operated valve
1. Work adsorption	OFF	OFF
2. Vacuum release	ON	ON
3. Operation stop	ON	OFF

#### Combination Symbol: J1

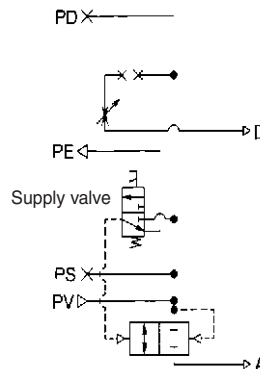


An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** This combination is used for effecting control in accordance with electric signals. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This combination is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Condition	Valve	
	Supply valve	Release valve
	Solenoid valve	—
1. Work adsorption	ON	—
2. Vacuum release	OFF	—
3. Operation stop	OFF	—

#### Combination Symbol: K5

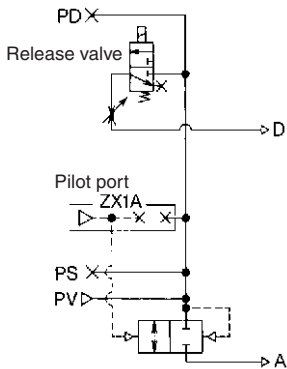


An external 3 port valve must be provided to serve as the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by external air signals and a vacuum release is effected by the solenoid valve.

#### How to Operate

Condition	Valve	
	Supply valve	Release valve
	External 3 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

#### Combination Symbol: J2

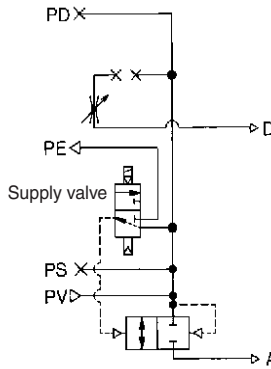

An N.O. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** It is used for controlling the supply pressure through electric signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This is used for preventing the workpieces from dropping during power outages. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This combination is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Condition	Valve	
	Supply valve	Release valve
	Solenoid valve	—
1. Work adsorption	OFF	—
2. Vacuum release	ON	—
3. Operation stop	ON	—


# Series ZX

# Made to Order Specifications:

Please consult with SMC for detailed specifications, size and delivery.

- ZX
- ZR
- ZM
- ZH
- ZU
- ZL
- ZY
- ZQ
- ZF
- ZP
- ZCU
- AMJ
- Misc.

### Combination Symbol: J3

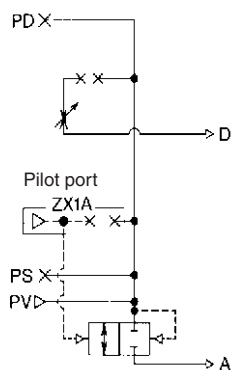


An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** The supply pressure is controlled by external air signals. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Valve	Supply valve	Release valve
Condition	External 3 port valve	—
1. Work adsorption	ON	—
2. Vacuum release	OFF	—
3. Operation stop	OFF	—

### Combination Symbol: D2

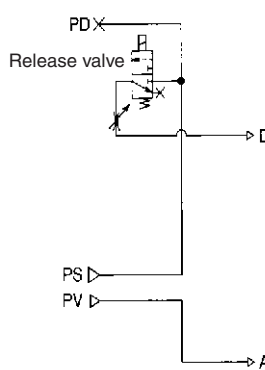


An N.C. solenoid valve is used for the vacuum release valve. An external supply valve must be provided.

**Application:** The supply pressure is controlled by the external valve and a vacuum release is effected by the solenoid valve.

#### How to Operate

Valve	Supply valve	Release valve
Condition	External valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

### Combination Symbol: J4

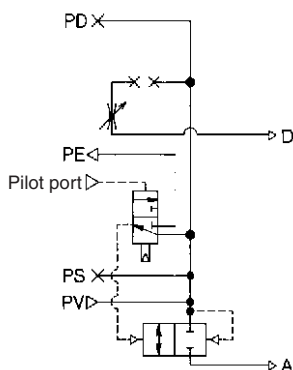


An air operated N.O. valve is used as the supply valve. A vacuum release valve is not used.

**Application:** The supply pressure is controlled by external air signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This is used for preventing the workpieces from dropping during power outages. A vacuum release is effected by the intrusion of air between the silencer, pad, and the workpiece. This type is used when there is no need to accelerate the vacuum release speed.

#### How to Operate

Valve	Supply valve	Release valve
Condition	Air operated valve	—
1. Work adsorption	OFF	—
2. Vacuum release	ON	—
3. Operation stop	OFF	—

### Combination Symbol: D3

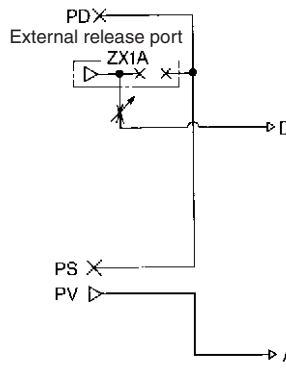


An external valve must be provided to serve as the supply valve. Also, an external 2 port valve (vacuum valve) must be provided to serve as the vacuum release valve.

**Application:** The supply pressure is controlled by the external valve and a vacuum release is effected by the external 2 port valve (vacuum valve).

#### How to Operate

Valve	Supply valve	Release valve
Condition	External valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

### Combination Symbol: D1

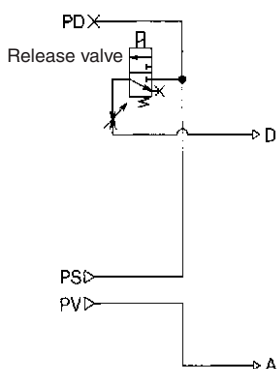


An N.C. solenoid valve is used for the vacuum release valve. An external supply valve must be provided.

**Application:** The supply pressure is controlled by the external valve and a vacuum release is effected by the solenoid valve.

#### How to Operate

Valve	Supply valve	Release valve
Condition	External valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

### Combination Symbol: D4

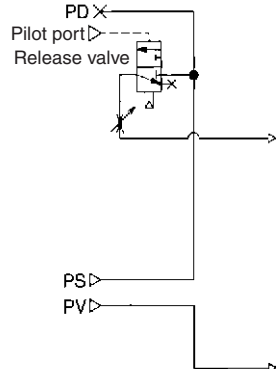

An external valve must be provided to serve as the supply valve. An air operated N.C. valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by the external valve and a vacuum release is effected by external air signals.

#### How to Operate

Valve	Supply valve	Release valve
Condition	External valve	Air operated valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

# Series ZX

# Made to Order Specifications:

Please consult with SMC for detailed specifications, size and delivery.


## 1. Valve Unit/Other Combinations of Supply Valve and Release Valve (Vacuum pump system)

### Vacuum Pump System



If those other than the standard combination of supply valves (Refer to page 13-2-41.) and release valves are required, select from the following combinations. (Refer to page 13-2-40 for "How to Order".)

#### Combination Symbol: K2

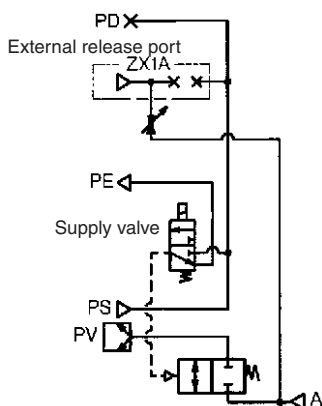


An N.C. solenoid valve is used as the supply valve. Also, an external 2 port valve (vacuum valve) must be provided to serve as the vacuum release valve.

**Application:** The supply pressure is controlled by electric signals and a vacuum release is effected by external air.

#### How to Operate

Condition	Valve	Supply valve	Release valve
		Solenoid valve	External 2 port valve
1. Work adsorption		ON	OFF
2. Vacuum release		OFF	ON
3. Operation stop		OFF	OFF

#### Combination Symbol: K7

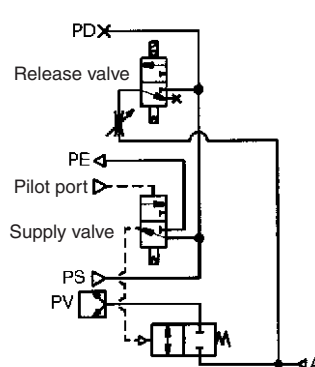


An air operated N.O. valve is used as the supply valve. An N.C. solenoid valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by external air signals and a vacuum release is effected by the solenoid valve. Because the supply valve is the N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Condition	Valve	Supply valve	Release valve
		Air operated valve	Solenoid valve
1. Work adsorption		OFF	OFF
2. Vacuum release		ON	ON
3. Operation stop		ON	OFF

#### Combination Symbol: K4

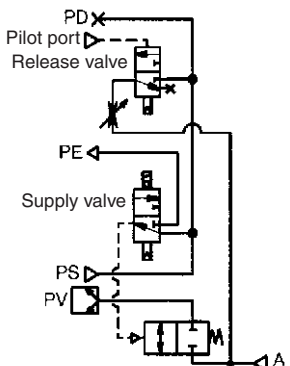


An N.O. solenoid valve is used as the supply valve. An air operated N.C. valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by electric signals and a vacuum release is effected by air signals. Because the supply valve is N.O., the pressure that is supplied to the ejector is not interrupted during a power outage; as a result, the state of suction can be maintained. This combination is used for preventing the workpieces from dropping during power outages.

#### How to Operate

Condition	Valve	Supply valve	Release valve
		Solenoid valve	Solenoid valve
1. Work adsorption		OFF	OFF
2. Vacuum release		ON	ON
3. Operation stop		ON	ON

#### Combination Symbol: J1

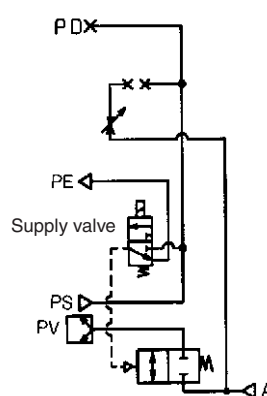


An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** This combination is used for controlling the pressure by electric signals. Normally, the workpiece is released due to the air leakage that occurs between the pad and the workpiece. However, if there is no air leakage, the workpiece will not become detached because the vacuum state is maintained even when the supply valve is turned OFF. To effect releasing, an external 2 port valve (vacuum valve) must be provided.

#### How to Operate

Condition	Valve	Supply valve	Release valve
		Solenoid valve	————
1. Work adsorption		ON	————
2. Vacuum release		OFF	————
3. Operation stop		OFF	————

#### Combination Symbol: K5

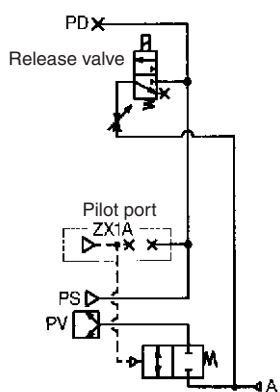


An external 3 port valve must be provided to serve as the supply valve. Also, an N.C. solenoid valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by external air signals and a vacuum release is effected by the solenoid valve.

#### How to Operate

Condition	Valve	Supply valve	Release valve
		External 3 port valve	Solenoid valve
1. Work adsorption		ON	OFF
2. Vacuum release		OFF	ON
3. Operation stop		OFF	OFF

#### Combination Symbol: J2

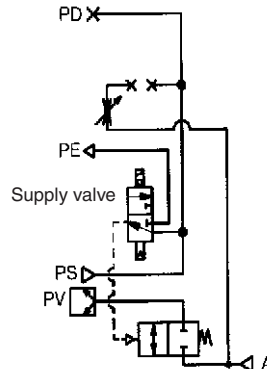

An N.O. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** Used for controlling with electric signals. Because the supply N.O., the pressure is not interrupted during a power outage. This prevents the workpieces from dropping. Normally, the workpiece is released due to leakage. However, if no air leakage, the workpiece will not detach because the vacuum state is maintained even when the supply valve is turned ON. To release, an external 2 port valve (vacuum valve) must be used.

#### How to Operate


Condition	Valve	Supply valve	Release valve
		Solenoid valve	————
1. Work adsorption		OFF	————
2. Vacuum release		ON	————
3. Operation stop		ON	————

# Series ZX

# Made to Order Specifications:

Please consult with SMC for detailed specifications, size and delivery.

## Combination Symbol: J3

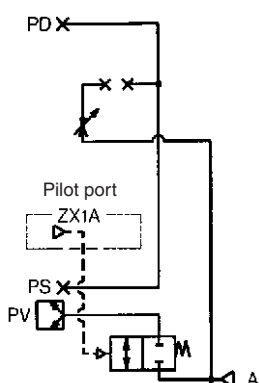


An N.C. solenoid valve is used as the supply valve. A vacuum release valve is not used.

**Application:** The supply pressure is controlled by external air signals. Normally, the workpiece is released due to the air leakage that occurs between the pad and the workpiece. However, if there is no air leakage, the workpiece will not become detached because the vacuum state is maintained even when the supply is turned OFF. To effect releasing, an external 2 port valve (vacuum valve) must be provided.

### How to Operate

Valve	Supply valve	Release valve
Condition	External 3 port valve	—
1. Work adsorption	ON	—
2. Vacuum release	OFF	—
3. Operation stop	OFF	—

## Combination Symbol: D2

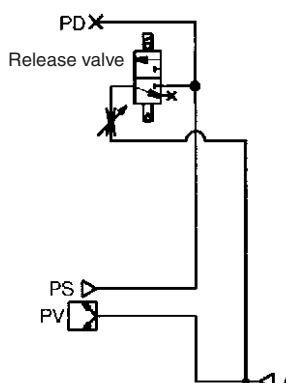


An N.C. solenoid valve is used as the vacuum release valve. A supply valve is not used.

**Application:** The supply pressure is controlled by an external 2 port valve (vacuum valve) and a vacuum release is effected by the solenoid.

### How to Operate

Valve	Supply valve	Release valve
Condition	External 2 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

## Combination Symbol: J4

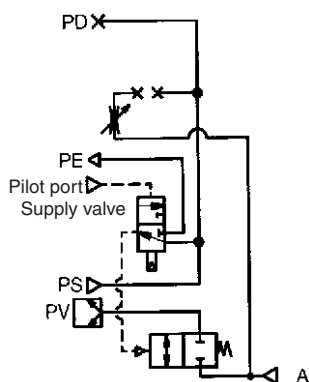


An air operated N.O. valve is used as the supply valve. A vacuum release valve is not used.

**Application:** Supply is controlled by external air signals. Because the valve is N.O., the pressure is not interrupted during a power outage. This prevents the workpieces from dropping. Normally, the workpiece is released due to leakage. However, if no leakage, the workpiece will not detach because the vacuum state is maintained even when the valve is turned ON. To release, an external 2 port valve (vacuum valve) must be provided.

### How to Operate

Valve	Supply valve	Release valve
Condition	Air operated valve	—
1. Work adsorption	OFF	—
2. Vacuum release	ON	—
3. Operation stop	ON	—

## Combination Symbol: D3

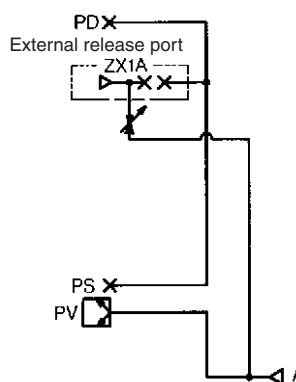


An external 2 port valve (vacuum valve) must be provided to serve as the supply valve and the vacuum release valve.

**Application:** The supply pressure is controlled by the external 2 port valve (vacuum valve) and releasing is also effected by the external 2 port valve.

### How to Operate

Valve	Supply valve	Release valve
Condition	External 2 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

## Combination Symbol: D1

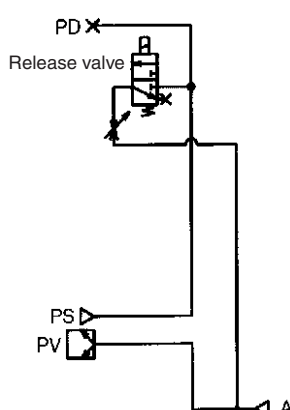


An N.C. solenoid valve is used as the vacuum release valve. A supply valve is not used.

**Application:** The supply pressure is controlled by an external 2 port valve (vacuum valve) and a vacuum release is effected by the solenoid.

### How to Operate

Valve	Supply valve	Release valve
Condition	External 2 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

## Combination Symbol: D4

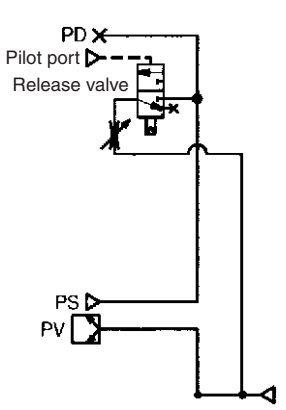

An external 2 port valve (vacuum valve) must be provided to serve as the supply valve. An air operated N.C. valve is used for the vacuum release valve.

**Application:** The supply pressure is controlled by the external 2 port valve (vacuum valve) and vacuum release is effected by external air signals.

### How to Operate

Valve	Supply valve	Release valve
Condition	External 2 port valve	Solenoid valve
1. Work adsorption	ON	OFF
2. Vacuum release	OFF	ON
3. Operation stop	OFF	OFF

ZX

ZR

ZM

ZH

ZU

ZL

ZY

ZQ

ZF

ZP

ZCU

AMJ

Misc.

Series ZX

# Made to Order Specifications:


Please consult SMC for detailed specifications, size and delivery.

**1. Noise Reduction Silencer Assembly/The ejector exhaust style is applicable to the silencer equipped specifications.**

ZX1 Nozzle diameter Exhaust style — Valve Voltage Electrical entry -X121


Noise reduction silencer assembly

Reduction in the exhaust noise from the ejector (Silencing effect 8 dB (A) Standard silencer assembly comparison)

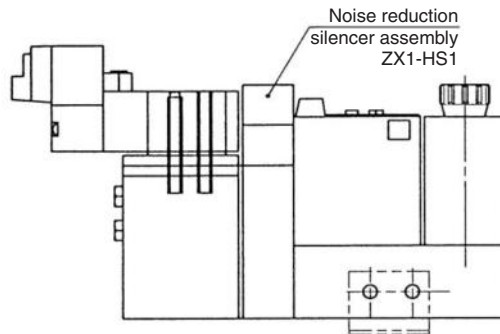

Ordering example  
ZX1101-K35LZ-D23C-X121

Noise reduction silencer assembly ZX1-HS1

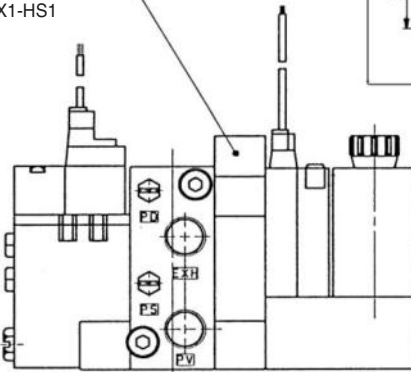

Ordering example  
\* ZZX102-R 1 pc.  
ZX1101-K35LZ-EC-X121 2 pcs.

